

TOSHIBA

INSTRUCTION MANUAL

MODE D'EMPLOI



DIGITAL STILL CAMERA

PDR-M81

[Downloaded From camera-usermanual.com](http://camera-usermanual.com)

TOSHIBA

INSTRUCTION MANUAL

To ensure that you use the Toshiba PDR-M81 Digital Still Camera safely and correctly, read this Instruction Manual carefully before you start using the camera. Once you have finished reading this Instruction Manual, keep it handy at all times.

DIGITAL STILL CAMERA

PDR-M81

In the space provided below, please record the model and Serial No. of your camera.

Model No. PDR-M81

Serial No. _____

Please retain this information for future reference.

ENGLISH

Attention

For customers in the U.S.A.

DIGITAL STILL CAMERA PDR-M81



Tested To Comply
With FCC Standards

FOR HOME OR OFFICE USE

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Change the direction of the radio or TV antenna.
Move the equipment or the radio or TV. For example, if the equipment is to the right of the TV, move it to the left of the TV.
Or, move the equipment farther away from the radio or TV.
- Plug the equipment into a different outlet. Don't plug your radio or TV into the same circuit as your equipment.
- Ensure that all expansion slots (on the back or side of the equipment) are covered.
Also, ensure that all metal retaining brackets are tightly attached to the equipment.
- If these suggestions don't help, consult your equipment dealer or experienced radio/TV technician for help.

[Download From camera-usermanual.com](http://Download.From.camera-usermanual.com)

Using the Function (Camera Operation) is the function name on the PDR-M81.

Notes On Handling the AC Adapter

Be careful not to touch the terminals of the AC adapter. If you touch the terminals, you may get a shock. Do not place the power cord and the function

Graphic symbol definitions

Following photographs (P. 41)

Following camera settings up to your camera (P. 46)

Following camera settings up to your camera (P. 46)

Following camera settings up to your camera (P. 46)

Following camera settings up to your camera (P. 46)

Following camera settings up to your camera (P. 46)

Following camera settings up to your camera (P. 46)

Following camera settings up to your camera (P. 46)

Following camera settings up to your camera (P. 46)

Following camera settings up to your camera (P. 46)

Following camera settings up to your camera (P. 46)

Following camera settings up to your camera (P. 46)

Following camera settings up to your camera (P. 46)

Following camera settings up to your camera (P. 46)

Following camera settings up to your camera (P. 46)

Following camera settings up to your camera (P. 46)

Following camera settings up to your camera (P. 46)

Following camera settings up to your camera (P. 46)

Following camera settings up to your camera (P. 46)

Following camera settings up to your camera (P. 46)

Following camera settings up to your camera (P. 46)

Following camera settings up to your camera (P. 46)

Following camera settings up to your camera (P. 46)

Following camera settings up to your camera (P. 46)

Following camera settings up to your camera (P. 46)

Following camera settings up to your camera (P. 46)

Following camera settings up to your camera (P. 46)

Following camera settings up to your camera (P. 46)

Following camera settings up to your camera (P. 46)

Following camera settings up to your camera (P. 46)

Following camera settings up to your camera (P. 46)

Following camera settings up to your camera (P. 46)

Following camera settings up to your camera (P. 46)

Before Reading This Manual

Thank you for purchasing the Toshiba PDR-M81 Digital Still Camera.

To ensure that you use this camera safely and correctly, read this Instruction Manual carefully before you start using the camera. Once you have finished reading this Instruction Manual, keep it handy at all times.

Trademark Information

- **Macintosh** and **QuickTime** are trademarks of Apple Computer, Inc.
- **MS-DOS** and **Windows** are registered trademarks of the Microsoft Corporation of the U.S. registered in the USA and other countries.
Windows is an abbreviated term referring to the Microsoft Windows Operating System.
- **SmartMedia™** is a trademark of Toshiba Corporation.
- Other companies or product names are trademarks or registered trademarks of the respective companies.


Conventions Used In This Manual

IMPORTANT

- Indicates items or details that you should observe to prevent loss of data, malfunction and impaired performance. Also indicates information relating to specifications and functions.

Memo

- Indicates extra useful information.

 Indicates another page to refer to for extra information.

The Function Map (continued)

Playing back your photographed images

 **STEP1** – Let's play back some images. (P. 80)

 **STEP2** – Selecting the various ways to play back images.

- Playing Back Movies (P. 81)
- Enlarging Photographed Images (P. 84)
- Auto Playback (P. 85)
- Simple Movie Playback (P. 86)
- Displaying a List of Images (P. 83)
- Displaying Detailed Information of Images (P. 116)

Setting the basic camera settings

- Setting the Date and Time (P. 111)
- Formatting SmartMedia™ (P. 91)
- Adjusting the LCD Monitor Brightness (P. 115)
- Switching LCD Monitor Display (P. 117)
- Turning the LCD Monitor Display OFF (P. 117)
- Turning the Beep OFF (P. 111)
- Switching the Folder (P. 92)
- Setting the Color of Images (Color/Black and White/Sepia) (P. 77)
- Changing the Power OFF Time (P. 110)
- Changing the LCD Monitor Display Language (P. 112)

Erasing images

 **STEP1** – Erasing Images (P. 87)

 **STEP2** – Other ways to erase images

- Erasing All Images in a Folder (P. 89)
- Erasing All Image Folders (P. 89)
- Formatting SmartMedia™ (P. 91)

You can also do this

–The PDR-M81 also has lots of other features.–

- Protecting Images (P. 106)
- Changing the size of Images (P. 94)
- Compressing Images (P. 96)
- Copying Images to another SmartMedia™ (P. 98)
- Print Information (P. 102)
- Displaying Detailed Information of Images (P. 116)
- Switching LCD Monitor Display (P. 117)
- Taking and Playing Back Photographs on a TV (P. 119)

Loading images on a personal computer

Loading Images on a Personal Computer (P. 121), separate "Software Manual"

Getting
Ready

Taking
Photographs

Playing
Back Images

Erasing
Images

Handy
Functions

Other
Applications

Additional
Information

Notes On Handling the AC Adapter

[illegible]

Exemption Clauses

[illegible]

Contents (continued)

The name in parentheses () is the function name on the PDR-M81.

■ Taking Shots with the Automatic Exposure Bracketing (AEB Photography)	71
■ Taking Photographs Continuously (Burst Photography) ..	72
■ Making Movies	75
■ Changing the Preset Conditions (RECORDING MENU)	76
PREVIEW	77
COLOR	77
ISO	78
SHARPNESS	79
CONTRAST	79
DIGITAL ZOOM	79
LCD *	79

Playing Back Images

■ Playing Back Photographed Images (Single-Frame Playback)	80
■ Playing Back Movies	81
■ Displaying a List of Images (Thumbnail Display)	83
■ Enlarging Photographed Images (Zoom Playback)	84
■ Auto Playback (Slideshow)	85
■ Playback of Multi Image Pictures	86

Erasing Images

■ Erasing Images (Erase Frame)	87
■ Erasing Folders (All Images in a Folder/All Folders)	89
■ Formatting the SmartMedia™	91

Handy Functions

■ About Folders	92
How to select the folder	92
■ Reducing the Image Size (Resize)	94
■ Compressing Images (Quality)	96

■ Copying Images	98
■ Print Information	102
■ Protecting Images	106
Protecting an Image	106
Removing the Protection	108

Other Applications

■ Basic Settings (mode)	109
AUTO POWER OFF	110
SOUND	111
TIME & DATE	111
OSD LANGUAGE	112
VIDEO OUT	112
QUALITY	112
SYSTEM INFO	114
■ Adjusting the LCD Monitor Brightness	115
■ DISP/i Button and LCD Monitor Display (In Playback Mode)	116
■ DISP/i Button and LCD Monitor Display (In Photography Mode)	117
■ Definitions of the Color of the Viewfinder LED	118
■ Taking and Playing Back Photographs on a TV	119
■ Transferring Images to a PC	121
■ Separately Sold Accessories	122
■ Connecting to Other Devices	123

Additional Information

■ Specifications	124
■ Warnings and Messages Displayed on LCD Monitor	128
■ Troubleshooting	130
■ Glossary	133

Using Your Camera (Continued)

is the function name on the PDR-M81.

Notes On Handling the AC Adapter

Be careful not to touch the terminals of the AC adapter. If you touch the terminals, you may get a shock. Do not touch the terminals of the AC adapter when it is plugged into the camera. Do not place the AC adapter in the camera. Do not use the AC adapter for anything other than the intended purpose.

Graphic symbol definitions

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Graphic symbol definitions

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Safety Precautions (continued)

DANGER

Do not heat, disassemble or throw the batteries into fire or water.

Doing might cause them to rupture, ignite or heat up, resulting in fire or major injury.



Do not strike the batteries with a hammer, or step on, drop or subject the batteries to strong impact.

Doing so might cause them to rupture, ignite or heat up, resulting in fire or major injury.



Use the batteries only for its originally intended purpose.

Using the batteries for any other purpose might cause it to rupture, ignite or heat up, resulting in fire or major injury.



Using Your Camera (Continued)

is the function name on the PDR-M81.

Notes On Handling the AC Adapter

Be careful not to touch the terminals of the AC adapter. If you touch the terminals, you may get a shock. Do not place the AC adapter in a place where it may get wet or where it may be damaged.

Location definitions

Precautions for storing the camera

Precautions for using the camera

Precautions for using the camera

Precautions for using the camera

Precautions for using the camera

Precautions for using the camera

Precautions for using the camera

Precautions for using the camera

Precautions for using the camera

Precautions for using the camera

Precautions for using the camera

Precautions for using the camera

Precautions for using the camera

Precautions for using the camera

Precautions for using the camera

Precautions for using the camera

Precautions for using the camera

Precautions for using the camera

Precautions for using the camera

Precautions for using the camera

Precautions for using the camera

Precautions for using the camera

Graphic symbol definitions

Following photographs

Following photographs

Following photographs

Following photographs

Following photographs

Following photographs

Following photographs

Following photographs

Following photographs

Following photographs

Following photographs

Following photographs

Following photographs

Following photographs

Following photographs

Following photographs

Following photographs

Following photographs

Following photographs

Following photographs

Following photographs

Following photographs

Safety Precautions (continued)

WARNING (continued)

Do not disassemble, change or repair the camera.

This might cause fire or electric shock. For details on repair and internal inspection, consult the store of purchase, or please contact the technical support number.



Do not touch power or TV antenna cords during a thunderstorm.

This might cause electric shock.



Do not use the camera while you are walking, driving or riding a motorcycle.

This might cause you to fall over or result in a traffic accident.



Use only the specified batteries or the specified AC adapter.

Use of a battery or AC adapter other than specified, might cause fire, defects or malfunctions.



WARNING (continued)

Keep the batteries out of the reach of children.

If a child swallows a battery, this might result in poisoning. If a child swallows a battery, immediately consult a physician.



If battery fluid enters the eyes, immediately rinse with fresh water and consult with a physician to receive treatment.

If left untreated, damage to the eye could be permanent.



Use the AC adapter only with the indicated power supply voltage (USA: 100-120V, Europe: 230V AC)

Use with any other power supply voltage might cause fire or electric shock.



Using Your Camera (Continued)

is the function name on the PDR-M81.

Notes On Handling the AC Adapter

Be careful not to touch the terminals of the AC adapter. If you do, you may get a shock. Do not place the AC adapter in a place where it may get wet or damaged.

Location definitions

When you use the camera, the location of the camera is defined as follows:

When you use the camera, the location of the camera is defined as follows:

When you use the camera, the location of the camera is defined as follows:

When you use the camera, the location of the camera is defined as follows:

When you use the camera, the location of the camera is defined as follows:

When you use the camera, the location of the camera is defined as follows:

When you use the camera, the location of the camera is defined as follows:

When you use the camera, the location of the camera is defined as follows:

When you use the camera, the location of the camera is defined as follows:

When you use the camera, the location of the camera is defined as follows:

When you use the camera, the location of the camera is defined as follows:

When you use the camera, the location of the camera is defined as follows:

When you use the camera, the location of the camera is defined as follows:

When you use the camera, the location of the camera is defined as follows:

When you use the camera, the location of the camera is defined as follows:

When you use the camera, the location of the camera is defined as follows:

When you use the camera, the location of the camera is defined as follows:

Graphic symbol definitions

When you use the camera, the location of the camera is defined as follows:

When you use the camera, the location of the camera is defined as follows:

When you use the camera, the location of the camera is defined as follows:

When you use the camera, the location of the camera is defined as follows:

When you use the camera, the location of the camera is defined as follows:

When you use the camera, the location of the camera is defined as follows:

When you use the camera, the location of the camera is defined as follows:

When you use the camera, the location of the camera is defined as follows:

When you use the camera, the location of the camera is defined as follows:

When you use the camera, the location of the camera is defined as follows:

When you use the camera, the location of the camera is defined as follows:

When you use the camera, the location of the camera is defined as follows:

When you use the camera, the location of the camera is defined as follows:

When you use the camera, the location of the camera is defined as follows:

When you use the camera, the location of the camera is defined as follows:

When you use the camera, the location of the camera is defined as follows:

When you use the camera, the location of the camera is defined as follows:

When you use the camera, the location of the camera is defined as follows:

Safety Precautions (continued)

CAUTION (continued)

Do not charge the supplied batteries.

Doing so might cause them to rupture, ignite or heat up, resulting in fire or major injury.



Do not leave dead or exhausted batteries in the camera.

Doing so might cause them to rupture, ignite or heat up, resulting in fire, major injury or damaging the camera.



Do not use different types of batteries together, or mix old and new batteries.

Doing so might cause them to rupture, ignite or heat up, resulting in fire or major injury or damaging the camera.



Do not walk around with the camera swinging from the shoulder strap.

If you walk around with the camera hanging from your hand through the shoulder strap, the camera might come into contact to other people and cause injury, or damage to the camera or other objects.



CAUTION (continued)

Do not look at the sun through the camera viewfinder.

This may cause injury of the eyes.



Do not use the flash close to anyone's eyes.

This might cause damage to the person's eyesight.



Do not subject the LCD monitor to impact.

If the LCD monitor is impacted, the glass on the screen may be broken and internal fluid may leak.

If the internal fluid enters your eyes or comes into contact with your body or clothes, immediately rinse with fresh water. If the internal fluid enters your eyes, immediately consult a physician to receive treatment.



Consult your dealer regarding the internal cleaning of the camera once every two years.

If dust is allowed to accumulate inside the camera for a long time, this might result in fire or defects. Consult your dealer regarding the cleaning costs.



) is the function name on the PDR-M81.

Be sure that you are not violating FCC regulations. FCC regulations may cause you to not be able to use the modded camera.

Graphic symbol definitions

1. **Identifying the Problem**

P2-D Leica camera settings up to you!

ne can't do it. People don't use the 1800

Designing the Shows (Oct 4 - Page 6)

© 2015 Pearson Education, Inc. or its affiliate(s). All rights reserved. This material is intended solely for the personal use of the individual user and is not to be disseminated broadly.

1. **Training** – A supervisor adjusts the tools and equipment used daily. **Portals of Nonance** on a

Forme 4-7500 (03-01) Canada (English)

From the SETI@home (p. 52):

Photography Using the Self-timer (P. 55)

Photography Using the Flash (P. 66)

Parasitology 139, 1–10. doi:10.1017/S0022268910001910

photographs turn out more as you

Taking Shots with the Priority Given to Aperture

Taking Shots With the Priority Given to Shutter Speed

Compensating Exposure

Taking Photos Continuously P. 58, P. 72

Setting White Balance (P. 58, P. 60)


Using Your Camera Correctly (continued)

● Carrying Out Maintenance on Your Camera

- To prevent the lens, surface of the LCD monitor or viewfinder from being scratched, blow off any dust from these parts with a blower brush and lightly wipe with a soft dry cloth.
- Clean the body of the camera with a soft dry cloth. Do not use volatile liquids such as paint thinner, benzene or insecticide, as these may react with the camera body and cause deformation or remove the coating.

● Cautions on Magnetism

- Please note that credit cards, cash cards, magnetic commutation tickets, floppy disks and the like are susceptible to magnetism. Do not bring them close to the speaker of the camera. Failure to do so may cause damage to data, which could make the camera unserviceable.

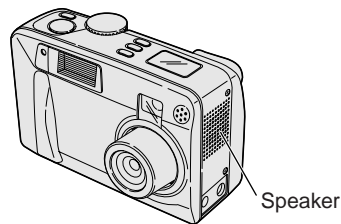

Using Your Camera Correctly (continued)

Notes On Handling the AC Adapter

Be careful not to touch the terminals of the AC adapter. If you do, you may get a shock. Do not touch the terminals of the AC adapter. Do not touch the terminals of the AC adapter. Do not touch the terminals of the AC adapter.

Graphic symbol definitions

Caution definitions

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Graphic symbol definitions

Caution definitions

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Exemption clauses

Using Your Camera Correctly (continued)

Notes On Handling Batteries

WARNING

When you use the battery, carefully read and strictly observe the warnings and cautions indicated on the battery.

Failure to do this might cause battery to rupture, ignite or heat up, resulting in fire, major injury or damaging the camera.

■ About Battery Use

- Do not use batteries other than that specified.
- Do not insert batteries in the wrong direction.
- Do not charge, heat, open, or short-circuit the batteries. Do not throw batteries into fire.
- Do not charge the supplied batteries.
- When using rechargeable batteries, follow the instructions for the batteries and the charger for safe handling. (This camera can not charge the rechargeable batteries.)
- Do not leave dead or exhausted batteries in the camera.

Neglecting the above may cause battery leakage and corrosion, resulting in burns or injury.

If your fingers or clothes come into contact with the battery acid, wash them immediately. If your eyes come in contact with battery acid, wash them and immediately consult your doctor.

Using Your Camera Correctly (continued)

Notes On Handling the AC Adapter

Be careful not to touch the terminals of the AC adapter. If you do, you may get a shock. Do not touch the terminals of the AC adapter. Do not touch the terminals of the AC adapter. Do not touch the terminals of the AC adapter.

Caution definitions

Do not store the camera in the following places

Do not store the camera in the following places:
 • Places with high humidity, such as bathrooms and kitchens.
 • Places with high temperature, such as near radiators and heaters.
 • Places with strong magnetic fields, such as near magnets and speakers.
 • Places with strong vibrations, such as near washing machines and dryers.
 • Places with strong odors, such as near perfumes and colognes.

Do not use the camera in the following places

Do not use the camera in the following places:
 • Places with high humidity, such as bathrooms and kitchens.
 • Places with high temperature, such as near radiators and heaters.
 • Places with strong magnetic fields, such as near magnets and speakers.
 • Places with strong vibrations, such as near washing machines and dryers.
 • Places with strong odors, such as near perfumes and colognes.

Do not use the camera in the following places:
 • Places with high humidity, such as bathrooms and kitchens.
 • Places with high temperature, such as near radiators and heaters.
 • Places with strong magnetic fields, such as near magnets and speakers.
 • Places with strong vibrations, such as near washing machines and dryers.
 • Places with strong odors, such as near perfumes and colognes.

Do not expose the camera to sand or oil

Do not expose the camera to sand or oil:
 • Do not use the camera in sandy or oily environments.
 • Do not use the camera near sand or oil.
 • Do not use the camera near sand or oil.

Notes On Condensation

Notes On Condensation:
 • Do not use the camera in high humidity environments.
 • Do not use the camera in high humidity environments.
 • Do not use the camera in high humidity environments.

Graphic symbol definitions

Do not use the camera in the following places

Do not use the camera in the following places:
 • Places with high humidity, such as bathrooms and kitchens.
 • Places with high temperature, such as near radiators and heaters.
 • Places with strong magnetic fields, such as near magnets and speakers.
 • Places with strong vibrations, such as near washing machines and dryers.
 • Places with strong odors, such as near perfumes and colognes.

Do not use the camera in the following places

Do not use the camera in the following places:
 • Places with high humidity, such as bathrooms and kitchens.
 • Places with high temperature, such as near radiators and heaters.
 • Places with strong magnetic fields, such as near magnets and speakers.
 • Places with strong vibrations, such as near washing machines and dryers.
 • Places with strong odors, such as near perfumes and colognes.

Do not use the camera in the following places:
 • Places with high humidity, such as bathrooms and kitchens.
 • Places with high temperature, such as near radiators and heaters.
 • Places with strong magnetic fields, such as near magnets and speakers.
 • Places with strong vibrations, such as near washing machines and dryers.
 • Places with strong odors, such as near perfumes and colognes.

Exemption Clauses

Exemption Clauses:
 • The manufacturer is not responsible for damage to the camera caused by fire, flood, or other natural disasters.
 • The manufacturer is not responsible for damage to the camera caused by fire, flood, or other natural disasters.
 • The manufacturer is not responsible for damage to the camera caused by fire, flood, or other natural disasters.


Accessories

Make sure that you have all of the items below before you start using your camera.


Alkaline batteries (4) (size AA)




AV cable (1)

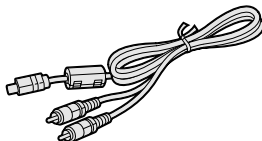


USB cable (1)

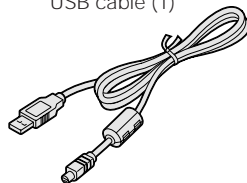

Shoulder strap (1)

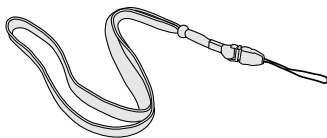


Camera case (1)

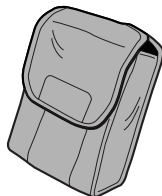


Lens cap (1)



 Software application (1)
(CD-ROM)




- SmartMedia™ (8MB) (1)
- SmartMedia™ case (1)

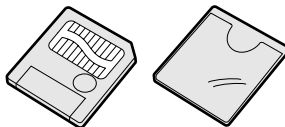

- Instruction Manual (this manual)
- Software Manual

Names of Parts (continued)

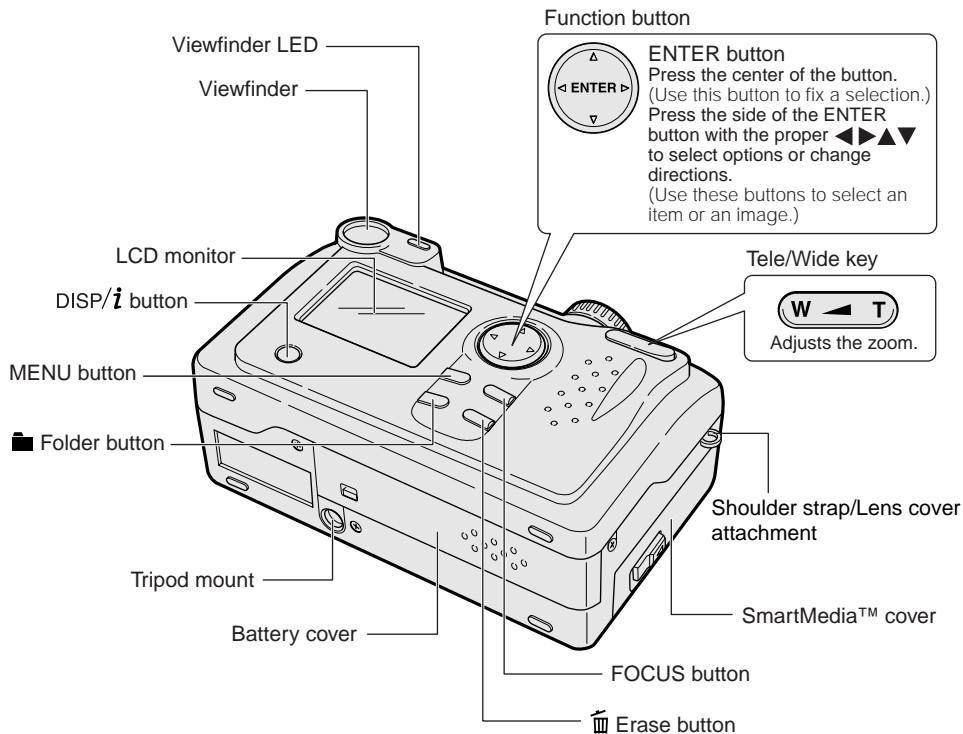

Additional Information:

Serifisering af HANCO-påtryksdrukket (bar) (findes ikke)

The **3.5M INFO** tab displays the information of the selected image. You can switch the view under the **ED** (Edit) tab to view the image in a larger size.

For details on how to use the camera, please refer to the **Getting Started** manual back on the LCD monitor.

Currently, as the camera is in the **Image** mode, selected folder and folders.

Set the protection level of the SmartMedia.

When the video ends, the video is erased, and the camera returns to the

6MB (SM-M1600D)/32MB (SM-M3200D)/64MB (SM-M6400D)/128M (SM-M1280D)

¥ The image before the photograph is taken is slightly less clear than playback images. (This is

because television displays in
lumpy Disk Adapter (FlashPath

* The display unit varies according to the output system.

With the NTSC system, images can be displayed simultaneously on the LCD monitor and TV during photography and playback.


Images recorded on the SmartMedia^a to be transferred to the PC

Viewfi With the PAL system, 1 TV display is available

Color TV display is available. **AC Adaptor** **Meaning**

≠ With the PAL system, images are played back with a black frame surrounded.

For the US/Canada: PDR-ACM1A

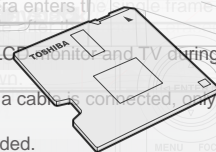

Green



ALITY



on the **SETUP MENU** and press **RIGHT** to move the cursor to the **RECORDING** menu.

Orange is available for the reduced display price **ENTER**

* The image size displayed on the LCD monitor becomes FULL (320 x 240) or HALF (160 x 120). The

4. All movies made in FULL size is displayed on the entire LCD monitor, and those made in HALF size is displayed in the center of the screen.

displayed in the center of the screen.


¥ When playing back movie images, switching is between standard and image only. not possible F3.4.

Names of Parts (continued)

Status display

This display indicates the camera's status. You can verify the camera's status even if the LCD monitor is not on.

The text, numbers and icons that are displayed in the status display vary according to the setting.

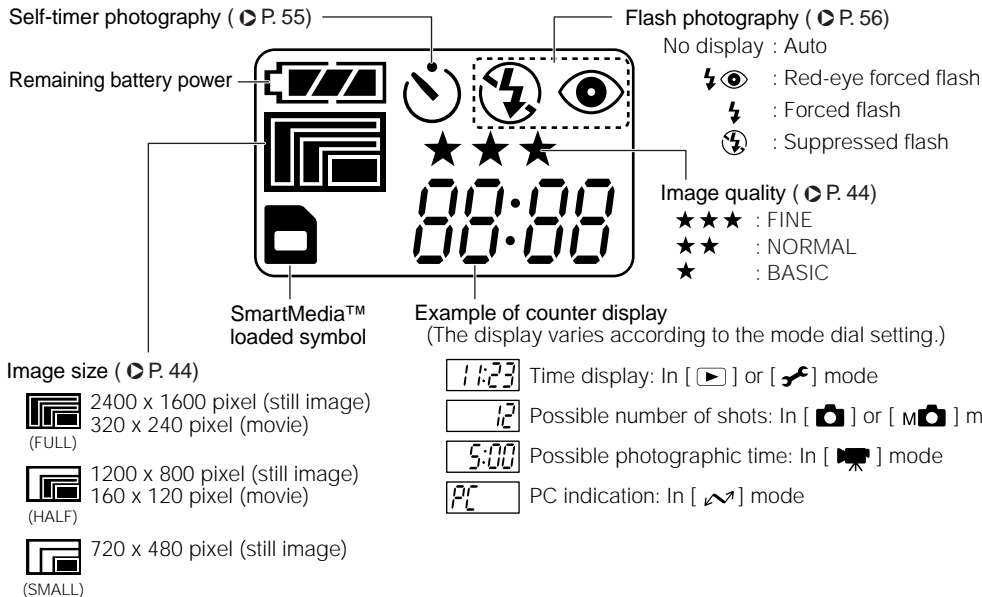

Installing the batteries


This camera uses four size AA batteries. For details on handling batteries, be sure to read page 16.

Loading the Batteries


IMPORTANT

- Before you load or remove the batteries, be sure to turn the camera off. If the battery is loaded or removed with the power on, the date setting may return to its default or the camera settings may be reset. (SET-UP ► Page 109, Manual Photography ► Page 58)

1 Unlock the battery cover ①, slide it, and open ②.

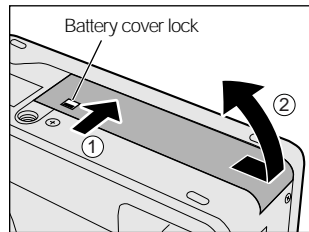



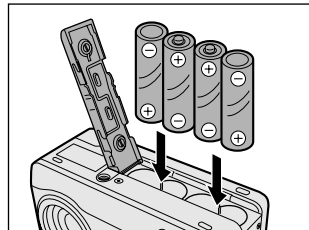


 

 
2 Load the batteries in the battery compartment making sure that it is loaded in the correct direction as shown in the figure on the right.



Installing the batteries (continued)

Battery Wear

When the power is ON, the remaining battery power is displayed on the LCD monitor and the status display.

LCD Monitor	Status Display	Remaining Battery Power
		Sufficient battery power
		Batteries are partially used.
		Battery power is nearing exhaustion. Replace with new batteries.
		Batteries completely exhausted. (Camera will not turn on.) Replace with new batteries.

Memo

- When you use the camera for the first time or if you have left the camera for a long time without the battery loaded, set the date (Page 111).
- If the batteries are exhausted and need replacement, do not connect the AC adapter. It may cause an incorrect display of remaining battery power.
- Battery power measure is based on amount of power required for camera LCD, flash, photography and playback. Status Display may show batteries exhausted if there is not enough power required for normal operation, even if there is some small power left in the batteries.

• About the battery duration time

The following shows the number of frames/time capable of continuous photographing and playback on condition of using new alkaline batteries.

The battery duration time may vary depending on environmental temperature, image size, image quality or using frequency of zoom.

In photography mode (using strobe every time in a normal temperature)

When LCD monitor is ON approx. 240 frames

When LCD monitor is OFF approx. 300 frames

In playback mode (slideshow continuous playback time)

approx. 110 min.

Using the Power Outlet (continued)

Memo

- When the AC adapter is connected after the batteries have been installed, the camera lens unit automatically retracts and the power turns off. Please turn on the power again to resume operation.
- Batteries can be installed while the AC adapter is connected. However, if the AC adapter is disconnected after the batteries have been loaded, the camera power is automatically turned off but the lens will remain extended. If this happens, please turn on the power to resume operation.

Getting
Ready

Taking
Photographs

Playing
Back Images

Erasing
Images

Handy
Functions

Other
Applications

Additional
Information

Sent: [REDACTED] To: [REDACTED]

[illegible]

Set the mode dial to **Movie** on the LCD monitor, cancel the protection (o) Page

When the DPOF write protection is on (Page 102),
 the images and index are erased, and the camera returns to the

6MB (SM-M1600D)/32MB (SM-M3200D)/64MB (SM-M6400D)/128M (SM-M1280D)

- The image before the photograph is taken is slightly less clear than playback images. (This is because television displays images at a lower resolution.)

Display Disk Adapter (Flash Path)
The display unit varies according to the output system.

This adapter allows SmartMedia™ to be used as 3.5" floppy disk.

• This adapter is inserted into the floppy disk drive on your PC, allowing

Images recorded on the SmartMedia™ to be transferred to the PC. When a cable is connected, only the TV display is available.

Color AC Adapter For the US/Canada: PDR-ACM1A

[illegible]

Press **ENTER** to the regular display, press **ENTER** (for the UK)

- The image size displayed on the LCD monitor becomes FULL (320 x 240) or HALF (160 x 120). The movies made in FULL size is displayed on the entire LCD monitor, and those made in HALF size is displayed in the center of the screen.

• When playing back movie images, switching is between standard and image only, not between F3.4

About SmartMedia™ (continued)

- Take care not to touch the SmartMedia™'s electrodes (metal contacts) or allow the electrodes to become soiled. Use a dry lint-free cloth to wipe away any dirt.
- To avoid damage caused by static electricity during transportation or storage, always use the special static-free case provided.
- If you are not using the camera for a long period of time, remove the SmartMedia™ and store it in a safe place.
- Inserting a SmartMedia™ that is charged with static electricity into your camera may cause it to malfunction. If this occurs, switch the camera OFF and then ON again.
- The SmartMedia™ may feel warm when it is removed from the camera after the camera is used for a long time. This is normal and not a malfunction.
- The SmartMedia™ has a limited service life. If images can no longer be written or erased, buy a new SmartMedia™.
- Use the index labels provided with the camera. If you attach a commercially available label, it may cause a malfunction when the SmartMedia™ is loaded or removed.

Loading SmartMedia™



Press the POWER button to turn the power off.

 Turning the Power Off  Page 38

Getting
Ready

Taking
Photographs

Playing
Back Images

Erasing
Images

Handy
Functions

Other
Applications

Additional
Information

About SmartMedia™ (continued)

Removing SmartMedia™

IMPORTANT


- Never open the SmartMedia™ cover or remove the SmartMedia™ while data is being recorded to the SmartMedia™ (viewfinder LED is lit red). This might damage the SmartMedia™ or corrupt the data on the SmartMedia™.

1 Press the POWER button to turn the power off.

☞ Turning the Power Off ☛ Page 38


2 Slide the SmartMedia™ cover release knob in the direction of the arrow ① to open the cover ②.

The cover opens ②.

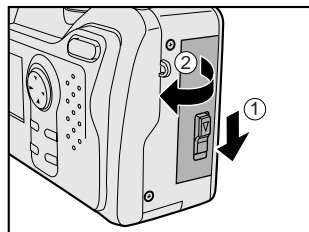

3 Push the SmartMedia™ in as far as it can go, and pull it out with your fingers.


If you push SmartMedia™ once in as far as it can go, it will protrude slightly. Pull it out with your fingers.

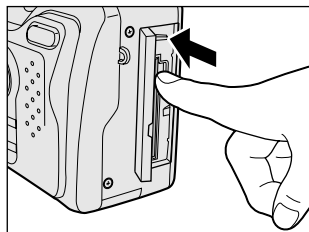

LCD Monitor Display (during photography)


The text, numbers and icons that are displayed on the LCD monitor vary according to the current settings.
The LCD monitor automatically turns ON if necessary even if it is set to OFF.
For details on the [] playback mode, see page 116.

In [] mode

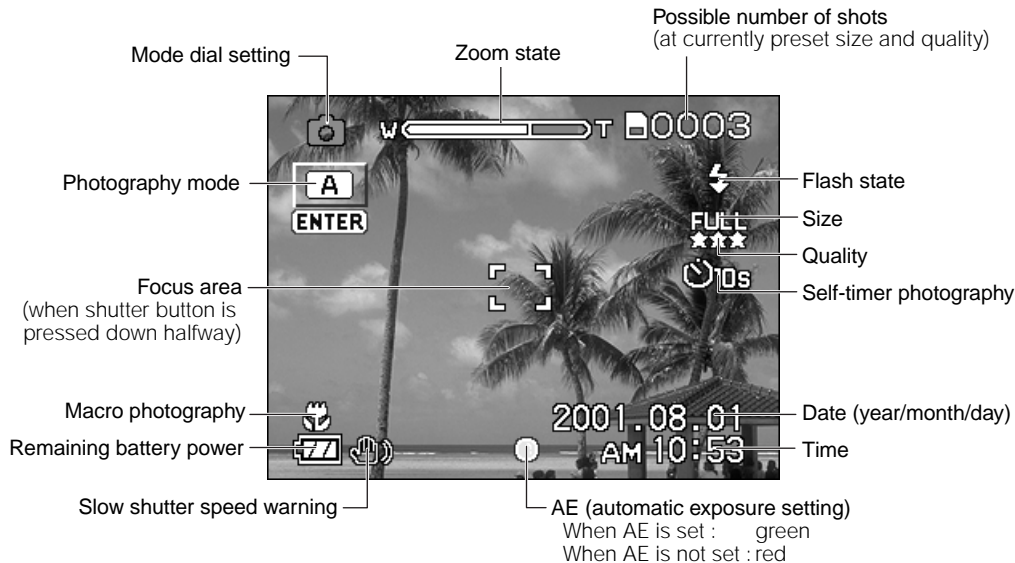

LCD Monitor Display (during photography) (continued)

In [] mode

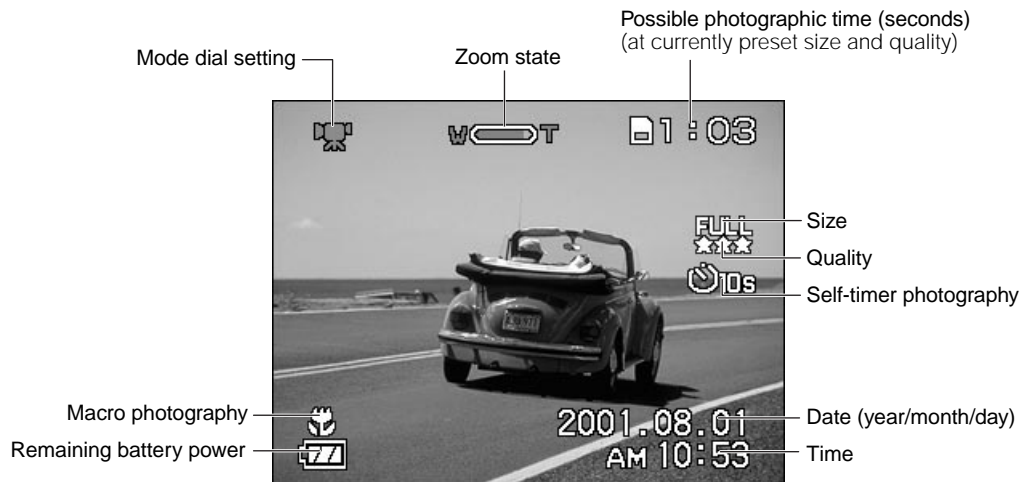

Memo

- The size of the data to be recorded varies according to the amount of detail in the subject image. So, the number of images that can be photographed after an image is recorded sometimes doesn't decrease.
- The display is momentarily interrupted after recording an image or the mode is switched. This does not affect photography.

How to Hold Your Camera

When taking a photograph, hold the camera firmly and prevent your finger or shoulder strap from covering the lens, flash or flash sensor.


Right

Camera held with both hands with your arms firmly held against the sides of your chest



Wrong

Fingers held over the lens

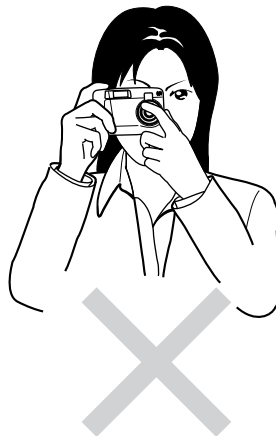

Se [REDACTED]

The **3.5M INFO** tab displays the information of the selected folder and folders.

Set the mode dial to  from the SmartMedia

On the screen, the following text is displayed:

6MB (SM-M1600D)/32MB (SM-M3200D)/64MB (SM-M6400D)/128M (SM-M1280D)

- The image before the photograph is taken is slightly less clear than playback images. (This is because television displays images at a lower resolution.)

The display unit varies according to the output system. This adapter allows SmartMedia™ to be used as 3.5" floppy.

With the NISC system, images can be displayed simultaneously on the LCD monitor and TV during photography and playback.

Images recorded on the SmartMedia™ to be transferred to the PC
With the PAL system, images cannot be displayed simultaneously: When a cable is connected, only
TV display is available.

A.C. Adapter With the PAL system, images are played back with a black frame surrounded.

For the US/Canada: PDR-ACM1A



© 2015 The Authors. Journal of Internal Medicine © 2015 Blackwell Publishing Ltd



Image only



Services (mode) (page 109). Select **QUALITY**

on the **SETUP MENU**, and press **ENTER** and pressing **ENTER** again to select **Yes**.

ENTER (1 point) (5 on the LHK)

The image size displayed on the LCD monitor becomes FULL (320 x 240) or HALF (160 x 120). The



Flashing: If hardware malfunction, the movies made in LIALE are displayed on the entire LCD monitor, and those made in HIALE size is

movies made in HD size is displayed on the entire HD monitor, and those made in FHD size is displayed in the center of the screen

Memo

- When playing back movie images, switching is between standard and image only.

in camera-usermanual.com

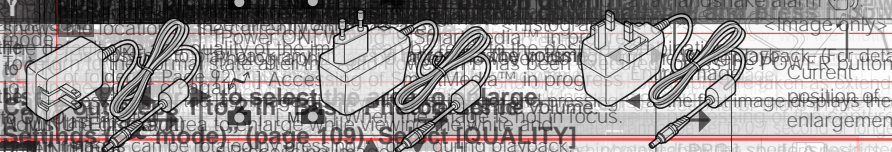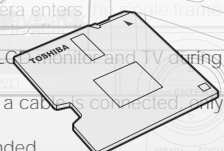

Photography (Auto Photography)

This is the most commonly used photography mode.

In this mode, exposure (combination of shutter speed and aperture) is automatically controlled to facilitate photography. There are two ways of taking photographs in this mode: using the viewfinder and using the LCD monitor.

Using the Viewfinder

1

Get ready to take the photograph.

Loading the batteries (▶ Page 25) and the SmartMedia™ (▶ Page 31) into the camera.

2

Press the POWER button to turn the power on.


☞ Turning the Power On ▶ Page 38

3

Set the mode dial to [].

Remove the lens cap beforehand.

If not, an error message will be displayed. (▶ 129)

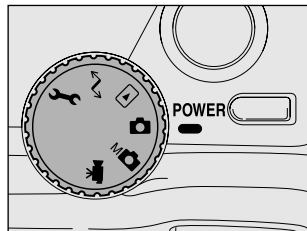

4

Turn the LCD monitor OFF. (▶ Page 117)

To reduce the amount of battery wear, we recommend turning the LCD monitor display OFF, and using the viewfinder to take photographs.

Getting Ready

Taking Photographs

Playing Back Images

Erasing Images

Handy Functions

Other Applications

Additional Information

Photography (Auto Photography) (continued)

3 Set the mode dial to [].


4 Look at the image on the LCD monitor to compose the picture.

☞ To adjust the brightness of the LCD monitor ▶ Page 115



5 Press the shutter button down halfway ①, and press it down fully ②.

- Pressing the shutter button down halfway adjusts the exposure, and pressing the shutter button down fully takes the shot.
- When the focus and exposure are correctly adjusted, the viewfinder lamp lights (green), and the AF icon turns green.
- If you shoot a still picture, when preview is set to ON (▶ Page 77), the recorded image is displayed on screen for about two seconds.
- The viewfinder LED turns red while image data is being recorded onto the SmartMedia™.

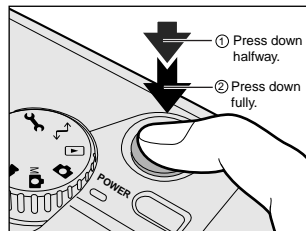




Memo

- The LCD monitor sometimes displays bright, dark or colored spots at all times. This is not a malfunction. These spots do not appear in the photographed image.

Setting the Image Size and Quality (continued)

<Quality>	[★★★]	FINE	: 1/5 (JPEG) compression	} (still image)
	[★★]	NORMAL	: 1/7.5 (JPEG) compression	
	[★]	BASIC	: 1/15 (JPEG) compression	

The more stars there are, the better image quality becomes. Higher quality images, however, take up more memory space, reducing the number of images that can be taken or the possible photographic time.

<Size>  FULL : 2400 x 1600 pixel (still image), 320 x 240 pixel (movie)
  HALF : 1200 x 800 pixel (still image), 160 x 120 pixel (movie)
  SMALL : 720 x 480 pixel (still image)

The larger size improves the quality of the image. Higher quality images, however, take up more space, reducing the number of images that can be taken or the possible photographic time.

3 Take the photograph.

☞ For details on how to take photographs ► Photograph

Memo

- To make the image smaller, it is more effective to reduce the size first and then reduce image quality.
- After you have taken a photograph, you can reduce its size (▶ Page 94) and quality (▶ Page 96).
- The memory size of the image varies according to the subject.
- The compression ratio is given for reference only.
- In the movie mode, the quality and size setting changes in the following order, regardless of the image quality setting.


FULL★★ → FULL★★★★ → HALF★
 ↑ ↓
 FULL★ ← HALF★★★★ ← HALF★★

- 98 -


Taking Photographs in a Variety of Modes ([SCENE▶] Mode)

Set the appropriate scene mode from: [A] automatically adjusts the focus and exposure settings, [] portrait, [] landscape, [] sports, [] night, [] multi photography mode options.

1 Set the mode dial to [].

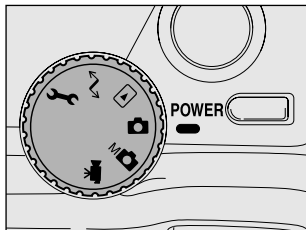

2 Press ENTER.
[SCENE▶] is displayed on the LCD monitor.

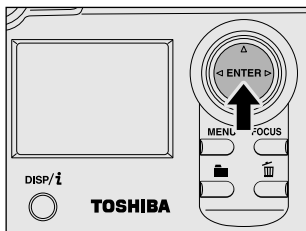

Protecting an image (SmartMedia™ Mode) (continued)

Removing the Protection

IMPORTANT

Try out steps 1 to 3 in "Protecting An Image" (Page 106).

Formatting erases all the images on a SmartMedia™, regardless of whether they are protected or not. To protect the entire SmartMedia™, see "Write Protection" (U Page 34).

Protecting an image

Press the **ENTER** button to set the mode.

Press the **ENTER** button to set the mode.

Press the **ENTER** button to set the mode.

Press the **ENTER** button to set the mode.

Press the **ENTER** button to set the mode.

Press the **ENTER** button to set the mode.

Press the **ENTER** button to set the mode.

Press the **ENTER** button to set the mode.

Press the **ENTER** button to set the mode.

Press the **ENTER** button to set the mode.

Press the **ENTER** button to set the mode.

Press the **ENTER** button to set the mode.

Press the **ENTER** button to set the mode.

Press the **ENTER** button to set the mode.



It is possible to play back any images in any folders by pressing **◀** or **▶** during playback.

• About Folders U Page 92

Press the **ENTER** button to set the mode.

Press the **ENTER** button to set the mode.

Press the **ENTER** button to set the mode.

Press the **ENTER** button to set the mode.

Press the **ENTER** button to set the mode.

Press the **ENTER** button to set the mode.

Press the **ENTER** button to set the mode.

Press the **ENTER** button to set the mode.

Press the **ENTER** button to set the mode.

Press the **ENTER** button to set the mode.

Taking Photographs in a Variety of Modes ([SCENE▶] Mode) (continued)

[] Automatically adjusts the focus and exposure settings

The camera automatically adjusts the focus and exposure settings to take photographs.

[] Portrait

Select this option to make people stand out with the background out-of-focus.



[] Landscape

Select this option to take photographs of distant scenery or landscapes.



Removing the Protection

IMPORTANT

Formatting erases all the images on a SmartMedia™, regardless of whether they are protected or not. To protect the entire SmartMedia™, see "Write Protection" (U Page 34).

Protecting an image

Press **ENTER** to set the camera to the desired mode. Press **ENTER** to display the menu.

Press **ENTER** to select **ENTER**, and press **ENTER** to select **ENTER**.

It is possible to play back any images in any folders by pressing **◀** or **▶** during playback.

Press **ENTER** to select **ENTER**, and press **ENTER** to select **ENTER**.


Press **ENTER** to select **ENTER**, and press **ENTER** to select **ENTER**.

Press **ENTER** to select **ENTER**, and press **ENTER** to select **ENTER**.

Press **ENTER** to select **ENTER**, and press **ENTER** to select **ENTER**.

Press **ENTER** to select **ENTER**, and press **ENTER** to select **ENTER**.

Press **ENTER** to select **ENTER**, and press **ENTER** to select **ENTER**.

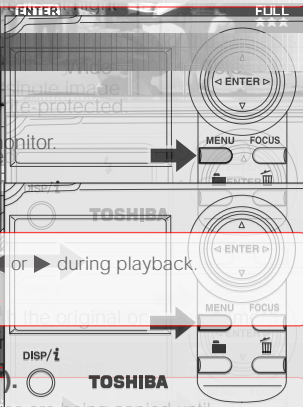

Press **ENTER** to select **ENTER**, and press **ENTER** to select **ENTER**.

Taking Photographs in a Variety of Modes ([SCENE▶] Mode) (continued)

[] 16-frame multi

This mode takes 16 shots continuously at 0.13 second intervals (7.5 frames/second). The 16 photographed images are saved as one image (FULL size: 2400 x 1600 pixels).

This mode is effective for continuously photographing moving subjects.



Memo

- Though zoom playback is not possible, playback of multi image pictures (▶ Page 86) is possible.
- Digital zoom photography is not possible.
- Photographs cannot be taken at HALF size or SMALL size. When HALF size or SMALL size is set before you select multi photography, the setting is automatically changed to FULL size. When multi photography is canceled, the setting returns to HALF size or SMALL size.

- 98 -

Zoom Photography (continued)

Digital Zoom Photography

To set the digital zoom:

 
- ① Press the MENU button.
- ② Use ▲ or ▼ to select [DIGITAL ZOOM] and press ►.
- ③ Use ▲ or ▼ to select [APPROVED] and press ENTER.
- ④ Press the MENU button.
- ⑤ To activate digital zoom, press the Zoom switch completely towards the "T" and hold it until the image on the LCD expands.



Press the shutter button down halfway, and press it down fully. ◀ Page 40

Memo

- The digital zoom photography is canceled by pressing the DISP/i button to turn the LCD monitor off. On the LCD monitor display off status, the digital zoom photography is not possible as well.
- The digital zoom photography is not possible in the 16-frame multi mode.
- The Zoom switch setting is automatically canceled by either turning the camera OFF or by activation of the Auto Power OFF function.
- You can check the zoom status in the LCD monitor.



- In movie mode, only the 2.2X digital zoom photography is possible.

Protecting the Images (Protect (Protect) and Select mode)

Removing the Protection

IMPORTANT
Formatting erases all the images on a SmartMedia™, regardless of whether they are protected or not.
To protect the entire SmartMedia™, see "Write Protection" (U Page 34).

Protecting an image


Press the **ENTER** button to select the image to be protected. The image is displayed on the monitor.
Press the **ENTER** button to select the image to be protected. The image is displayed on the monitor.
Press the **ENTER** button to select the image to be protected. The image is displayed on the monitor.
Press the **ENTER** button to select the image to be protected. The image is displayed on the monitor.

Memo
It is possible to play back any images in any folders by pressing **◀** or **▶** during playback.
+ About Folders (U Page 92)

Press the **ENTER** button to select the image to be protected. The image is displayed on the monitor.
Press the **ENTER** button to select the image to be protected. The image is displayed on the monitor.
Press the **ENTER** button to select the image to be protected. The image is displayed on the monitor.

Memo
Do not remove the SmartMedia™ or turn the camera off while images are being copied until the **CHANGE CARD** appears on the screen. This might damage the SmartMedia™.
To write-protect another image, write-protection can be simultaneously carried out if set at step 2.
[P] is displayed for images that are specified in the DPOF format, and write-protection cannot be removed. To remove write-protection, cancel the DPOF format setting (U Page 102).

Memo
Press the **ENTER** button to select the image to be protected. The image is displayed on the monitor.
Press the **ENTER** button to select the image to be protected. The image is displayed on the monitor.
Press the **ENTER** button to select the image to be protected. The image is displayed on the monitor.


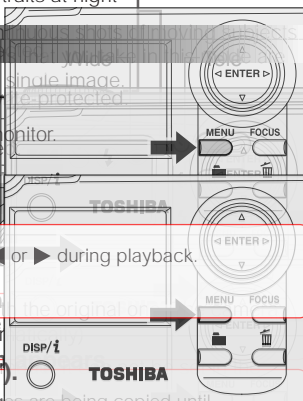


Self-timer Photography

When the self-timer is used, the camera automatically takes a picture after the preset time (2 or 10 seconds).

- 1 Set the mode dial to [] [M] or [].
- 2 Press the self-timer button while viewing the status display area.

 When you press the self-timer button, the following are displayed in order on the LCD monitor.

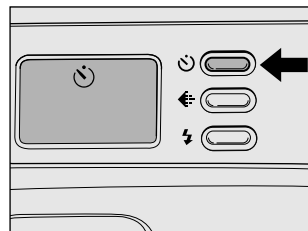

- 3 Compose the picture.
- 4 Press the shutter button down halfway, and press it down fully. Page 40


The self-timer LED lights red, and then flashes. The photograph is then taken after the preset time (2 or 10 seconds).

When photographs are taken using the LCD monitor, the count down is displayed.
To cancel photography midway, press .

Memo

- Burst photography is not possible.
- In movie mode, press the shutter button down fully to stop recording.
If this operation is not performed, photography is automatically stopped when the SmartMedia™ runs out of free space or when the size of a single picture has reached the maximum recordable size.

When the size of the photograph on the LCD monitor is displayed in yellow when the shutter button is pressed halfway down, it is not possible to increase the size of an image, or to restore a photograph that has not been saved. If the camera is turned off or the Auto Power OFF function is activated.

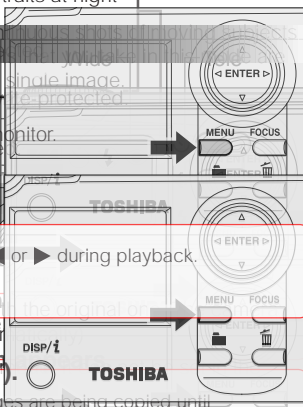

Photography Using the Flash (continued)

[No display] Auto

In this mode, the flash fires automatically according to the photography conditions. This mode is ideal for general photography where you are not trying to achieve any particular effect.

[Red-Eye Forced Flash

Use this mode to avoid the red-eye effect (Additional Information, Glossary) when photographing people in low-light conditions.

Red-eye is reduced more effectively if the subject looks directly towards the camera. Effectiveness is also increased if the distance between the subject and camera is kept as short as possible.

[Forced Flash






In this mode, the flash always fires. Use the Forced Flash mode when the subject is backlit, or in artificial light (fluorescent lighting, etc.).

The flash also fires during macro photography.

[Suppressed Flash

Use the Suppressed Flash mode when you are taking pictures in indoor lighting at distances too great for the flash to have any effect, such as theater performances or indoor sporting events.

Memo

- In [], [] or [] mode, flash photography is not possible.
- In [] mode, flash photography is fixed to red-eye auto.
- In [] mode, flash photography is fixed to slow synchro.
- In the flash photography mode, the flash always fires twice. A picture is taken at the second firing.

Sell Settings (High/Low/Stop/Display/Vis/Display/Alld)


Manual Settings (continued)

3 Press ▲ or ▼ to select the setting item.

4 Press ► to display option menu, press ▲ or ▼ to select options and press ENTER.

Pressing ENTER selects the setting. To cancel, press ◀.

- ☞ [EXP.] Exposure control ► Page 60
- [W.B.] White balance ► Page 60
- [A.E.] Metering system ► Page 61
- [S/C] Single, continuous or AEB photography mode ► Page 61

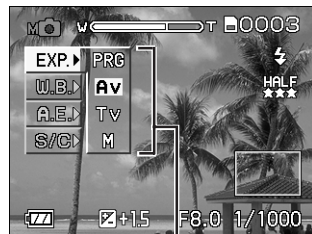

Set values

5 Press ENTER.

The camera is ready to take photographs.

6 Compose the picture, press the shutter button down halfway, and press it down fully. ► Page 40

The camera takes the picture.

See [this page](#) for more information on the [terms and conditions](#) of the survey.

[illegible]

Set the mode dial to for the SmartMedia

Media 000035 are erased, and the camera returns to the

6MB (SM-M1600D)/32MB (SM-M3200D)/64MB (SM-M6400D)/128M (SM-M1280D)

- The image before the photograph is taken is slightly less clear than playback images. (This is because television displays images at a lower resolution.)

• The display unit varies according to the output system

This adapter allows SmartMedia™ to be used as 3.5" floppy disk with the NTSC system. Images can be displayed simultaneously

This adapter is inserted into the floppy disk drive on your PC, allowing

Images recorded on the SmartMedia™ to be transferred to the PC. **Viewfinder** With the PAL system, images cannot be displayed simultaneously. When a cable is connected, only TV display is available.

Color | AC Adapter | PAL system, images are played back with a black frame surrounded.

With the shutter button held half

DISP/1

SHIBA

ALITY

Settings (mode), (page 109). Select **QUALITY**

On the **SETUP MENU**, and press **▶** (right arrow) and pressing **▶** (right arrow) clockwise.

ENTER 10 (for the UK)

- The image size displayed on the LCD monitor becomes FULL (320 x 240) or HALF (160 x 120). The

When the image size displayed on the LCD monitor becomes FULL (625 X 215) or HALF (300 X 115), the movies made in FULL size is displayed on the entire LCD monitor, and those made in HALF size is

4. The number 4 will be automatically set between 100, 100, and 100, 100 regardless of its setting, displayed in the center of the screen.

Memo



- When playing back movie images, switching is between standard and image only. not possible F3.

[led From camera-usermanual.com](http://www.camera-usermanual.com)



Manual Settings (continued)

Metering system (A.E.)

The camera calculates the exposure level before a photograph is taken.

- [] : Multi metering (default)
The exposure is measured and calculated for the entire area of the screen.
By dividing the entire area of the screen, the exposure level for each unit is calculated. A well balanced exposure can be obtained.
- [] : Spot metering
The exposure is measured in a very small area at the center of the screen.
It is possible to calculate the exposure of a subject without being affected by the surrounding environment.

Single, continuous or AEB photography mode (S/C)

- [] : Photography in 1-shot mode (default)
- [] : Photography in burst mode (► Page 72)
- [AEB] : Photography with the Automatic Exposure Bracketing (► Page 71)

Photography in the Aperture-priority Mode

In this mode, photographs are taken with the priority given to aperture. The camera automatically sets the shutter speed according to the aperture.

A small aperture value produces a portrait photo with an out-of-focus background. The smaller the aperture value, the more out-of-focus the background becomes.

A large aperture value produces sharp images on both close objects and distant objects like landscapes. The larger the aperture value, the larger the area for sharp images.

1 Carry out steps 1 to 2 in “Manual Settings” (page 58).

2 Press ▲ or ▼ to select [EXP.].

3 Press ► to display option menu, press ▲ or ▼ to select [Av] and press ENTER.
Pressing ENTER selects the setting.

4 Press ENTER.
The camera is ready to take photographs.



Photography in the Shutter Speed-priority Mode

In this mode, photographs are taken with the priority given to shutter speed. The camera automatically sets the aperture value according to the shutter speed.

A fast shutter speed produces a photograph that looks as if a moving subject is still.

A slow shutter speed produces a photograph that makes you feel that it is flowing.

1 Carry out steps 1 to 2 in “Manual Settings” (page 58).

2 Press ▲ or ▼ to select [EXP.].


3 Press ► to display option menu, press ▲ or ▼ to select [Tv] and press ENTER.
Pressing ENTER selects the setting.

4 Press ENTER.
The camera is ready to take photographs.



Additional Information

Copyright © 2012 Pearson Education, Inc. All rights reserved. Printed in the United States of America. This book is protected by copyright. No part of this book may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or by any information storage or retrieval system, without permission in writing from Pearson Education, Inc.

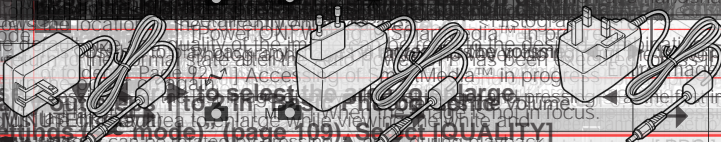

Photography in the Full Manual Mode

Set the aperture and shutter speed values separately before taking a photograph.

1 Carry out steps 1 to 2 in “Manual Settings” (page 58).

2 Press **▲** or **▼** to select [EXP.].

3 Press **▶** to display option menu, press **▲** or **▼** to select [M] and press **ENTER**.

Pressing **ENTER** selects the setting.

4 Press **ENTER**.

The camera is ready to take photographs.



5 Pressing **▲** or **▼** to set the aperture value (○ Page 64), and pressing **▲** or **▼** to set the shutter speed value (○ Page 66) separately are also possible.

6 Compose the picture, press the shutter button down halfway, and press it down fully. ○ Page 40

The camera takes the picture.

Memo

- When pressing **▲** or **▼** in the full manual mode, the shutter speed is adjusted, but the exposure compensation setting is not possible. However the exposure value is displayed on the LCD monitor. When the exposure value is displayed in red, it shows over- or under-exposure. It is recommended that the shutter speed and the aperture value be adjusted to obtain the proper level of exposure.
- If the aperture value is set to F2.9 (increased aperture size), the shutter speed 1/1000 second is not available.

Setting Up the Camera

The camera has a built-in LCD monitor. When the camera is turned on, the LCD monitor displays the current image. You can select the image to be displayed on the LCD monitor by pressing the **DISP/1** button. The camera has a built-in LCD monitor. When the camera is turned on, the LCD monitor displays the current image. You can select the image to be displayed on the LCD monitor by pressing the **DISP/1** button. The camera has a built-in LCD monitor. When the camera is turned on, the LCD monitor displays the current image. You can select the image to be displayed on the LCD monitor by pressing the **DISP/1** button.

Setting the mode of the LCD monitor

When the camera is turned on, the LCD monitor displays the current image. You can select the image to be displayed on the LCD monitor by pressing the **DISP/1** button. The camera has a built-in LCD monitor. When the camera is turned on, the LCD monitor displays the current image. You can select the image to be displayed on the LCD monitor by pressing the **DISP/1** button. The camera has a built-in LCD monitor. When the camera is turned on, the LCD monitor displays the current image. You can select the image to be displayed on the LCD monitor by pressing the **DISP/1** button.

Floppy Disk Adapter (Flash Path)

This adapter allows SmartMedia images to be displayed simultaneously on the LCD monitor and TV during photography and playback. When the floppy disk adapter is inserted into the floppy disk drive on your PC, allowing images on the PC to be transferred to the PC. When the floppy disk adapter is inserted into the floppy disk drive on your PC, allowing images on the PC to be transferred to the PC. When the floppy disk adapter is inserted into the floppy disk drive on your PC, allowing images on the PC to be transferred to the PC.

Color: C. Adapter PAL system, images are played back with a black frame surrounded. For the US/Canada: PDR-ACM1A



When the camera is turned on, the LCD monitor displays the current image. You can select the image to be displayed on the LCD monitor by pressing the **DISP/1** button. The camera has a built-in LCD monitor. When the camera is turned on, the LCD monitor displays the current image. You can select the image to be displayed on the LCD monitor by pressing the **DISP/1** button.



When the camera is turned on, the LCD monitor displays the current image. You can select the image to be displayed on the LCD monitor by pressing the **DISP/1** button. The camera has a built-in LCD monitor. When the camera is turned on, the LCD monitor displays the current image. You can select the image to be displayed on the LCD monitor by pressing the **DISP/1** button.

When the camera is turned on, the LCD monitor displays the current image. You can select the image to be displayed on the LCD monitor by pressing the **DISP/1** button. The camera has a built-in LCD monitor. When the camera is turned on, the LCD monitor displays the current image. You can select the image to be displayed on the LCD monitor by pressing the **DISP/1** button.

When the camera is turned on, the LCD monitor displays the current image. You can select the image to be displayed on the LCD monitor by pressing the **DISP/1** button. The camera has a built-in LCD monitor. When the camera is turned on, the LCD monitor displays the current image. You can select the image to be displayed on the LCD monitor by pressing the **DISP/1** button.

When the camera is turned on, the LCD monitor displays the current image. You can select the image to be displayed on the LCD monitor by pressing the **DISP/1** button. The camera has a built-in LCD monitor. When the camera is turned on, the LCD monitor displays the current image. You can select the image to be displayed on the LCD monitor by pressing the **DISP/1** button.

When the camera is turned on, the LCD monitor displays the current image. You can select the image to be displayed on the LCD monitor by pressing the **DISP/1** button. The camera has a built-in LCD monitor. When the camera is turned on, the LCD monitor displays the current image. You can select the image to be displayed on the LCD monitor by pressing the **DISP/1** button.

When the camera is turned on, the LCD monitor displays the current image. You can select the image to be displayed on the LCD monitor by pressing the **DISP/1** button. The camera has a built-in LCD monitor. When the camera is turned on, the LCD monitor displays the current image. You can select the image to be displayed on the LCD monitor by pressing the **DISP/1** button.

Getting Ready

Taking Photographs

Playing Back Images

Erasing Images

Handy Functions

Other Applications

Additional Information

Exposure Compensation

This setting allows you to intentionally lighten or darken the entire image. Use this setting when the optimum brightness (exposure) cannot be obtained, for example, when the brightness between the subject and the background is not balanced or when the subject to photograph occupies only an extremely small part of the screen.

1 Set the mode dial to [M📷].

2 Press ◀ or ▶ to adjust the exposure.

The setting range is as follows. A larger value lightens the exposure, and a smaller value darkens the exposure. The value that you set is displayed on the LCD monitor. Press ▶ to increase (brighten) exposure, and ◀ to decrease (darken) exposure.



Exposure Setting Value

◀ (to - side)

▶ (to + side)

-2.0 / -1.5 / -1.0 / -0.5 / 0 (default) / +0.5 / +1.0 / +1.5 / +2.0

3 Compose the picture, press the shutter button down halfway, and press it down fully. ◀ Page 40

The ideal brightness sometimes cannot be obtained even if a large exposure value is set in dark photographic conditions.

In this case, press the shutter button, and check the brightness in the preview image (photographed still image). (PREVIEW ▶ Page 77)

Taking Shots With the Automatic Exposure Bracketing (AEB Photography)

When it is difficult to determine the necessary exposure compensation, this mode will automatically set the camera to photograph three consecutive pictures in -0.5, 0, and +0.5 compensation.

1 Carry out steps 1 to 2 in “Manual Settings” (page 58).

2 Press **▲** or **▼** to select [S/C].

3 Press **▶** to display option menu, press **▲** or **▼** to select [AEB] and press **ENTER**.
Pressing **ENTER** selects the setting.



4 Press **ENTER**.

The camera is ready to take photographs.

5 Compose the picture, press the shutter button down halfway, and press it down fully. **○ Page 40**

The camera will automatically take a picture in -0.5 compensation, 0 compensation, and +0.5 compensation.

Memo

- If burst photography is selected when the shutter speed is set to a speed of 0.7 second or longer, the shutter speed is automatically changed to 1/2 second.
- The camera takes three consecutive pictures in the order of standard exposure, overexposure (+0.5) and underexposure (-0.5) compensation.

Taking Photographs Continuously (Burst Photography) (continued)

5 Compose the picture, press the shutter button down halfway, and press it down fully. Page 40

The maximum number of photography that can be taken continuously is three.

If you release the shutter button before the camera captures three images, the camera will stop taking pictures at that point.

After photography is finished, the LCD monitor automatically turns ON.

6 Press or to verify the image.

You will be allowed to choose which image to save before it is recorded to the SmartMedia™.












The number of photographs stored in the memory is displayed at the bottom right of the screen, and the number in green is the image currently displayed.

The green indication also moves as you move the image to be displayed.



7 Use or to select the recording method.

The camera is set to erase all images immediately after photography.

- ①[ ] : This setting is for saving and erasing the selected image.
Press  or  to select the image, and press ENTER.
The red  mark appears under the selected image. To cancel selection of the image, press ENTER again.
- ②[ ] : This setting is for saving all images.
Press ENTER.
All images are selected, and all images with  turns into a red .
- ③[ ] : This setting is for erasing all images.
Press ENTER.


① to ③ can be combined regardless of their order to set saving and erasing of images.

Setting the Playback Mode

The camera has two playback modes: **Standard** and **Image Only**. You can switch the playback mode by pressing the **DISP/1** button. When the camera is in the **Standard** mode, the LCD monitor displays the original factory setting. When the camera is in the **Image Only** mode, the LCD monitor displays the image only, without the playback menu.

Setting the Playback Mode

1. Press the **DISP/1** button. The camera enters the playback mode. The LCD monitor displays the image only, without the playback menu.
2. Press the **DISP/1** button again. The camera enters the **Image Only** mode. The LCD monitor displays the image only, without the playback menu.
3. Press the **DISP/1** button again. The camera enters the **Standard** mode. The LCD monitor displays the original factory setting.

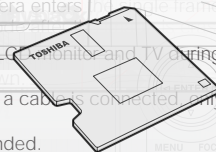

Color The camera has two color modes: **Standard** and **Image Only**. The **Standard** mode displays the image with a black frame surrounded. The **Image Only** mode displays the image only, without the black frame.

Meaning The camera has two meaning modes: **Standard** and **Image Only**. The **Standard** mode displays the image with a black frame surrounded. The **Image Only** mode displays the image only, without the black frame.

ALITY The camera has two ality modes: **Standard** and **Image Only**. The **Standard** mode displays the image with a black frame surrounded. The **Image Only** mode displays the image only, without the black frame.

ake The camera has two take modes: **Standard** and **Image Only**. The **Standard** mode displays the image with a black frame surrounded. The **Image Only** mode displays the image only, without the black frame.


Onge The camera has two onge modes: **Standard** and **Image Only**. The **Standard** mode displays the image with a black frame surrounded. The **Image Only** mode displays the image only, without the black frame.

4 The camera has two 4 modes: **Standard** and **Image Only**. The **Standard** mode displays the image with a black frame surrounded. The **Image Only** mode displays the image only, without the black frame.

Making Movies

Make a movie of moving images. Audio can also be recorded.

1 Set the mode dial to [].

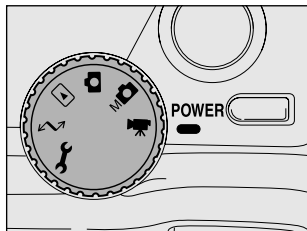


2 Compose the picture, press the shutter button down halfway, and press it down fully.  Page 40

Photography begins.

The maximum photography time (seconds) appears on the LCD monitor and on the status display.

3 To stop making movies, press the shutter button down fully again.

If you do not do this, photography is automatically stopped when there is no more free space on the SmartMedia™, or when the maximum size that a single movie can be recorded is reached. (Maximum photography time  Page 124)

Memo

- Flash photography is not possible.
- The image size displayed on the LCD monitor becomes FULL (320 x 240) or HALF (160 x 120). The movie made in FULL size is displayed on the entire LCD monitor, and that made in HALF size is displayed in the center of the screen.
- When making a movie, there's a risk of lens motor noises being recorded on the sound track.
- When making a movie, only digital zoom photography is available.

Setting the Date and Time (Date/Time)

The camera has a built-in clock. You can set the date and time. You can also set the camera to display the date and time on the LCD monitor. You can also set the camera to display the date and time on the LCD monitor. You can also set the camera to display the date and time on the LCD monitor.

Setting the Date and Time

1. Press the **DATE/TIME** button. The camera enters the date and time setting mode.

2. Use the **DATE/TIME** button to move the cursor to the item you want to set. Press the **DATE/TIME** button to enter the setting.

3. The image before the photograph is taken is slightly less clear than playback images. (This is because television displays images at a lower resolution.)

Floppy Disk Adapter (Flash Path)

This adapter allows SmartMedia to be used as a floppy disk.

This adapter is inserted into the floppy disk drive on your PC, allowing images and movie images to be transferred to the PC.

Images and movie images cannot be displayed simultaneously: When a cable is connected, only TV display is available.

Color: C-Adapter PAL system, images are played back with a black frame surrounded.

For the US/Canada: PDR-ACM1A



ALITY



Setting the Date and Time

1. Press the **DATE/TIME** button. The camera enters the date and time setting mode.

2. Use the **DATE/TIME** button to move the cursor to the item you want to set. Press the **DATE/TIME** button to enter the setting.

3. The image before the photograph is taken is slightly less clear than playback images. (This is because television displays images at a lower resolution.)

Floppy Disk Adapter (Flash Path)

This adapter allows SmartMedia to be used as a floppy disk.

This adapter is inserted into the floppy disk drive on your PC, allowing images and movie images to be transferred to the PC.

Images and movie images cannot be displayed simultaneously: When a cable is connected, only TV display is available.

Color: C-Adapter PAL system, images are played back with a black frame surrounded.

For the US/Canada: PDR-ACM1A

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

ALITY

Changing the Preset Conditions (RECORDING MENU) (continued)




To quit the RECORDING MENU, press the MENU button.

The camera is now ready to take photographs.

PREVIEW

This setting allows you to display a photographed image on the LCD monitor for two seconds immediately after you have taken the shot.

This allows you to check the composition and brightness of the photographed image.

Note, however, that detailed areas are sometimes lacking detail as the resolution of preview images is low. To check detailed areas and focus, check it in the [] playback mode (► Page 80).

To cancel preview, press the shutter button halfway down again.

The three images that you took are displayed for about two seconds each in the AEB photography mode (► Page 71)

[OFF] : Do not display preview (default)

[ON] : Display preview

COLOR

Set the color of the image to be photographed.

[STANDARD] : Standard color (default)

[VIVID] : Vivid color

[MONOCHROME] : Black and white

[SEPIA] : Sepia

Selbstbestimmung und Selbstverwirklichung

Changing the Preset Conditions (RECORDING MENU) (continued)

SHARPNESS

Sets the sharpness at which the image is to be recorded.

- [NORMAL] : Normal sharpness (default)
- [SOFT] : Soft effect
- [HARD] : Hard effect

CONTRAST

Sets the contrast of the image to be photographed.

- [NORMAL] : Automatic (standard) setting (default)
- [STRONG] : Strong contrast
- [SOFT] : Soft contrast

DIGITAL ZOOM

Enlarges the center of the screen and takes photographs with apparent effect that the focal distance is set to twice the distance.


 Zoom Photography ► Page 52

- [ON] : Enables digital zoom photography. (default)
- [OFF] : Disables digital zoom photography.

LCD

Adjusts the brightness of the LCD monitor. This adjustment does not adjust the brightness of the image to be recorded.

[-5] to [+5]

 To adjust the brightness of the LCD monitor ► Page 115

Send the completed form to: **Sevgi Özgür, Bilkent University, Ankara, Turkey**

SEMINFO.GE

[illegible]

Set the mode dial to  for the SmartMedia

When the DPOF writing protection is turned off, the camera returns to the normal operation.

6MB (SM-M1600D)/32MB (SM-M3200D)/64MB (SM-M6400D)/128M (SM-M1280D)

- The image before the photograph is taken is slightly less clear than playback images. (This is because television displays images at a lower resolution.)

Display Disk Adapter (Flash Path)
The display unit varies according to the output system.

This adapter allows SmartMedia™ to be used as a 3.5" floppy disk. With the N400 system, images can be displayed simultaneously on the LCD monitor and TV during photography and playback.

Images recorded on the SmartMedia™ to be transferred to the PC Viewfinder. When a cable is connected, images cannot be displayed simultaneously. When a cable is connected, only TV display is available.

Color ● A.C. Adapter ● PAL system, images are played back with a black frame surrounded.
For the US/Canada: PDR-ACM1A

With the shutter button held half-pressed, the camera will take a series of 10 frames at 1/250 sec. (1/250 sec. is the minimum shutter speed for the 1/250 sec. mode). The camera will then take a final frame at 1/250 sec. (1/250 sec. is the minimum shutter speed for the 1/250 sec. mode). The camera will then take a final frame at 1/250 sec. (1/250 sec. is the minimum shutter speed for the 1/250 sec. mode).

1. Power adapter (Type A)

2. Power adapter (Type B)

3. Power adapter (Type C)

▶ Press **ENTER** to return to the regular display.

- The image size displayed on the LCD monitor becomes FULL (320 x 240) or HALF (160 x 120). The movies made in FULL size is displayed on the entire LCD monitor, and those made in HALF size is displayed in the center of the screen.

• When playing back movie images, switching is between standard and image only.

Playing Back Movies


Play back movies that you have recorded. Audio can also be played back.

1 Set the mode dial to [▶].

The last recorded image appears on the LCD monitor.

☞ To adjust the brightness of the LCD monitor ▶ Page 115

Changing the LCD monitor display ▶ Page 116

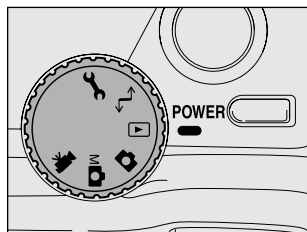

2 Press ◀ or ▶ to select the movie to play back.

3 Press ▲.

Playback of the selected movie begins.

The user can control playback as shown on the table of the next page by pressing various buttons during playback, a pause or stopping.



Serifisering (Serif) (Serif Display) (Serif/finmek. MS)

[illegible]

Set the mode dial to  for the SmartMedia

05/11/2016 10:09:54 AM

6MB (SM-M1600D)/32MB (SM-M3200D)/64MB (SM-M6400D)/128M (SM-M1280D)

- The image before the photograph is taken is slightly less clear than playback images. (This is

Jonny Disk Adapter (FlashPath)

- The display unit varies according to the output system.

With the NTSC system, images can be displayed simultaneously on the LG monitor and TV during photography and playback.

Images recorded on the SmartMedia™ to be transferred to the PC. When a cable is connected, only images with the PAL system, images cannot be displayed simultaneously. When a cable is connected, only TV display is available.

Color | **AC Adapter**

For the US/Canada: PDR-ACM1A

Press and hold down the shutter button down to take a picture. The camera will take a picture with the shutter button held half-pressed.

ALITY

[illegible]

...essing these...
...n switch to...
...any...
...the worst...
...has been...
...back. For details...
...OWE R button

enlargement

can be for a more pressing issue during playback.

ENTER (for the U.S.) ENTER (for the U.K.)

- The image size displayed on the LCD monitor becomes FULL (320 x 240) or HALF (160 x 120). The

Flashing All movies made in FULL size is displayed on the entire LCD monitor, and those made in HALF size is displayed in the center of the screen.

displayed in the center of the screen.

- When playing back movie images, switching is between standard and image only, not possible F3.4.

[led From camera-usermanual.com](http://www.camera-usermanual.com)

Displaying a List of Images (Thumbnail Display)

Nine reduced images are simultaneously displayed on the LCD monitor. This manual calls this display "thumbnail display."

This feature is useful, for example, when there are many images recorded in the SmartMedia™. After you have displayed the thumbnail display, you can select the desired image and display it in the regular display.

1 Set the mode dial to [].

The last image frame appears on the LCD monitor.

2 Press ENTER.

Nine images are displayed simultaneously.


3 Use , , or to move the cursor to select the image to be displayed at regular size.


The cursor selected image is displayed with green frame.

Pressing the buttons continuously moves the cursor continuously.

4 Press ENTER.

The selected image is displayed at its regular size.

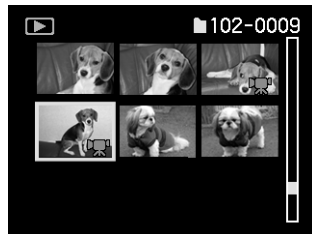

* In the thumbnail display mode, [] icon is displayed for the movie data.

Memo

- It is possible to play back any images in any folders by pressing  or  during playback in the thumbnail display mode.  About Folders  Page 92

Serifisering af HLRN (Routing Display) (se W-finderk. 445d)

SEMINFO

[illegible]

Set the mode dial to  Movie for the LCD monitor.

When the DPOF write protection is turned off, the camera returns to the normal operation.

6MB (SM-M1600D)/32MB (SM-M3200D)/64MB (SM-M6400D)/128M (SM-M1280D)

- The image before the photograph is taken is slightly less clear than playback images. (This is because television displays images at a lower resolution.)

- The display unit varies according to the output system.

With the M-SC system, images can be displayed simultaneously on the LCD monitor and TV during photography and playback.

Images recorded on the SmartMedia™ to be transferred to the PC

With the PAL system, images cannot be displayed simultaneously. When a cable is connected, only TV display is available.

- AC Adapter

Color ● AC Adapter ● For the US/Canada: PDR-ACM1A

[illegible]

ALITY ... push button down at a handshake alarm (👋).



to the volume
the focus
enlargement

Settings (mode) (page 109), Select QUALITY

on the **SETUP MENU** and press **OK**. Afterward pressing **▼** redr-ACMIU wise.

▶ To return to the regular display, press **ENTER**.

• The image size displayed on the LCD monitor becomes FULL (320 x 240) & HALF (160 x 120) alternately. Movies made in FULL size is displayed on the entire LCD monitor, and those made in HALF size is displayed on the upper half of the LCD monitor.

displayed in the center of the screen.

Memo


- When playing back movie images, switching is between standard and image only.

Auto Playback (Slideshow)


Automatically play back one image at a time in order. This feature is not supported in the movie mode.

1 Set the mode dial to [].
The last image frame appears on the LCD monitor.

2 Press the MENU button.
The PLAYBACK MENU is displayed.

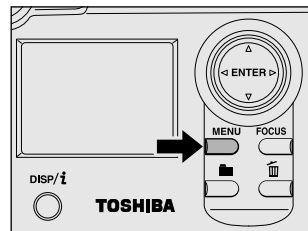

3 Use ▲ or ▼ to select [SLIDE SHOW] and press ►.
The slideshow begins and [] is displayed on the LCD monitor.
The next image is displayed every three seconds.

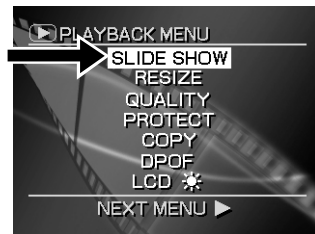

4 To quit the slideshow, press ENTER.
The LCD monitor displays the image when ENTER is pressed.
The slideshow is repeated until ENTER is pressed.

Memo

- The Auto Power OFF function does not operate during automatic playback.
- Auto playback is only available for images in the same folder.
- When movies are stored in the same folder, they are not played back during automatic playback.

Erasing Images (Erase Frame)

Erases images one image at a time.

Note: Images cannot be erased when they are protected (▶ Page 106) or the SmartMedia™ is write-protected (▶ Page 34).

- 1 Set the mode dial to [] , [] , [M] or [].**


When [] is selected, the last image frame or the thumbnail display appears on the LCD monitor.

- 2 When [] is selected, use ◀ or ▶ to select the image to be erased.**

When [], [M] or [] is selected, only the last recorded image can be erased.

- 3 Press the  erase button.**

The erase icon is displayed at the left of the screen.

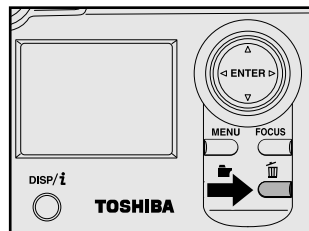

- 4 Use ▲ or ▼ to select [] , and press ENTER.**

This erases the image and returns to the previous mode.

To cancel erasing of image data, select [] and press ENTER.



Serifisering af Håndskrift til Duple / En / Fimfede

SEMINFO

[illegible]

Set the mode dial to for the SmartMedia

When the DPOF writing protection is turned off, the camera returns to the normal operation.

6MB (SM-M1600D)/32MB (SM-M3200D)/64MB (SM-M6400D)/128M (SM-M1280D)

- The image before the photograph is taken is slightly less clear than playback images. (This is because television displays images at a lower resolution.)

• The display unit varies according to the output system

With the NTSC system, images can be displayed simultaneously

This adapter is inserted into the floppy disk drive on your PC, allowing

Images recorded on the SmartMedia™ to be transferred to the PC
With the PAL system, images cannot be displayed simultaneously: When a cable is connected, only
TV display is available.

- **A.C. Adapter** With the PAI system, images are played back with a black frame surrounded

For the US/Canada: PDR-ACM1A

Two of the most important factors in the development of the human brain are the environment and the genes. The environment can be defined as the external factors that influence the development of the brain, such as the quality of the mother's care, the quality of the mother's diet, and the quality of the mother's education. The genes can be defined as the internal factors that influence the development of the brain, such as the quality of the mother's care, the quality of the mother's diet, and the quality of the mother's education. The environment and the genes are both important factors in the development of the human brain, and they both influence the development of the brain in a similar way. The environment and the genes are both important factors in the development of the human brain, and they both influence the development of the brain in a similar way.

With the shutter button held half-pressed, press the **DISP/1** button. The LCD screen will display the following information:

ALITY

The image shows four different power adapters and their cables, labeled 1, 2, 3, and 4. Adapter 1 is a small, white, rectangular adapter with a coiled cable. Adapter 2 is a larger, white, rectangular adapter with a coiled cable. Adapter 3 is a small, white, rectangular adapter with a coiled cable. Adapter 4 is a larger, white, rectangular adapter with a coiled cable. The cables are black and have different connectors at the end.

on the **SETUP MENU** and press

ENTER (cont.) (for the UK)

• The image size displayed on the LCD monitor becomes FULL (320 x 240) or L

The image size displayed on the LCD monitor becomes FULL (320 x 240) or HALF (160 x 120). The movies made in FULL size is displayed on the entire LCD monitor, and those made in HALF size is displayed in the center of the screen.

2. Memo

- When playing back movie images, switching is between standard and image only. **no cross and F3.4**

Erasing Folders (All Images in a Folder/All Folders)

Erases selected folders and all contents currently recorded to the SmartMedia™ loaded on your camera. There are two ways of erasing images, by individual folders or by all folders.

Note: Images cannot be erased when they are protected (◀ Page 106) or when the SmartMedia™ is write-protected (◀ Page 34).

The folder to be erased differs according to the position of the mode dial.

[▶] : Folder of images currently being played back

[📷], [M📷] or [📹] : Folder of images currently being photographed

☞ About Folders ▶ Page 92


1 Set the mode dial to [▶], [📷], [M📷] or [📹].

Set the mode dial to the type of folder you want to erase.

When [▶] is selected, the last image frame or the thumbnail display appears on the LCD monitor.

2 Hold down the 🗑️ erase button for two seconds.

The erase icon is displayed at the left of the screen.

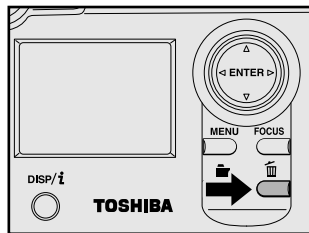

Sei $D = \{d_1, \dots, d_n\}$ die Menge der Differenzen $d_i = x_i - x_{i-1}$ für $i = 1, \dots, n$. Dann gilt:

The **3D MEM INFO** graphs of player's 3D MEM INFO. The graphed images you can see in the
+ **VIEW UNDER LED** graphs of player's 3D MEM INFO. The graphed images you can see in the
For a complete 3D MEM INFO, please refer to the 3D MEM INFO. The graphed images you can see in the
current as the 3D MEM INFO. The graphed images you can see in the 3D MEM INFO. The graphed images you can see in the

Set the mode dial to . Play on the LCD monitor.

When the DPOF writing protection is on (Page 102),
 the images and titles are erased, and the camera returns to the

6MB (SM-M1600D)/32MB (SM-M3200D)/64MB (SM-M6400D)/128M (SM-M1280D)

- The image before the photograph is taken is slightly less clear than playback images. (This is because television displays images at a lower resolution.) Use the

• The display unit varies according to the output system

• This adapter allows SmartMedia™ to be used as 3.5" floppy disk

This adapter is inserted into the floppy disk drive on your PC, allowing for photography and playback.

Images recorded on the SmartMedia™ to be transferred to the PC. With the PAL system, images cannot be displayed simultaneously: When a cable is connected, only TV display is available.

Color | AC Adapter

For the US/Canada: PDR-AČM1A

[illegible]

in the shutter button held half



ALITY



[illegible]

enlargement

on the SETUP MENU and press

Or, to return to the regular display, press **ENTER**.

• The image size displayed on the LCD monitor becomes FULL (320 x 240) or HALF (160 x 120). The moving image in FULL size is displayed on the entire LCD monitor, and those made in HALF size is

movies made in PAL size is displayed on the entire LCD monitor, and those made in HDTV size is displayed in the center of the screen.

2. **Memo**

• When playing back movie images, switching is between standard and image only. (not possible) F-3.4.

- 80 -

Formatting the SmartMedia™

Formatting erases all images and reformats the SmartMedia™ loaded in your camera. Protected images (▶ Page 106) are also erased. SmartMedia™ cannot be formatted if it is write-protected (▶ Page 34).

IMPORTANT

- The SmartMedia™ must be formatted on the camera before use.

1


Set the mode dial to [] , [] , [M] or [].

When [] is selected, the last image frame or the thumbnail display appears on the LCD monitor.

2

Hold down the  erase button for two seconds.

The erase icon is displayed at the left of the screen.

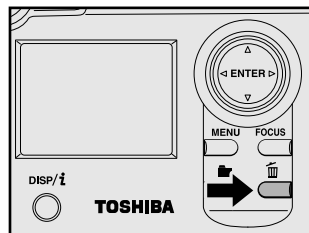

3

Use ▲ or ▼ to select [] , and press ENTER.

To cancel formatting, select [] and press ENTER.

4

To reset the image number, use ▲ or ▼ to select [EXECUTE], and press ENTER.

To cancel resetting of image numbers, select [CANCEL].




Memo

- SmartMedia must be formatted before using for the first time. Also, it is recommended to periodically reformat the SmartMedia card to remove any miscellaneous files and ensure maximum storage capacity.

About Folders (continued)

Memo

- When taking photographs, it is not possible to select a folder for recording images. Pressing the  folder button will create a new folder. The subsequently photographed images are recorded in that new folder.
- When a new folder is created, the frame No. is assigned from 0001.
- To play back images photographed by another camera
 - Proper playback may not be possible for some image size.
 - Images cannot be played back unless the file name and folder name are set correctly.
- It is possible to play back any images in any folders by pressing ◀ or ▶ during playback. (For details of folder ▶ Page 92)

Getting
Ready

Taking
Photographs

Playing
Back Images

Erasing
Images

Handy
Functions

Other
Applications

Additional
Information

Protecting Images (Size) and Select mode

Removing the Protection

IMPORTANT

Formatting erases all the images on a SmartMedia™, regardless of whether they are protected or not. To protect the entire SmartMedia™, see "Write Protection" (▶ Page 34).

Protecting an image

Press the **ENTER** button to set the image to the desired mode.

Press the **ENTER** button to set the image to the desired mode.

Press the **ENTER** button to set the image to the desired mode.

Press the **ENTER** button to set the image to the desired mode.

Press the **ENTER** button to set the image to the desired mode.

Press the **ENTER** button to set the image to the desired mode.

Press the **ENTER** button to set the image to the desired mode.

Press the **ENTER** button to set the image to the desired mode.

Press the **ENTER** button to set the image to the desired mode.

Press the **ENTER** button to set the image to the desired mode.

Press the **ENTER** button to set the image to the desired mode.


Press the **ENTER** button to set the image to the desired mode.

Press the **ENTER** button to set the image to the desired mode.

Press the **ENTER** button to set the image to the desired mode.

Press the **ENTER** button to set the image to the desired mode.

Press the **ENTER** button to set the image to the desired mode.

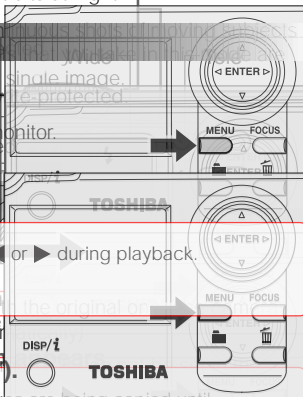

Press the **ENTER** button to set the image to the desired mode.

Press the **ENTER** button to set the image to the desired mode.


Press the **ENTER** button to set the image to the desired mode.

Reducing the Image Size (Resize) (continued)

3 Use ▲ or ▼ to select [RESIZE] and press ►.

The RESIZE menu is displayed.

If there are no images that can be resized, or if a movie folder is selected, a message appears on screen and the screen returns to the PLAYBACK MENU.

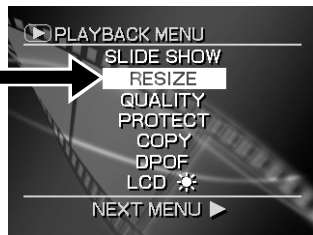

4 Use ◀ or ▶ to select the image and press ENTER to set image size.

The current image size is displayed under the image.

Each press of ENTER changes the icons as follows:

[] HALF size [] SMALL size

☞ For details of image size (▶ Page 44)



To cancel the selection, press ENTER again.

If you want to resize two or more images, repeat the procedure for the necessary number of images.

When the Zoom switch is pressed toward "T" during image selection, the image is displayed to fit the entire screen. To redisplay the original image, move the Zoom switch towards the "W". (Zoom switch ▶ Page 21)

5 Use ▲ or ▼ to select [EXECUTE], and press ENTER.

The screen indicating that the image is being resized appears.

To quit resizing, select [CANCEL] and press ENTER.

When resizing ends, the screen returns to the PLAYBACK MENU.


To quit the PLAYBACK MENU, press the MENU button.

Memo

- It is possible to play back any images in any folders by pressing ◀ or ▶ during playback.

☞ About Folders ▶ Page 92

IMPORTANT Formatting erases all the images on a SmartMedia™, regardless of whether they are protected or not. To protect the entire SmartMedia™, see "Write Protection" (c Page 34).

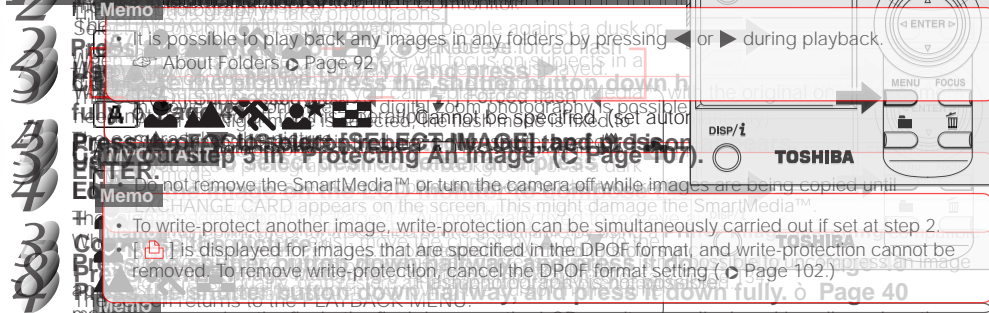[illegible]


It is not possible to reduce the size of an image. It is not possible to increase the size of an image, or to restore a photograph that has been reduced in size. If the camera is turned off or the Auto Power OFF function is activated.

Compressing Images (Quality) (continued)

3 Use ▲ or ▼ to select [QUALITY], and press ►.

The SET-UP menu is displayed.

If there are no images that can be compressed, or if a movie folder is selected, a message appears on screen and the screen returns to the PLAYBACK MENU.

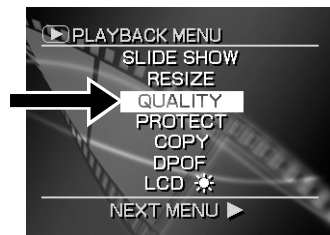

4 Use ◀ or ▶ to select the image, and press ENTER to set the compression ratio.

The current compression ratio (quality) is displayed under the image.

Each press of ENTER changes the number of stars as follows:

★★ [NORMAL]

★ [BASIC]

☞ Details of compression ratio ► Page 44



If you want to compress two or more images, repeat the procedure for the necessary number of images.

When the Zoom switch is pressed toward "T" during image selection, the image is displayed to fit the entire screen. To redisplay the original image, move the Zoom switch towards the "W". (Zoom switch ► Page 21)

Memo

- It is possible to play back any images in any folders by pressing ◀ or ▶ during playback.
☞ About Folders ► Page 92

5 Use ▲ or ▼ to select [EXECUTE], and press ENTER.

The screen indicating that the image is being compressed appears.

To quit compression, select [CANCEL] and press ENTER..

When compression ends, the screen returns to the PLAYBACK MENU.

To quit the PLAYBACK MENU, press the MENU button.

Removing the Protection

IMPORTANT: Formatting erases all the images on a SmartMedia™, regardless of whether they are protected or not. To protect the entire SmartMedia™, see "Write Protection" (b Page 34).

Protecting an image

...an image


...set to the desired mode

...and press **display**







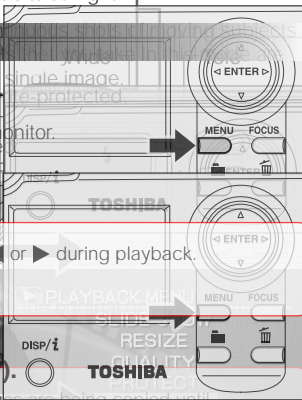







...press **OK** for third select **ENTER** and

...press **OK** according to the mode


...TOSHIBA



• It is possible to play back any images in any folders by pressing ◀ or ▶ during playback.

Do not remove the SmartMedia™ or turn the camera off while images are being copied until

- To write-protect another image, write-protection can be simultaneously carried out if set at step 2.
-  is displayed for images that are specified in the DPOF format, and write-protection cannot be removed. To remove write-protection, cancel the DPOF format setting (p. 102.)

- Page 40

- When a photograph is taken, the flash icons on the LCD monitor are displayed in yellow when the camera is ready to take a photograph. Press the **VIEW** button. It is not possible to increase the size of an image, or to

• **Restore size** after it has been decreased when the camera is turned off or the Auto Power OFF function is

activated.

camera-usermanual.com

Copying Images (continued)

4 Use ◀ or ▶ to select the desired image, and press ENTER.

This selects the image to be copied, and [] is displayed under the image.

To cancel a selection, press ENTER again.

If you want to copy two or more images, repeat the procedure for the necessary number of images.

The bar at the bottom of the screen indicates the amount of buffer memory used to store the data of the images which have been selected, and the remaining memory space. The amount of memory space consumed is indicated in green.

When the Zoom switch is pressed toward "T" during image selection, the image is displayed to fit the entire screen. To redisplay the original image, move the Zoom switch towards the "W". (Zoom switch ▶ Page 21)



Memo

- It is possible to play back any images in any folders by pressing ◀ or ▶ during playback.
▶ About Folders ▶ Page 92

5 Use ▲ or ▼ to select [EXECUTE], and press ENTER.

The screen indicating that the image is being read appears.

6 Load the SmartMedia™ for copying the image to.

The message [EXCHANGE CARD] is displayed.

- ① Remove the SmartMedia™.
- ② Replace it with another SmartMedia™.

Getting Ready

Taking Photographs

Playing Back Images

Erasing Images

Handy Functions

Other Applications

Additional Information

Protecting an image (SmartMedia™) (Auto Select mode)

Removing the Protection

IMPORTANT

Formatting erases all the images on a SmartMedia™, regardless of whether they are protected or not. To protect the entire SmartMedia™, see "Write Protection" (p. Page 34).

Protecting an image

It is possible to play back any images in any folders by pressing ◀ or ▶ during playback.

• About Folders p. Page 92

It is possible to play back any images in any folders by pressing ◀ or ▶ during playback.

• About Folders p. Page 92

It is possible to play back any images in any folders by pressing ◀ or ▶ during playback.

• About Folders p. Page 92

It is possible to play back any images in any folders by pressing ◀ or ▶ during playback.

• About Folders p. Page 92

It is possible to play back any images in any folders by pressing ◀ or ▶ during playback.

• About Folders p. Page 92

It is possible to play back any images in any folders by pressing ◀ or ▶ during playback.

• About Folders p. Page 92

It is possible to play back any images in any folders by pressing ◀ or ▶ during playback.

• About Folders p. Page 92

It is possible to play back any images in any folders by pressing ◀ or ▶ during playback.

• About Folders p. Page 92

It is possible to play back any images in any folders by pressing ◀ or ▶ during playback.

• About Folders p. Page 92

Copy Images (continued)

The image No. for copying

When images are copied, the frame No. is not copied. The frame No. becomes:

- **Still images:** When the SmartMedia™ at the copy destination contains the folder [xxxTOSHI], a folder having the largest number of "xxx" incremented by 1 is created.
Example: When there are folders [101TOSHI] and [102TOSHI], the folder [103TOSHI] is created.

When there is no [xxx TOSHI] folder, a new folder is created.
In each case, the frame No. is assigned from 0001.

Getting
Ready

Taking
Photographs

Playing
Back Images

Erasing
Images

Handy
Functions

Other
Applications

Additional
Information

Protecting Images (Need) (Auto Select mode)

Removing the Protection

IMPORTANT
Formatting erases all the images on a SmartMedia™, regardless of whether they are protected or not.
To protect the entire SmartMedia™, see "Write Protection" (▶ Page 34).

Protecting an image

Press **PLAYBACK MENU** (▶) to enter the playback menu. Press **SLIDE SHOW** (▶) to enter the slide show mode. Press **RESIZE** (▶) to enter the resize mode. Press **QUALITY** (▶) to enter the quality mode. Press **PROTECT** (▶) to enter the protect mode. Press **ENTER** (▶) to protect the image.

It is possible to play back any images in any folders by pressing **◀** or **▶** during playback.
About Folders ▶ Page 92

Press **PLAYBACK MENU** (▶) to enter the playback menu. Press **SLIDE SHOW** (▶) to enter the slide show mode. Press **RESIZE** (▶) to enter the resize mode. Press **QUALITY** (▶) to enter the quality mode. Press **PROTECT** (▶) to enter the protect mode. Press **ENTER** (▶) to protect the image.

Press **PLAYBACK MENU** (▶) to enter the playback menu. Press **SLIDE SHOW** (▶) to enter the slide show mode. Press **RESIZE** (▶) to enter the resize mode. Press **QUALITY** (▶) to enter the quality mode. Press **PROTECT** (▶) to enter the protect mode. Press **ENTER** (▶) to protect the image.

Press **PLAYBACK MENU** (▶) to enter the playback menu. Press **SLIDE SHOW** (▶) to enter the slide show mode. Press **RESIZE** (▶) to enter the resize mode. Press **QUALITY** (▶) to enter the quality mode. Press **PROTECT** (▶) to enter the protect mode. Press **ENTER** (▶) to protect the image.



Print Information (continued)

- 5** Press **▲** or **▼** to select [SELECT] or [ALL], and press **ENTER**.

[SELECT] : Sets one image at a time.

[ALL] : Sets all images at once.

- 6** Set the number of prints and date.

- ① Press **◀** or **▶** to select the image, and press **▲** or **▼** to set the number of copies.

Up to 99 copies can be set for a single image.

When the Zoom switch is pressed toward "T" during image selection, the image is displayed to fit the entire screen. To redisplay the original image, move the Zoom switch towards the "W". (Zoom switch **▶** Page 21)

- ② When you have finished this setting, press **ENTER**.

The DATE screen is displayed.

The date of the image can be printed in the lower right corner of the picture.

- ③ Press **▲** or **▼** to select [YES] or [NO], and press **ENTER**.


If you want to print the date, select [YES] and press **ENTER**.

If you do not want to print the date, select [NO] and press **ENTER**.

The message "CREATE DPOF FILE?" is displayed.

Memo

- It is possible to play back any images in any folders by pressing **◀** or **▶** during playback. **▶** About Folders **▶** Page 92
- The date printed in the picture will depend on the date set into the camera. For the correct date to be printed onto the picture, please check the date set into your camera before the image is photographed. (To correctly set the time and date **▶** Page 111)

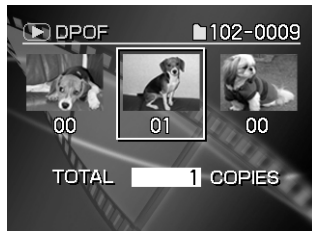

Protecting Images (Need) Select mode

Removing the Protection

IMPORTANT

Try out steps 1 to 3 in "Protecting An Image" (Page 106).

Formatting erases all the images on a SmartMedia™, regardless of whether they are protected or not. To protect the entire SmartMedia™, see "Write Protection" (o Page 34).

CREATE DPOF FILE?

Protecting an image

Press the **DISP** button and the LCD monitor is turned on. Press the **ENTER** button and the LCD monitor displays the menu.

Press the **DISP** button and the LCD monitor displays the menu.

Press the **DISP** button and the LCD monitor displays the menu.

Press the **DISP** button and the LCD monitor displays the menu.

Press the **DISP** button and the LCD monitor displays the menu.

It is possible to play back any images in any folders by pressing **◀** or **▶** during playback.

+ About Folders o Page 92

Press the **DISP** button and the LCD monitor displays the menu.

Press the **DISP** button and the LCD monitor displays the menu.

Press the **DISP** button and the LCD monitor displays the menu.

Press the **DISP** button and the LCD monitor displays the menu.

Press the **DISP** button and the LCD monitor displays the menu.

To write-protect another image, write-protection can be simultaneously carried out if set at step 2.


[] is displayed for images that are specified in the DPOF format, and write-protection cannot be removed. To remove write-protection, cancel the DPOF format setting (o Page 102).

Press the **DISP** button and the LCD monitor displays the menu.

Press the **DISP** button and the LCD monitor displays the menu.

Press the **DISP** button and the LCD monitor displays the menu.

Press the **DISP** button and the LCD monitor displays the menu.

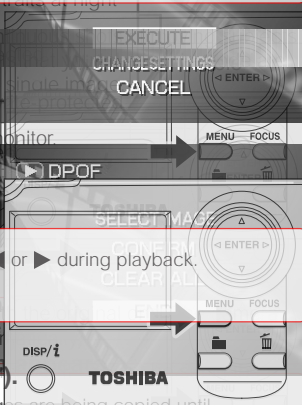

Print Information (continued)

9 Select the desired operation.

[CONFIRM]: Press this to confirm the settings.

- ① Press ▲ or ▼ to select [CONFIRM], and press ENTER.
- ② After confirming the settings, press ENTER.
- ③ Select [END] and press ENTER.

[CLEAR ALL]: Press this button to clear all settings.

- ① Press ▲ or ▼ to select [CLEAR ALL], and press ENTER.
- ② To clear all settings, select [EXECUTE] and press ENTER.
To cancel [CLEAR ALL], select [CANCEL] and press ENTER.
- ③ To remove the write-protection, select [YES] and press ENTER.
- ④ Select [END] and press ENTER.

Memo

- When the SmartMedia™ already contains a DPOF information file, the message "RECREATE DPOF FILE?" is sometimes displayed. Note that if you select [YES], the file is overwritten, and the information of the existing DPOF information file is erased. The same also applies when the DPOF information file is overwritten on a personal computer and values not supported by this camera were set.
- Images set in the DPOF format are automatically protected. Write-protection cannot be removed by regular methods (▶ Page 108)
- You can specify up to 99 prints or up to 999 frames in a single SmartMedia™. The maximum number of prints you can specify in a single SmartMedia™ is limited to 10000.

Protecting Images (SmartMedia™) (Protecting An Image Select mode)

Removing the Protection

IMPORTANT

Formatting erases all the images on a SmartMedia™, regardless of whether they are protected or not. To protect the entire SmartMedia™, see "Write Protection" (▶ Page 34).

Protecting an image

Press the **ENTER** button to set the protection mode. The camera will display the protection mode.

Press the **ENTER** button to set the protection mode. The camera will display the protection mode.

Press the **ENTER** button to set the protection mode. The camera will display the protection mode.

Press the **ENTER** button to set the protection mode. The camera will display the protection mode.

Press the **ENTER** button to set the protection mode. The camera will display the protection mode.

Press the **ENTER** button to set the protection mode. The camera will display the protection mode.

Press the **ENTER** button to set the protection mode. The camera will display the protection mode.

Press the **ENTER** button to set the protection mode. The camera will display the protection mode.

Press the **ENTER** button to set the protection mode. The camera will display the protection mode.

Press the **ENTER** button to set the protection mode. The camera will display the protection mode.

Press the **ENTER** button to set the protection mode. The camera will display the protection mode.


Press the **ENTER** button to set the protection mode. The camera will display the protection mode.

Press the **ENTER** button to set the protection mode. The camera will display the protection mode.

Press the **ENTER** button to set the protection mode. The camera will display the protection mode.

Press the **ENTER** button to set the protection mode. The camera will display the protection mode.

Press the **ENTER** button to set the protection mode. The camera will display the protection mode.

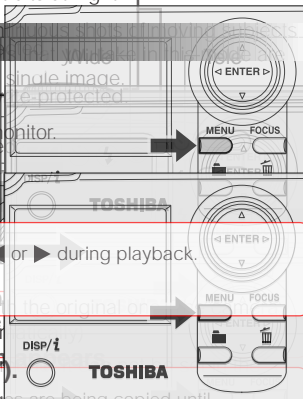


Press the **ENTER** button to set the protection mode. The camera will display the protection mode.

Press the **ENTER** button to set the protection mode. The camera will display the protection mode.

Press the **ENTER** button to set the protection mode. The camera will display the protection mode.

Protecting Images (continued)

- 3** Use **▲** or **▼** to select **[PROTECT]** and press **▶**.
The PROTECT menu is displayed.

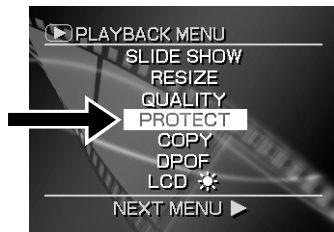

- 4** Use **▲** or **▼** to select the desired image to protect, and press **ENTER**.

This fixes the image to be protected, and **[On]** is displayed under the image.

To cancel the selection, press **ENTER** again.

To write-protect two or more images, repeat this procedure for the necessary number of images.

When the Zoom switch is pressed toward "T" during image selection, the image is displayed to fit the entire screen. To redisplay the original image, move the Zoom switch towards the "W". (Zoom switch ▶ Page 21)



Memo

- It is possible to play back any images in any folders by pressing **◀** or **▶** during playback.
(For details of folder ▶ Page 92)

- 5** Use **▲** or **▼** to select **[EXECUTE]**, and press **ENTER**.

To quit write-protection, select **[CANCEL]** and press **ENTER**.

When write-protection ends, the screen returns to the PLAYBACK MENU.

To quit the PLAYBACK MENU, press the MENU button.

Memo

- When the PROTECT setup screen is displayed again, **[On]** is displayed under protected images.
- To cancel write-protection for an image, write-protection is simultaneously canceled if set at step 4.

Protecting Images (continued) (SmartMedia™/Pro Select mode)

Removing the Protection

IMPORTANT

Formatting erases all the images on a SmartMedia™, regardless of whether they are protected or not. To protect the entire SmartMedia™, see "Write Protection" (▶ Page 106).

Protecting an image

Press the **PROTECT** button to set to the desired mode.

Press the **ENTER** button to display the protection mode.

Press the **PROTECT** button to select **PROTECT** and

press the **ENTER** button to select the protection mode.

It is possible to play back any images in any folders by pressing **◀** or **▶** during playback.

About Folders ▶ Page 92

Press the **PROTECT** button to select **PROTECT** and press the **ENTER** button to select the protection mode.



Press the **PROTECT** button to select **PROTECT** and press the **ENTER** button to select the protection mode.

- To write-protect another image, write-protection can be simultaneously carried out if set at step 2.
- [P] is displayed for images that are specified in the DPOF format, and write-protection cannot be removed. To remove write-protection, cancel the DPOF format setting (▶ Page 102).

Press the **PROTECT** button to select **PROTECT** and press the **ENTER** button to select the protection mode.

It is possible to reduce the size of an image. It is not possible to increase the size of an image, or to restore a photograph that has been deleted even if the camera is turned off or the Auto Power OFF function is activated.

PROTECT 102-0009

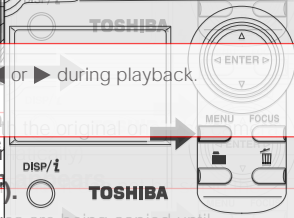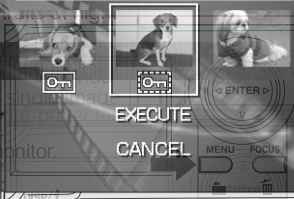


Basic Settings (🔧 mode)

This feature allows you to set up the default settings for using your camera in addition to image-related settings. This is called “setup”. The following items can be changed in the SET-UP mode:

AUTO POWER OFF/SOUND/TIME & DATE/OSD LANGUAGE/VIDEO OUT/QUALITY/SYSTEM INFO.

The details set here are held in memory even if the camera is turned OFF.


- 1** Set the mode dial to [🔧].
The SETUP MENU appears.

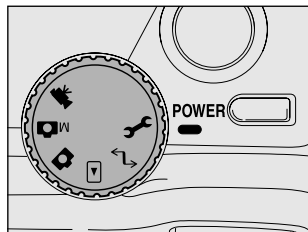

- 2** Use ▲ or ▼ to select the item you want to set.

- ☞ AUTO POWER OFF ☞ Selects the time for automatic power off (P. 110)
SOUND ☞ Turns on and off the sound (P. 111)
TIME & DATE ☞ Setting the Time and Date (P. 111)
OSD LANGUAGE ☞ Selecting the Monitor Display Language (P. 112)
VIDEO OUT ☞ Setting Video Output (P. 112)
QUALITY ☞ Setting image quality and size (P. 112)
SYSTEM INFO. ☞ Returning Settings to the Defaults (P. 114)

Setting item

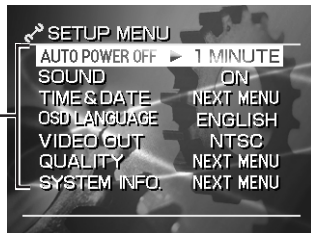

D

- 89 -

Basic Settings (mode) (continued)

SOUND

Sets whether or not to sound the beep tone.

- [ON] : Sounds the beep tone according to the operating state or operation. (default)
[OFF] : Does not sound the beep tone in any state.

TIME & DATE

Sets the date and time.
Seconds cannot be set.

1 Using ◀ or ▶ to select the item you want to set, and use ▲ or ▼ to set the value for each item.

Pressing ▶ advances the selection in the following order:

YEAR → MONTH → DAY → Hour → Minute → OK → CANCEL
↑

2 Select [OK] and press ENTER.

To quit setting, select the [CANCEL] button and press ENTER.



Basic Settings (🔑 mode) (continued)

- 2** Press ▲ or ▼ to select the number you desired to set, and press ► or ENTER.

The SIZE item is reversely displayed in white.



- 3** Press ▲ or ▼ to select the size you desired, and press ► or ENTER.

The QUALITY item is reversely displayed in white.



- 4** Press ▲ or ▼ to select the quality you desired, and press ► or ENTER.

The display returns to the Step 2 screen.


Adjusting the LCD Monitor Brightness

This adjustment adjusts the brightness of the LCD monitor and not the brightness of the recorded image.

1 Set the mode dial to [], [], [M ] or [].

2 Press the **MENU** button.

The RECORDING MENU or PLAYBACK MENU is displayed.
You can set the LCD monitor brightness in either of these menus.

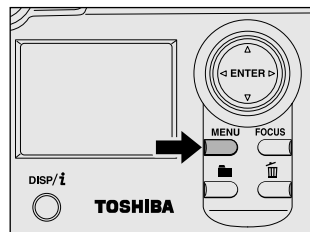

3 Use **▲** or **▼** to select [LCD ] and press **▶**.
The image and the LCD menu are displayed.

4 Use **◀** or **▶** to adjust the brightness.
Press **◀** to darken (-) the LCD monitor, or **▶** to lighten (+) the LCD monitor.
The LCD monitor can be adjusted within the range [-5] to [+5].
(Default is 0.)



5 Press **ENTER**.
This returns the camera to the previous mode.

Additional Information	Other Applications	Handy Functions	Erasing Images	Playing Back Images	Taking Photographs	Getting Ready
------------------------	--------------------	-----------------	----------------	---------------------	--------------------	---------------

SEMINFOGE

The **SYSTEM INFO** tab displays the system information of the selected folder and folders. You can select the information to be displayed from the **VIEW UNDER LENS** menu (page 26).

For example, if you select **DATE AND TIME** from the **VIEW UNDER LENS** menu, the date and time of the original factory setting are displayed.

Insert the original factory setting card into the slot and select the folder and folders.

Set the model dial to Press on the LCD menu

When the DPOF menu is selected, the camera returns to the DPOF menu. When the DPOF menu is selected, the camera returns to the DPOF menu.

6MB (SM-M1600D)/32MB (SM-M3200D)/64MB (SM-M6400D)/128M (SM-M1280D)

- The image before the photograph is taken is slightly less clear than playback images. (This is

because television displays images at a lower resolution.)

- The display unit varies according to the output system.

With the M-3C system, images can be displayed simultaneously on the LCD monitor and TV during photography and playback.

Images recorded on the SmartMedia™ to be transferred to the PC. When a cable is connected only one image with the PAL system, images cannot be displayed simultaneously. When a cable is connected only one TV display is available.

Color! AC Adapter

For the US/Canada: PDR-ACM1A

Green IT

With the shutter button held half-pressed, press the **DISP/1** button. The LCD screen will display the following information:

ALITY

to the register display, press ENTER.

- The image size displayed on the LCD monitor becomes FULL (320 x 240) or HALF (160 x 120). The movies made in FULL size is displayed on the entire LCD monitor, and those made in HALF size is displayed in the center of the screen.

Memo

- When playing back movie images, switching is between standard and image only, not crossable F3.4

DISP/i Button and LCD Monitor Display (In Photography Mode)


This item switches the display on the LCD monitor when taking photographs.

1 Set the mode dial to [], [M] or [].

2 Press the DISP/i display/info button.

Each press of the DISP/i display/info button switches the display format as follows:

OSD full display → OSD display off → LCD monitor off

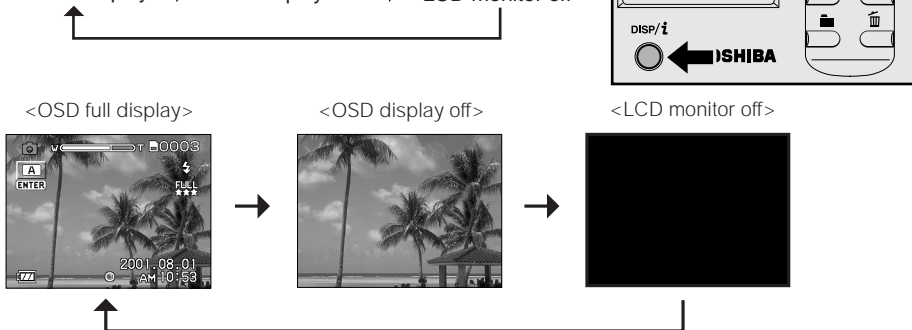

Memo

- When any button is pressed while OSD display is off, the monitor displays the alteration on the screen for two seconds.
- When the LCD monitor is off, the digital zoom function is forcibly canceled.
- In the movie mode or macro photography mode, the LCD monitor can not be turned off.
- When the LCD monitor is off, any setting for manual, exposure compensation, aperture value, shutter speed value or focus is not possible.


Taking and Playing Back Photographs on a TV

Television sets can be used to compose images for photography or playback. To do this, the camera must first be connected to the TV. We recommend using the AC adapter on an indoor power outlet when available.

IMPORTANT

- Before you connect your camera to other equipment, be sure to turn all other connected equipment OFF. If you connect your camera to other equipment with the power still ON, the screen may flicker or the image may not be displayed normally.

- 1** Connect the plug of the AV cable (provided) to the PC/AV terminal on the camera.

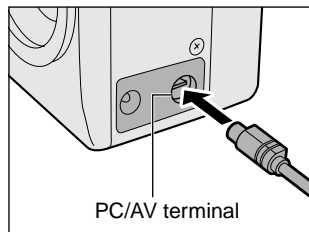

- 2** Connect the plug of the AV cable to the video input terminal on the TV.

Memo

- Switch to the video output system, NTSC or PAL, according to the TV or country in which your camera is used.
☞ For details on how to switch the system ▶ Page 112

Transferring Images to a PC

You can transfer images photographed on your camera to a PC using the packaged CD-ROM and USB cable. Images recorded on SmartMedia™ can also be transferred to a PC using the PC card adapter (sold separately) or floppy disk adapter (sold separately). (▶ Page 122)

To transfer images to a PC, software must be installed and special cables connected.

For details, refer to the User's Guides for your PC and the Software Manual.

Using SmartMedia™ on a PC

- When you use SmartMedia™, do not change or erase folders or file names (image data) on the SmartMedia™. Doing so might prevent the SmartMedia™ from being used on the camera.
- Format the SmartMedia™ only on your camera.
- To edit image data, copy the image data to hard disk on the PC, and edit the copied image data.

Getting
Ready

Taking
Photographs

Playing
Back Images

Erasing
Images

Handy
Functions


Other
Applications

Additional
Information

D

- 303 -

Connecting to Other Devices

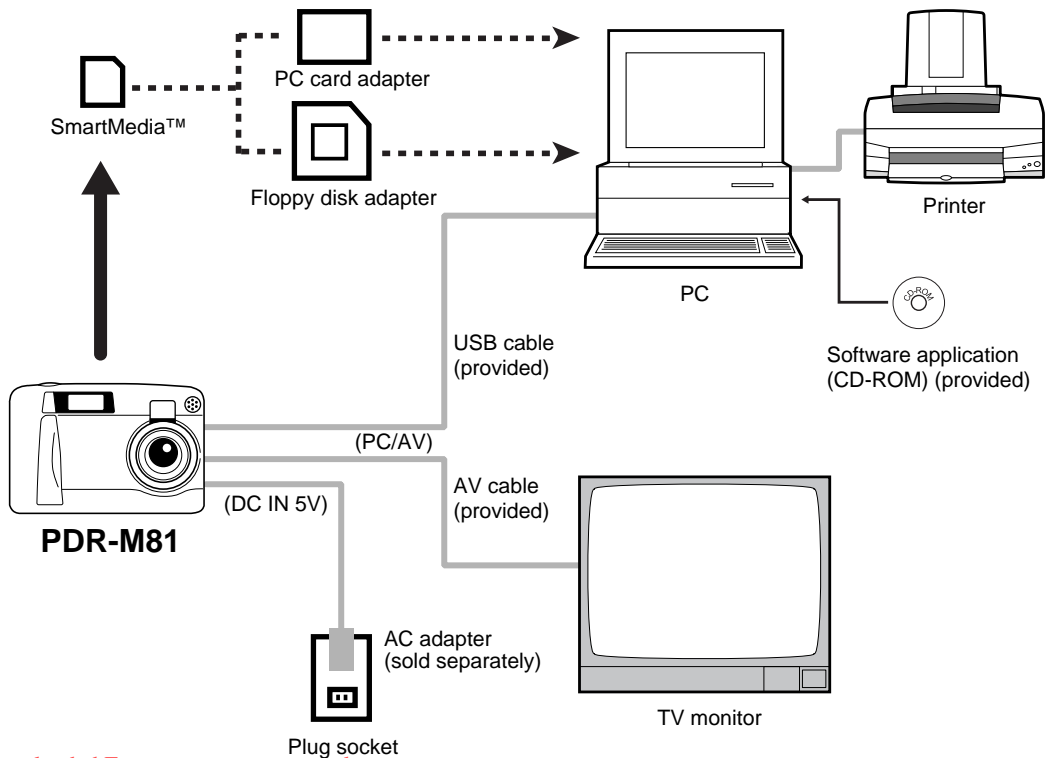

Classifying Messages Displayed on LCD Monitor

	● SmartMedia™ messages	● Causes	● Remedy	● See Page
Getting Ready	No image is displayed on the LCD monitor. The camera is in the PC mode.	Change the camera to the photography or playback mode.	Remedy	P.41
Taking Photographs	● Low power mode	PC mode is activated.	Replace with new batteries.	P.58
Playing Back Images	● Formatting	● The SD card is not formatted.	Batteries are not fully charged.	P.55
Erasing Images	● Full frame	● The SD card is full.	Remove the SD card and connect to a computer.	P.56
Handy Functions	● Still image	● The SD card is full.	Remove the SD card and connect to a computer.	P.57
Other Applications	● Video image	● The SD card is full.	Remove the SD card and connect to a computer.	P.58
Additional Information	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.59
	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.60
	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.61
	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.62
	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.63
	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.64
	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.65
	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.66
	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.67
	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.68
	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.69
	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.70
	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.71
	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.72
	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.73
	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.74
	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.75
	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.76
	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.77
	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.78
	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.79
	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.80
	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.81
	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.82
	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.83
	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.84
	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.85
	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.86
	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.87
	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.88
	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.89
	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.90
	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.91
	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.92
	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.93
	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.94
	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.95
	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.96
	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.97
	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.98
	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.99
	● Error message	● The SD card is full.	Remove the SD card and connect to a computer.	P.100

Specifications (continued)

Pickup elements		1/1.8" CCD sensor (total number of pixels: approx. 4.2 million)
Sensitivity		Equivalent to ISO 100/200/400
Lens		2.8X optical zoom lens F2.9 – F4.8
Focal length		f=7.25 mm – 20.3 mm (equivalent to 35 mm – 98 mm on a 35 mm camera)
Viewfinder		Real image type zoom finder
Auto-focus		TTL system AF, focus adjusting range: approximately 0.10 m (0.33 ft) to infinity (WIDE side setting) Detection system: Contrast detection system (frame rate during detection: 30 Hz)
Exposure Control	Metering system	Spot metering, multi metering
	Control system	Program AE , aperture-priority AE, shutter-priority AE
	Exposure compensation	-2.0 EV to +2.0 EV (in 0.5 EV increments)
Aperture		F2.9 to F8 automatic selection, manual selection possible
Shutter speed		1/2 to 1/1,000 sec. (electronic shutter and mechanical shutter) Maximum 15 sec. for extended exposure photography
White balance		Auto selected Manual setting possible (5 modes)
Focal range	Standard	Approx. 80 cm (31") to infinity
	Macro	Approx. 10 cm (4") to infinity (WIDE side setting) Approx. 25 cm (10") to infinity (TELE side setting)
Self-Timer		2 seconds/10 seconds selectable
Built-in flash	Modes	Auto, Red-eye reduction forced flash, Forced Flash, Suppressed Flash
	Effective range	Approx. 0.8 m (2.6 ft) – 3.0 m (9.8 ft) (WIDE side setting, ISO setting: [2X])

Getting Ready

Taking Photographs

Playing Back Images

Erasing Images

Handy Functions

Other Applications

Additional Information

Specifications (continued)

AC adapter (PDR-ACM1A)

Power supply	AC120V 50/60Hz
Rated Input Capacity	18VA
Rated Output	DC5V 1.5A
Operating temperature	0°C (+32°F) ~ +40°C (+104°F)
Storage temperature	-10°C (+14°F) ~ +70°C (158°F)
Dimensions	48 mm (1-8/9") (W) x 26 mm (1-1/4") (H) x 70 mm (2-3/4") (D)
Weight	Approx. 100 g (3.5 oz)
Connector Cable Length	Approx. 2 m (6.6 ft)

AC adapter (PDR-ACM1E)



Power supply	AC230V 50Hz
Rated Input Capacity	120 mA
Rated Output	DC5.0V 1.5A
Operating temperature	0°C ~ +40°C
Storage temperature	-10°C ~ +70°C
Dimensions	49.5 mm (1.9") (W) x 66.5 mm (2.6") (H) x 76 mm (3.0") (D)
Weight	Approx. 130 g (4.5 oz)
Connector Cable Length	Approx. 2 m (6.6 ft)

AC adapter (PDR-ACM1U)

Power supply	AC230V 50Hz
Rated Input Capacity	120 mA
Rated Output	DC5.0V 1.5A
Operating temperature	0°C ~ +40°C
Storage temperature	-10°C ~ +70°C
Dimensions	49.5 mm (1.9") (W) x 60.5 mm (2.4") (H) x 76 mm (3.0") (D)
Weight	Approx. 130 g (4.5 oz)
Connector Cable Length	Approx. 2 m (6.6 ft)

These specifications are subject to change without notice.

Warnings and Messages Displayed on LCD Monitor (continued)

Display		Meaning
LCD monitor	Status display	
FOLDER ERROR	---	There are no free folders on the SmartMedia™ to copy image data to.
RECREATE DPOF FILE?	---	There is a parameter that is not supported in the DPOF setting file.
CLOSE THE CARD LID	---	The SmartMedia™ cover must be closed.
FRAME NUMBER FULL	---	The maximum number of images (999 frames) that can be set is exceeded when setting DPOF setting files.
NO IMAGE AVAILABLE	---	No images are recorded to the SmartMedia™.
DPOF ERROR	---	There is a parameter that is not supported in the DPOF setting file.
DPOF PROTECT OFF	---	This is a confirmation for checking whether or not to remove DPOF write-protection when clearing DPOF settings.
LENS COVER	---	The zoom lens cannot be correctly set up. Is the lens cap still attached to the lens? Check the lens cap, and turn the power ON again.
	---	You tried to play back an image not supported on this camera.
ERROR***	---	A camera problem has occurred. Contact a Support Center.
	---	Poor lighting conditions. Image will be vulnerable to vibrations.

Getting Ready

Taking Photographs

Playing Back Images

Erasing Images

Handy Functions

Other Applications

Additional Information

Global Warming (Continued)

[illegible]

Troubleshooting (continued)

Problem	Causes	Remedy	See Page
I cannot use the flash to take pictures.	The mode dial has been changed to another setting.	Set the mode dial to the correct setting.	–
	The flash is set to Suppressed Flash mode.	Set the flash to Auto, Red-Eye Reduction or Forced Flash mode.	P.56
	You pressed the shutter button while the flash was charging.	Wait until charging is completed before pressing the shutter button.	P.118
The flash will not charge.	The camera is set to Suppressed Flash mode.	Set the flash to Auto, Red-Eye Reduction or Forced Flash mode.	P.57
	The batteries are exhausted.	Replace with new batteries.	P.25
The playback image is too dark even though I used the flash.	The subject is too far away.	Move closer to the subject. (about 2.6 ft (0.8 m) ~ 9.7 ft (3.0 m) (WIDE side setting))	P.92
Images cannot be played back.	No image saved in the folder	Select the folder containing images to play back.	P.56
The playback image is blurred.	The lens is not clean.	Clean the lens.	–
	The image is out of focus.	Set the FOCUS photography according to the distance up to the subject.	P.54
I cannot format the SmartMedia™.	The SmartMedia™ is write-protected.	Remove the write-protection.	P.34
I cannot erase all the frames.	The frame is protected.	Remove the write-protection. Cancel the DPOF setting.	P.108 P.102
	The SmartMedia™ is write-protected	Remove the write-protection.	P.34
Nothing happens when I use the buttons and switches.	Camera malfunction.	Turn the power off and remove the batteries once, and try again.	–
	The mode dial is not at the correct position.	Set the mode dial to the correct setting.	–
	The camera is in the Auto Power OFF mode.	Press the POWER button again to turn the camera on.	P.110

Glossary (continued)

SmartMedia™		Causes	Remedy	See Page
No proper check and recording media. If in the SUB-BC mode, the camera is in the PC mode.			Change the camera to the photography or playback mode.	P.41
Playback problem		Causes	Remedy	See Page
media not displayed			Replace with new batteries	P.48
Image format		Exif Ver. 2.1-compliant	Batteries are partially used	P.75
Image format		White balance	Attaching the power cable connections	P.80
Still image mode		Quality	Image file size	P.20
Still image mode		Compression	File Size (max.)	P.20
Still image mode		Mode	Size	P.11
Still image mode		Ratio	Size	P.25
Number of frames		Ratio	Size	P.25
Full size		FINE	1/5	83
2400 x 1600 pixels		1/4	16	133
1/4 size		1/3.5	41	666
1200 x 800 pixels		1/7.5	15	62
Small size		1/6	24	199
720 x 480 pixels		1/5	62	999
Exposure		1/15	15	124
Exposure		1/12	14	249
Exposure		1/10	12	399
Exposure		1/8	10	999
Exposure		1/6	8	999
Exposure		1/5	6	999
Exposure		1/4	4	999
Exposure		1/3	3	999
Exposure		1/2	2	999
Exposure		1	1	999
Exposure		2	2	999
Exposure		4	4	999
Exposure		8	8	999
Exposure		15	15	999
Exposure		30	30	999
Exposure		60	60	999
Exposure		120	120	999
Exposure		240	240	999
Exposure		480	480	999
Exposure		960	960	999
Exposure		1920	1920	999
Exposure		3840	3840	999
Exposure		7680	7680	999
Exposure		15360	15360	999
Exposure		30720	30720	999
Exposure		61440	61440	999
Exposure		122880	122880	999
Exposure		245760	245760	999
Exposure		491520	491520	999
Exposure		983040	983040	999
Exposure		1966080	1966080	999
Exposure		3932160	3932160	999
Exposure		7864320	7864320	999
Exposure		15728640	15728640	999
Exposure		31457280	31457280	999
Exposure		62914560	62914560	999
Exposure		125829120	125829120	999
Exposure		251658240	251658240	999
Exposure		503316480	503316480	999
Exposure		1006632960	1006632960	999
Exposure		2013265920	2013265920	999
Exposure		4026531840	4026531840	999
Exposure		8053063680	8053063680	999
Exposure		16106127360	16106127360	999
Exposure		32212254720	32212254720	999
Exposure		64424509440	64424509440	999
Exposure		128849018880	128849018880	999
Exposure		257698037760	257698037760	999
Exposure		515396075520	515396075520	999
Exposure		1030792151040	1030792151040	999
Exposure		2061584302080	2061584302080	999
Exposure		4123168604160	4123168604160	999
Exposure		8246337208320	8246337208320	999
Exposure		16492674416640	16492674416640	999
Exposure		32985348833280	32985348833280	999
Exposure		65970697666560	65970697666560	999
Exposure		131941395333120	131941395333120	999
Exposure		263882790666240	263882790666240	999
Exposure		527765581332480	527765581332480	999
Exposure		1055531162664960	1055531162664960	999
Exposure		2111062325329920	2111062325329920	999
Exposure		4222124650659840	4222124650659840	999
Exposure		8444249301319680	8444249301319680	999
Exposure		16888498602639360	16888498602639360	999
Exposure		33776997205278720	33776997205278720	999
Exposure		67553994410557440	67553994410557440	999
Exposure		135107988821114880	135107988821114880	999
Exposure		270215977642229760	270215977642229760	999
Exposure		540431955284459520	540431955284459520	999
Exposure		1080863910568919040	1080863910568919040	999
Exposure		2161727821137838080	2161727821137	999

Glossary

● AF/AE

AF (auto-focus) ... A function for automatically focusing your camera.

AE ... A function for automatically setting your camera's exposure.

AF/AE lock ... Locking of the focus and exposure settings.

● DPOF (Digital Print Order Format)

A standard for directly writing print information to the SmartMedia™. Files in this format can be printed easily by printers or photo print service bureaus that support this format.

● DCF (Design rule for Camera File System)

A file system standard defined by the JEIDA (Japan Electronic Industry Development Association) that is required for exchanging data between digital still cameras or a digital camera and a printer. This standard defines the hierarchy and file names used when storing image files on memory cards or other recording medium.

● Exif File Format (Exchangeable Image File Format)

A color still image format for digital still cameras approved by the JEIDA (Japan Electronic Industry Development Association). JPEG-compliant, this format is compatible with TIFF and JPEG and can be used in image processing software for most personal computers.

● JPEG

A file format used for compressing and saving color images. The compression ratio can be selected, but the higher the compression ratio, the worse image quality becomes. This format is widely used in the paint software for PCs and on the Internet.

● NTSC (National Television System Committee)

Method of television transmission in use in Japan and North America

● PAL (Phase Alternate Line)

Method of television transmission in use in the United Kingdom, Germany and other western European countries

● PC Card

A generic term for cards that meet the PC Card Standard.

● Red-Eye Effect

The phenomenon where people's eyes sometimes appear red in the picture when you use a flash to photograph them in low-light conditions. This is caused by the light of the flash reflecting off the inside of the eye.

● White Balance

When the brightness of the light changes, the human eye adapts so that a white object still looks white. On the other hand, devices such as digital still cameras see a white subject as white by first adjusting the balance to suit the color of the ambient light around the subject. This adjustment process is referred to as matching the white balance.

Glossary (continued)

[illegible]

MEMO

MEMO

Global Contacts

Country/Region	Company name	Phone number	e-mail	Website
Canada	Toshiba America Information Systems, Inc.	(800) 829-8318	dsc.support@tais.toshiba.com	www.toshiba.com/taisisd
China Hong Kong	Toshiba Hong Kong Ltd.	2956-0222	NA	www.toshiba.com.hk
France	Toshiba Systems (France)	01 47 28 28 50	consommateur@toshiba-tsfc.com	www.toshiba.fr/produits/video/index.htm
Germany	Toshiba Europe GmbH	(02131) 158 01	consumer@toshiba-leg.com	www.toshiba.de/consumer
Italy	Toshiba Consumer Products (Italia)	(039) 6099342	toshiba.italia@toshiba-tuk.com	www.toshiba.it/
Singapore	Toshiba Singapore Pte.	270-7776	NA	www.cp.toshiba.com.sg
Switzerland	Toshiba Europe GmbH Swiss Branch	01-946 07 77	info@toshiba.ch	www.toshiba.ch/
United Kingdom	Toshiba (UK) Ltd.	(01932) 828828	enquiries@toshiba-tuk.com	www.toshiba.co.uk
United States	Toshiba America Information Systems, Inc.	(800) 829-8318	dsc.support@tais.toshiba.com	www.toshiba.com/taisisd

For customers in the U.K.

Website for digital cameras: www.toshiba.co.uk
Technical support is available on-line, or by calling (0115) 9766958.

9.00am to 5.00pm Monday to Friday except bank holidays,
or e-mail us at: enquiries@toshiba-tuk.com

Toshiba European Service Centre
Units 6&7 Admiralty Way, Camberley, Surrey, GU15 3DT, U.K.

For customers in the U.S.A. and Canada

Register your product on-line at www.toshiba.com/taisisd
Technical support is available on-line, or by calling (800) 829-8318.

8:00 a.m. to 5:00 p.m. EST, Monday to Friday except holidays,
or e-mail us at: dsc.support@tais.toshiba.com

Toshiba America Information Systems, Inc.
Imaging Systems Division
9740 Irvine Boulevard, Irvine, California 92618-1697

* Address and telephone number are subject to change without notice.

* For customers outside of Canada, U.K. and the U.S.A., please refer to the "Global Contacts" before this page and contact the nearest Toshiba company for assistance.

[Downloaded From camera-usermanual.com](http://camera-usermanual.com)