

 
Clothes Hook Camera J018

User Manual

Thank you for purchasing Clothes hook Camera J018. It has adopted unique ultra-portable design, which makes it apply to every area. Clothes hook Camera brings more convenience, safety and fun to your daily life.

I Characters of Product

- It has small contour design, which does UV spray finishing for the whole body.
- Support AVI video format.
- It can carry out high definition image recording under low illumination.
- Support 30 fps for 1280*960.
- Support USB1.1.
- Support 16GB T-flash card.(maximum)
- Build-in lithium battery which can make a video more than 120 minute.

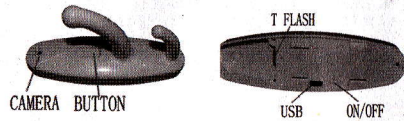

II Operation Guide

1. Charge

The battery is built-in lithium rechargeable battery, so when you use it the first time, please charge firstly. The method for charging as following:

- 1.) Connect computer: use USB cable to connect the computer, then it can be charged.
- 2.) Use adaptor: connect charger plug with USB cable, then plug into electrical connector receptacle, it can be charged.

When you charge it, green light will bright simultaneously. When the green light is not flashing, the charge is completed. Notice: when battery power is not enough, J018 will enter into protection mode, so it cannot be turn on. Now, please

charge for it.

2. Power / take photos

Please confirm already insert the TF card in the slot.

Push "ON/OFF" button to "ON", long press button, after four long green light flashes, enter the standby mode. Short press button, the green light flashes once then turns off, start taking pictures manually, and then short press button, the green light lit, enter the standby mode, and save the file, saved a video document automatically every 5 minutes. For continuous recording, you can short press button again.

3. Motion detection recording

Please verify that the T-F card is inserted into the product!

Push "ON/OFF" button to "ON", long press button, after four long green light flashes, enter the standby mode. Continuous short press button twice, the green light flashes three times then turns off into the camera motion detection mode, save a video document automatically every 5 minutes. Then short press button, the green light lit, enter the standby mode, and save the file.

Notice:

- a. Please make sure T-flash (Micro SD) card has been inserted, if not, it will be power off automatically after 4 seconds, And easy to cause system halted.
- b. The maximum capacity of T-flash card is 16GB.
- c. Saving file needs certain time, so please don't press Operation button continuously in order to avoid saving unsmoothly and generating incomplete file.
- d. When you make a video, please focus on the object and keep 50cm under sufficient illumination. Then the video will be right, natural color, clear and stable.

4. Shutdown

In the pause, ON / OFF button in the ON position, long press button then turns off.

5. Time set

1. In the off state, connected to the computer.
2. In the memory card to create a new document called time. TXT
3. Open time.TXT document, enter the time format is as follows: 2010-01-01 16:12:10, Save the document.
4. Exit the computer connected, unplug the USB data cable. At this point, the machine should be turned off;
5. After booting, the machine is set the system time the same as the document time automatically.

6. Auto-power off function

J018 will save file and turn off automatically as following:

2

- a. When you shoot video without enough power, file will be saved automatically, then auto-power off.
- b. When disk space of J018 is not enough, after indicator goes out immediately, file will be saved automatically then auto-power off.

7. Connecting computer

It can connects computer under power off mode, after that which can be used as U disk, who can copy, cut and paste, delete file.

When you connect it with USB port, a portable disk mark will be seen after several seconds. Green light is flashing constantly.

Notice:

a. When you connect computer, if the machine cannot be identified, or not see the portable U disk mark in 30 seconds, please insert it again.

b. It is better copy or cut video file into computer hardware then play. Video file which is saved in the machine is played directly will cause unsmooth play, the reason is that gigantic data cannot be transmitted synchronously.

8. Reset

When machine works abnormal for illegal operation or other unknown reasons, it needs to be reset.

Push "ON/OFF" to "OFF", that's OK.

9. Charge

Three times before charging to charge more than 12 hours, make the battery to achieve maximum efficiency.

 
Start charging, Green indicator light is flashing slowly. When charging 1 ~ 2 hours continuously fully charged, Green indicator light are often bright.

10. Installation

Clothes hook Camera can be used with a dedicated siding installed in any place at random, hanging plate can fixation screws also be used double-sided adhesive fixed.

Installation diagram below :

3

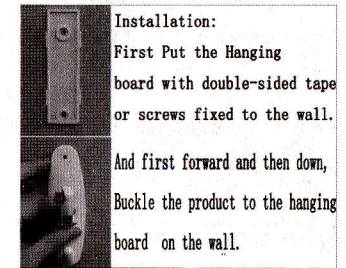

Installation:

First Put the Hanging

board with double-sided tape or screws fixed to the wall.

And first forward and then down,

Buckle the product to the hanging

board on the wall.

Notice

Suitable using situation: Please follow State's law. Do not use it illegally.

Software upgrade: In order to make products have more function, manufacturer will perfect product software continuously. This product is convenient for customer to upgrade by themselves, so please contact with local retailer for the latest software information and upgrade method

Work temperature: Please use it under normal temperature and avoid using under unsuitable body temperature.

Work humidity: Please use it under agreeable human atmosphere humidity, Please not to make product wet or expose in rain for which without waterproof function.

Shooting illumination: Please use it under enough light sources; do not aim the camera at the sun and other strong light sources in order not to damage optical parts of an apparatus.

Cleaning requirements: Please not use the product under too large dust density atmosphere so as not to affect video effects for tainted lens and other parts.

Waste treatment: Please pay attention to protect environment, not to throw the product optionally. In order to avoid explosion, please not throw product into fire.

 
4

Clothes hook Camera J018 使用说明

感谢您购买 Clothes hook Camera J018, 本机采用了独特的超便携式设计, 使它的应用在各个领域, 为您带来方便, 安全, 丰富多彩的日常生活。

产品特点

- 小巧的外形设计, 对产品进行全机 UV 喷涂, 时尚耐磨;
- 支持 AVI 的视频格式
- 在低照度下, 可进行高清影像的录制
- 解晰度 1280*960, 30 帧每秒
- 支持 USB1.1 传输接口
- 最大可支持 16G 的 T-flash 卡
- 内置锂电池可持续摄像达 120 分钟



操作指南

1. 充电:

本机内置可充电锂电池, 初次使用本机时, 请先进行充电, Clothes hook Camera 可以通过以下方式充电:

- 1). 连接电脑充电, 使用 USB 数据线, 即可充电
- 2). 用充电器充电, 用 USB 数据线与充电器座连接, 再把充电器插市电插座, 即可充电。充电时, 绿灯闪烁, 充满电后绿灯长亮。

注意: 当电池电量不足时, 机器会直接进入保护状态, 无法开机。此时, 请对本机进行充电。

2. 开机/摄像

请确认已将 T-F 卡插入产品中!

将 ON/OFF 键移至 ON 位置, 长按按键, 绿灯闪烁四次后长亮, 进入待机状态。短按一次按键, 绿灯闪烁一次后熄灭, 开始手动摄像, 再短按按键, 绿灯常亮, 进入待机状态, 并保存文件, 每三十分钟自动保存一次视频文档。如需连续摄像, 可再次短按按键。

1

3. 移动侦测录像

请确认已将 T-F 卡插入产品中!

将 ON/OFF 键移至 ON 位置, 长按按键, 绿灯闪烁四次后长亮, 进入待机状态。连续短按两次按键, 绿灯闪烁三次后熄灭, 进入移动侦测摄像模式, 每 5 分钟自动保存一个视频文档。再短按按键, 绿灯常亮, 进入待机状态, 并保存文件。

注意:

- a. 请务必确认卡槽中已插入 T-flash (Micro SD) 卡, 如未插卡, Clothes hook Camera 将在 4 秒后自动关机, 如在开机前未插入 T-F 卡, 容易引起死机现象。
- b. T-flash (Micro SD) 的最大使用容量为 16G
- c. 文件保存需要一定的时间, 请勿在保存时连续按操作键等, 这样会导致录制的文件无法顺利保存, 并使生成的文件不完整。
- d. 请在充足照明的环境下, 把镜头对准所摄对象, 与被摄物保持 50cm 以上的距离, 这样将会得到正确, 色彩自然, 景物清晰, 画面稳定的影像。

4. 关机

在暂停状态下, ON/OFF 键在 ON 位置, 长按按键关机。

5. 时间设置

1. 将本机关机并与电脑连接;
2. 在储存卡的根目录下新建一个名为 time.TXT 的文档;
3. 打开 time.TXT 文档, 输入时间格式如下: 2010-01-01 16:12:10 保存文档
4. 正常退出电脑连接状态, 拔出 USB 连线。此时, 本机应处于关机状态;
5. 正常开机, 则本机系统时间被自动设置为与文档的时间。

6. 自动关机功能:

在下列情况下: Clothes hook Camera 将自动保存录像数据, 并自动关机:

- a. 正在摄像时, 如电量不足, 系统会先保存录像内容, 然后自动关机。
- b. 当 Clothes hook Camera 磁盘空间满时, 指示灯瞬间闪动后, 机器将自动保存文件, 并自动关机。

2

7. 连接电脑

在关机状态连接电脑, 连接电脑后可作为 U 盘使用, 可自由进行文件的复制, 剪贴, 删除。
把本机插入电脑 USB 口, 数秒后电脑将会弹出可移动磁盘标识, 绿灯闪烁。

提示:

- a. 本机连接电脑后, 如果电脑无法识别, 或在 30 秒后仍未弹出可移动磁盘标识, 请重新插拔一次。
- b. 建议把录好的视频文件复制或剪切到电脑硬盘中再进行播放, 直接播放保存在本录像机内置存储器里的视频文件, 可能会因为数据量过大, 传输跟不上, 而导致播放不顺畅。

8. 复位:

当本机因为非法操作或其它未明原因, 工作不正常时, 需要对产品进行复位。

直接 ON/OFF 键, 直接移至 OFF 位置, 系统断电, 相当于复位本机

 
9. 充电

前三次使用 Clothes hook Camera 时, 请将产品电池用完再充电, 并每次保持连续充电 12 小时, 使电池达到最大效能。

当开始插上充电器充电时, 绿色指示灯慢闪; 当连续充电 1~2 小时, 电池充满, 绿灯常亮

10. 安装

Clothes hook Camera 可使用专用的挂板随意安装于任何地方, 挂板可用螺钉固定, 也可用双面胶固定。安装示意图如下:



挂板安装:

先把挂板用双面胶或螺钉固定在墙面上

如右图

先往前再向下把

主机扣紧到墙上的挂板上

3

注意事项

使用场合: 敬请严格遵守国家相关法律, 不得将此产品用于任何非法用途, 否则后果自负。

软件升级: 为了使产品具有更好的性能, 厂家将不断完善产品软件, 本产品具有方便客户自己升级软件的特点, 请向当地经销商索取最新版本软件的信息以及升级方法。

工作温度: 请在自然温度下使用, 请勿在人体不能适应的温度下工作

工作湿度: 请在人类适宜生活的环境湿度下使用, 请勿将产品置于潮湿的工作环境, 产品不具备防水功能, 敬请避免使本产品淋水或暴露在雨水中

拍摄照度: 请在有充足光源的环境下使用, 请勿将摄像头直接对着太阳等超强光源, 以免光学器件受损。

保洁要求: 请勿在粉尘密度过大的环境下使用, 以免镜头以及其它部件沾染粉尘, 影响摄像效果

废弃处理: 请注意环保, 勿随意丢弃本产品。禁止把本产品投掷于火中, 以免发生爆炸。

4