

vtech®

User's manual

 


Models: ES1510A/
ES1510-0A

<http://hkphones.vtech.com>

1. GET TO KNOW YOUR PHONE

1.1 Handset Overview

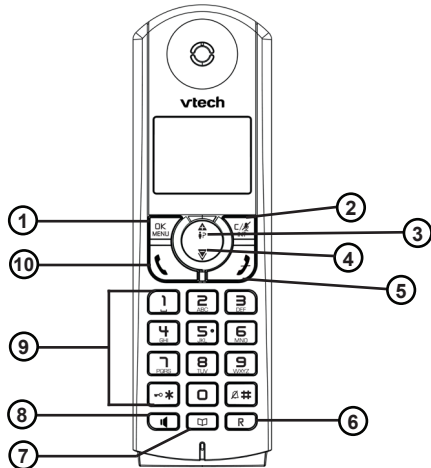

- In idle mode: Press to access the main menu.
In sub-menu mode: Press to confirm the selection.
During a call: Press to access Intercom/Phonebook/Redial List/Call List.
- In main menu mode: Press to go back to idle screen.
In sub-menu mode: Press to go back to previous level.
In sub-menu mode: Press and hold to go back to idle screen.
In editing/predialing mode: Press to clear a character/digit.
In editing/predialing mode: Press and hold to delete all the characters/digits.
During a call: Press to mute/unmute the microphone.
In idle mode: Press to intercom another handset.
In ringing: Press to suppress handset ringer.
- In idle mode: Press to access the call list.
In menu mode: Press to scroll up the menu items.
In Phonebook list/Redial list/Call List: Press to scroll up the list.
During a call: Press to increase the volume.
In ringing: Press to increase the ringer volume.
- In idle mode: Press to access the redial list.
In menu mode: Press to scroll down the menu items.
In Phonebook list/Redial list/Call List: Press to scroll down the list.
During a call: Press to decrease the volume.
In ringing: Press to decrease the ringer volume.
- During a call: Press to end a call and go back to idle screen.
In menu/editing mode: Press to go back to previous menu.
In menu/editing mode: Press and hold to go back to idle screen.
In idle mode: Press and hold to power off the handset.
In idle mode: Press and hold to power on the handset.
- In idle/predialing mode: Press to insert a flash.
During a call: Press to dial a flash.
- In idle mode: Press to access the phonebook list.
- During a call: Press to turn on/off the speakerphone.
In Idle mode/Predialing mode/Redial list/Call List/Phonebook entry: Press to make a call with speakerphone.
During ringing: Press to answer a call with speakerphone.

 
9. ALPHANUMERIC KEYPAD, ,

* key in idle mode: Press and hold to enable or disable the keypad lock.
key in idle mode: Press and hold to turn on/off the ringer.
key in call list mode: Press to review caller's number if applicable.
0 key in predialing/number editing mode: Press and hold to insert a pause (P).
1, 2, 3 key in idle/off hook mode, press and hold to dial the stored direct memory number.

10.

In idle/predialing mode: Press to make a call.
In Redial list/Call List/Phonebook entry: Press to make a call to the selected entry in the list.
During ringing: Press to answer a call.


1.2 Base Station Overview

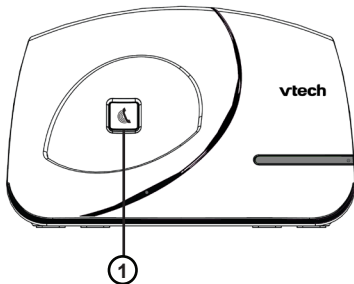

1.

Press on the base station to page your handset. It will ring for approximately 60 seconds.
Press and hold on the base station for about five seconds, the base station is entered into registration mode and allows handset registration.

 1.3 Display Icons and Symbols

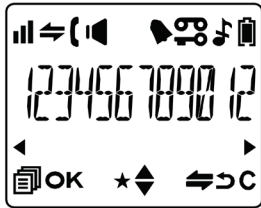

- Steadily on when the handset is in range of the base.
Flash when out of range of the base or not registered to the base.
- Steady when an intercom is in progress.
Flashes when there is an incoming intercom call.
- Indicates a call is in progress.
- Indicates that handsfree is being used.
- Steady when an alarm is set.
Flashes when the alarm time set before reaches.
- Indicates that the keypad is locked.
- Indicates when there are received new Voice Message Waiting (VMWI) not yet read.
Disappear when all the voice messages have been read.
(Network service dependent)
- Indicates that the ringer is switched off.
- Indicates when the battery is fully charged.
Whole icon flashes when the battery performs initial charging.
Internal block icon flashes when the battery is in final charging stage.
- Indicates when the battery needs charging.
Flashes when low battery power level is detected.
- Indicates when more characters are existed before the text currently displayed.
- Indicates when more characters are existed after the text currently displayed.
- Indicates when new call.
Turn off when new call has been read.
- Scroll up / down the menu items / Phonebook list / Redial list / Call List.

2. PRECAUTIONS

The signal quality will depend on the location and environment of the base and handset.

Position your ES1510A away from sources of excessive heat (radiators, direct sunlight, etc.) and protect it from vibrations and dust. Never allow your telephone to come into contact with water or other liquids, or with aerosols. To reduce the risk of interference and optimize reception, take particular care not to install the base in the immediate vicinity of windows, large metal objects, reinforced concrete, televisions, music centres, VCR or DVD players, halogen lamps or heating devices, fluorescent lighting, burglar alarms, microwave ovens, computers, etc. This telephone requires an electrical power supply in order to function.

To clean your ES1510A, use an antistatic cloth lightly moistened with water.

NOTE:

Your ES1510A is a DECT™* standard appliance designed to receive and transmit telephone calls. It is designed for connection to the public telecommunications network.

 
3. INSTALL YOUR PHONE

3.1 Install and Charge the batteries

- Slide down to open the battery compartment cover.
- Place the 2 supplied AAA rechargeable batteries as indicated. Pay extra attention to direction of polarity.
- Slide the battery compartment cover back.
- Put the handset on the base and charge for 15 hours before using the handset for the first time. The handset will give a beep when it is properly placed on the base or charger.

NOTES:

- Use only the supplied NiMH rechargeable batteries.
- If the handset will not be used for a long time, disconnect and remove the batteries to prevent possible leakage.

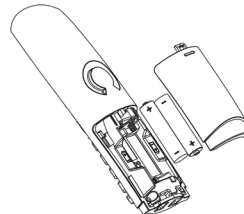


3.2 Connect the Base Station

- Plug one end of the telephone line cord into the telephone jack on base bottom.
- Plug the small end of power adapter into a power jack on base bottom.
- Connect the power supply plug to the base jack horizontally, and route the power supply cord through the slot.
- Plug the large end of power adapter into a wall power outlet.
- Plug the other end of the telephone line cord in to the telephone jack or micro-filter.

NOTE:

 Always use the cables provided in the box.

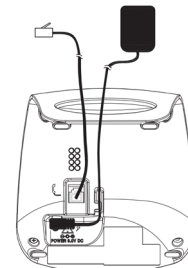

If you have broadband service, a micro-filter (not included) is required.

3.3 Connect the Charger(s) (for Duo/Trio models)

Plug the power adapter into mains socket.

If you have a Broadband line

If you connect your telephone to a line with a broadband connection, you will need to insert a micro-filter between the telephone and the telephone line, otherwise you may get interference between the telephone and the broadband, which could cause problems.

In a home with broadband, every telephone must have a microfilter connected, not just the one at the telephone point that your modem is connected to. If you need more broadband microfilters, contact your broadband supplier.

4. USING YOUR PHONE

4.1 Make a call

4.1.1 Preparatory Dialing

Enter the phone number and press or to dial the number.
Press to clear the entry.

4.1.2 Direct Dialing

Press or to take the line and enter the phone number.

4.1.3 Dial from Direct Memory Keys

In idle or off hook mode, press and hold , , to dial the direct memory number. You have to store number to the related key first. See section 7.4 for reference.

4.1.4 Call from the Redial List

Press to access the redial list and press / to select the desired redial number. Press or to dial out to the selected redial number.

5. PRIVATE PHONEBOOK

Your phone can store up to 50 private phonebook entries with names and numbers. Each phonebook entry can have a maximum of 20 digits for the phone number and 12 characters for the name. You can also select different ringtones for your phonebook entries. Phonebook entries are stored alphabetically by name.

5.1 Add a New Phonebook Entry

In Idle:
Press to access the phonebook.

OR

Press and / to select **PHONEBOOK** main menu item and then press to access the phonebook.

- Press to select **ADD**.
- Press to enter the name.
- Press to enter the number.
- Press and / to select the desired ringtone for your phonebook entry.
- Press to store the phonebook entry.

5.2 Call from the Phonebook

In Idle:

- Press to access the phonebook.
OR
Press and / to select **PHONEBOOK** main menu item and then press to access the phonebook.
- Press or to dial out to the selected phonebook entry.

