

ACCUSPLIT® AX740BL

OPERATING INSTRUCTIONS

BASIC STOPWATCH OPERATIONS

Twin Button Feature: The Left and Right buttons on new ACCUSPLIT stopwatches operate interchangeably, so both are labeled “A” for these instructions.

Backlight

EL Backlight comes on for 5 seconds with each push of the button.

Event

- A – Start
- A – Stop (Display shows “SPLIT”)
- A (2sec) – Reset

Dual Split Memory with Split Counter

- A – Start (Shows Running DUAL Time)
- A – Split* (Top shows CUM 1, Bottom shows LAP 1)
- A – Split* (shows CUM 2, Bottom shows LAP 2)
- A – Split* (Top shows CUM 3, Bottom shows LAP 3)
- A – Split* (Top shows CUM 4, Bottom shows LAP 4)
- A (2sec) – Reset

*Split Counter always shows Current Split

Push C to return to Running Time

Memory Review (before Resetting)

- C (2sec) – Review* (Bottom shows AVE LAP Split, Top shows TOTAL ELAPSED TIME)
- C – Review (Shows last DUAL Split)
- C – Review (Shows next DUAL Split, in reverse order)

*Reviews at any time in reverse numerical order. Hold down for Rapid Review.



BATTERY CHANGING

If the display becomes dim or goes blank, you can replace the battery using “X3V” case battery changing instructions posted at www.accusplit.com/support. The watch uses a CR2032 Lithium battery.

Master Reset

Remove battery as shown above. Wait 5 seconds and reinstall.

NO-PROOF-OF-PURCHASE LIMITED WARRANTY

See label on back of unit for details, or check
<http://support.ACCUSPLIT.com>