


SURVIVOR™ ACCUSPLIT®

STOPWATCH

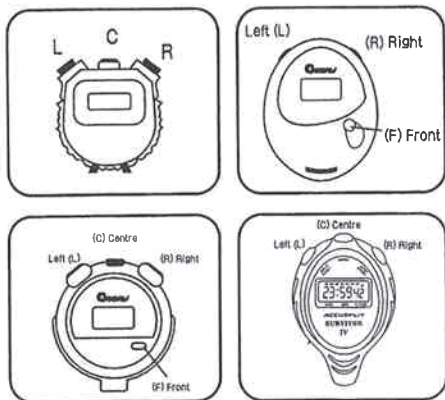

STOPWATCH OPERATIONS

Press C until at Stopwatch display. If necessary, Press R-Stop & L-Reset to 0.

<u>Event</u>	<u>Split</u>	<u>1-2 Finish</u>
R-Start	R-Start	R-Start
R-Stop	L-Split	L-Stop #1
(Repeat R,R	L-Release	R-Stop #2
time-in/ time-out)	(Repeat L,L	(See #1 time)
L-Reset	each Split)	L-Release
	R-Stop	(See #2 time)
	L-Reset	L-Reset

USER REGISTRATION

Please return this USER (not owner) Registration (or a copy) to the Repair Center address above, so that we may keep you informed of future developments.

Most common use?

Model# _____

e-mail _____

Telephone (optional)

USER _____

_____ Zip _____

TIME, CALENDAR & ALARM DISPLAY

Press C until you get to the Time Display.

Hold R - display Month, Date, & Day

Hold L - see Alarm Time

Hold L & Press R - Alarm On / Off

TO SET / DISARM HOURLY CHIME / ALARM

Press C until you get time display

Hold C see Alarm Time &

Press L. Chime is ON when dashes appear above display. Chime is OFF when no dashes appear.

TO SET TIME & CALENDAR

Press C 3 times to enter Set Mode

Press L to select Seconds, Minutes, Hour (A/P=12 hour, H=24 hour), Date, Month, Day

Press R to change any of the above.

(Seconds only resets to 00)

(Hold R to change digits rapidly)

Press C to return to Time display

TO SET ALARM

Press C 2 times to enter Set Mode

Press L to select Minutes & Hours

Press R to change Minutes or Hours

Press C to return to Time display

BATTERY CHANGING

For best results, use Silver Oxide Battery

NO-PROOF-OF-PURCHASE LIMITED WARRANTY

See label on back of unit for details, or check

<http://support.ACCUSPLIT.com>

ACCUSPLIT, Inc. • 6120 Stoneridge Mall Rd., Suite 210 • Pleasanton, CA 94588 USA
 800-965-2008 • 925-226-0888 • FAX 925-463-0147 • www.ACCUSPLIT.com • support@ACCUSPLIT.com

ASSEMBLED IN CHINA

© 2000AST