



3 CUP RICE COOKER TECHNICAL SPECIFICATIONS

Voltage: 230-240V ~ 50Hz
Power input: 350 Watt

PACKAGE CONTENTS

1 Rice Cooker
1 Non Stick Bowl
1 Glass Lid
1 Cup
1 Spoon
1 Instruction Manual

Confirm all parts before disposing of carton. Safely dispose of all plastic bags and other packaging components. They may be potentially dangerous to children.



SAFETY INSTRUCTIONS

Carefully read this manual before using this appliance. Make sure that you know how the appliance functions and how to operate it. Maintain the appliance in accordance with the instructions to ensure that it functions properly. Keep this manual with the appliance. If the appliance is to be used by a third party, this instruction manual must be supplied with it. The safety instructions do not by themselves eliminate any danger completely and proper accident prevention measures must always be used. No liability can be accepted for any damage caused by non compliance with these instructions or any other improper use or mishandling.

Do not use this appliance if it has been dropped or damaged in any way, if the supply cord is damaged, or if it is leaking.

USERS MANUAL

RICE COOKER

MODEL CE1957RC





ASSEMBLY AND OPERATION

Upon opening check to ensure that all parts are available and that the appliance, cord and plug are not damaged.

Connect to a suitable power supply, corresponding to that of the appliance, 230-240~V a.c. 50 Hz.

Measure the rice using the plastic measuring cup. One cup of uncooked rice will make about 3 cups of cooked rice.

Wash rice 4 to 5 times with fresh water until water becomes clear. Be sure to wash in separate bowl or pan. Do not use the rice cooker pan for this purpose.

Place washed rice in non-stick inner pan and add water. Markings inside pan indicate required amount of water. Example: If you have used two measures of rice, add water to line marked 2, and so forth.

Place the non-stick pan inside the cooker (outside of pan should be clean and dry). Do not force. Turn slightly to right and left to be sure it is seated vertically, directly on the heating plate. Cover with lid.

Plug in power cord and depress cook switch completely. Pilot light will turn on. When rice is cooked, the "on" light will switch off and the keep "warm" switch will be automatically activated.

If you do not want heat preservation, simply unplug the cord after switching off the appliance at the wall socket.

Keep the lid on for at least 15 minutes allowing the rice to be steamed fluffy by the remaining heat.

The system is designed to produce uniform and perfect cooking. However you can prepare rice to your taste adding more or less water.

You can decrease cooking by returning the cook switch to its original position before it returns automatically or increase it, by depressing it again after automatic cycle is complete.

The leftovers can be served later without losing flavour if you follow these instructions:
Left over rice should be removed from the aluminium pan and kept in the refrigerator until ready to be served.
NEVER use the non-stick aluminium pan to store leftovers in the refrigerator.

CASCADE



ELECTRICAL SAFETY

When using electric appliances always observe safety regulations where applicable to reduce the risk of fire, electric shock and personal injury.

Always check that the power supply corresponds to the voltage on the rating plate.

Supply cord and plug.

Always unplug from mains supply when not in use. Do not abuse or damage the power cord. Fully unwind the cord before use as a coiled cord may overheat. Do not allow the supply cord to touch hot surfaces.

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

Children.

Caution. Be aware of the danger to young children of any electrical appliance. Keep out of reach of young children.

This appliance is not intended for use by young children or infirm persons. Young children must be supervised to ensure that they do not play with the appliance.



Water.

Do not immerse any part of this appliance or supply cord in water. Do not use with wet hands or use in any damp situations.

Environment.

This appliance is designed for inside use only. Do not use near curtains or other combustible materials. Do not use outdoors. Do not use near a hot gas or electrical burner or place in a heated oven. This appliance must not be used in locations where flammable vapour or explosive dust is likely to exist.

Earth safety.

This appliance must be earthed.

Connect to a suitably earthed supply socket only, corresponding to the requirements of this appliance. Do not overload the circuit.

CASCADE



GENERAL SAFETY

When using electric appliances basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury. Read all these instructions before attempting to use the heater.

Use

Use this appliance only for its intended use. Use only genuine attachments supplied by an authorised service dealer. Do not let the supply cord hang over the edge of any table or counter. Do not leave connected to the power supply when not in use. This appliance is for household use only.

Scalding

Do not touch any hot surface. Hot steam may be ejected when opening any vessel lid containing hot or boiled water.

Ventilation

Ensure adequate ventilation, keep an open space of at least 20 cm all around this appliance.

Keep children away.

This appliance is not intended for use by young children or infirm persons without supervision. Young children must be supervised to ensure that they do not play with this appliance.

Do not cover this appliance.

Always leave a gap around any appliance when in use.

Damaged or dropped.

Always inspect your appliance before use. Check all components and all covers are correctly attached. Do not use this appliance if it has been damaged, dropped, left outdoors or dropped in water.

Store in a safe place

When not in use store your appliance and all its accessories and instruction manual in a safe and dry place.

Do not attempt to service this appliance yourself. Return it to a qualified service agent for repair. This appliance requires no maintenance.

CASCADE



MAINTENANCE

Before cleaning.

When not in use or before cleaning, always disconnect the appliance from the mains supply.

Cleaning.

Regularly clean the outside of the appliance of dust with a soft damp cloth and dry it with a dry towel. Do not immerse in water. Do not use harsh solvents.

Damage check.

Always check that the appliance is in good working order and that all parts are secure. Check the power supply cord and plug regularly for cuts or damage.

Store in a safe place

When not in use store your appliance and all its accessories and instruction manual in a safe and dry place.

CASCADE

Guarantee Card

This product is guaranteed against faulty materials and workmanship for a period of two years from the date of purchase. The obligation to the purchaser under this warranty is limited to servicing the unit and replacing defective parts when the product is returned freight prepaid to the retailer. This warranty becomes void if the product has been tampered with, damaged by accident, damaged in any other way by improper use or has been purchased second hand. All production orders have quality inspections. In the unlikely event of a deficiency, please contact the retailer from which this product was purchased.

WARRANTY FOR APPLIANCES USED COMMERCIALY LIMITED TO 90 DAYS

Type of Appliance: _____

Model No.: _____ Purchase Date: _____

Product Purchased From: _____

Your Name: _____

Address: _____

Phone Number: _____

IMPORTANT!

Please retain this warranty card along with your purchase receipt. Please do not post to the retailer or importer. If service is required, both of these documents are to be returned with the appliance to your retailer, otherwise a fee may be charged.

For Technical Information

New Zealand call Toll Free 0800-898580

Australia call Toll Free 1-800-858011

Email: administration@orientalpacific.com