

# Temperature Sensor Module (TSM) USB Stick Demo Board User Manual

## ***Table of Contents***

1	Introduction.....	3
2	Host computer requirements.....	4
3	Installing the software .....	4
4	Where to begin with the XP-0128 EVB.....	5
	4.1 Demo board overview.....	5
5	Where to begin with the XP-0128 PC software.....	6
	5.1 Temperature Sensor Module overview.....	6
	5.2 Running TSM USB STICK software.....	6
	5.3 Main window buttons.....	7
	5.4 Zooming .....	9
6	Disclaimer .....	11
7	Revision Table .....	12

## 1. Introduction

The TSM USB STICK has very few parts to *highlight* how easy it is to interface the TSM into your current design. Remember the SMBus only requires two digital I/O pins from your microprocessor. (No analog signals to worry about!)

The featured component of the USB STICK is Dexter's Temperature Sensor Module (TSM), consists of the industry standard Dexter ST-60 with a special embedded signal conditioning ASIC inside the TO-5 can. Due to the low noise amplifier, 17-bit high resolution ADC and powerful DSP of the TSM very accurate non-contact temperature measurements can be achieved. Factory Calibrated object and ambient temperatures is available in RAM of the TSM. This is accessible by the industry standard two wire serial SMBus protocol or via 10-bit PWM (Pulse Width Modulated) output of the device.

The SMBus allows for multiple zone temperature control – up to 100 sensors can be read via four common wires.

Traditional IR Detector voltage output is in the microvolt range requiring specialized electronics to minimize noise, readout electronics, calibration and compensation for system integration. Using the integrated ASIC with our detectors inside the TO-5 can:

- Electronics are placed at the detector, greatly reducing electrical noise. Temperature measurements now in digital format.
- System integration time and expertise is reduced
- Less OEM time to market
- Lower system costs
- Smaller footprint
- Plug and Play
- Calibrated output from factory
- System Flexibility

The TSM USB STICK demo board, (p/n: XP-0128) is designed to support the infrared temperature sensor module (TSM). The main purpose of the TSM USB STICK demo kit is to allow customers to evaluate the TSM for virtually any application quickly. The communication between PC and the demo board is accomplished via USB.

The TSM USB STICK demo Kit contains the following items:

1. TSM USB STICK demo board (EVB), pre-programmed with USB a boot loader and demonstration firmware.
2. DVD-ROM, containing the PC USB HID demo software.

Our TSM USB STICK is based on the Microchip PIC18F14K50 which offers a cost complete hardware designs, low cost development tools and software which could be an excellent starting point for any hardware design. Dexter offers design services and could customize the demo board to meets your needs as well.

Please contact Dexter for further information.

## 2. *Host computer requirements*

For the demo to function correctly the following hardware and software requirements must be met:

- PC-Windows compatible system
- An available USB port
- DVD-ROM drive (for use with the accompanying DVD)
- Microsoft Windows XP sp 1 or higher. Graphics set to 1024x768 or higher.
  - Processor:** 400 MHz Pentium processor or equivalent (Minimum);  
1GHz Pentium processor or equivalent (Recommended)
  - RAM:**96 MB (Minimum); 256 MB or above (Recommended)
  - Hard Disk:** Up to 500 MB of available space may be required if Dot Net not installed
- Microsoft Dot Net 3.5 sp 1 or higher. Install DVD has this included.
- Microsoft Dot Net 3.5 sp 1 Chart Control. Install DVD has this included.

## 3. *Installing the software*

The demo board requires very little effort to install. Most of the work is done by the installation software. Insert the install DVD into the drive on your computer. If auto run is enabled on your system the software installation should start automatically. If not simply click on the file "setup.exe" on the DVD drive to start the process.

You may be asked to accept each of the Microsoft software license if not already installed on you computer.

After the USB software is installed you can connect the demo board to any USB port on the computer.

To connect the demo board:

1. Unpack and unwrap the TSM USB STICK.
2. Connect the TSM USB STICK to an open USB port on the host system.  
The LED will shine a steady RED when on.

The software will be installed in a separate Dexter Research directory and can be accessed from a shortcut Start/Programs/Dexter Research Center/TSM USB STICK.



#### 4. *Where to begin with the TSM USB STICK demo.*

##### 4.1 Demo board overview.

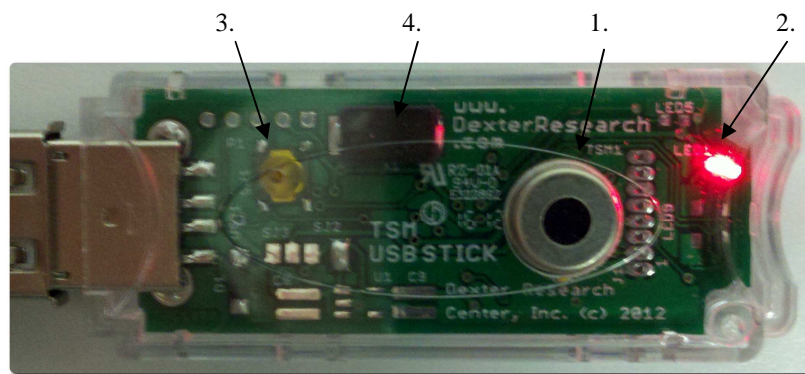


FIG 4.1 Top View

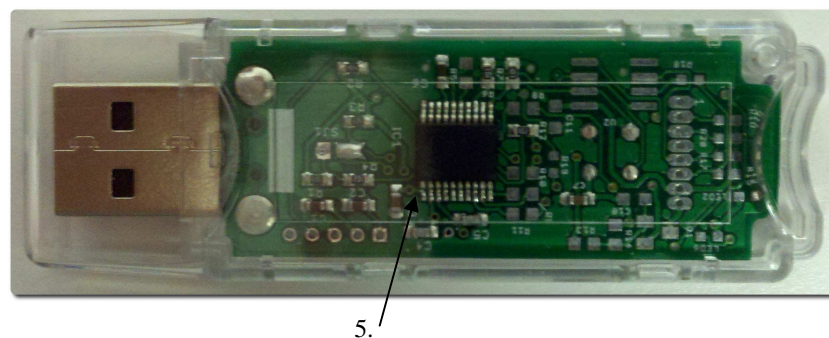


FIG 4.2 Bottom View

Fig.4.1. shows the top view of the demo board. The highlighted areas are:

1. Temperature Sensor Module with 70° Field of View TO-5 package.  
“TSM” (p/n: MD-0003).  
**Please see accompanying TSM data sheet for other models and features.**
2. Status LED. LED is on solid when connected to the PC and talking to Windows.  
During temperature sampling the LED will blink at the sample rate.
3. Upgrade button. Should a firmware update be required, pressing this button while plugging in the stick will place it in boot loader mode. Special PC boot loader software will be released should this ever become necessary.
4. Crystal for the microcontroller (PIC18F14K50).
5. Microcontroller (PIC18F14K50).

## 5. *Where to begin with the XP-0128 PC software.*



### 5.1 Temperature Sensor Module overview.

The TSM USB STICK software is a Windows-based application designed to be used with the XP-0128 demo board for evaluating Dexter’s TSM series of infrared non-contact Temperature sensor modules. Basic ambient and object temperature readings of the TSM can be captured, logged and displayed on the PC screen, providing an easy way to evaluate the TSM for use in target applications.

### 5.2 Running TSM USB STICK software.

Insert the TSM USB STICK into any USB port on the PC. You may elect to use a USB extension cable (not supplied) to provide greater flexibility on detector direction. The TSM USB STICK red LED should be “ON”.

Launch the software from shortcut in:

Start/Programs/Dexter Research Center/TSM USB STICK .

The Startup screen will be appearing on desktop:

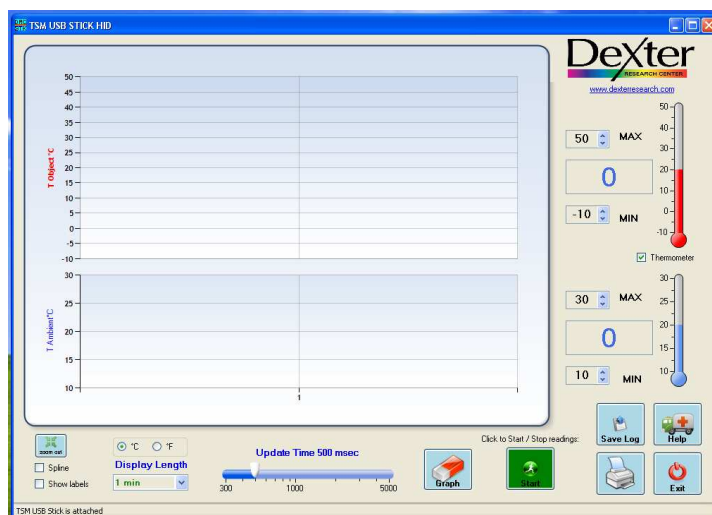 


FIG 5.1

After loading, the software will automatically recognize the TSM type, voltage, SMBus address and open the main screen. The status LED will be RED indicating power is applied, you should see “TSM USB Stick attached” in the lower left corner indicating communication is established.

### 5.3 Main window buttons.



**Exit** button.

Exits the program.



**Help** button.

Pulls up this User Manual.



**Start / Stop** button.

Click the “**Start**” button to begin taking measurements and update graphs. Button will turn to “**Stop**”. Click to end taking measurements.



*Note: This button will not appear on the screen if there are no communications with the TSM USB STICK.*



**Save Log / Log ON** button.

Clicking the “**Save Log**” button will allow you to log a date and time stamped readings for both temperatures in °C to an Excel csv file.

Note: You must specify a file of your choice each time you click the “Save Log”. Data is always appended to this file never erased. Button will change to a light red with “Log ON” when the data log feature is enabled. Re-click to disable logging.




**Print Graph** button.

Clicking this button will call up printer dialog screen to print the current displayed graph.



**Erase Graph** button.

Clicking this button will erase all data from the current displayed graph.

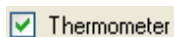

**Thermometer** check box.

Checking this check box will display both object and ambient Thermometers on the screen.




**°C °F** button.

Here you can select Celsius or Fahrenheit scale. This will change the graph and thermometer display scale. Note: the Log file is always in °C.  
*Caution: when changing this setting any data on the graph will be erased.*




**Display Length** pull down button.

Here you can select how much time the “X” axis on the graph represents. From 5 seconds to 1 hour. The “X” axis is a first in first out display; data enters on the right and leaves on the left to maintain the selected temperature history.

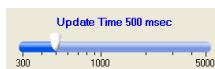


**Update Time** slider bar.

The slider bar in the middle of the screen “Update Time (msec)” sets the approximate sample time that readings are taken and displayed.

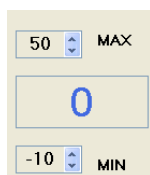

**Max and Min limit** text boxes and Current reading digital display.

Both object and ambient graphs have “Y” axis maximum and minimum setting boxes. This set the resolution of the graphs and thermometer on the screen only; it has no effect on the TSM. Graphs maximum delta = 1000°.

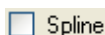

**Spline** check box.

Checking this check box will display both object and ambient graphs as a spline curve on the screen. During real time data collection the graph is show as a point to point line for faster update speed.



**Show labels** check box.

Checking this check box will display on both object and ambient graphs data labels for each point. This feature is only useful when you have a few points on the graph. Labels will make the graph unreadable and slow with large samples of data. This feature is most useful under zoom conditions. During real time data collection this feature is disabled for a faster update speed.



**Zoom out** button.

Clicking this button will remove all zoom levels from the display.



### 5.4 Zooming.

One nice feature is the ability to zoom in on a section of either graph. This is very useful when you have a large time window and you would like to see more detail on a small section of activity. See Fig. 5.2


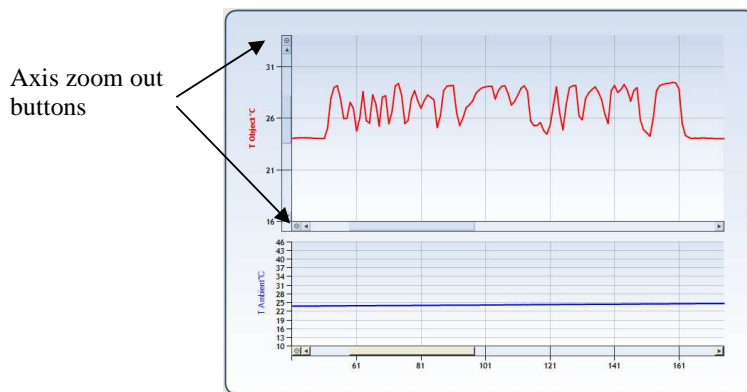


Fig. 5.2

Use the mouse to highlight the section of graph you are interested in. Place the mouse at the starting corner, press and hold the left button dragging the mouse to the ending corner.

Now in this example we had elected to highlight a section on the T object graph, we could have selected a section on the T ambient graph.

 Releasing the mouse button will update both graphs as selected.

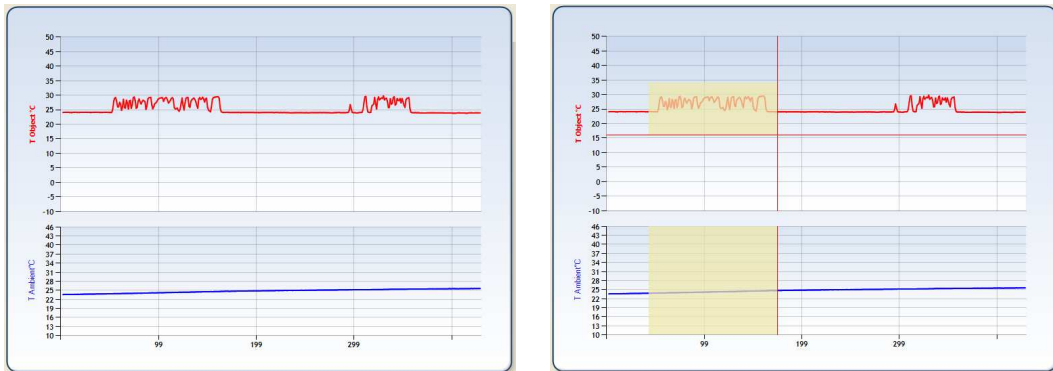

Zoom out button

Fig. 5.3

Each graph will now have a set of scroll bars and zoom out buttons. See Fig. 5.3.

Zoom out button for each axis will take you back one zoom level for that axis.

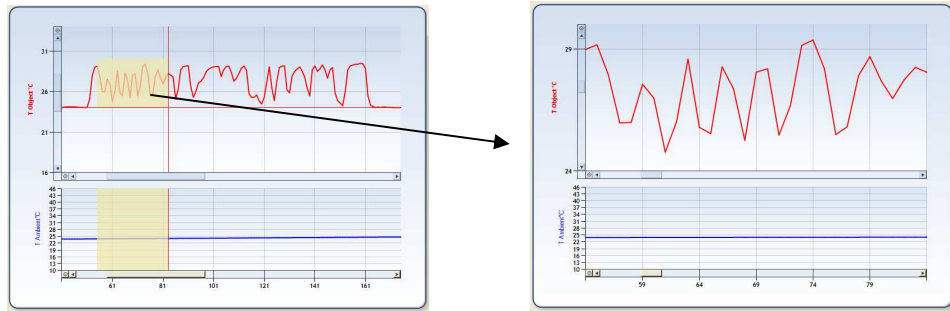


Fig. 5.4

Multiple zoom levels are possible; here we have highlighted another section on the first level to get even finer detail. Now at this level it may be useful to try the “Show labels” checkbox.


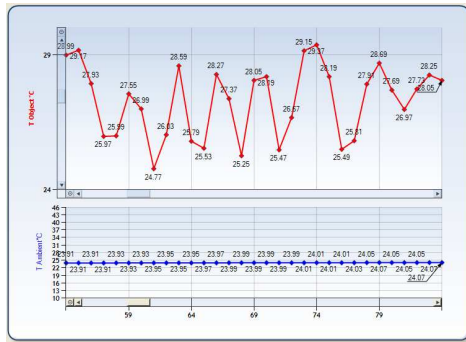 


Fig. 5.5

To get back to a “NO” zoom state you could click on each axis zoom out buttons or just click on the global zoom out button.



Fig. 5.6

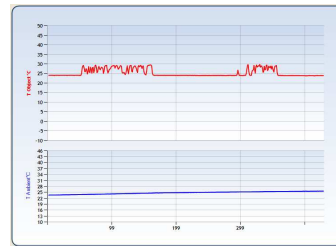

Also note that clicking “Erase Graph” or “Start” will go back to the “NO” zoom state.



## 6. *Disclaimer*

Devices sold by Dexter are covered by the warranty and patent indemnification provisions appearing in its Term of Sale. Dexter makes no warranty, express, statutory, implied, or by description regarding the information set forth herein or regarding the freedom of the described devices from patent infringement. Dexter reserves the right to change specifications and prices at any time and without notice. Therefore, prior to designing this product into a system, it is necessary to check with Dexter for current information. This product is intended for use in normal commercial applications. Applications requiring extended temperature range, unusual environmental requirements, or high reliability applications, such as military, medical life-support or life-sustaining equipment are specifically not recommended without additional processing by Dexter for each application.

The information furnished by Dexter is believed to be correct and accurate. However, Dexter shall not be liable to recipient or any third party for any damages, including but not limited to personal injury, property damage, loss of profits, loss of use, interrupt of business or indirect, special incidental or consequential damages, of any kind, in connection with or arising out of the furnishing, performance or use of the technical data herein. No obligation or liability to recipient or any third party shall arise or flow out of Dexter's rendering of technical or other services.

© 2012 Dexter Research Center, Inc. All rights reserved.

For the latest version of this Manual and software, go to our website at

[www.DexterResearch.com](http://www.DexterResearch.com)

Or for additional information contact Dexter Direct:

Dexter Research Center, Inc.  
7300 Huron River Drive  
Dexter, MI. 48130 U.S.A.

Phone: +1 (734) 426-3921

Fax: +1 (734) 426-5090

[detectandmanage@dexterresearch.com](mailto:detectandmanage@dexterresearch.com)

## **7. Revision Table**

Version	Modifications	Comment	Date
nc		Release	May 2012