

2. Press the ▲ or ▼ button to select 'Frame Rate' and then press the 'OK' button.
3. Press the ▲ or ▼ button to toggle between different frame rates. Once you have highlighted your desired selection, press the 'OK' button to confirm and exit.

Time Stamp Setting

1. In the setting mode, press the ▲ or ▼ button to select 'RECORDER SETTING' and then press 'OK' button.
2. Press the ▲ or ▼ button to select 'Time Stamp' and then press the 'OK' button.
3. Press the ▲ or ▼ button to toggle between on and off. Once your desired selection is made, press the 'OK' button to confirm and exit.


Recording Type

1. In the setting mode, press the ▲ or ▼ button to select 'RECORDER SETTING' and then press 'OK' button.
2. Press the ▲ or ▼ button to select 'Recording Type' and then press the 'OK' button.
3. Press the ▲ or ▼ button to toggle between 'still' and 'video'. Once your desired selection is made, press the 'OK' button to confirm and exit.

Event Playback

1. In the setting mode, press the ▲ or ▼ button to select 'EVENT PLAYBACK' and then press 'OK' button.
2. Refer to the user manual instructions on Playback of Video/Picture, Deleting Video/Picture and Deleting Folder for guidance.

TROUBLESHOOTING

Problem	Possible Cause	Likely Solutions
Tool will not start	1. Monitor not charged 2. Batteries need charging	1. Charge monitor 2. Replace batteries in control handle
Monitor will not charge	1. Adaptor cable not attached properly 2. Adaptor not connected to power	1. Make sure adaptor cable is connected between monitor and adaptor 2. Make sure adaptor is securely plugged into wall socket
Image too dark or light	1. LEDs near camera need adjustment 2. Monitor display needs adjustment	1. Use dial on control handle to adjust brightness of LEDs 2. Use contrast and brightness buttons on monitor to adjust image
 Follow all safety precautions whenever diagnosing or servicing the tool. Disconnect power supply before service.		

SPECIFICATIONS

Imaging Sensor	CMOS
Total Pixels	640 x 480 (PAL) 640 x 480 (NTSC)
Horizontal Viewing Angle	36°
Transmission Frequency	2468MHz
Minimum Illumination	0 Lux
Modulation Type	FM
Bandwidth	18MHz
Power Supply	4x AA batteries
Unobstructed Effective Range	10m (max)
Waterproof Capacity	IP67 (for lens/tube only)
Tube Diameter	9mm
Dimensions (WxDxH)	186 x 145 x 41mm (excluding flexible tube)
Approx. Weight	408g
LCD Screen Type	3.5" TFT-LCD
Effective Pixels	960 x 240
Video System	PAL/NTSC
Transmission Frequency	2414MHz, 2432MHz, 2450MHz, 2468MHz
Exterior Supply Voltage	5VDC
Consumption Current (Max.)	500mA
Charging Time	3 hours
Working Time	2 hours
Picture/Video Pixels	640 x 480
Video Size	20M byte/minute
Frame Rate	30 frame/second
Video Output Level	0.9-1.3VP-P@75ohm
Receiving Sensitivity	<-85dBm
Dimensions (WxDxH)	100 x 70 x 25mm
Approx. Weight	140g
Operating Temperature	-10°C to +40°C / +14°F to +104°F
Operating Humidity (Max.)	15 to 85%RH

Actual transmission range of wireless monitoring may vary according to the weather, location, interference or building construction. All specifications are subject to minor change without notice.

FCC INFORMATION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The graphics included in this user manual are subject to minor change without notice.

YORK Survey Supply

Explorer Premium Video Borescope



Operating Instructions



Prospect House, George Cayley Drive, Clifton Moor, York, England YO30 4XE

Tel: +44 (0) 1904 692723 Fax: +44 (0) 1904 690385
E-Mail: sales@yorksurvey.co.uk www.yorksurvey.co.uk

