

Gigaset

S820

Congratulations

By purchasing a Gigaset, you have chosen a brand that is fully committed to sustainability. This product's packaging is eco-friendly!

To learn more, visit www.gigaset.com.



GIGASET. INSPIRING CONVERSATION.
MADE IN GERMANY

Gigaset S820 – Touch & Type

Touchscreen/display

Status bar (→ enclosed poster)

Icons show the telephone's current settings and operating status. Touch the status bar to open the status page

Idle display or menu page

(→ enclosed poster)

Handset keys

Side keys

Set the volume during a call

 Talk key

Dial displayed number, accept call,
switch between earpiece and handsfree mode
Press **briefly**: open redial list
Press and **hold**: start dialling

 Menu key

Open the main menu/return to the idle display

 End call/end key

Press **briefly**: end call/paging call, reject internal call,
return to idle status
Press and **hold**: switch handset on/off

Star key

Press and **hold**: deactivate/activate ring tones

Hash key

Press and **hold**: activate/deactivate keypad and display
lock

Recall key

Recall (flash)
press and **hold**: enter dialling pause

Message key

Call up messages page (→ enclosed poster)

Mini USB connection socket

Connect the handset to your PC (Gigaset QuickSync)



Registration/paging key on the base

Press **briefly**: start paging

Press and **hold**: set base to registration mode

Message/registration mode display

Pulsing: new messages received

Flashing: base in registration mode

Contents









Gigaset S820 – Touch & Type	1
Safety precautions	4
Getting started	5
Display icons	15
Setting options	17
Using the telephone	20
Making calls	23
Contacts (address book)	26
SMS (text messages)	27
Calendar	28
Alarm	29
Baby phone	29
ECO DECT – Reducing transmission power (radiation)	30
Bluetooth devices	31
Customer Service & Assistance	32
Authorisation	33
Index	34

Safety precautions

Warning

Read the safety precautions and the user guide before use.

Explain their content and the potential hazards associated with using the device to your children.

	Use only the power adapter indicated on the device.
	Use only rechargeable batteries that correspond to the specification (see "Technical Data"). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. Rechargeable batteries, which are noticeably damaged, must be replaced.
	Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery. If you use a medical device (e.g. a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for the specifications of your Gigaset product see "Technical Data").
	Do not hold the rear of the handset to your ear when it is ringing or when speaker mode is activated. Otherwise you risk serious and permanent damage to your hearing. Your Gigaset is compatible with the majority of digital hearing aids on the market. However, perfect function with all hearing aids cannot be guaranteed. The phone may cause interference in analogue hearing aids (humming or whistling) or cause them to overload. If you require assistance, please contact the hearing aid supplier.
	The devices are not splashproof. For this reason do not install them in a damp environment such as bathrooms or shower rooms.
	Do not use the devices in environments with a potential explosion hazard (e.g. paint shops).
	If you give your Gigaset to a third party, make sure you also give them the user guide.
	Remove faulty devices from use or have them repaired by our Service team, as these could interfere with other wireless services.

Please note

The device cannot be used in the event of a power failure. It is also **not** possible to transmit **emergency calls**.

Emergency numbers cannot be dialled if the keypad lock is activated!

Getting started

Checking the package contents

- ◆ One Gigaset S820 **base**
- ◆ One charger cradle for the base
- ◆ One phone cord
- ◆ One Gigaset **handset**
- ◆ One battery cover (rear cover for the handset)
- ◆ Two batteries
- ◆ One belt clip
- ◆ One rubber seal for the USB connection
- ◆ One poster, one user guide and one CD

If you have purchased a model with multiple handsets, the package should contain two batteries, a battery cover, a belt clip and a charger with a charger cradle for each additional handset.

Setting up the base and charger (if included)

The base and charging cradle are designed for use in dry rooms in a temperature range of +5°C to +45°C.

- ▶ Set up the base on a level, non-slip surface at a central point in the building or mount the base on the wall

Please note

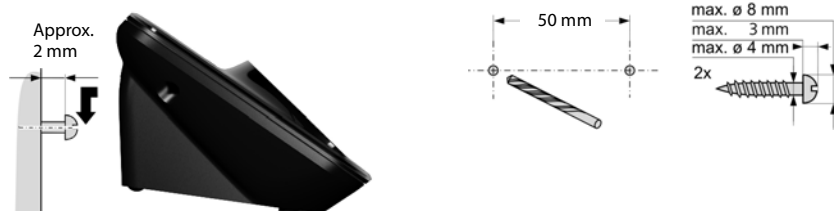
Pay attention to the range of the base. In buildings this is up to 50 m, outdoors up to 300 m. The range is reduced when ECO DECT is activated.

The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out.

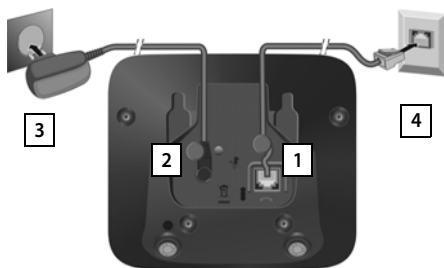
Please note:

- ◆ Never expose the telephone to the effects of heat sources, direct sunlight or other electrical devices
- ◆ Protect your Gigaset from moisture, dust, corrosive liquids and fumes

Wall mounting the base (optional)



Connecting the base with the phone network and the mains power supply

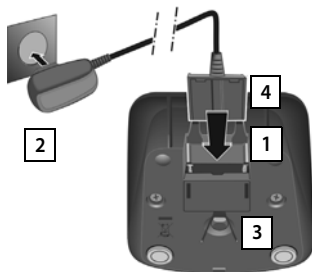


- ▶ Plug the telephone cable into the connection socket **1** on the back of the base until it clicks into place, then push the cable into the clips
- ▶ Plug the charger cradle cable into the socket **2** on the back of the base and **press firmly** to ensure the power supply. It is important to twist the angle plug underneath the cable clips to ensure a firm fit
- ▶ **First**, connect the charger cradle **3**
- ▶ **Then** connect the phone jack **4**

Please note:

- ◆ The charger cradle must **always be connected**, as the phone will not operate without a power supply
- ◆ Use only the charger cradle and phone cord **supplied**. Pin connections on telephone cables can vary

Connecting the charger (if included)



- ▶ Connect the flat plug to the charger cradle **1**
- ▶ Plug the charger cradle into the plug socket **2**

If you have to remove the plug from the charger again:

- ▶ Disconnect the charger cradle from the mains power supply
- ▶ Press the release button **3** and disconnect the plug **4**

Setting up the handset for use

The handset's display and keys are covered with a protective film.

Please remove the protective film.

Caution

Please do **not** use any touchscreen styli to operate the handset.

Do not use any protective sleeves/films from other manufacturers, as they may restrict the operation of your handset.



Inserting the rubber seal for the USB plug socket

Open the battery cover and insert the rubber seal into the groove.



Inserting the battery and closing the battery cover

Caution

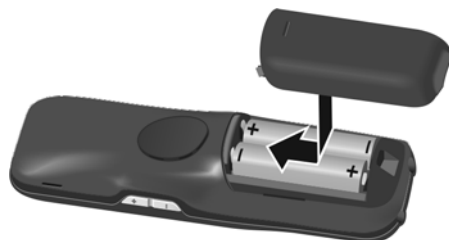
Use only rechargeable batteries recommended by Gigaset Communications GmbH, as this could otherwise result in significant health risks and personal injury. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

- ▶ Insert the batteries with the polarity in the correct direction

The polarity is indicated in the battery compartment.



- ▶ Insert the battery cover from above
- ▶ Then press the cover until it clicks into place



To **reopen the battery cover** to replace the battery:

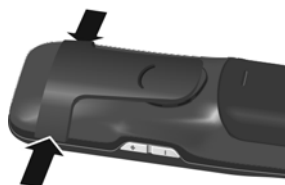
- ▶ Insert your fingernail into the notch on the top of the cover and push downwards



Attaching the belt clip

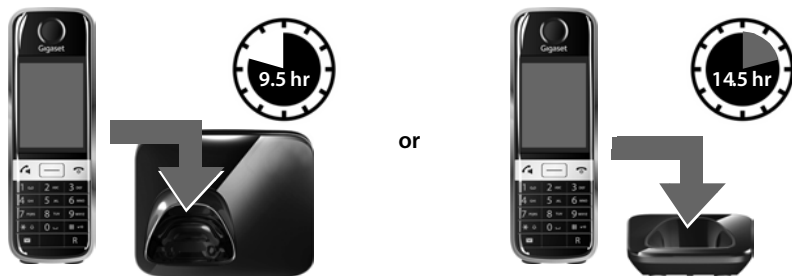
The handset has notches on each side for attaching the belt clip.

- ◆ **To attach** – press the belt clip onto the back of the handset so that the protrusions on the belt clip engage with the notches
- ◆ **To remove** – press the centre of the belt clip firmly with your right thumb, push the fingernail of your left index finger up between the clip and the housing, and pull the clip in an upward direction



Charging the battery

The battery is supplied with a partial charge. The batteries are fully charged when the lightning icon ⚡ on the display goes out.



- Place the handset into the base for **9.5 hours** or into the charger for **14.5 hours**

Please note

- ◆ The handset may only be placed in the designated base or charger
- ◆ The battery is also charged if the handset is connected via a USB connection to a PC with a power supply of 500 mA
- ◆ The battery may heat up during charging. This is not dangerous
- ◆ After a time, the charge capacity of the battery will decrease for technical reasons

Registering the handset


Handsets contained in the package have already been registered to the base. If, however, a handset has not been registered (display "**Handset not registered to any base**"), please register it manually. You must initiate registration on the base and on the handset:

1) **On the base:** press and **hold** the registration/paging key (at least 3 seconds)

2) **On the handset** (within 60 seconds): press **Register**

Or:

Menu key  ► menu page **Settings** ►  **HS + Base** ► **Register**

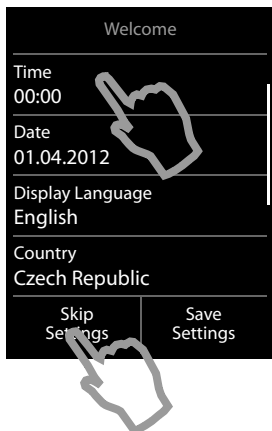
► If necessary, enter the system PIN (default: 0000) and confirm with 

Setting up the base and handset – installation wizard

The installation wizard starts automatically the first time your handset is connected to the base after switching on or after registration. It helps you to configure the following key settings on the handset and base. These keys are required for operation:

- ◆ Time and date
- ◆ Display language
- ◆ Country in which the phone will be used
- ◆ Your own area code

Note: some fields will not be displayed if your handset is registered with a base that has already been configured.



If you want to adjust the settings at a later date:

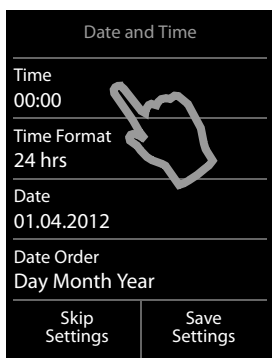
- ▶ Touch the **Skip Settings** option at the bottom of the display

The handset then switches to idle status.

You can configure the settings at any time using the **Settings** menu on your handset.

To configure the settings:

- ▶ Touch the **Time** field to configure this setting

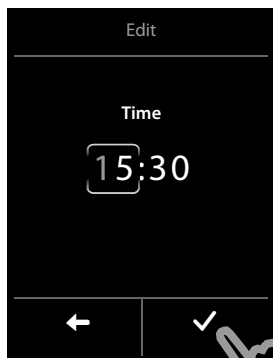


The **Date and Time** submenu opens.

Set the



- Time
- Time Format (12 hrs/24 hrs)
- Date
- Date Order (Day Month Year/Month Day Year)

by touching the fields in sequence and adjusting the settings (see the following illustrations).

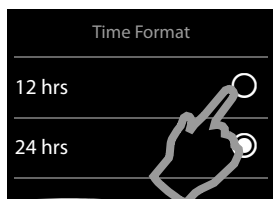


Setting the time

The current position is shown in colour and the digit flashes.



- ▶ Enter the digits via the keypad. The cursor position moves one space to the right each time a digit is entered. You can change the cursor position by touching the digit you want to change
- ▶ Touch the  icon to save your changes or press  to return to the **Date and Time** page without saving any changes

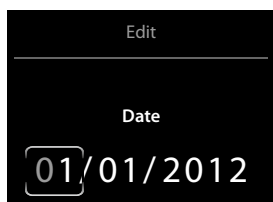
Please note: when 12 hrs mode is activated, **am/pm** will appear next to the input field.



Setting the time format



The time format setting is indicated by .

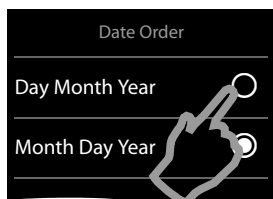
- ▶ Touch the  icon to change the format
- ▶ Touch the  icon. The setting is saved automatically. You return to the **Date and Time** page



Setting the date



The current position is shown in colour and the digit flashes.

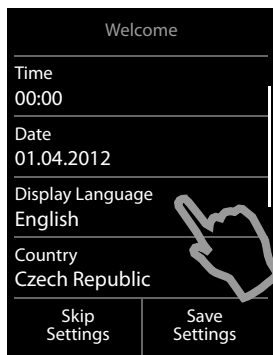
- ▶ Enter the digits via the keypad. The cursor position moves one space to the right each time a digit is entered. You can change the cursor position by touching the digit you want to change
- ▶ Touch the  icon to save your changes or press  to return to the **Date and Time** page without saving any changes



Setting the date order

The date order setting is indicated by .

- ▶ Touch the  icon to change the format
- ▶ Touch the  icon. The setting is saved automatically. You return to the **Date and Time** page
- ▶ Touch **Save Settings** to return to the **Welcome** page




Setting the display language


The current language is displayed under **Display Language**.

If you want to change the setting:


- ▶ Touch the **Display Language** field



The current language setting is indicated by .

- ▶ Touch the  icon next to the language you want to set

If your language is not displayed, the list may be "longer" than the display. You must then scroll through the list. To do this, put a finger on the display and move it slowly upwards.

- ▶ Touch the  icon. The setting is saved automatically. You return to the **Welcome** page



Setting the country

The country in which you are going to use the phone and for which it is authorised must be indicated under **Country**.

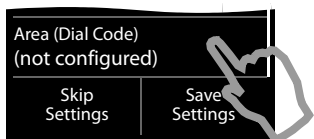
If the setting is not correct:

- ▶ Touch the **Country** field
- ▶ Set the country as described above

Please note

If you have selected **Other Country** instead of a country, the **Welcome** page will also show the **Country (Dial Code)** entry.

- ▶ Press **Country (Dial Code)** and enter the **International Prefix** and **International Area Code** for the international country code as described below for the local area code



Entering the local area code

- ▶ Touch the **Area (Dial Code)** field

The **Local Prefix** is the country-specific area code that precedes the **Local Area Code** when the country code is not dialled. In Serbia, the "0" **Local Area Code** is then e.g., 11 for Belgrad.

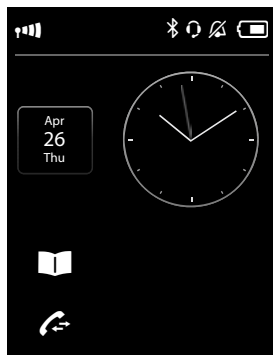
- ▶ Enter the **Local Prefix** of your country (max. 4 characters; "0" in the example). The field is already populated for the selected country
- ▶ Briefly touch the second input field and enter the **Local Area Code** (maximum 8 characters, "11" in the example)

You can correct incorrect entries using

- ▶ Touch after entering the numbers to save the entry

The **Welcome** page is displayed again.

- ▶ Touch the **Save Settings** option to save your settings



Once you have configured all the necessary settings, your handset switches to idle status.

Your phone is now ready for use.

What would you like to do next?

After successfully setting up the phone, you can make calls straight away, customise your Gigaset according to your requirements or firstly familiarise yourself with the operating features (→ page 20).

Customising the idle display

You can select the functions you use most often to design the display according to your needs. Customisation allows you to directly access up to 6 functions such as alarm, calendar, address list, call lists, etc., and call them up with a single touch of an icon (→ enclosed poster).

Synchronising with contacts in Google or Outlook

Synchronise your handset's directory using your PC and our Gigaset QuickSync software. For the free download and more information, see www.gigaset.com/gigaset820.

Setting ring tones

Assign specific tunes to internal and external calls, reminders, wake-up calls and to certain callers.

Menu key  ► menu page **Settings** ►  **Audio Settings**

Protect yourself from undesired calls

Use the time control function or the blacklists. Set your telephone so that it does not ring when you receive an undesired call.

Menu key  ► menu page **Settings** ►  **Call Protection**

Registering existing Gigaset handsets to the base

Continue using these handsets to make calls from your new base. Transfer contacts entries from these handsets to your new handset. For further information see the user guides for these handsets.

Configuring ECO DECT settings

Reduce the transmission power (emissions) of your phone.

Open the status page ► Switch **Max. Range / No Radiation** on/off using the corresponding switch.

Download your personal ring tones and images to your handset







Connect your handset to your PC via Bluetooth/USB and download ring tones and images to your handset with the help of our **Gigaset QuickSync** software. For the free download and more information, see www.gigaset.com/gigaset820.




- ◆ For more details about your telephone functions, please refer to the user guide on the CD supplied or online at www.gigaset.com
- ◆ If you have any questions about using your phone, please read the tips on troubleshooting or contact our Service team

Display icons

Options bar icons

The following functions are available in the options bar depending on the operating situation:

Icon	Action
	Return to the previous display
	Mute handset microphone
 (orange)	Unmute handset microphone
	Open call list
	Open contacts
	Save number to contacts












Icon	Action
	Delete
	Save/select
	Edit entry, enter new appointment











Please note

The menu icons can be found in the menu overview on page 17.

Icons in the status bar

The following icons are displayed in the status bar depending on the settings and the operating status of your telephone:

Icon	Meaning
	Signal strength (No Radiation off) 76%–100% 51%–75% 26%–50% 1%–25% Red: no connection to the base
	
	
	
	
	No Radiation activated: White if Maximum Range is on; Green if Maximum Range is off
	Bluetooth activated or Bluetooth headset/data device connected
	
	Ring tone deactivated
	"Beep" ring tone activated
	USB connection active

Icon	Meaning
	Battery charge status: White: charged over 66% White: charged between 34% and 66% White: charged between 11% and 33% Red: charged below 11% Flashing red: battery almost empty (less than 10 minutes talk time)
	
	
	
	
	Battery charging (current charge status): 0%–10% 11%–33% 34%–66% 67%–100%
	
	
	
	

Display icons

Signalling display icons



Establishing a connection (outgoing call)



Connection established



Connection cannot be established/connection terminated



Internal/external call



Alarm call



Birthday reminder call



Reminder call for appointment

Other display icons



Information



(Security) prompt



Please wait ...



Action complete (green)




Warning



Action failed (red)

Setting options

Open the **Settings** menu page:

- ▶ Briefly press **menu key**  when the handset is in idle mode
- ▶ Touch **Settings** in the header

Please note

Not all of the functions described in this user guide are available in all countries.



Time

Time Format

12 hrs / 24 hrs

Date

Date Order

Day Month Year / Month Day Year



Ringtones (Handset)

Volume

Crescendo

Internal Calls

External Calls

Reminder Signal

Volume

Crescendo

Sound

Advisory Tones

Confirmation

Key Click

Battery Warning

Music on Hold



Screensaver

Activation

Selection

Backlight

In Charger

Out of Charger

Timeout



Display Language

AM Phrase Language

Country

Area (Dial Code)



This Handset

Register/De-register

Registered Handsets

Connect to Base

Base 1

:

Base 4

Best Base

Setting options



ECO DECT

Max. Range
No Radiation

Repeater Mode
Security

System PIN

Resets

Handset Reset
Base Reset

Clean-up List

Appointments
Calls
Messages
Contacts



Call Waiting



Time Control

Activation Mode
VIP Callers

Anonymous Calls

Protection Mode

Black List

Blocked Numbers
Protection Mode



Key 2

:

Key 9



Auto Answer

Listening In

Access Code

Code to access line
Use

Dialling Mode

Pulse
Tone

Recall

80 ms/ ... / 800 ms



SMS

SMS Service Centres

Active Send Centre
Service Centr. 1
:
Service Centr. 4



Blue-
tooth

Activation
Search for Devices
Known Devices
Own Device



Network
Mailbox

Access Number
Activate/Deactivate


 
(dependent on your network provider)

Please note


This quick user guide only describes a small proportion of your telephone's functions. You will find an extensive description of all functions contained in the menu overview in the detailed user guide for your Gigaset S820 both on the enclosed CD and on the Internet at www.gigaset.com.

Using the telephone

Switching the handset on/off

- ▶ Press and **hold** the end call key  in idle status to switch the handset off. You will hear a melody
- ▶ Press and **hold** the end call key  again to switch the handset on again

Returning to idle status

 
- ▶ **Briefly** press the end call key 

Or:

- ▶ If you do not press any key and do not touch the display, the display **automatically** reverts to idle status after approximately three minutes

Keypad and display lock

Activating/deactivating the keypad and display lock

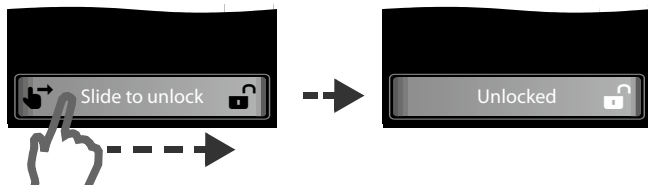
- ▶ Press and hold the  key to activate or deactivate the lock

If a call is signalled on the handset, the keypad/display lock automatically deactivates and you can accept the call. The lock reactivates once the call has finished.

Activating/deactivating the automatic display lock

The display is automatically locked during a call or when listening to the answer machine to prevent inadvertent operation. You can briefly deactivate the lock (for 5 seconds) to operate the telephone via the display. The lock then reactivates automatically.

To **unlock**, slide across the display from left to right, pressing down on the bottom line.



Please note

When the keypad lock is active, you cannot call emergency numbers.

Operating the touchscreen

You operate the handset mainly via the display.

Icons, list entries, switches and selection areas shown on the display are touch sensitive areas. Touching these areas allows you to set and start functions and navigate between the various display screens (pages).

Selecting functions/list entries

Touch a list entry or the corresponding icon to select the list item (contacts, submenu, call lists) or to activate/deactivate a function.

Scrolling in lists and menus (scrolling vertically)

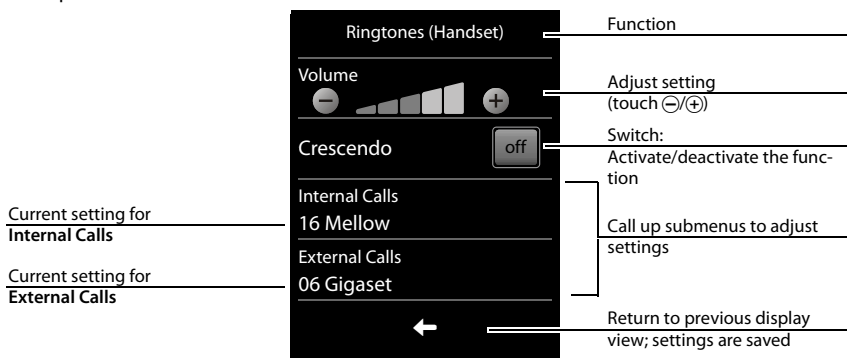
If there are more elements than those shown, a scroll bar appears on the right of the display. This shows the size and position of the visible section.

Slide your finger vertically over the display **while pressing down** to scroll through the display.

Changing settings (user interface elements)

Touch an icon on one of the menu pages to open the corresponding application/function. The display shows the adjustable parameters and their current settings (marked orange), selection options or switches for activating/deactivating an application/function.

Examples:



Switch: switching functions on/off (activating/deactivating) or selecting functions

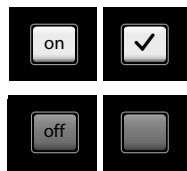
Touch the switch briefly to activate/deactivate or select/deselect functions.

The function is activated or selected if the switch is orange (text **on**) or the switch is light grey (✓ icon).

Activated/
selected

Or

Deactivated/
deselected

 


Selection fields

If two or three alternative settings are available for one parameter, these alternatives are displayed in the form of selection fields. The current setting appears in orange.

- ▶ To change it, briefly touch the selection field you require

Selection field **Call Divert**
(Example)



Opening the sub-menu to set a parameter

- ▶ Briefly touch the parameter field to open the submenu

Options and options bar

Many displays have an **options bar** at the bottom. This displays all the actions that you can apply in the current context.

- ▶ Touch an option to perform the corresponding action or touch **Options** to display a list of further options

Options bar (example)



Returning to the previous display

You will see the  icon on many pages.


- ▶ Touch the icon to return to the previous display page


Entering numbers and text

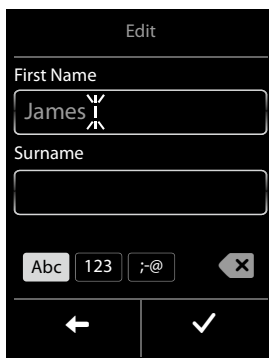
Use the keypad to enter characters.

When numerous number and/or text fields are displayed (e.g., **First Name** and **Surname** in a contacts entry), the first field is automatically activated. You need to touch any subsequent fields to activate them. A field is activated when the flashing cursor appears in the field.

 
 
Correcting incorrect entries

Briefly touch  to delete the **character** in front of the cursor.

Touch and **hold**  to delete the **word** in front of the cursor.




Entering text

- ◆ Each key between  and  is assigned several letters and characters. The characters are displayed in a selection line at the bottom of the screen when you press a key. The selected character is highlighted. Briefly press the key several times in succession to select the required letter/character
- ◆ The letter/characters are inserted at the cursor position. You can move the cursor by touching the desired position in the input field
- ◆ **Abc**: switches between lower and upper case for the **subsequent letters**.
- ◆ When editing a contacts entry, the first letter and each letter following a space is automatically in upper case
- ◆ **123**: enter digits Touch **Abc** to return to the letter keypad (upper/lower case)

- ◆ **Ⓜ**: opens table with special characters; press to insert special characters. You can enter special characters (marked/diacritical characters e.g., umlauts) by pressing the corresponding key repeatedly


Making calls

Making an external call


- ▶ Enter the number and **briefly** press 

Or:


- ▶ Press and **hold**  and then enter the number

You can cancel dialling by pressing .


Dialling with the redial list

- ▶ **Briefly** press  to open the redial list

You have the following options:

- ▶ Press . The phone dials the last dialled number (marked with a green dot)

Or:

- ▶ Touch an entry to open the detail view
 - ▶ Press . The number of the entry marked with the green dot is dialled

Or:

- ▶ Touch the desired number

Please note


The redial list contains the last twenty numbers dialled with this handset. You can manage them in the same way as the message lists on your telephone:

- ▶ **Open the detail view:** touch the entry. The display shows all the available information. In the detail view, you can delete the entry or add the number to the contacts


Dialling from the call list

Menu key  ▶  Call List


You have the following options:

- ▶ Press . The number of the entry marked with the green dot is dialled


Or:

- ▶ Touch an entry to open the detail view
 - ▶ Press . The phone dials the last dialled number (marked with a green dot)

Or:

- ▶ Touch the field with the green dot
 - **No entry in contacts:** the number is dialled
 - **Entry in contacts:** detail view opens
 - ▶ Press . The phone dials the last dialled number (marked with a green dot)

Call list (example)

All Calls		
● James Foster 📞 18:30, Home		
01712233445566 📞 11.06., 18:30		
0168123477945 📞 10.06., 17:13		
	Show all	Show by type

Making calls

Or:

- ▶ Touch the desired number

Please note



If you have **new messages** you can open the call list via the **message pop-up** or the **message page**.

Dialling with Contacts

Menu key  ▶  **Contacts**

- ▶ Scroll through the contacts until the desired entry appears


You have the following options:

- ▶ Press  to dial the number **marked in green**
 - There is **only one number saved**: the number is dialled immediately
 - There is **more than one number saved**: the detail view opens
- ▶ Press . The number with the green dot is dialled

Or:

- ▶ Touch the desired number

Or:

- ▶ Touch the name of an entry to open the detail view
 - ▶ Press . The number of the entry marked with the green dot is dialled

Or:

- ▶ Touch the desired number

Configuring/selecting QuickDial

Prerequisite: the contacts must contain at least one number.

Menu key  ▶ menu page **Settings** ▶  **QuickDial** ▶ Touch the desired QuickDial key.

If no numbers have been saved:

- ▶ **Contacts opens** ▶ **Select a number**

If a number has already been saved:

- ▶ **Delete the number:** 
- ▶ **Change the number:** **Edit** ▶ **Contacts opens** ▶ **Select a number**

Select number: press and hold the corresponding key in idle status.


Please note

If you change/delete a number from the contacts, the same number is automatically deleted from the QuickDial list.

One-touch call


You can set your phone to dial a previously stored number when you touch **any** key. This enables children who are still too young to enter a number to call a specific number, for example.

 
Menu key  ▶  **One Touch Call**

- ▶ Touch . Enter the number you wish to call or edit a stored number

- ▶ Activate one-touch call with **on**.

 

If no number has been saved yet, the menu for entering a number is opened. The one-touch call function appears on the display when it is activated


The previously stored number is selected by touching any key. Press the end call key  to cancel dialling.

Exit one-touch call mode: press and hold  key.

Making internal calls

Internal calls to other handsets registered to the same base are free of charge.

Menu key  ▶  **Internal Call** ▶ If necessary, select a handset from the list or touch **All Handsets** (group call).

After opening the list, press  to initiate a group call to all handsets.

Accepting a call

You have the following options:

- ▶ Press 
- ▶ If **Auto Answer** is activated, remove the handset from the charger

Speaker


If you are going to let someone listen in, you should tell the other party that this is happening.

Activating handsfree mode while dialling


- ▶ Enter the number and press  twice

Switching between earpiece and handsfree mode

 
 

During a call, when establishing the connection:

- ▶ Press 

Place the handset in the charger during a call:

- ▶ Press and hold the  key while placing the handset in the charger and hold for a further 2 seconds

Changing the earpiece, handsfree and headset volume

Use the side keys  /  to adjust the volume for the current mode (handsfree, earpiece, headset) during a call. The current setting appears on the display . The setting is saved automatically after approximately 2 seconds and the display returns to the previous screen.


Activating/deactivating the microphone (muting)

If you turn the microphone off during a call, your caller can no longer hear you.

- ▶ Touch  to switch the microphone on and off

Using provider-specific functions (network services)

You have to request these services from your network provider (there may be additional charges). Network services fall into two distinct groups:




- ◆ Network services that are activated outside of a call for the next call or all subsequent calls (e.g., "Divert calls to a different phone connection", "Withhold number (no calling line identification)"). You can easily activate/deactivate these network services via the  **Select Services** sub-menu on the **Settings** menu page
- ◆ Network services that are activated during an external call, e.g., "Consultation call", "Swap between two callers", "Set up conference calls". These services are provided to you during an external call in the options bar (e.g., **Consultation**, **Conference**)

For additional information on the network services, see the user guide on the enclosed CD and on the Internet at www.gigaset.com.

Contacts (address book)

Managing contacts entries

Opening the contacts


Menu key  ▶  **Contacts** or during a call depending on the situation
 or **Options** ▶ **Contacts**



Creating a new entry

- ▶ Open the contacts
If no entries have been created
 - ▶ **New Entry**, otherwise
 - ▶ **Options** ▶ **New Entry**
- ▶ Enter the components of each entry via the individual fields (name, number, eMail, ring tone, birthday, picture)

Where necessary, scroll down to see additional components.

To create an entry, you must enter at least one number.

Input in the **eMail** field: pressing the  key multiple times allows you to enter frequently used characters: @ . - 0 _

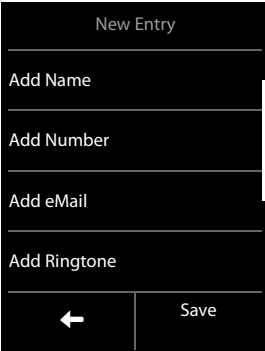
If available, confirm each entry with . Touch  to exit the menu without saving (exceptions: ring tone and caller picture).

The first number in each entry is automatically highlighted in green (●). This number is used when you open the contacts entry and press the talk key.






- ▶ Touch **Save**

Viewing an entry (detail view)

- ▶ Open contacts ▶ Touch the desired entry



 

Editing entries

- ▶ Touch  in the detail view
- ◆ Change/delete first name, surname, number or eMail address: touch the entry ▶ Where necessary, touch the relevant field ▶ Delete data by touching  ▶ Where necessary, enter new data ▶ Touch  to confirm. Touch  to exit the menu without saving
- ◆ Delete a caller picture or ring tone assignment: touch the relevant entry
 - ▶ **No Picture / No Ringtone**
- ◆ Delete a birthday: touch the **Birthday** field ▶ 

Deleting an entry

- ▶ In the detail view: **Options** ▶ **Delete** ▶ Touch **Yes** to confirm

Delete **all** contacts entries:

 

- Menu key**  ▶ menu page **Settings** ▶  **System** ▶ **Clean-up List** ▶ **Contacts**
 ▶ **Delete all contact entries** ▶ Touch **Yes** to confirm

Transferring an entry/contacts to another handset

 

Prerequisite:

- ◆ The sending and receiving handsets must both be registered to the same base
- ◆ The other handset and the base can send and receive contacts entries


Transferring individual entries

- Menu key**  ▶  **Contacts** ▶ Touch the required entry ▶ **Options** ▶ **Copy**
 ▶ **Internal Handset** ▶ Select the recipient handset

Transferring the entire contacts

- Menu key**  ▶  **Contacts** ▶ **Options** ▶ **Copy List** ▶ **Internal Handset**
 ▶ Select the recipient handset

Adding a displayed number to the contacts

- ▶ Touch the desired number ▶ Touch 
 - ▶ **New Entry:** the number is copied as the first number of the entry with number type **Home**
- Or:
 - ▶ Select entry and
 - Add number: ▶ touch **Add**
 - Or:
 - Overwrite number: ▶ select corresponding number ▶ Touch **Yes**




SMS (text messages)

Your device is supplied ready for you to send text messages immediately. Prerequisites:

- ◆ Calling Line Identification is enabled
- ◆ Your network provider supports SMS within the fixed line network
- ◆ To receive SMS messages, you must be registered with your network provider.
This usually occurs automatically when you send your first text message

Writing and sending text messages



Your system can send a **linked SMS** (made from up to four individual SMS messages) as one message. The messages are linked automatically.

Menu key  **Write SMS** ▶ Touch the **To** field ▶ Enter recipient number with prefix
▶ Touch  to confirm ▶ Touch the **Message** field ▶ **Enter** SMS text ▶ Touch  to confirm
▶ **Send SMS**: touch **Send**

Reading and managing SMS messages

▶ **Open the detail view**: touch the SMS entry.

 

You have the following options:

- ▶ Press : call the sender of the SMS
- ▶ : delete SMS
- ▶ **Options**
 - ▶ **Reply**: write and send an SMS to the sender
 - ▶ **Edit**: change the SMS text and send it to a recipient
 - ▶ **Save Number**: store the number in the contacts

Touch the sender or highlighted number in the message text:

Call the number or save in the contacts. The number cannot be divided by a space. If it contains a special character (+ - / etc.), it is regarded as two numbers.

Deleting the **entire contents** of the SMS inbox or drafts list:

Menu key  ▶ menu page **Settings** ▶  **System** ▶ **Clean-up List**

▶ **Messages**

▶ **Delete all received SMS**

Or:

▶ **Delete all SMS drafts**

▶ Touch **Yes** to confirm

For information on setting SMS centres, see the user guide on the enclosed CD and on the Internet at www.gigaset.com.

Calendar

You can remind yourself of up to **30 appointments**. Birthdays in the contacts are transferred to the calendar.

The current date is highlighted in white in the calendar. Days with appointments are marked with a coloured bar. When you select a day, it is briefly highlighted in colour.

Saving appointments to the calendar

Prerequisite: the date/time has already been set (→ page 9).

Menu key  ▶  **Calendar**


▶ Set the month using  /  ▶ Touch the desired day ▶ **New Entry**

The **Text**, **Time**, **Reminder** (you can set a reminder for up to one week in advance of the appointment) and **Sound Signal** are logged for each appointment.

 

▶ Touch **Save**


Setting the tones and volumes of the reminder signal

Menu key  ► menu page **Settings** ►  **Audio Settings** ► **Reminder Signal**

- Set the volume using \oplus/\ominus or set increasing volume using the switch next to **Crescendo**
- **Sound** ► Select the ring tone ► Touch  to go back

Showing/deleting stored appointments

Menu key  ►  **Calendar** ► Touch the desired day to display the appointments list

- Touch the desired appointment ► Delete appointment  or select, edit and save the entry.

Delete all missed appointments:


Menu key  ► menu page **Settings** ►  **System** ► **Clean-up List**

- **Appointments** ► **Delete all past appointments** ► Touch **Yes** to confirm

Alarm

Prerequisite: the date/time has already been set (→ page 9).

Menu key  ►  **Alarm** ► **on/off**

- Touch  to change the settings for the alarm:
 - **Time** ► Set the hour and minutes for the wake-up time (time setting → page 10)
 - **Active Days** ► Set the days when you want the alarm to ring
 - **Sound** ► Select a ring tone for the wake-up call
- Touch **Save** and confirm the security prompt

A wake-up call is signalled in the display and with the selected ring tone for a maximum of 60 seconds. During a call, the wake-up call is only signalled by a short tone.

Deactivating the wake-up call/repeating after a pause (snooze mode)

- **Switch off until next wake-up call:** Touch **Off**
- **Snooze mode:** Touch **Snooze**. The wake-up call is deactivated and then repeated after 5 minutes. After the second repetition the wake-up call is deactivated for 24 hours

Baby phone

When the baby phone is switched on, the stored (internal or external) destination number is called as soon as a defined noise level is exceeded in the vicinity of the handset.

The baby phone call to an external number is cancelled after approximately 90 seconds. The talk key and menu keys are locked when the baby phone is activated. The handset's speaker can be switched on or off using the **Two Way Talk** function. If the intercom is activated, you can respond to the baby phone.


When baby phone mode is activated, incoming calls are only indicated on the display (**without a ring tone**). The display backlight is reduced to 50%. Advisory tones are deactivated.

Caution



- ◆ Please check the functionality when you switch on. For example, test its sensitivity. Check the connection if you are diverting the baby phone to an external number. Please note that the baby phone is only activated 20 seconds after being switched on
- ◆ Activating the function reduces the operating time of your handset. If necessary, place the handset in the charger
- ◆ The handset should be positioned 1 to 2 meters away from the baby. The microphone must be pointed towards the baby
- ◆ No answer machine may be activated at the destination number

Changing the settings

Menu key  ►  Baby Phone ►  ► Set Forward alarm to (Internal or External), Two Way Talk on/off, Sensitivity (High or Low) ► Save

- ◆ **Internal:** select the internal handset from the list
- ◆ **External:** enter the destination number ► Confirm with 


 
Activating/deactivating the baby phone

- **Activate:** Menu key  ►  Baby Phone ► on
- **Deactivate:** deactivate the switch on the idle display

Cancelling/deactivating the baby phone call

To cancel a baby phone call: press .

Deactivating the baby phone remotely

- Accept the baby phone call and press keys  

ECO DECT – Reducing transmission power (radiation)

On delivery, the device is set to maximum range. This guarantees optimised wireless management. To further reduce the transmission power:

Shorten the range – reduces the transmission power by up to 80%

- Open the status page ► Max. Range off

Completely deactivate the DECT-wireless module in idle status (Eco mode+)

 

- Open the status page ► No Radiation on

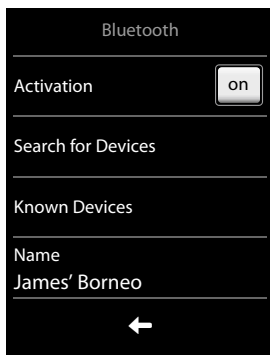
Bluetooth devices

Up to 5 data devices (PC, PDA, mobile phone) and one Bluetooth headset can be registered on the handset. The distance to the Bluetooth device should not exceed 10 m.

Activating/deactivating Bluetooth mode

You can activate/deactivate Bluetooth mode using the status page (→ enclosed poster) or via

Menu key  ▶ menu page **Settings** ▶  **Bluetooth**
▶ **Activation on/off**




Searching for and pairing Bluetooth devices

Starting the search



- ▶ Start the search via **Search for Devices** in the **Bluetooth** sub-menu

Pairing the device – adding the device to the known devices list

- ▶ Select the device in the **Devices Found** list
 - ▶ **TrustDevice** ▶ If necessary, enter the PIN of the device you want to pair and touch  to confirm
- ◆ PIN for a **data device**: enter any PIN on the handset and then also on the data device.
PIN for a **headset**: In general, **0000** is preset. Therefore, you only need to enter the PIN in exceptional cases




Editing the list of paired (trusted) devices

A  next to the device name in the list indicates a headset and  indicates a data device.

- ▶ Open the **Known Devices** list ▶ Select device ▶ View device information
 - ▶ Touch  to delete the device ▶ Touch **Yes** to confirm
- Or:
 - ▶ Touch the **Name** field ▶ Change the name and touch  to confirm

Rejecting/accepting an unpaired Bluetooth device

If an unknown Bluetooth device tries to establish a connection, you will be asked to enter the device's PIN (bonding).

- ◆ **Reject**: ▶ touch  or 
- ◆ **Accept**: ▶ enter device PIN ▶ Touch  to confirm
 - ▶ **Yes**: add to the **Known Devices** list or
 - ▶ **No**: use the device temporarily

Changing the handset's Bluetooth name

Menu key  ▶ Menu page **Settings** ▶  **Bluetooth** ▶ **Own Device** ▶ Touch the name
▶ Touch  to delete name ▶ Enter new name ▶ Touch  to confirm

Our representatives are also available on the telephone hotlines for consultation.

Replacement or repair services are not offered in countries where our product is not sold by authorised dealers.

Authorisation

This device is intended for analogue phone lines in your network.

Country-specific requirements have been taken into consideration.

We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC.

A copy of the Declaration of Conformity is available at this Internet address:

www.gigaset.com/docs

CE 0682

Please note

Signs of wear on the display and housing are excluded from the warranty.

Index

- A**
- Activating/deactivating functions 21
 - Activating/deactivating the display lock .. 20
 - Alarm 29
 - Area code - prefix..... 12
 - Authorisation 33
- B**
- Baby phone, baby alarm 29
 - Back function 22
 - Base
 - connecting to power/telephone
 - network..... 6
 - setting 9
 - setting up..... 5
 - wall mounting 5
 - Battery
 - charging..... 8
 - charging status 15
 - inserting..... 7
 - Bluetooth
 - activating..... 31
 - changing device name 31
 - list of known devices..... 31
 - registering devices 31
 - searching for devices..... 31
 - starting a search 31
- C**
- Calendar..... 28
 - Call
 - accepting..... 25
 - external 23
 - internal..... 25
 - Caller picture 26
 - Calling
 - external 23
 - internal..... 25
 - Changing settings
 - user interface elements..... 21
 - Charger (handset)
 - connecting..... 6
 - setting up..... 5
 - Cloud synchronisation..... 14
 - Configuring QuickDial..... 24
 - Contacts 26
 - copying number from text 27
 - managing entries 26
 - saving entry 26
 - sending entry/list to handset..... 27
 - sending to handset..... 27
 - synchronising with PC or MAC s. CD
 - Correcting incorrect entries 22
 - Customer Care..... 32
 - Customer Service & Assistance 32
- D**
- Deactivating baby phone..... 30
 - Destination number (baby phone) 30
 - Dialling
 - using the call list..... 23
 - using the redial list 23
 - with contacts 24
 - Display icons 15
 - Dot, green 23, 24
- E**
- Earpiece mode 25
 - Earpiece volume 25
 - ECO DECT 30
 - Eco mode+ (switching off wireless
 - module)..... 30
 - Entering special characters..... 23
 - Entering text 22
 - Entering umlauts..... 23
- G**
- Getting started 5
 - Green dot..... 23, 24
 - Group call 25
- H**
- Handset
 - activating/deactivating 20
 - connecting charger 6
 - earpiece volume 25
 - in idle status s. Poster, 1, 13
 - loading caller pictures..... s. CD
 - loading pictures s. CD
 - loading ring tones s. CD
 - muting..... 25
 - paging s. CD
 - registering multiple handsets s. CD
 - setting 9
 - setting up 7
 - speaker volume 25
 - using it as a baby phone 29
 - Handset + base 8
 - Handsfree volume..... 25
 - Hearing aids 4

- I**
- Icons
 - options bar 15
 - status bar 15
 - Idle display s. Poster, 1, 13
 - Idle status
 - returning to 20
 - Incorrect entry correction 22
 - Installation wizard 9
 - Internal call 25
- K**
- Keypad/display lock on/off 1, 20
 - Keys
 - end call/end key s. Poster, 1, 23
 - handset s. Poster, 1
 - menu key s. Poster, 1
 - paging key (base) 2
 - talk key s. Poster, 1
- L**
- List
 - cleaning up 27, 28, 29
 - known devices (Bluetooth) 31
 - Lock
 - activating/deactivating 20
 - Lower/upper case 22
- M**
- Making calls
 - accepting a call 25
 - external 23
 - internal 25
 - Making internal calls 25
 - Marked characters 23
 - Medical equipment 4
 - Menu key s. Poster, 1
 - Menu pages s. Poster
 - Menu tree 17
 - Menu, setting options s. Poster, 17
 - Message pop-up s. Poster
 - Messages page s. Poster
 - Mini USB connection socket 1
 - Mounting the base on the wall 5
 - Muting the handset 25
- N**
- Network services 26
 - Number
 - as destination for baby phone 30
 - copying to contacts 27
 - saving in contacts 26
 - Numbers
 - entering 22
- O**
- One touch call 24
 - Opening the submenu 22
 - Options 22
 - Options bar 22
 - icons 15
 - Overview of handset s. Poster, 1
- P**
- Package contents 5
 - Paging 2
 - Paging key 2
 - Power adapter 4
 - Prefix for area code 12
- Q**
- QuickSync
 - (software for Windows and Mac) .. s. CD
- R**
- Radiation 30
 - Range 5
 - Rubber seal 7
- S**
- Safety precautions 4
 - Selection fields 22
 - Sending
 - complete contacts to handset 27
 - contacts entry to handset 27
 - Setting an appointment 28
 - Setting the area code 9
 - Setting the country 9
 - Setting the date 9
 - Setting the display language 9
 - Setting the time 9
 - Setting up, handset 7
 - Settings menu s. Poster, 17
 - Side keys s. Poster, 1

Index

Signal strength.....	15
SMS.....	27
deleting	28
reading.....	28
sending	28
writing	28
Snooze mode (alarm)	29
Speaker.....	25
Status bar, icons	s. Poster, 1, 15
Status page	s. Poster
Switch.....	21
Switching microphone (handset) on/off ..	25
Switching off wireless module	30
Synchronising directory	14
Synchronising Google contacts	14

T

Text message, see SMS	
Time, setting	9
Tones + signals.....	14
Touchscreen.....	1
operating	21

U

Upper/lower case.....	22
USB connection socket	1
USB connection, rubber seal.....	7
User interface elements	21
Using the redial list	23
Using the telephone	20

V

VIP ring tone	27
Volume	
handsfree/earpiece volume	
of handset	25

W

Writing (SMS)	28
---------------------	----

Issued by

Gigaset Communications GmbH
Frankenstr. 2a, D-46395 Bocholt

© Gigaset Communications GmbH 2012

Subject to availability.

All rights reserved. Rights of modification reserved.

www.gigaset.com