

VOYAGER II

INSTALLATION GUIDE



 **FLIR**

© FLIR Systems, Inc., 2009. All rights reserved worldwide. No parts of this manual, in whole or in part, may be copied, photocopied, translated, or transmitted to any electronic medium or machine readable form without the prior written permission of FLIR Systems, Inc.

Names and marks appearing on the products herein are either registered trademarks or trademarks of FLIR Systems, Inc. and/or its subsidiaries. All other trademarks, trade names, or company names referenced herein are used for identification only and are the property of their respective owners.

This product is protected by patents, design patents, patents pending, or design patents pending.

The Voyager II imaging system is controlled by US export laws. There are special versions of this system that are approved for international distribution and travel. Please contact FLIR Systems if you have any questions.

FLIR Systems, Inc.
70 Castilian Drive
Goleta, CA 93117
Phone: +1.888.747.FLIR (+1.888.747.3547)
www.flir.com

Document Number: 432-0002-00-11, rev 110

Document History

Revision	Date	Comment
100	Feb 2008	Initial Release
110	Jan 2009	Voyager II: includes NMEA interface, updated drawings, added TOC and page numbers, other minor changes

This document is controlled to FLIR Technology Level 2. The information contained in this document pertains to a dual use product controlled for export by the Export Administration Regulations (EAR). FLIR trade secrets contained herein are subject to disclosure restrictions as a matter of law. Diversion contrary to US law is prohibited. US Department of Commerce authorization is not required prior to export or transfer to foreign persons or parties unless otherwise prohibited.

Contents

VOYAGER II INSTALLATION	4
Introduction	4
Installation Preparation	4
Prior to Cutting/Drilling Holes	4
PHYSICAL INSTALLATION	5
Voyager II Camera Body	5
Voyager II Bulkhead Box	5
Voyager II Joystick Control Unit (JCU)	5
ELECTRICAL INTERCONNECT	6
Main Sensor Cable	6
Installation Steps	6
NMEA INTERFACE	14
References	14
NMEA INTERFACE INSTALLATION	14
NMEA Installation Card	14
Connector Slot	14
NMEA Interface Wiring	15
Spare JCU Slot (1 or 2 JCUs in use)	15
Pigtail Connection (3 JCUs in use)	16
Electrical Checkout	16
Testing the NMEA Interface	17
DRAWINGS & INSTALLATION TEMPLATES	18
CONNECTIONS QUICK REFERENCE	18

VOYAGER II INSTALLATION

Introduction

Thank you for buying your new Voyager II! This manual describes the physical mounting and electrical connection of the Voyager II camera. If you need help during the installation process, call 888.747.3547 to speak with one of FLIR's Applications experts. The Voyager II should be installed by a qualified marine electronics technician, as incorrect installation could void the warranty.

The Voyager II comes with these standard components:

- Camera Body
- Bulkhead Box
- NMEA Interface Board (in a separate bag inside the Bulkhead Box)
- 50' or 100' main sensor cable (depending on what you ordered) - connects the Camera Body to the Bulkhead Box
- Joystick Control Unit (JCU) with 100' cable that connects to the Bulkhead Box
- System Power cable (10')
- Voyager Documentation Package

You may need to supply:

- 16- gauge electrical wire; up to 100' (3-conductor, for system power)
- Six (6) 1/4-20 stainless steel bolts for attaching the Voyager II Camera Body. Note that bolt length may be dependant on mounting platform thickness
- Four (4) bolts or screws for attaching the Bulkhead Box as required
- Miscellaneous electrical hardware, connectors and tools

If using the NMEA interface features, you will need to provide a 2-wire serial cable to the Bulkhead Box from your NMEA device.

Installation Preparation

- Find a good place to mount the Voyager II's components:
 - o Mount the Voyager II as high as practical, but without interfering with any radar, navigational or communications electronics, and minimizing the degree to which vessel structures block the camera's view.
 - o Mount the Voyager II as close to the vessel's centerline as possible so you will have a symmetrical view of on-coming traffic.
 - o Voyager II should be mounted on a flat surface with the base on the bottom and the camera on top. Do not hang the Voyager II upside down; the picture will display upside down, and you may damage the Voyager II.

Prior to Cutting/Drilling Holes

- Once the mounting location has been selected, verify both sides of the mounting surface are accessible.
- Determine if any interior trim panels must be removed in order to gain access to the mounting hardware, and remove them ahead of time.
- When selecting a mounting location for the Voyager II, consider cable lengths and routing. Ensure the cables are long enough, given the proposed mounting locations and cable routing requirements, and route the cables before you install the components.

PHYSICAL INSTALLATION

Voyager II Camera Body

Using the template supplied with this Installation Manual as a guide, mark the location of the holes for mounting the Voyager II. Make sure the template is aligned so that the Voyager II will point straight ahead, and that the cable will exit towards the stern of the vessel.

Mount the Voyager II's camera body with 6 1/4x20 bolts and washers. There is also a 3/8x16 center insert which can be used for added support.



Voyager II Bulkhead Box

NOTE:

FLIR recommends that you terminate all cable ends inside the Bulkhead Box BEFORE you mount it. Refer to the section on detailed cable preparation and termination for these instructions.

Mount the Bulkhead Box in an area that:

- Is sheltered from the weather
- Has good airflow
- Is not exposed to direct sunlight
- Is within easy reach of all required cables
- Provides room for adequate service loops as depicted in the installation drawings supplied

Voyager II Joystick Control Unit (JCU)

Mount the JCU in a convenient area that is close to the monitor that will display the Voyager II video output. Make sure the area you choose will leave enough room for the connector and cable under the JCU (refer to the drawing package supplied for dimensions).

Using the template supplied with the Installation Manual as a guide, mark the locations of the holes to be cut and drilled for the JCU.

Cut the hole that will allow the JCU to be recessed in the vessel's control console per the installation drawings supplied, and drill the holes for the four mounting studs.

Route the JCU cable through the JCU mounting hole. Connect the terminated end of the cable to the JCU, insert the JCU into its mounting location and secure with the supplied mounting studs.



The following sections (Electrical Interconnect and NMEA Interface) describe the connections to the Voyager. Refer to the NMEA 0183 Standard for details on interconnecting the Voyager II with other marine electronic devices.

ELECTRICAL INTERCONNECT

Main Sensor Cable

After routing the main sensor cable between the Camera Body and the Bulkhead Box, install the Camera Body and connect the terminated end of the main sensor cable to the connector on the back of the Camera Body's base.


This section describes the procedures required to prepare the main sensor cable, JCU cable and main power cable for termination inside the Bulkhead Box. The following tools and documents are recommended to complete the job:

- The installation drawings and templates (FLIR p/n 432-0002-00-19) at the end of this manual
- Ruler or measuring tape
- Exacto knife
- Scissors
- Wire cutter
- Wire stripper for 20 gauge wires
- Crimping tool for BNC connector
- Channel locks
- 2mm flathead screw driver

Installation Steps


Step 1:

Remove the main sensor cable feed through grommet **(A)** by unscrewing it from the lock nuts **(B)** and **(C)** on the Bulkhead Box.

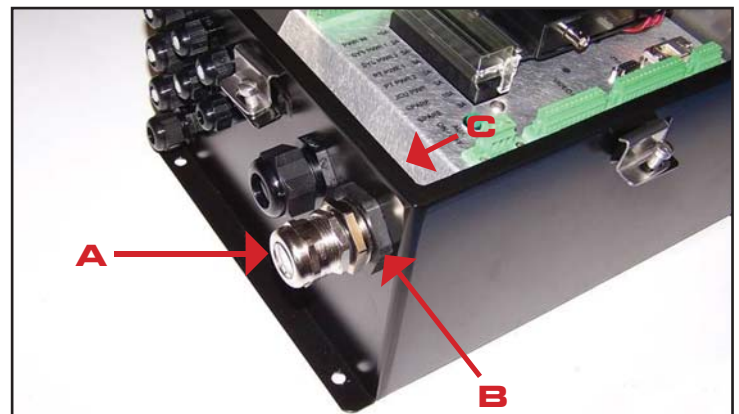

Step 2:

Unscrew the grommet cap **(A)** from the cable gland **(B)** to expose the grommet seal

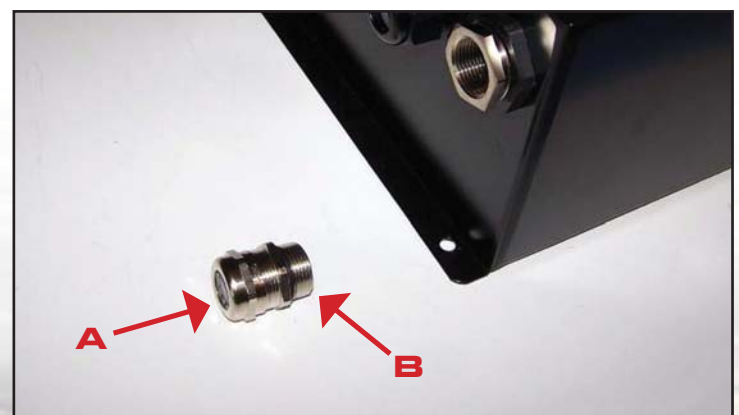


Step 3:

Remove the grommet seal from the cable gland by inserting a finger and pulling it out.



Step 4:

Now that the grommet cap (A), seal (B), and cable gland (C) have been disassembled, remove the other sections of the grommet from the front of the Breakout Box, including the 1" reducer (D), and the inner lock nut (E).

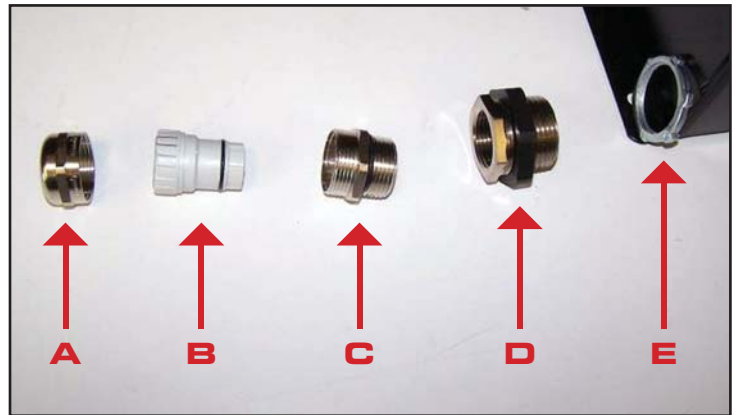

Step 5:

Now prepare the main cable ends for attachment to the inside of the Bulkhead Box. As directed by the drawing supplied in this Installation Manual, measure 13.5" from the end of the cable, carefully cut around the outer black cable jacket until you can slide it off, and remove it. Be careful not to cut into the metal braid beneath the outer jacket.



Step 6:

Slide the black outer jacket off the cable, exposing the inner metal braid



Step 7:

Push the braid back over the black outer jacket an inch or two, creating an area of slack in the braid. Carefully insert scissor tips into the braid, and cut all the way around it as shown. Slide the excess braid off the cable and discard it




Step 8:

Working with the shorter length of braid, trim it so that only 1" extends beyond the black outer jacket as shown.



Step 9:

Slide the grommet cap (A – not shown), seal (B), and cable gland (C) over the cable

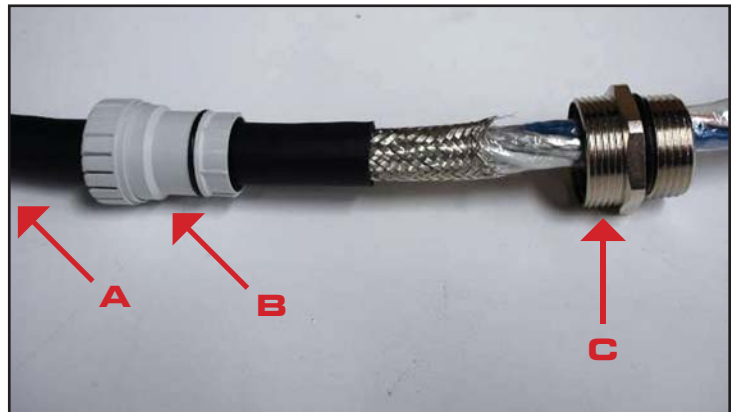

Step 10:

Slide the grommet seal up the cable so that the front edge just lines up with the end of the black outer cable jacket as shown



Step 11:

Carefully fold the metal braid back over the grommet seal as shown



Step 12:

Trim the metal braid as shown, so that the black o-ring seal is clear of the metal braid.



Step 13:

Slide the cable gland over the grommet seal as shown, capturing the metal braid between the two



Step 14:

Screw the grommet cap onto the cable gland as shown.

You are now ready to prepare the cable ends for connection to the Bulkhead Box's internal termination blocks



Step 15:


Trim the clear Mylar sheath back so the individual wire bundles can be spread apart as shown. This will make them easier to identify and work with.

Cut the blue Ethernet cable to 12.5" long, measured from the end of the cable gland.

Cut the wire bundle inside a clear jacket and steel braid to measure 11.5" long.

Cut the bundle of 4 twisted pairs inside a white outer jacket to measure 11.5" long.

The video cable should be cut to 9.5"

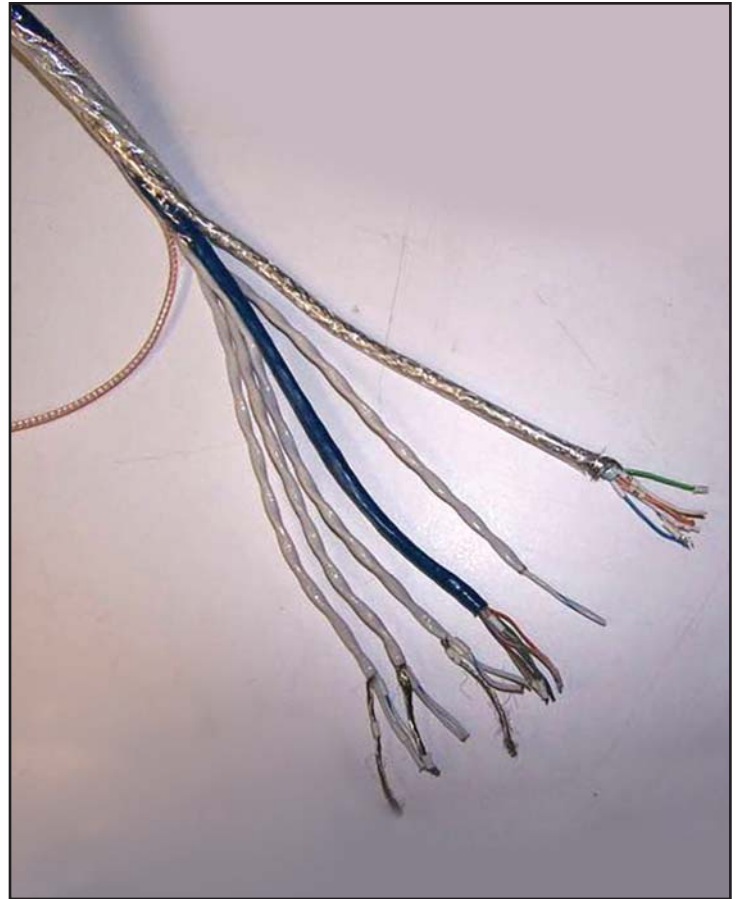

Step 16:

Prepare the video cable by securing the crimpable 75-ohm BNC connector (provided) onto the RG-179 cable.



Step 17:


The rest of the wires will need to be prepared in a fashion similar to the following progression.

Carefully cut around the outer insulation as shown.




Step 18:

Slide the outer insulation off, and separate the two inner wires as shown

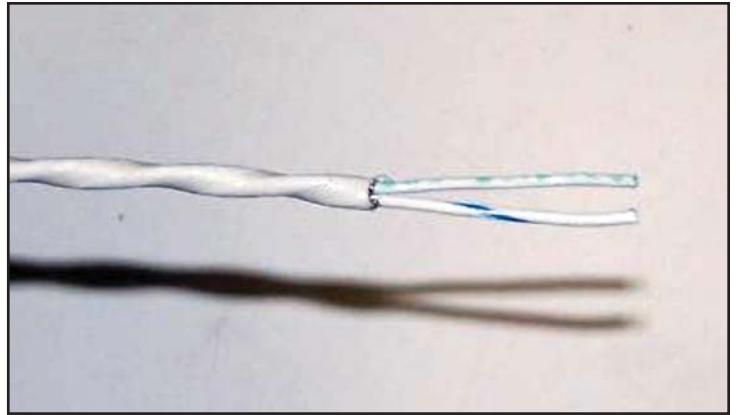


Step 19:

Strip 1/4" from the end of each wire as shown. When this is done, they are ready for termination in the Bulkhead Box.

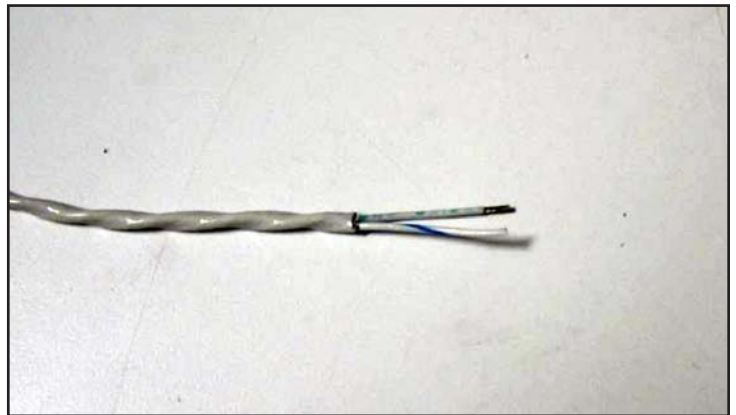

Step 20:

Slide all of the prepared wires and the video cable through the 1" reducer. Then carefully pass all of the prepared wires and the video cable through the hole in the front of the Bulkhead Box.

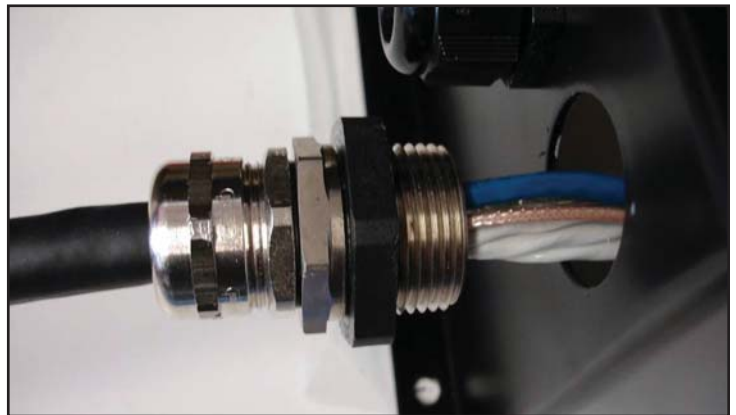

Step 21:

Slide all of the prepared wires and the video cable through the lock nut, and secure it to the 1" reducer as shown



Step 22:

Connect the wires from the main sensor cable to terminal blocks **J6**, **J7**, **J8**, and Video In using the drawings provided at the end of this manual for guidance.

Step 23:

Connect the wires from the system power cable to **J5**. The cable ends are prepared using the same procedures you used for everything in the main sensor cable except the video cable.


Step 24:

Connect the wires from the Joystick Control Unit (JCU) to the **J1** terminal block. The cable ends are prepared using the same procedures used for the main sensor cable.

Step 25:

Install additional (optional) JCUs and other connections as required to **J2** - **J4**, as shown on the next page.

When all wires have been connected, mount the Bulkhead Box in the selected location.

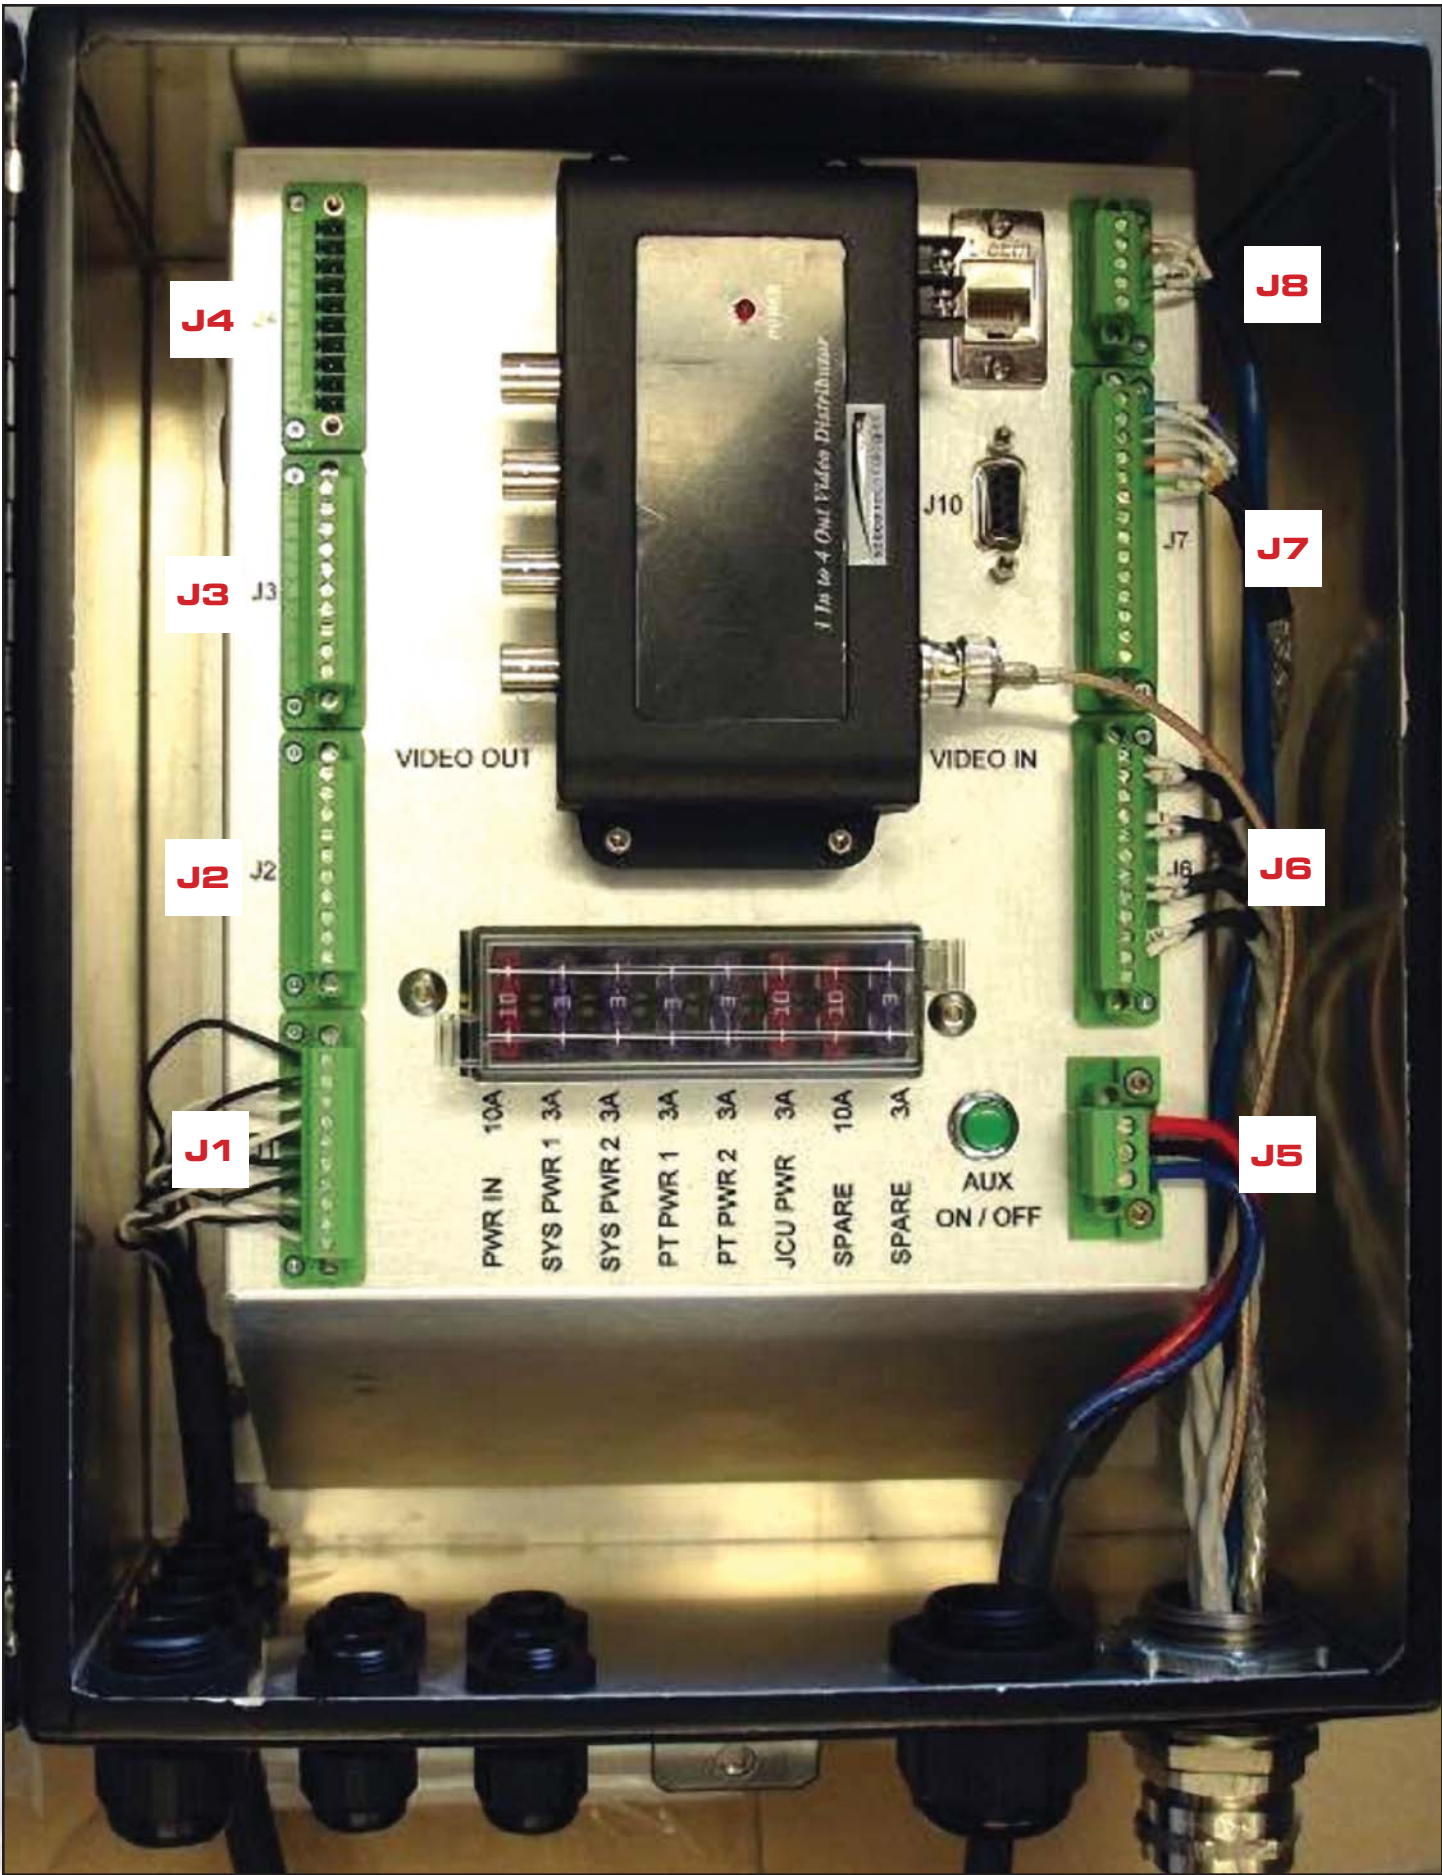

J4

J3

J2

J1

J8

J7

J6

J5

PWR IN 10A
SYS PWR 1 3A
SYS PWR 2 3A
PT PWR 1 3A
PT PWR 2 3A
JCU PWR 3A
SPARE 10A
SPARE 3A
AUX ON / OFF

VIDEO OUT

VIDEO IN

J10

J7

J6

J5

NMEA INTERFACE

The Voyager II has the capability to “listen” to (or take commands from) radar, GPS or other devices using the National Marine Electronics Association (NMEA) 0183 Protocol. The NMEA 0183 protocol is a combined electrical and data specification for communication between marine electronic devices. Additional information regarding the protocol can be found on the NMEA web site: <http://www.nmea.org/pub/0183/>

According to the NMEA protocol, the Voyager II is known as a listener, and another device such as a radar or multi-function display is known as a talker. This protocol allows the talker to send positional information to the Voyager II camera, and it responds by automatically pointing toward vessels and other objects that show up on the display and tracking their movement.

The Voyager II connects to the other equipment via a serial cable (not provided with the Voyager II). The serial cable connects to the Voyager II through an unused Joystick Control Unit (JCU) slot on the Voyager Bulkhead Box.

This document describes the steps necessary to install and verify the Voyager II NMEA 0183 interface. Operation of the Voyager II NMEA interface is described in the Voyager II User’s Guide Addendum.

References

- Voyager Installation Guide, FLIR Document Number: 432-0002-00-11
 - National Marine Electronics Association, NMEA 0183 Version 2.0
- Note, the Voyager II does not support the NMEA 0183-HS (High Speed) protocol

NMEA INTERFACE INSTALLATION

NMEA Installation Card

The Voyager II communicates with other devices through a custom interface card. The card is plugged into one of the four JCU connector slots in the Bulkhead Box. The interface card has pigtail wires to connect to the other NMEA device.

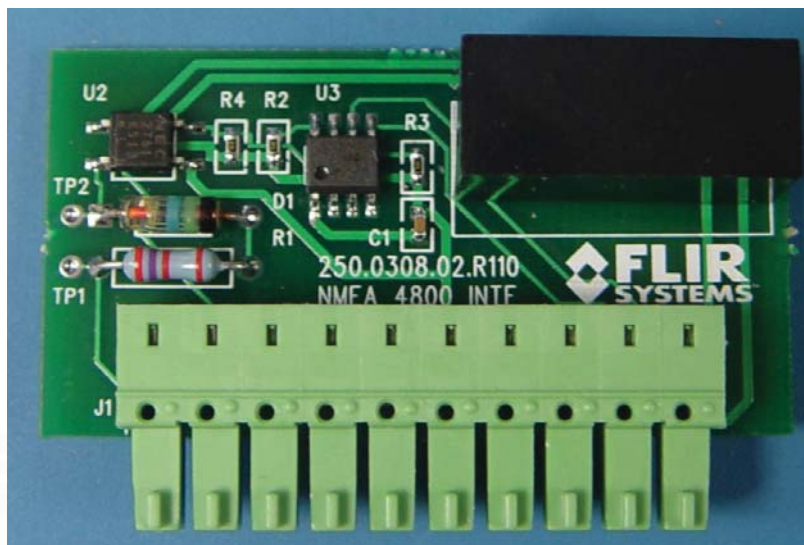


Figure 1: NMEA Interface Card

Connector Slot

The interface card comes installed in slot J4 by default. The card must be moved to the JCU slot after the last active JCU. For a system with one JCU, the module should be plugged into the J2 slot; for systems with 2 JCUs, the module must use the J3 slot (as pictured below). For a system with 3 JCUs, the module must use slot J4.

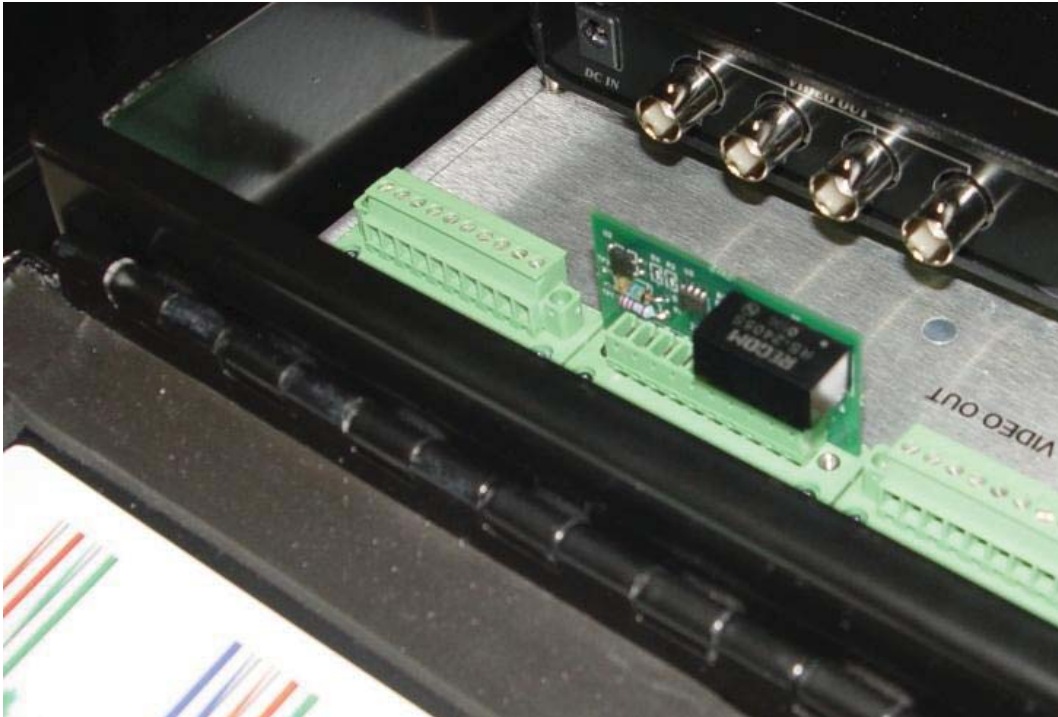


Figure 2: Bulkhead box JCU connection with NMEA card installed in Slot 3

NMEA Interface Wiring

The connection from the other NMEA device must be routed through one of the JCU cable glands located on the bottom wall of the Bulkhead Box.



Figure 3: Cable Glands on the Bulkhead Box

There are two methods for connecting the NMEA cable to the NMEA interface card. The first method makes use of a spare JCU slot (in the case when only one or two JCUs are used); the second method makes use of a pigtail connection when 3 JCUs are in use and the NMEA card occupies the 4th slot.

Spare JCU Slot (1 or 2 JCUs in use)

For a configuration that uses one or two JCUs and with the NMEA card plugged into the second or third slot, the empty adjacent slot (J3 or J4, respectively) can be used to connect NMEA signals as shown in Figure 4.

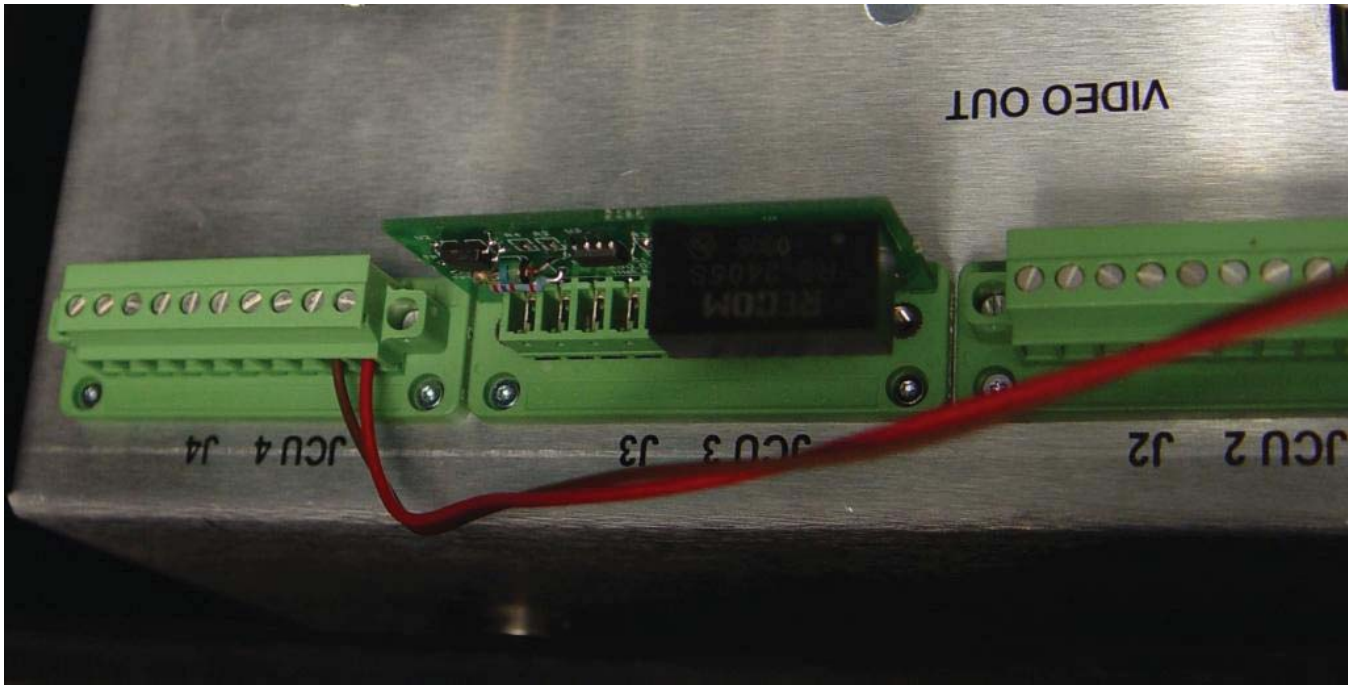


Figure 4: NMEA Interface card on Slot J3; NMEA connection in Slot J4

For this connection, attach NMEA “A” and “B” signal wires to connector terminals 1 and 2 respectively. These terminals are interconnected to the appropriate terminals in the previous slot within the Bulkhead Box. No additional jumpers are necessary.

Pigtail Connection (3 JCUs in use)

For a Voyager II configuration with 3 JCUs and a NMEA interface, all four JCU slots are occupied. The NMEA card will reside in the JCU slot J4. Route the NMEA interface cable up to the JCU slot J4 and, using a cable tie, anchor the NMEA cable to the 3rd JCU cable. Cutoff the shrink wrap insulator on the end of the wires and using in-line crimp splices and attach the NMEA talker signals A and B to the pigtail red and yellow wires respectively.

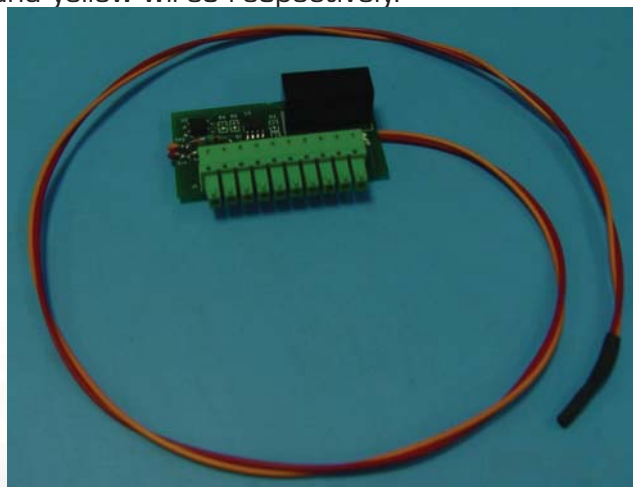


Figure 5: NMEA Interface Card with Pigtail cable

Electrical Checkout

Disable the NMEA talker and verify the static RS-422 signal levels by measuring the voltage differ-

ence between the differential RS-422 outputs.

The voltage should be measured on the adjacent JCU; namely, if the module is plugged into JCU J3 slot, then the measurement should be on the connector residing in the JCU J2 slot.

Using a volt meter, measure the voltage difference from pin 8 (hot probe) and pin 9 (return probe of the VOM). The voltage reading should be greater than +2.0V.

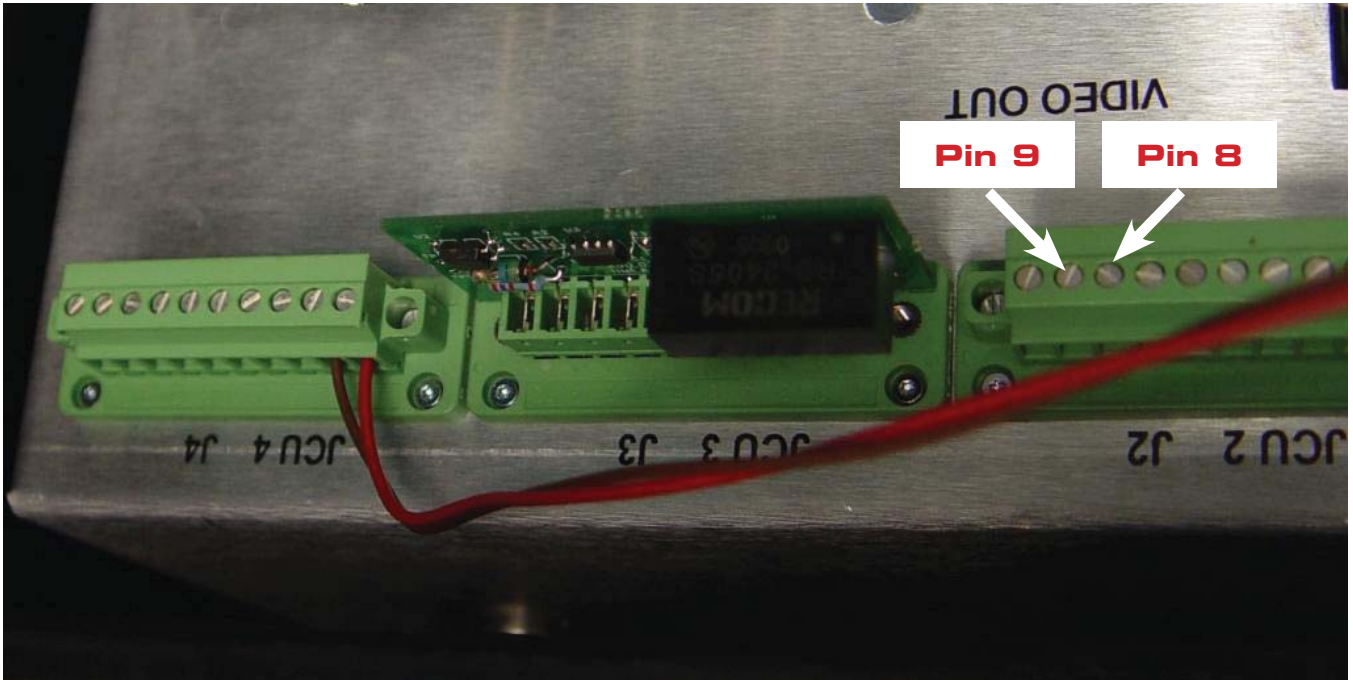


Figure 6: Voltage Test Points

Testing the NMEA Interface

Message Checkout

Refer to the user manual for the other NMEA device (the talker) for information on how to install the connection and how to enable and control the NMEA messages it will generate.

Enable the NMEA talker and set the Baud Rate to 4800. Use the SETUP/NMEA menu and enable RSD to allow the Voyager system to respond to the RSD message (refer to the Voyager II Operator's Manual Addendum for information on how to access the SETUP menu.) Next, get the NMEA talker to generate an RSD message. For example, using the cursor on the multifunction display unit, move the cursor and verify that the Voyager responds to the RSD message.

If the talker is configured to send only the cursor message, there may be delays due to packetizing of the NMEA messages by the JCU. Under "normal" circumstances, a significant volume of other NMEA messages are present and this allows good packetization that results in minimal delay.

CONNECTIONS QUICK REFERENCE

LEFT SIDE BREAKOUT BOX CONNECTIONS			
Connector	Terminal Opening	Wire Color & Marking	Wire Bundle
JCU 1 – 4 (P1 – P4)	1	White #1	JCU Cable(s)
	2	Black #1	
	3	White #3	
	4	Black #3	
	5	Shield from twisted pair #1	
	6	Black #4	
	7	White #4	
	8	White #2	
	9	Black #2	
	10	Overall Shield	




RIGHT SIDE BREAKOUT BOX CONNECTIONS			
Connector	Terminal Opening	Wire Color & Marking	Wire Bundle
Power Input (P5)	1	Red (+24 VDC)	Power Input Cable
	2	Black (-24 VDC)	
	3	Blue (ground)	
Pan/Tilt & System Power (P6)	1	White “j”	Main Sensor Cable – White Outer Jacket
	2	White/Blue “b”	
	3	N/C	
	4	White “f”	
	5	White/Blue “h”	
	6	N/C	
	7	White “g”	
	8	White/Blue “Z”	
	9	N/C	
	10	White “w”	
	11	White/Blue “a”	
	12	N/C	
Communication (P7)	1	Blue “M”	Main Sensor Cable – Clear Outer Jacket; Stainless Steel Braid
	2	White/Blue “P”	
	3	White/Orange “N”	
	4	Orange “R”	
	5	Green “c”	
	6-14	N/C	
Ethernet (P8)	1	White/Orange “G”	Main Sensor Cable – Blue Outer Jacket
	2	Orange “F”	
	3	Green/White “D”	
	4	Green “E”	
	5	N/C	

DRAWINGS & INSTALLATION TEMPLATES


The drawings provide more detailed dimensions and mounting information. If you have any questions, call FLIR’s Applications Experts at 888.747.3547.

Use the templates to locate the holes required to mount the Voyager II’s Camera Body and JCU.

NOTES: UNLESS OTHERWISE SPECIFIED
 1. JCU BULKHEAD BOX, AND VOYAGER CAMERA SHALL BE LABELED WITH BRADY LABEL P/N: TH-7-428-3
 INFORMATION FOR LABELS PROVIDED ON LAST SHEET OF THIS DRAWING.

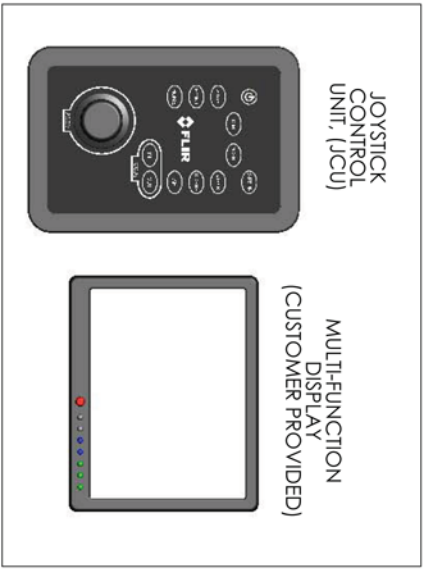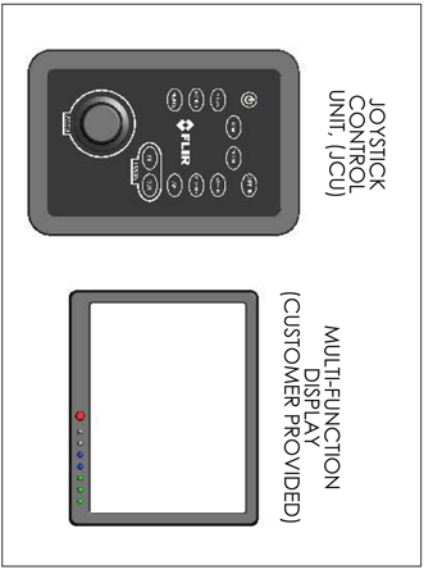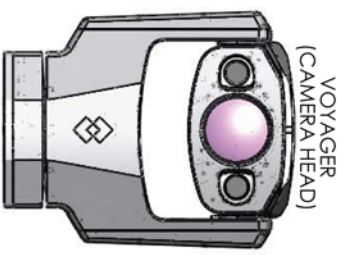

POWER INPUT
24VDC

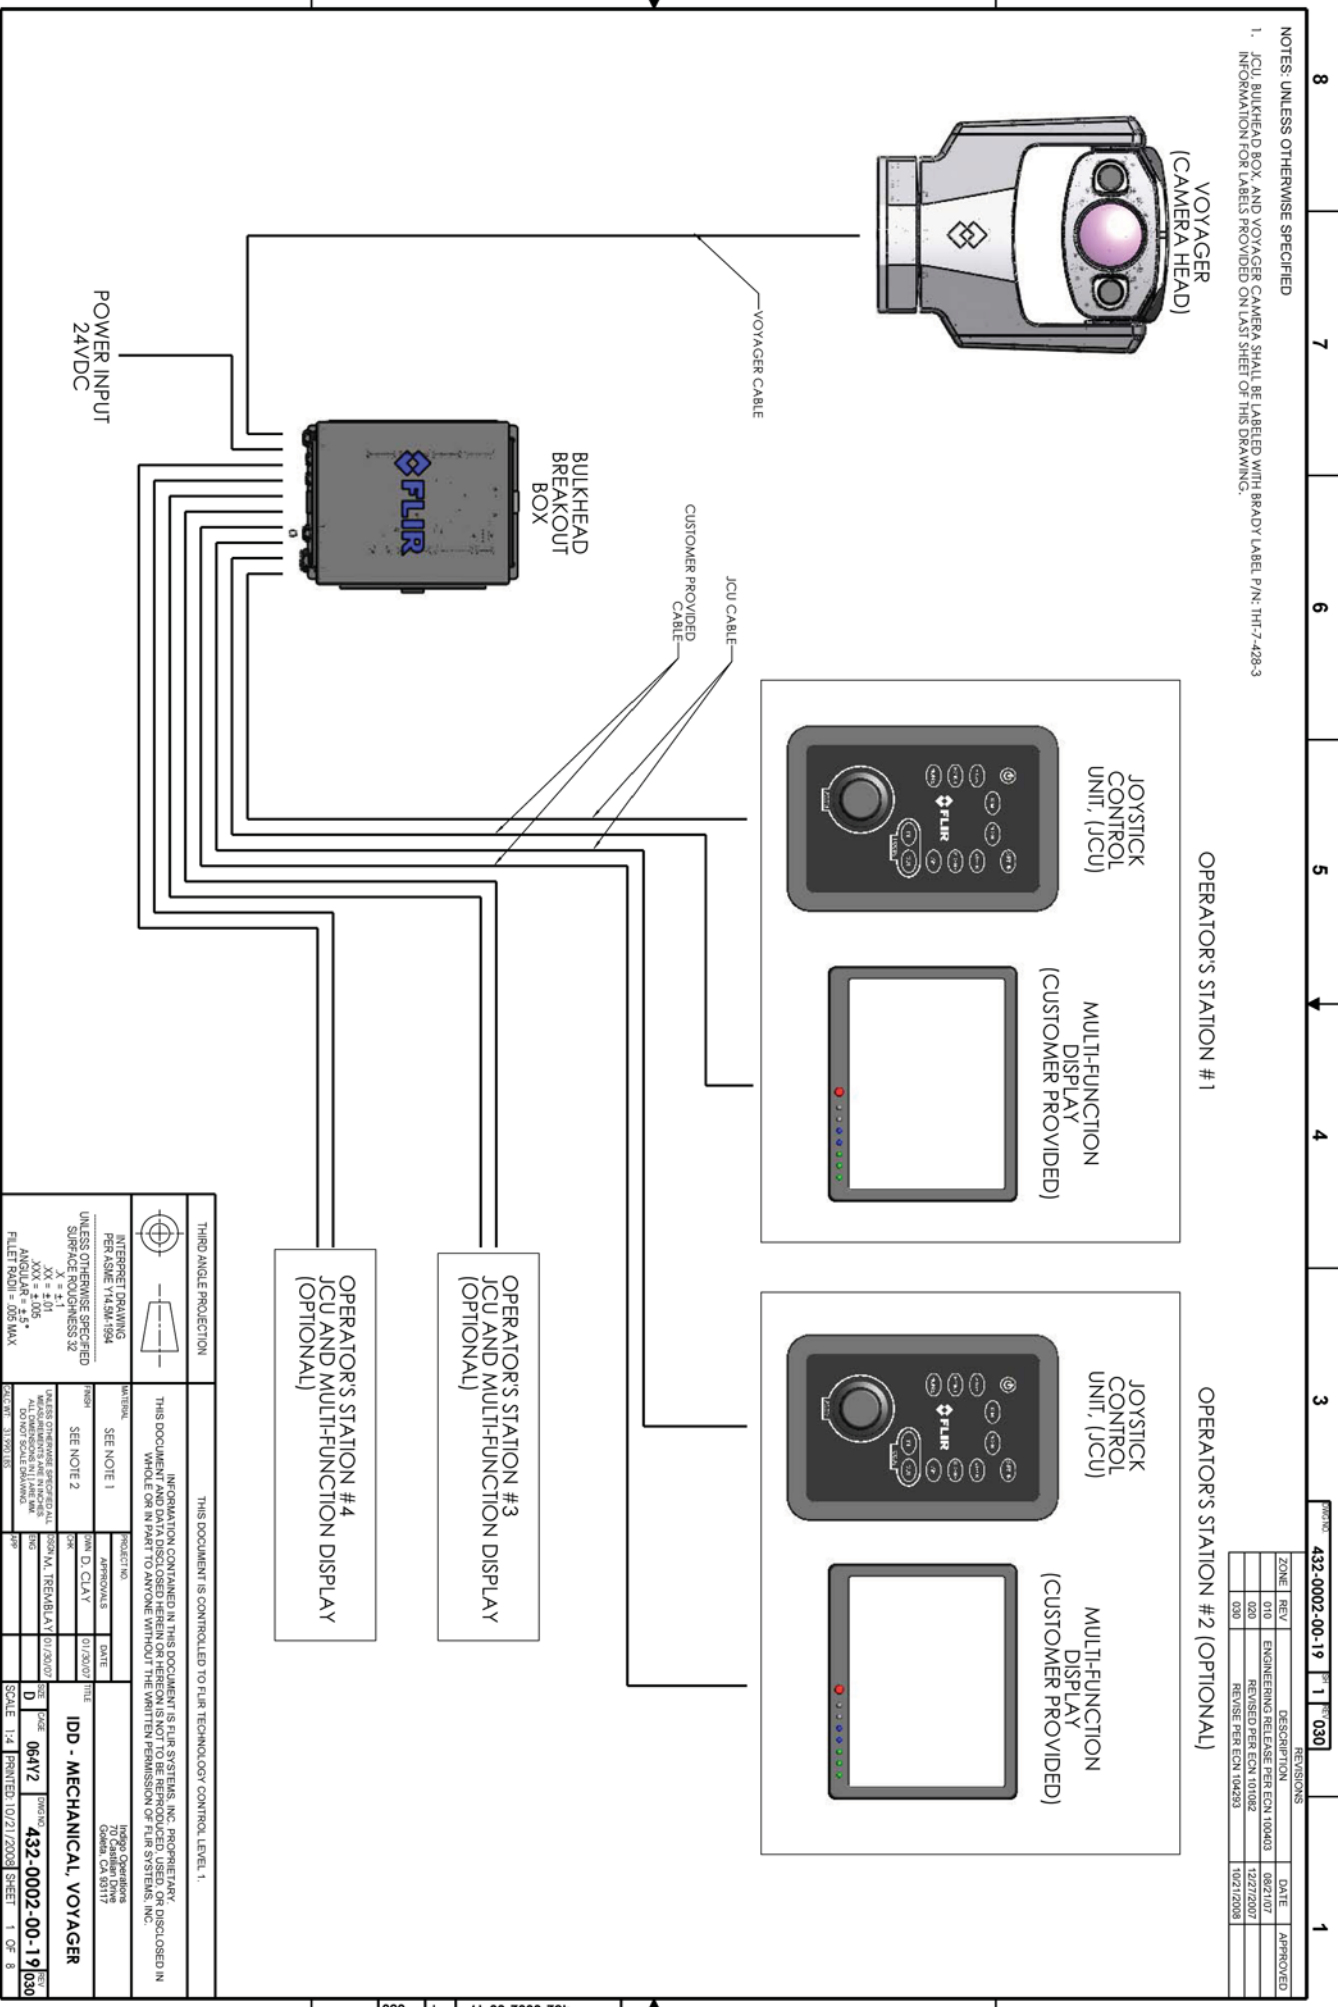

REVISED: 432-0002-00-19 1 OF 8 030

ZONE	REV	DESCRIPTION	DATE	APPROVED
010		ENGINEERING RELEASE PER ECN 10043	08/21/07	
020		REVISED PER ECN 101082	12/27/2007	
030		REVISE PER ECN 104293	10/12/2008	

THIRD ANGLE PROJECTION

INTERPRET DRAWING PER ASME Y14.5M-1994
 UNLESS OTHERWISE SPECIFIED SURFACE ROUGHNESS 32
 XX = ±.11
 XXX = ±.05
 FILET RADIUS = .005 MAX

THIS DOCUMENT IS CONTROLLED TO FLIR TECHNOLOGY CONTROL LEVEL 1.

INFORMATION CONTAINED IN THIS DOCUMENT IS FLIR SYSTEMS, INC. PROPRIETARY AND IS NOT TO BE DISCLOSED IN WHOLE OR IN PART TO ANYONE WITHOUT THE WRITTEN PERMISSION OF FLIR SYSTEMS, INC.

APPROVALS	DATE	TITLE
DMC	01/20/07	DESIGN
DMC	01/20/07	DESIGN
DMC	01/20/07	DESIGN
DMC	01/20/07	DESIGN

SEE NOTE 1
 SEE NOTE 2

ISSUED PER ECN 104293

SCALE: 1:1




PRINTED: 10/21/2008

SHEET 1 OF 8

432-0002-00-19 030

IDD - MECHANICAL, VOYAGER

TOPOGRAPHY
 GARDEN, CA 95117

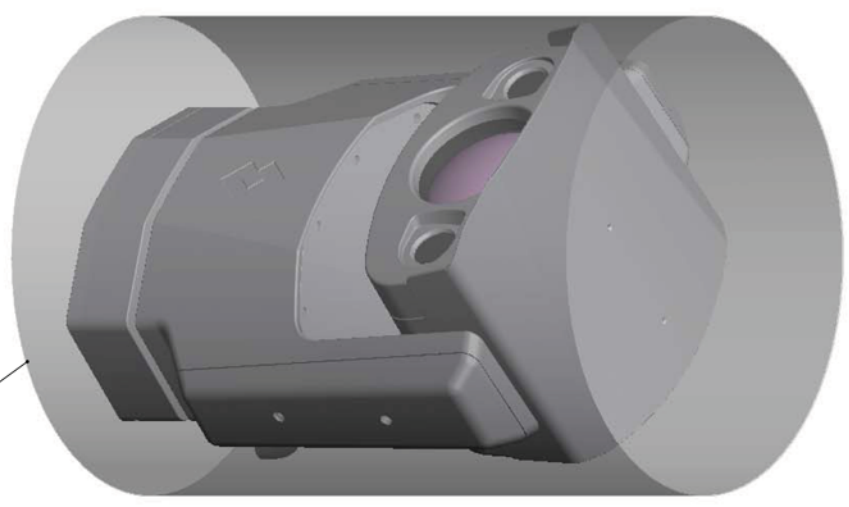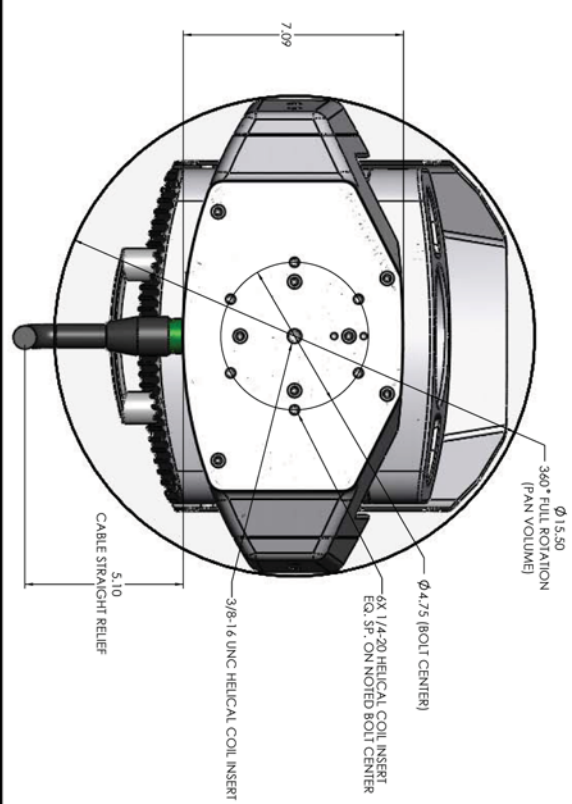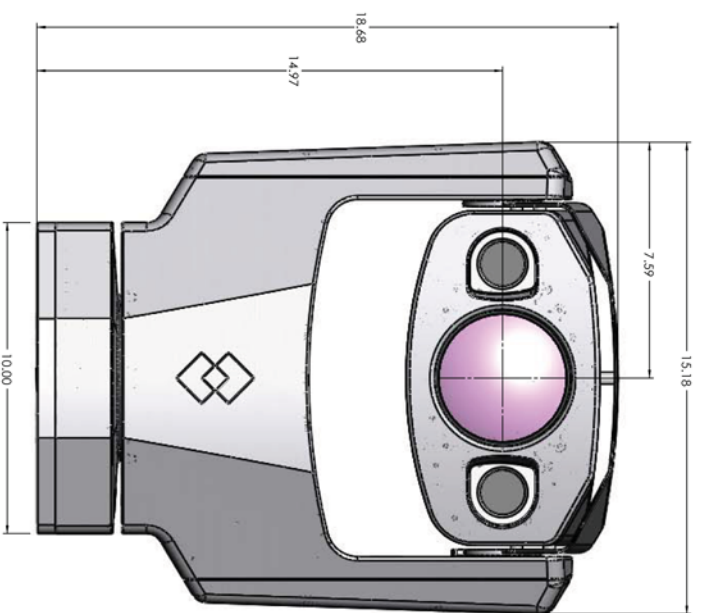


MINIMUM KEEP OUT VOLUME
CYLINDER: 22 X 15.50 DIA

- Ø15.50
- 360° FULL ROTATION (PAN VOLUME)
- Ø4.75 (BOLT CENTER)
- 6X 1/4-20 HELICAL COIL INSERT EQ. 5P ON NOTED BOLT CENTER
- 3/8-16 UNC HELICAL COIL INSERT
- 5.10
- CABLE STRAIGHT RELIEF

IDD - MECHANICAL, VOYAGER

REV	DATE	BY	APP'D	DESCRIPTION
0	06/12			ISSUE
1	10/21/2008			REVISED TO ADD 3D MODEL


SCALE: 2:1 PRINTED: 10/21/2008 SHEET 2 OF 8
SOLIDWORKS MODEL: Voyager.ktm
MODEL REVISION: 030

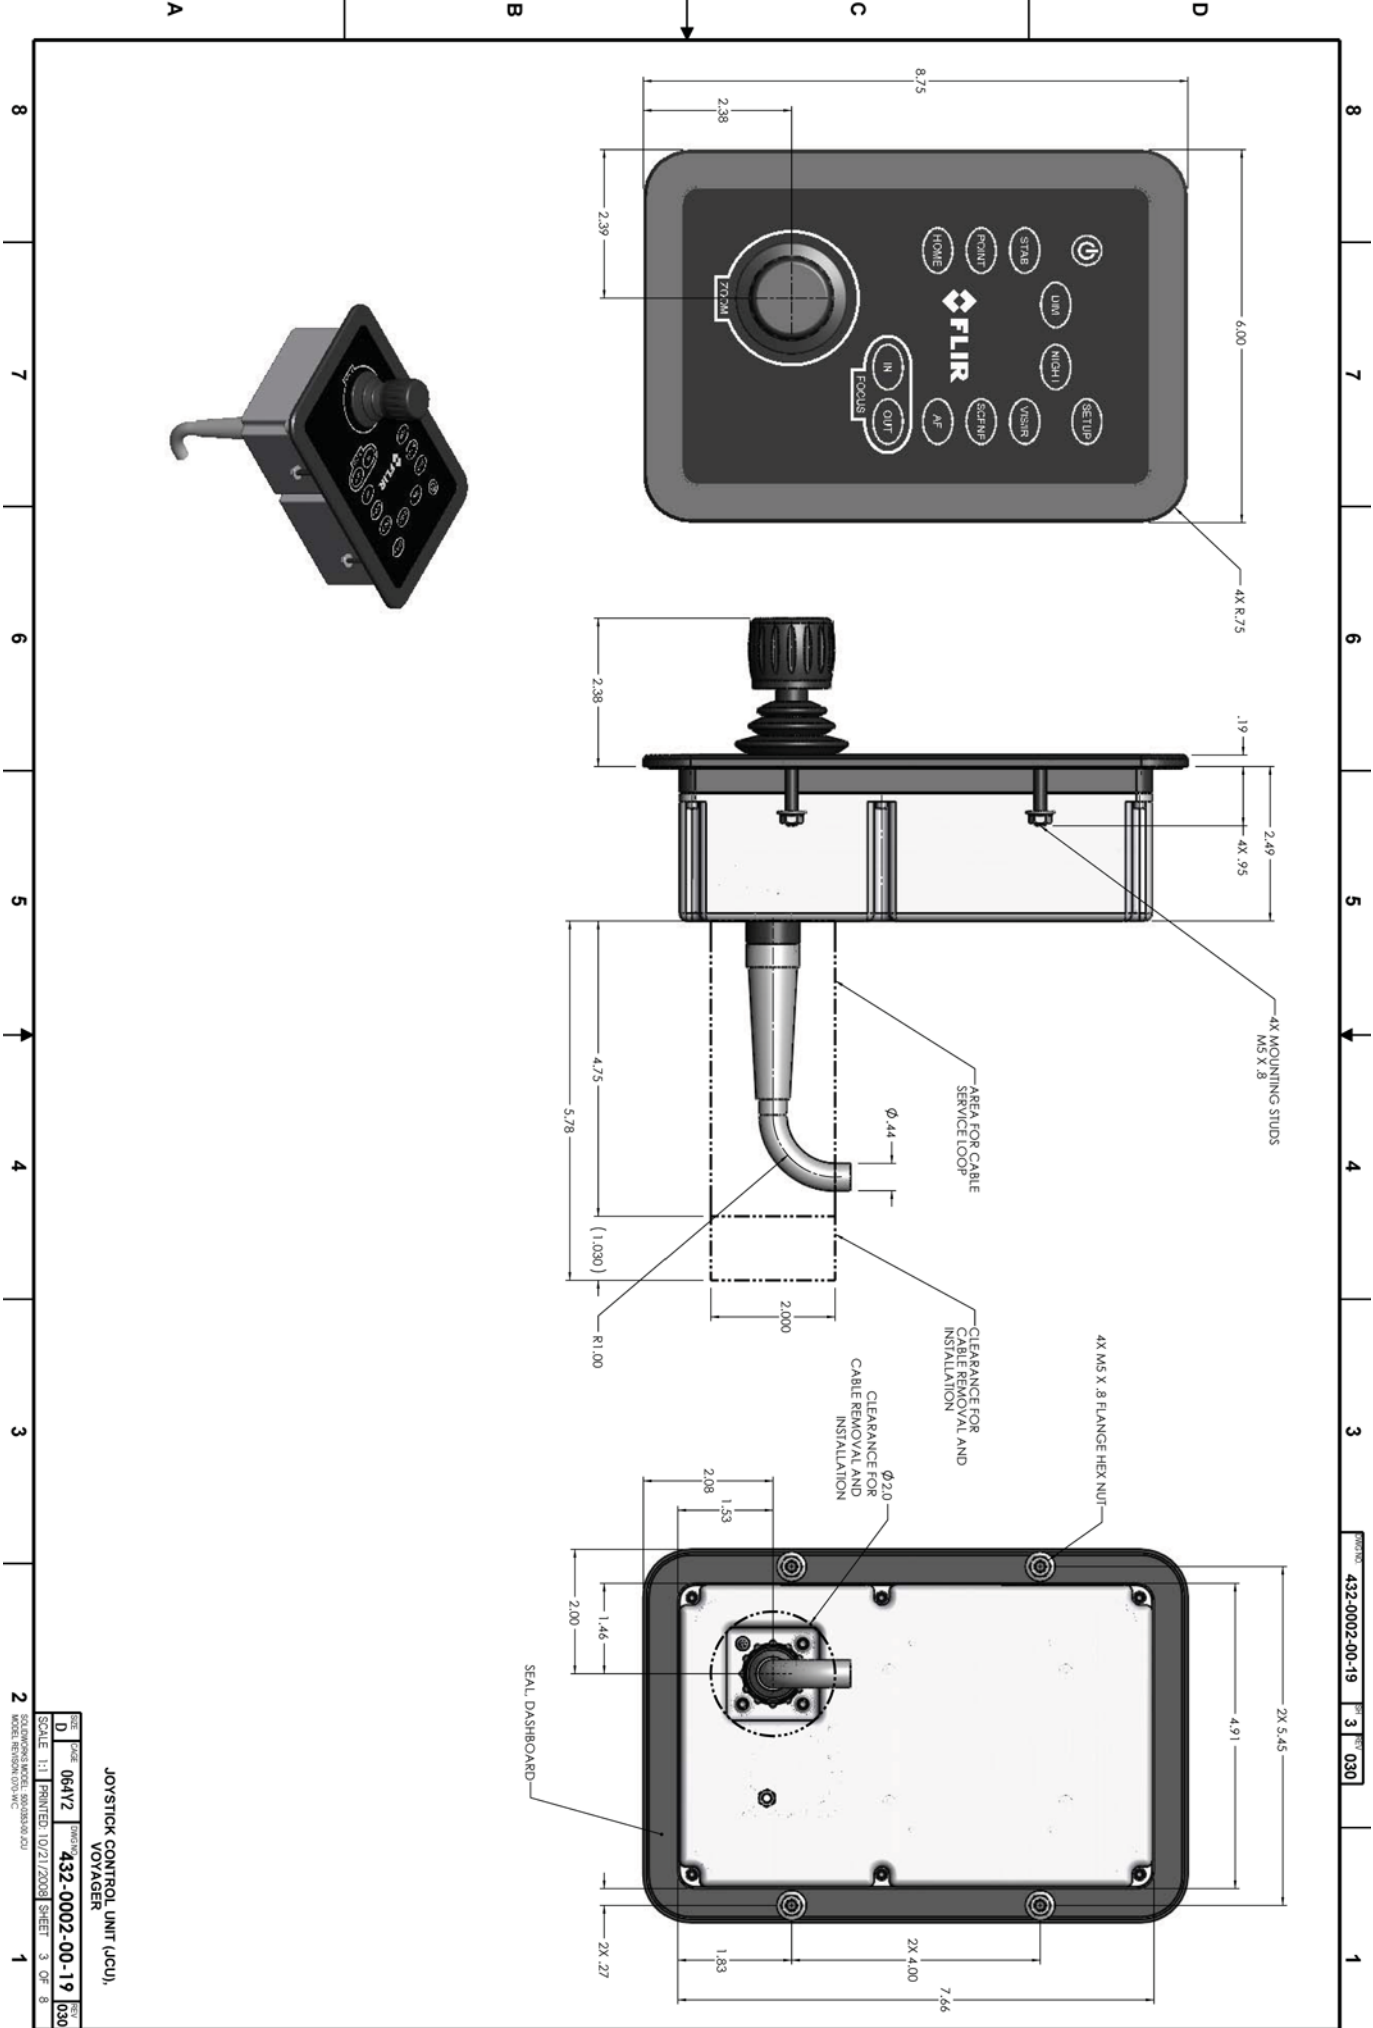

JOYSTICK CONTROL UNIT (JCU),
 VOTAGER
 SCALE 1:1 PRINTED 10/21/2008 SHEET 3 OF 8
 SOLIDWORKS MODEL: 500-0530-001
 MODEL NUMBER: 010-010

PROJ NO: 432-0002-00-19
 SHEET 3 OF 8


PROJ NO: 432-0002-00-19
 SHEET 3 OF 8

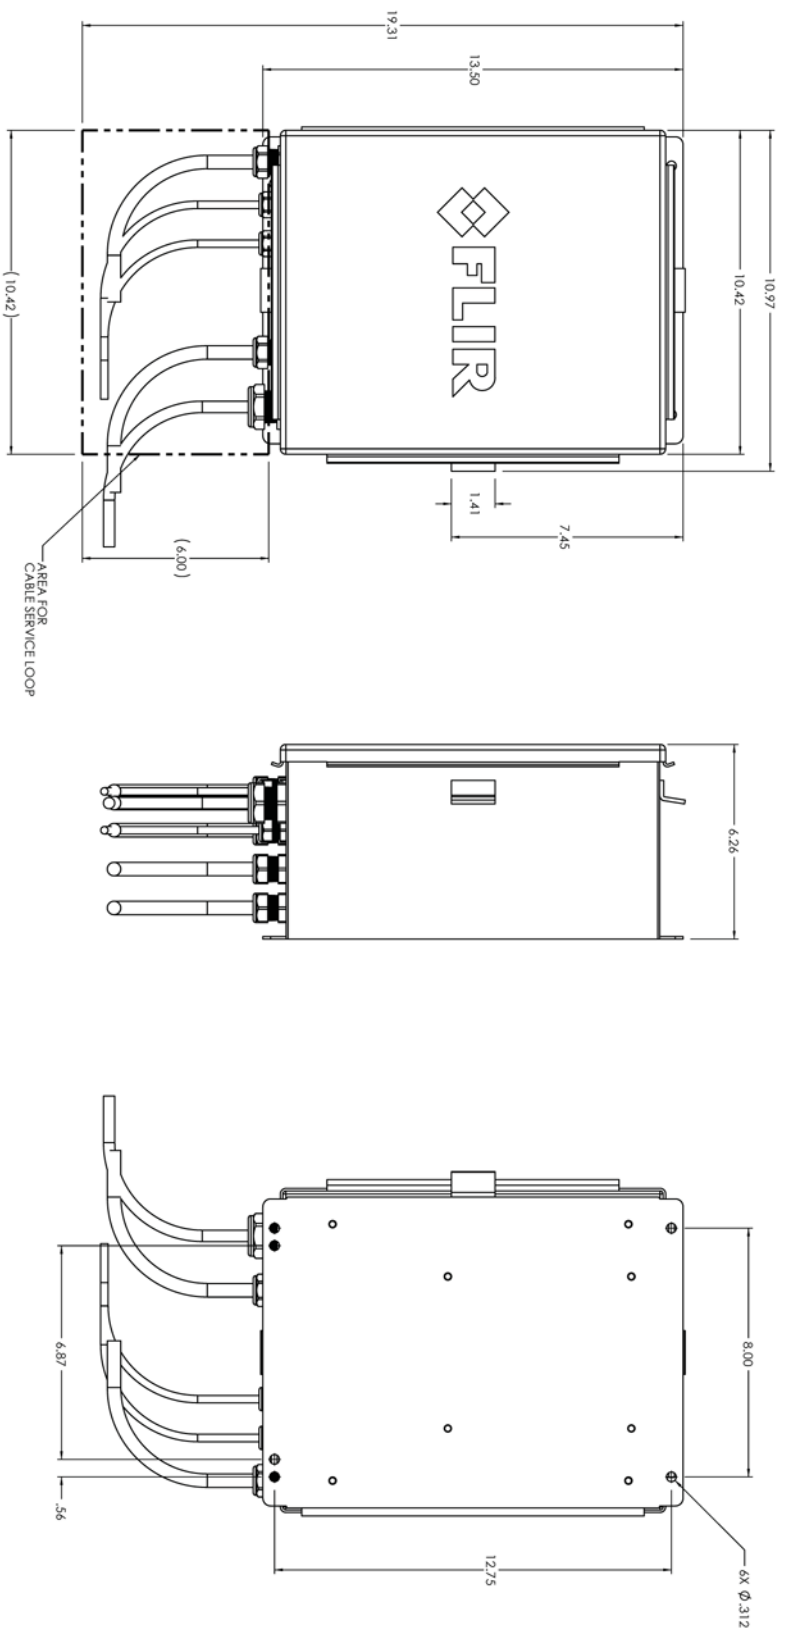

**BULKHEAD BOX ASSEMBLY,
VOTAGER**

REV	DATE	DESCRIPTION
0	06/1/2	ORIGINAL

SCALE: 1:1 PRINTED: 10/21/2008 SHEET 4 OF 8
 SOLIDWORKS MODEL: 550-0086-00 Bulkhead box votager
 MODEL RELEASED: 07/03/11

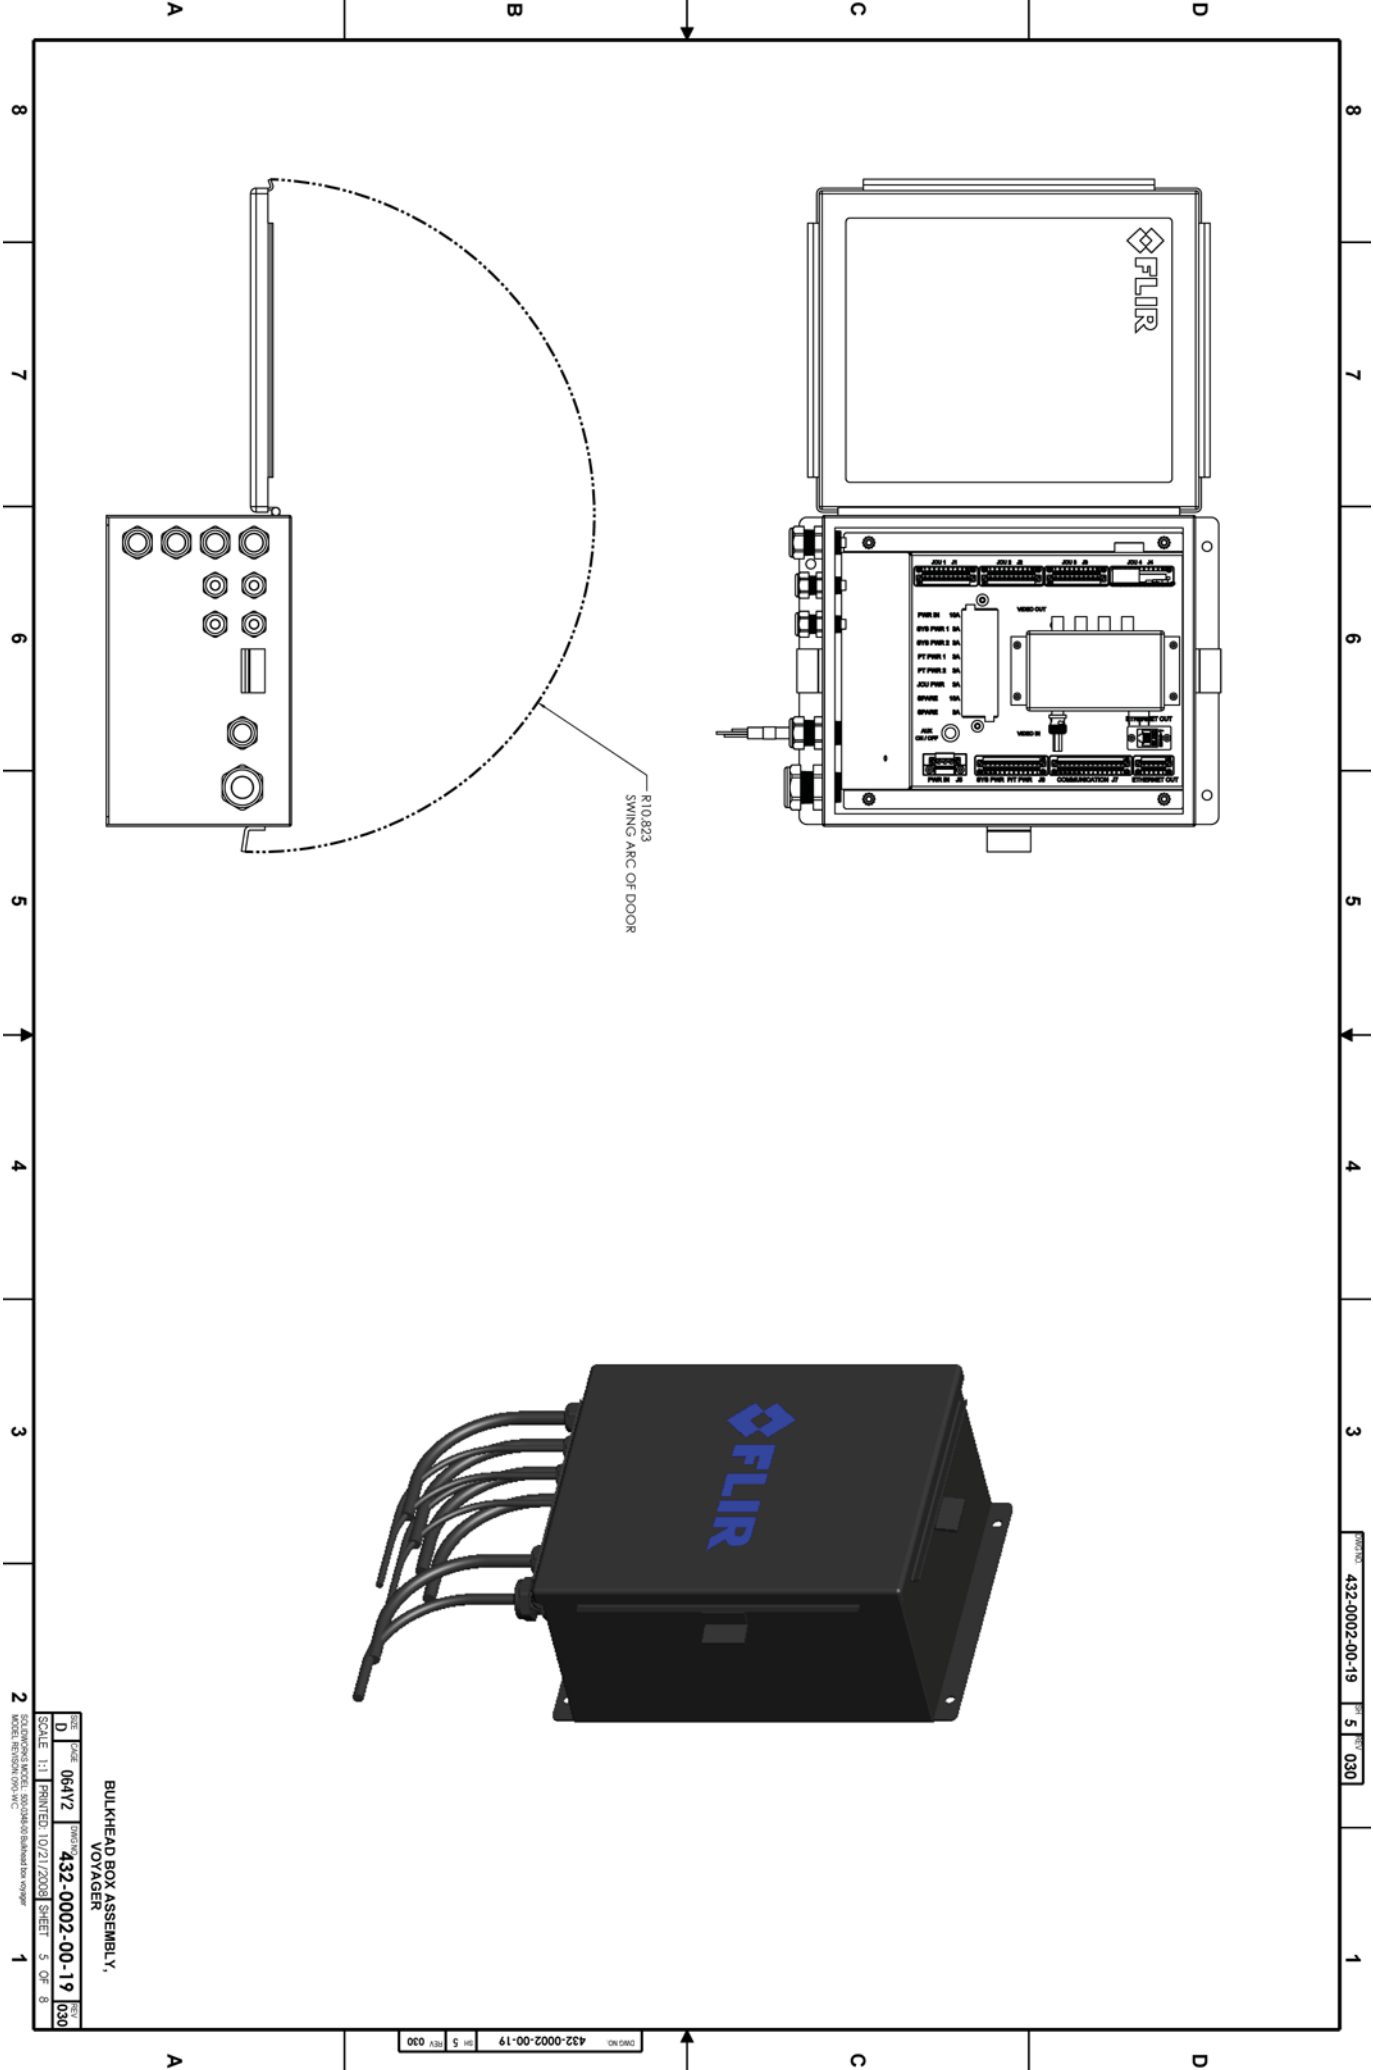

R10.823
SWING ARC OF DOOR

PROJ NO: 432-0002-00-19 5 OF 8 030

**BULKHEAD BOX ASSEMBLY,
VOYAGER**


REV A
DATE 06/12
DRAWN BY 432-0002-00-19
SCALE 1:1 PRINTED 10/21/2008 SHEET 5 OF 8
SOLUTIONS MODEL: 550-0048-00 Bulkhead box voyager
MODEL NUMBER: 030-030

PROJ NO: 432-0002-00-19 5 OF 8 030



WHT/ORN WIRE, [308-0149-XXX] LABELED 'G'
ORN WIRE, [308-0149-XXX] LABELED 'F'
GRN/WHT WIRE, [308-0149-XXX] LABELED 'D'
GRN WIRE, [308-0149-XXX] LABELED 'E'
N/C


ETHERNET CABLE
(BLUE OUTER JACKET)

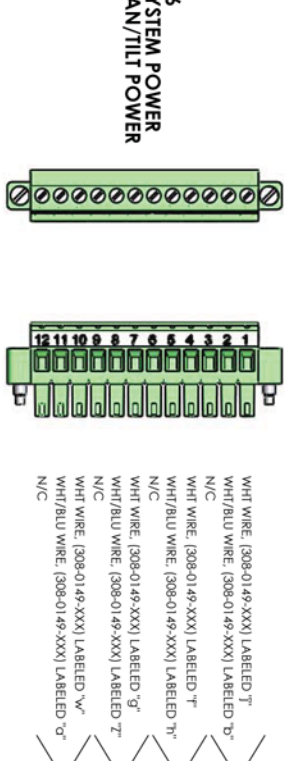

WHT WIRE, [308-0149-XXX] LABELED 'T'
WHT/BLU WIRE, [308-0149-XXX] LABELED 'B'
N/C
WHT WIRE, [308-0149-XXX] LABELED 'T'
WHT/BLU WIRE, [308-0149-XXX] LABELED 'B'
N/C
WHT WIRE, [308-0149-XXX] LABELED 'G'
WHT/BLU WIRE, [308-0149-XXX] LABELED 'T'
N/C
WHT WIRE, [308-0149-XXX] LABELED 'W'
WHT/BLU WIRE, [308-0149-XXX] LABELED 'C'
N/C



SYS PWR 1
SYS PWR 2
P/T PWR 1
P/T PWR 2

4 TWISTED PAIRS
(WHITE OUTER JACKET)

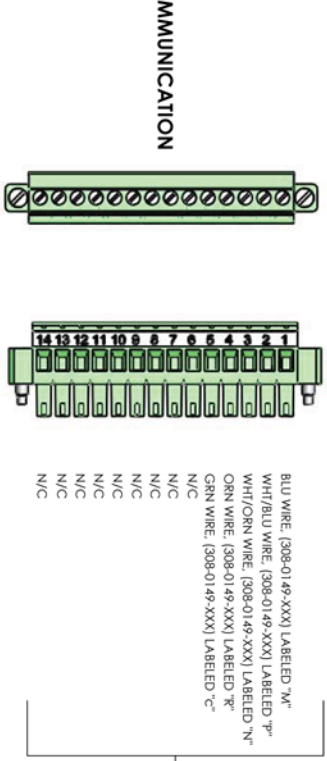


BLU WIRE, [308-0149-XXX] LABELED 'M'
WHT/BLU WIRE, [308-0149-XXX] LABELED 'P'
WHT/ORN WIRE, [308-0149-XXX] LABELED 'N'
ORN WIRE, [308-0149-XXX] LABELED 'R'
GRN WIRE, [308-0149-XXX] LABELED 'C'
N/C
N/C
N/C
N/C
N/C
N/C
N/C
N/C
N/C
N/C

CLEAR OUTER JACKET, STAINLESS STEEL BRAID

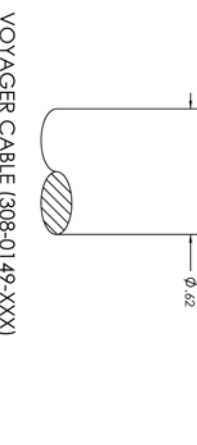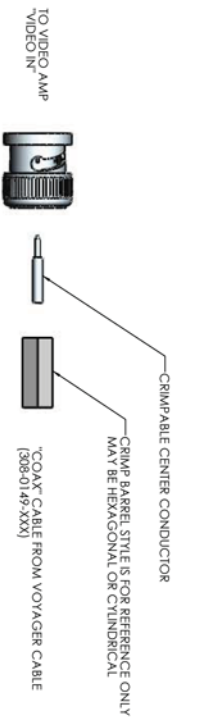


[FLUK SYSTEMS P/N: 202-0003-12]

**JCU 1 THRU 4
P1 THRU P4**

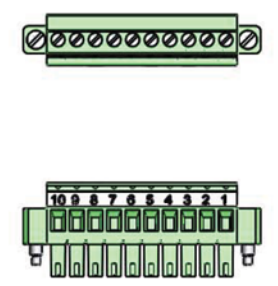


WHT WIRE (308-0139-XXX, WHT #1) TWISTED PAIR #1
 BLK WIRE (308-0139-XXX, BLK #1) TWISTED PAIR #1
 WHT WIRE (308-0139-XXX, WHT #3) TWISTED PAIR #3
 BLK WIRE (308-0139-XXX, BLK #3) TWISTED PAIR #3
 SHIELD FROM TWISTED PAIR #1 (308-0139-XXX) SHALL BE ISOLATED FROM OTHER WIRES AND SHIELDS USING PROVIDED TUBING.
 BLK WIRE (308-0139-XXX, BLK #4) TWISTED PAIR #4
 WHT WIRE (308-0139-XXX, WHT #4) TWISTED PAIR #4
 WHT WIRE (308-0139-XXX, WHT #2) TWISTED PAIR #2
 BLK WIRE (308-0139-XXX, BLK #2) TWISTED PAIR #2
 OVERALL SHIELD (308-0139-XXX) SHALL BE ISOLATED FROM OTHER WIRES AND SHIELDS USING PROVIDED TUBING.

**POWER INPUT
P5**

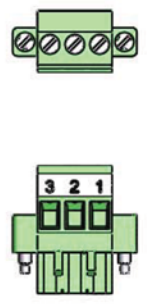

RED WIRE (POWER INPUT CABLE, 4104680)
 BLK WIRE (POWER INPUT CABLE, 4104680)
 BLU WIRE (POWER INPUT CABLE, 4104680)


NMEA 4800 INTERFACE BOARD

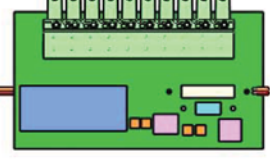

ONE JCU:
 INSTALL NMEA INTERFACE BOARD INTO VESSEL TO BE INSTALLED AS FOLLOWS:
 SIGNAL "A" TO PIN 1
 SIGNAL "B" TO PIN 2
 OF CONNECTOR J3.


TWO JCUS:
 INSTALL NMEA INTERFACE BOARD INTO VESSEL TO BE INSTALLED AS FOLLOWS:
 SIGNAL "A" TO PIN 1
 SIGNAL "B" TO PIN 2
 OF CONNECTOR J3.

THREE JCUS:
 INSTALL NMEA INTERFACE BOARD INTO VESSEL TO BE INSTALLED AS FOLLOWS:
 SIGNAL "A" TO PIN 1
 SIGNAL "B" TO PIN 2
 OF CONNECTOR J3.

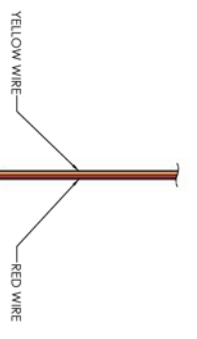

PIGTAIL OF NMEA 4800 INTERFACE: THE ENDS OF NMEA 4800 WIRES MUST HAVE PROTECTIVE COVERING.


**CABLE STRIP DETAIL
JCU CABLE, J1 - J4
"INSIDE" THE ENCLOSURE**

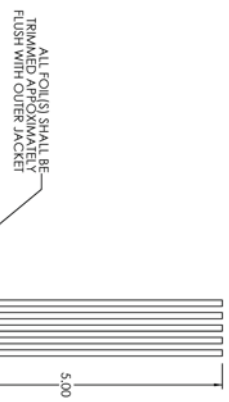

ALL FOIL(S) SHALL BE TRIMMED TO WAFER FLUSH WITH OUTER JACKET

AT A MINIMUM: 50% OF CABLE SHALL PROTRUDE BEYOND THE CABLE GLAND

"OUTSIDE" THE ENCLOSURE

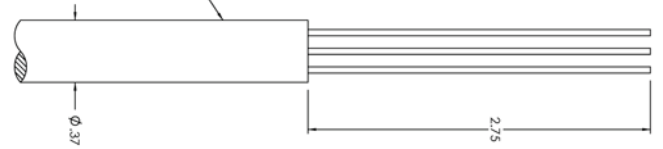

OUTER JACKET (308-0139-XXX)

POWER INPUT CABLE (4104680)


YELLOW WIRE

RED WIRE


This page intentionally left mostly blank.

FORWARD ↑

Caution: When you print this document from the .pdf file, the installation templates may not be to scale. Be sure to check the dimensions prior to cutting any holes.

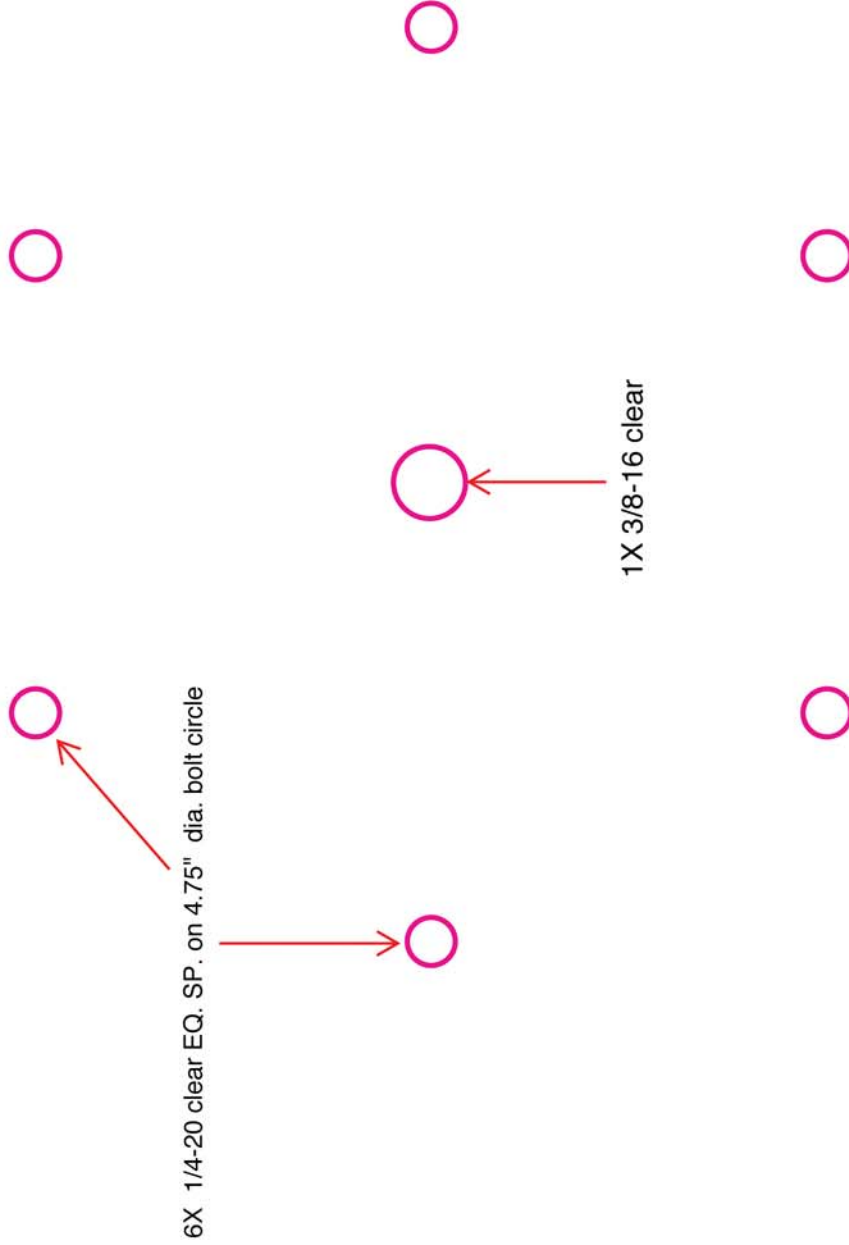

This page intentionally left mostly blank.

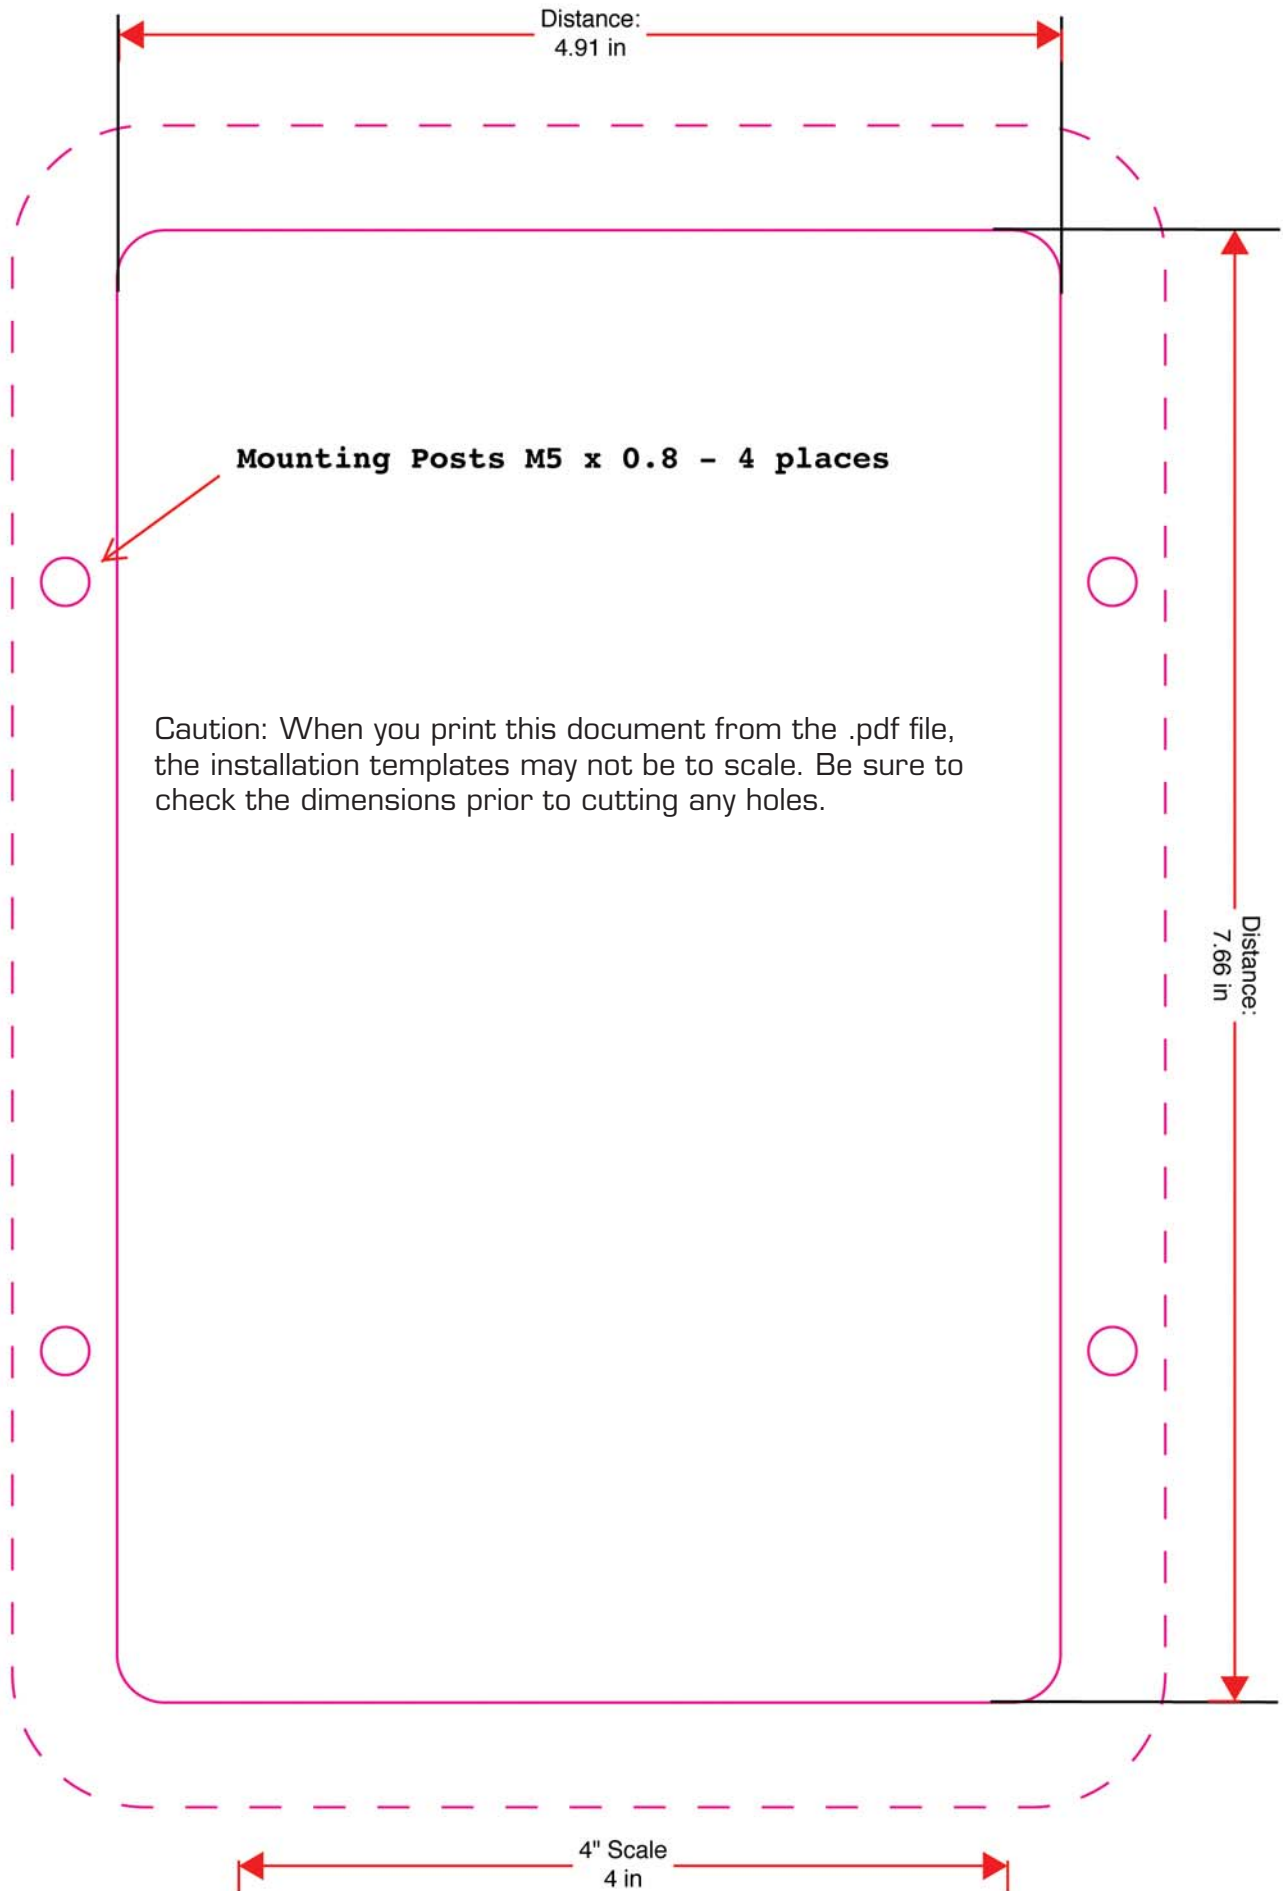

This page intentionally left mostly blank.

This page intentionally left mostly blank.



FLIR[®]

**FLIR Systems, Inc.
CVS World Headquarters
70 Castilian Drive
Goleta, CA 93117
USA**

**PH + 1 805.964.9797
PH: + 1 877.773.3547 (Sales)
PH: + 1 888.747.3547 (Apps)
FX: + 1 805.685.2711
www.FLIR.com**

**FLIR Systems, Inc.
Corporate Headquarters
27700 SW Parkway Avenue
Wilsonville, OR 97070
USA**

**PH: + 1 877.773.3547
FX: + 1 503.498.3153
sales@flir.com**

**CVS Eurasian Headquarters
FLIR Systems CVS BV
Charles Petitweg 21
4847 NW Teteringen - Breda
The Netherlands**

**PH: +31 (0) 765.794194
FX: +31 (0) 765.794199
flir@flir.com**