 


H.264 WRISTWATCH USER'S MANUAL

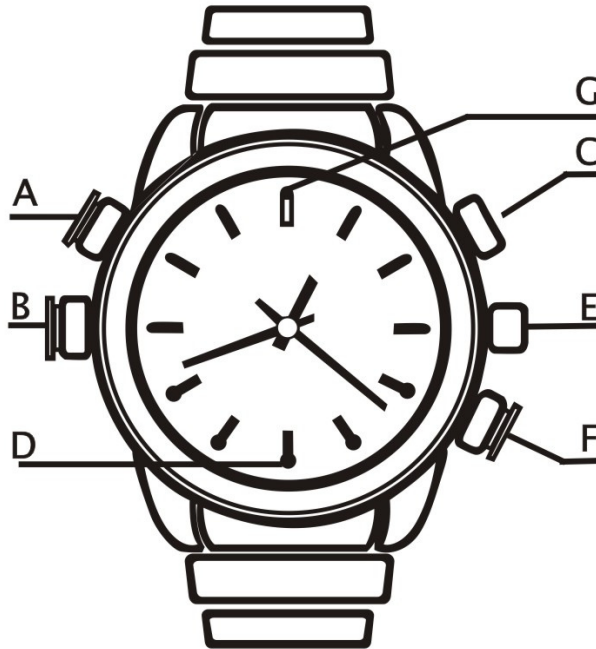

Profile


This product is the wristwatch with H.264 digital function, camera function, PC Camera. It looks lovely, but a useful wristwatch. The lovely designed wristwatch is easy to operate.

Before use please read the following:

It's the NEW Design waterproof wristwatch with High Resolution(720P). But because the construction of this product, it can not be used underwater. It does a good job underwater and weatherproof.


1. The nut, A: MIC1 and the nut, B: MIC2 are microphone hole nut, the height of them are same.
2. The nut A, MIC1 is with a hole in the center of the nut (the following picture), it is for transmits the sound. If the environment permit, please use this nut. When you take the video, the equipment also can record the sound.
3. The nut, B: MIC2 is without the hole, but it is with a rubber fitting inside which can anti-water. When it is in the humidity or dust environment, please use this nut. But when you use this nut, the equipment can not record the sound.
4. Please tighten the nuts when you use the equipment.
5. Before use the nut, please check if the rubber is inside of the nut. If not, please change the new one.

 Picture1

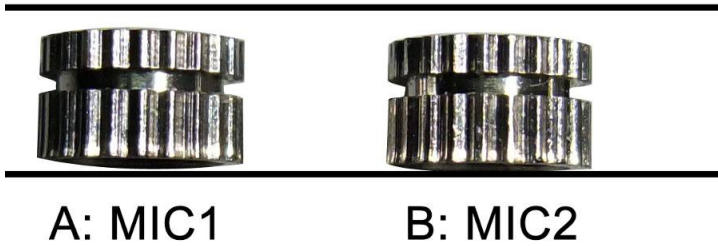

THE NUT STRUCTURE SHOWED AS FOLLOWING PICTURE:

 Picture2

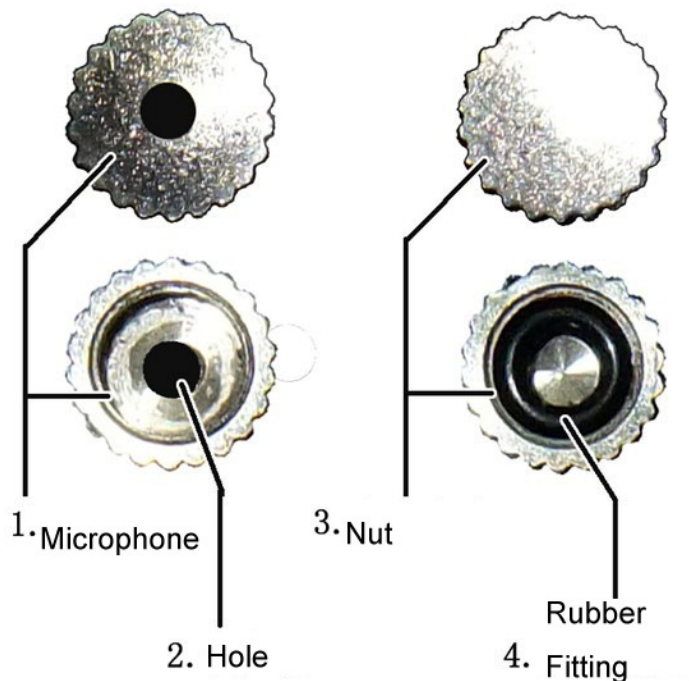


The following Spare Parts introduction showed as the **picture3**

● **Spare Parts:**

- a) Mode Key:No.A.. is for switching between Video,Camera,Playback.
- b) **Interface:** USB (No.B), is for connecting pc or recharger.
- c) **Operation Key:**No.C,it is for Turning on or off,Video,Pause.
- d) **Lence:**No.D,Taking in the signal of Video.
- e) **Time Reset:**No.E,it is for resetting the time showing on wriste watch.

STRUCTURE

 Picture3

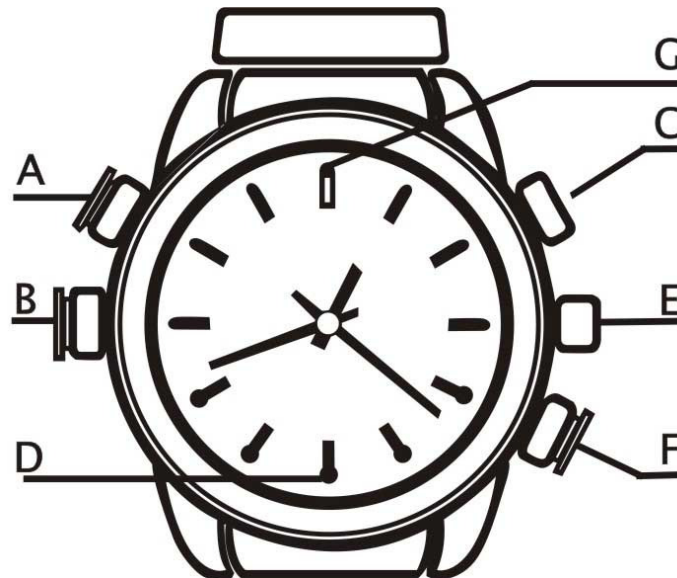

A、MODE SWITCH B、USB INTERFACE C、ON/OFF
D、CAMERA E、TIME OPERATION KEY F、AUDIO HOLE G、INDICATOR

● OPERATION

- 1. On:** Press the key, No. C for about two seconds, the red light and blue light will be burning together, when the red one is off and blue one is burning. The equipment is in the status of standby.
- 2. Off:** In the condition of standby or video, press the key, No. C for two seconds, the equipment will be off after the red light is shining for three times. The equipment will be off after three minutes in the condition of standby if it does not receive any order.
- 3. Video:** In the condition of standby, after you click the key No. C, the blue light will flash. It means the equipment is taking video. During the video, if you click the key, No. C, the equipment will stop taking video, after it saves the file, then, it enters into the standby status.
- 4. Camera:** In the condition of standby, after you click the key, No. A for one time. The blue light will be off and red light will be burning, it means it's in the status of Camera. Then, if you click the Key, C for one time. The red light will flash one time. It means it takes one picture and saves it as JPG file.
- 5. Separate recording operation :** In the condition of standby, after you click the key, No. A after the red light and blue light will be burning, indicating that the machine is in recording standby state; press A key secondary, red and blue lights at the same time light up, indicating that at this time the machine is separate recording standby mode, press the C key under a red and blue lights flashing 3 times, indicating

that being a separate recording , recording continuous secondary C key , to stop recording and auto-save, again, short press to start recording again .Reset:If the system halted,please press the key,No.A and the key,No.C together.It can reset the equipment.

- **Mobile Disc:**When it is in the condition of the off or standby status,you can connect the equipment and the PC.The mobile disc sign will show in the screen.

- **Charge:**After you connect the equipment and PC or charger,the red light is burning.After it is full,the red light will off.

- **Time Reset:**

Set the recording time : The camera provides the function of recording time is displayed in a video file format: year - month - day hours : minutes : seconds, set the time method is as follows :

Good connection through the USB cable and the computer in the machine state of the organ , "Removable hard disk " drive in My Computer . Open WordPad or Notepad in Windows software in the annex (*. txt format) input :2012 -07 - 07 12:59:30

Take the file name : time.txt.Press it to update it.Then,disconnect the equipment and PC.

- **FAQ**

1.If the capacity is full,the blue light and red light will shine for about five seconds and power off after it stores the file.

2.If the power is low, the equipment will store the file and power off after the blue light and red light will be shine alternately for about five seconds.

3.If the equipment stop responding for unknown reason or wrong operating,please press the mode key and operating key together to reset.

- **Parameter**

Item	Parameter
VIDEO FORM	AVI
Video Coding	H.624
Resolution	1280*720
Player Software	Operating systems or mainstream movie playback software
Picture Format	JPG
Image Scaling	4:3

Support System	Windows me/2000/xp/2003/vista; Mac os 10.4; Linux;
VOL	DC-5V
Interface-type	Mini USB
Memory Card Format	Nand flash
Battery	High-capacity polymer lithium battery

● Notice

- Work place:It is only for legal place.
- Battery:You need to charge it after it does not work for long time.
- File safty:It is not the professional memory card,so it can not instead of professional memory card completely.you need to keep back-up.
- Video quality:It is not the professinal video equipment,so it can not instead of professional Video Equipment completely.
- Working tempreture: 0—45°C,it is better to use in the room tempreture.
- Working humidity:20%-80%,it is with waterproof function.Before you enter into the waterproof status,do not put it into water or humidy place.
- Illuminance: Please to use it in the luminous place.
- Cleanliness:it is better not to use it in the dust place.
- Other items:It can not use in the high magnetic fields , uniform electric field.It can not be striked,quick hardly.
- Notice:Please contact the local selleres if you need any other more inforamtion or help.