

Thanks for your interest in
servicemanuals.net

Attached are a couple pages from the
manual so you can make sure if it what
you are looking for and so you can see the
quality of the manuals we provide.

We look forward to receiving your order.


To order, please go to

click here

RCA

user manual

 RTD315W

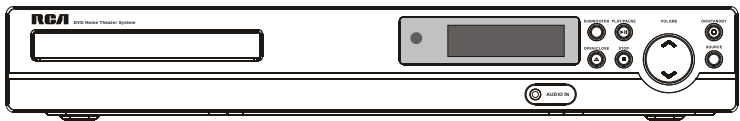


It is important to read this instruction book prior to using your new product for the first time.

Important Safety Instructions

- Additional safety information
- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
 - Always leave sufficient space around the product for ventilation. Do not place product in or on a bed, rug, in a bookcase or cabinet that may prevent air flow through vent openings.
 - Do not place lighted candles, cigarettes, cigars, etc. on the product.
 - Connect power cord only to AC power source as marked on the product.
 - Care should be taken so that objects do not fall into the product.
 - Do not attempt to disassemble the cabinet. This product does not contain customer serviceable components.
- If your product operates on batteries, adhere to the following precautions:
- Any battery may leak electrolyte if mixed with a different battery type, if inserted incorrectly, or if all batteries are not replaced at the same time.
 - Any battery may leak electrolyte or explode if disposed of in fire or an attempt is made to charge a battery not intended to be recharged.
 - Discard leaky batteries immediately. Leaking batteries can cause skin burns or other personal injury. When discarding batteries, be sure to dispose of them in the proper manner, according to your state/provincial and local regulations.
 - Battery shall not be exposed to excessive heat such as sunshine, fire or the like

Connections and Setup

 Accessories provided

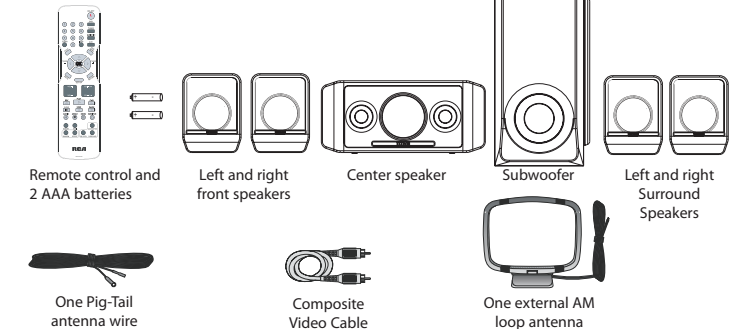

Things to consider before you connect

- Ensure that the mains supply in your house complies with that indicated on the identification sticker located on the back of your unit.
- Install your unit horizontally, away from any source of heat (fireplace) or appliances creating strong magnetic or electric fields. The components of this unit are sensitive to heat. The maximum ambient temperature should not exceed 35°C/95°F.
- Leave enough space around the unit to allow adequate ventilation: 10 cm/4 inches on either side and above the top, and 5 cm/2 inches at the rear.
- The humidity of the room should not exceed 75%. If you have to use the unit outdoors, do not expose it to rain or splashing water. The apparatus should not be exposed to dripping or splashing and no objects filled with liquids, such as vases, should be placed on the apparatus.
- Moving the unit from a cold place to a warm one can cause condensation on some components inside the unit. Let the condensation disappear on its own before turning the unit on again.
- Before moving the unit, make sure the disc tray is empty.

Connections and Setup

Better surround placement

 
Location
If possible, place surround speakers to either side of the listening area, not behind it.

Height

If space permits, install surround speakers 2-3 feet above viewers. This helps to minimize localization effects.

Aiming


Aim surround speakers straight across the room, not down at viewers, to help create a more open, spacious surround sound field.

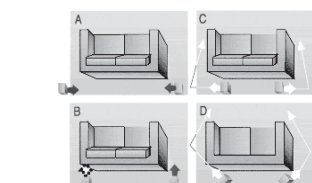

Alternative Surround Placement

Rear wall
If rear wall mounting is the only choice, aim the speakers at each other (A), towards the front (B) or towards the sidewalls (C, D). Experiment with placement until sounds seem to surround you, rather than come from behind you.

 Overview of Controls :Front panel controls

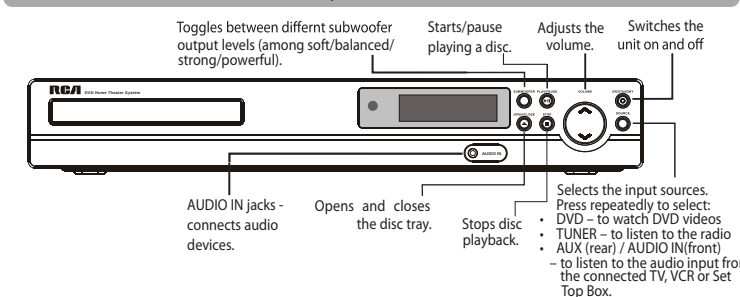

FCC Information

 
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



Ventilation

 You must adequately ventilate the product. Make sure there is adequate space around the unit to provide proper air flow for ventilation. See diagram.

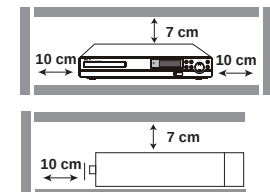

This product complies with DHHS Rules 21 CFR Subchapter J. Applicable at the date of manufacture.

 
For your safety

The AC power plug is polarized (one blade is wider than the other) and only fits into AC power outlets one way. If the plug won't go into the outlet completely, turn the plug over and try to insert it the other way. If it still won't fit, contact a qualified electrician to change the outlet, or use a different one. Do not attempt to bypass this safety feature.

Removing the power plug is the only way to completely remove power from your product. Make sure the power plug remains easily accessible.

Note:

This DVD player is designed and manufactured to respond to the Region Management Information. If the Region number of a DVD disc does not correspond to the Region number of this DVD player, this player cannot play the disc. The Region number for this DVD player is Region 1.



FCC Information



WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

CAUTION: USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

CAUTION: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE.

WARNING: MAINS PLUG IS USED AS DISCONNECT DEVICE AND IT SHOULD REMAIN READILY OPERABLE DURING INTENDED USE. IN ORDER TO DISCONNECT THE MAINS PLUG FROM MAINS COMPLETELY, THE MAINS PLUG SHOULD BE DISCONNECTED FROM THE MAINS SOCKET OUTLET COMPLETELY.

Service information

This product should be serviced only by those specially trained in appropriate servicing techniques.

Main plug is used as the disconnect device, it shall remain operable and should not be obstructed during intended use. To be completely disconnected the apparatus from supply mains, the main plug of the apparatus shall be disconnected from the mains socket outlet completely.

Caution

Invisible laser radiation when open. Avoid exposure to beam. Class 1 laser product. This system must be opened only by qualified technicians to prevent accidents caused by the laser beam.

Connections and Setup

 
 
Notes:

- Refer to the owner's manual of the connected TV as well
- When using HDMI cable, do not connect to other analog video outputs.

Connecting AUDIO from external sources such as TV (Aux-In)

Using AUX jack

Connect the AUX jacks from the unit to the AUDIO OUT jacks on VCR, TV, Set Top Box or other component.

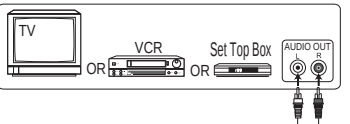

Using AUDIO IN jacks

Connect the Ø3.5mm AUDIO IN jacks on the front panel of the unit to the headphone output on mp3 players.

 
Notes:

- Ø3.5mm to Ø3.5mm audio cables (not included) are required.
- Press either SOURCE on the main unit or AUDIO IN on the remote control to select AUDIO IN mode.
- To listen to the audio input from the connected component, press SOURCE on the main unit or AUDIO IN on the remote control to select the AUDIO IN mode.

Suggest using Ø3.5mm AUDIO IN jack for mp3 player and AUX IN jacks for auxiliary equipment such as DVD, VCR or PC.

Connecting the speakers

Speaker wires are color-coded to match the terminals. Connect the speaker wire from the back of each speaker to the corresponding color terminal at the back of the unit. Press down the tab to open the terminal and insert the wire. Release the tab to lock wire in the terminal.

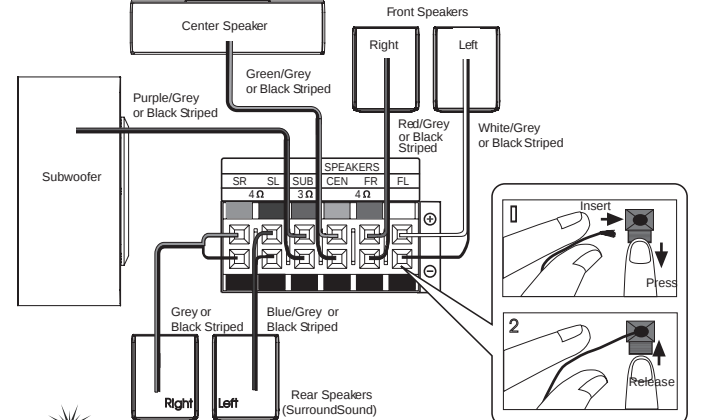

Note: When connecting the speakers, make sure the polarities ("+" speaker wire to "+" on the receiver. For example, red wire to red terminal on the receiver) of speaker wires and terminals match. If the cords are reversed, the sound will be distorted. Do not let the speaker wires touch each other, it will damage the speaker.

Overview of Controls

RANDOM - Turns on/off random playback on CDDA/wma/peg discs.

REPEAT - Accesses the repeat function.

EQ . LEVEL - Toggles channels for different channel level settings. Adjusts the value using VOL +/-.

SURROUND - Changes the Surround sound setting. In DVD mode, press the button to select between Dolby Digital and Stereo modes (Dolby ProLogic is available if the input is Dolby 2ch). In the AUX IN / AUDIO IN mode (analog input), press the button to select between Dolby ProLogic and STEREO modes. (Refer to details on Dolby Digital and Dolby ProLogic.)

Remote control functions in tuner mode

TUNER - Selects the TUNER and switch between FM/AM

VOL +/- - Adjusts the sound volume.

MUTE - Mutes and Restores the sound.

TUNER +/- - Tunes down and up the radio frequencies

MEMORY - Stores a station

CH +/- - Selects programmed stations

AUDIO - Selects between Stereo and Mono mode for Tuner (FM)

Using remote control to navigate through the on-screen menus

Use A V < > and OK on the remote control to navigate through the on-screen displays (the DVD player's menu, the Info Display that appears during playback, or a disc's menu).

Use A V < > on the remote to move through on-screen menus in the direction of the arrow button (eg, to move right, press >). The arrow buttons are used to highlight an option. Once highlighted, press OK to select the option that is highlighted.

Note: Insert 2 "AAA"(UM-47"/R03") batteries to the remote control prior to use.

Important Information

Important battery information

- Do not mix different types of batteries or new and old batteries. Do not use rechargeable batteries.
- In order to avoid any risk of explosion, observe the polarities indicated inside the battery compartment. Replace only with the type of batteries specified. Do not dispose of them in a fire or recharge them.
- If you are not using the remote control for a long period of time, remove the batteries.

Please respect the environment and prevailing regulations. Before you dispose of batteries or accumulators, ask your dealer whether they are subject to special recycling and if they will accept them for disposal.

Illustrations contained in this document are for representation only.



CAUTION

- This product utilizes a laser. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure. Do not open covers and do not repair yourself. Refer servicing to qualified personnel.
- To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. No objects filled with liquids, such as vases, should be placed on the apparatus.

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la class B est conforme à la norme du NMB-003 du Canada

WARNING

To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. No objects filled with liquids, such as vases, should be placed on the apparatus.

Important Safety Instructions

Please read and save for future reference

Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use.

 
- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Only use attachments/accessories specified by the manufacturer.



Portable Cart Warning

Connections and Setup

Positioning speakers

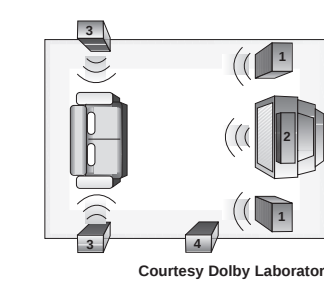

1. Left, Right (Front Speakers)
Front speakers carry primarily music and sound effects.

2. Center
In surround mode, the center speaker carries most of the dialog as well as music and effects. It should be set between the left and right speakers.

3. Surround (Rear Speakers)
The surround speakers' overall sound balance should be as close as possible to the front speakers. Proper placement is vital to establish an evenly distributed sound field.

 
4. Subwoofer
A subwoofer is designed to reproduce powerful low bass effects (explosions, the rumble of spaceships, etc.).

Note: Front, Center speakers provided with this unit are magnetically shielded to protect your TV set. It is not recommended to place the surround speakers and subwoofer near the TV set.

Basic playback operations

Variable slow motion

- Press SLOW button on the remote in play mode.
- Each time the SLOW button is pressed, the speed of slow-motion playback changes in the following sequence:



3. Press PLAY to resume normal playback.

 
Changing chapter/track
While the disc is playing, press the CH +/- button to go immediately to the next or previous chapter, or to the next or previous track.

Zoom

- While a disc is playing, press ZOOM until you reach the zoom size you want. The ZOOM button toggles through 2x, 3x, 4x and then zooms out to 1/2x, 1/3x and 1/4x, then returns to normal playback.
- Move from one area to another (pan) using the arrow buttons.
- To turn ZOOM off, press ZOOM until you get to the ZOOM OFF option.

Types of menus


- Disc menu — The appearance and contents of this menu varies according to the type of disc you have inserted. It is separate from the Setup menu.
- Info menu — The unit's Info menu appears at the top of the screen while the disc is playing. Press INFO on the remote to switch the Info menu on or off.
- Setup menu — Press SETUP to access this menu.

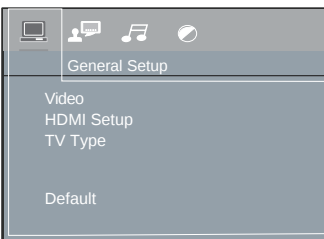

Front speaker placement


For best results, follow the speaker placement below.

 Alignment
Align the center speaker evenly with (A) or slightly behind (B) (the left and right speakers), but not ahead of them.

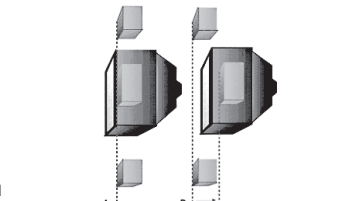

Angle
Place the left and right speakers to form a 45-degree angle with your favorite viewing position to duplicate the soundtrack mixer's perspective.

 Height
The three front speakers should be as close as possible to the same height. This often requires placing the center speaker directly on top (A) or beneath (B) the TV set.

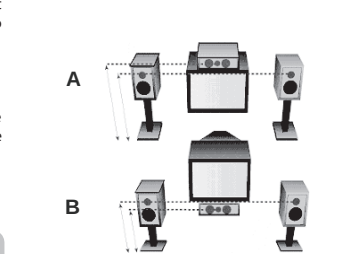

Notes:

- When you press STOP, the unit stores the point where playback was interrupted. If you press PLAY again, playback resumes from this point. To stop playback completely or to start again from the beginning, press STOP twice. If the unit is left in STOP mode for more than 5 minutes without any user interaction, a screen saver is activated. At the end of 30 minutes without any user interaction, the unit switches off automatically.

The Info Menu

- Press INFO on the remote while a disc is playing to display the info menu. The first banner shows title, chapter, and time display information.
- Press INFO again for audio language, subtitles, and camera angle.
- Press INFO a third time for play mode, bookmark and sleep timer.
- Use the right/left arrow buttons on the remote to select an option.
- Use the up/down buttons to scroll through the options

Note: INVALID KEY will be displayed if the function you select is not available.

