

Haier

Cordless Water Kettle USER'S MANUAL



HKT-1137

Before operating this appliance, please read these instructions completely.

CONTENTS

Title	Page No.
IMPORTANT GUIDELINES	1-4
PRIOR TO FIRST USE	4
DESCRIPTION OF THE KETTLE	5-6
OPERATION INSTRUCTIONS	6-7
CLEANING AND MAINTENANCE	7-9
DISPOSAL DESCRIPTION	9

Congratulations on the purchase of your new **Haier** Cordless Water Kettle.

IMPORTANT GUIDELINES

- Read the instructions carefully before use.
- Before you connect the appliance to the supply mains, check that the voltage indicated on the rating label found underneath the machine, corresponds to that of the local mains.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the appliance, the base, the power cord, or plug in water or any other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Unplug the appliance when not in use and before cleaning or maintenance operation. Allow to cool before putting on or taking off parts.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person, in order to avoid a hazard.
- In the event of faults, defects or a suspected defect, immediately take the plug out of the socket-outlet. Never put the defective appliance

into operation. **ONLY AUTHORIZED SERVICE CENTRES CAN MAKE REPAIRS.** The manufacturer declines all responsibility for any damage caused by repair jobs performed incorrectly.

- Use this appliance only for its use as described in this manual. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet.
- This unit is for household use only. Do not use for commercial or industrial purposes.
- Always plug the appliance to a grounded electrical outlet.
- Use of extension cords may cause damage, injuries and/or accidents.
- Never pull power cord. Always disconnect from the power supply by pulling on the plug.
- Switch the On/Off button Actuator to OFF position before removing the plug from main power supply.
- **Do not try to use the kettle with any other base than the one provided.**
- Do not attempt to boil any liquid other than water in your kettle. This could result in damage to the appliance or injury.


- Do not overfill the kettle. Maximum mark is indicated on the water gauge.
- **Do not connect the appliance to a power supply if the power cord, base or kettle itself appears damaged.**
- Never touch the hot kettle surface, always use the handle when using it.
- Ensure the lid is closed when boiling your kettle to prevent water splashing out and causing injury. Scalding may occur if the lid is removed during the brewing cycles.
- Ensure the kettle and base are placed on a firm, level surface and cannot fall into water.
- If the base or connector becomes wet, disconnect from the power supply and dry the base and surface underneath with a dry cloth or tea towel before resuming normal use.
- After having disconnected the power plug and after the appliance has cooled down, the appliance must be cleaned only with a non-abrasive, slightly dampened cloth, adding a few drops of neutral, non-aggressive detergent
- In the event that you decide to dispose of the appliance, we advise you to make it inoperative by cutting off the power cord. We also recommend that any parts that could be dangerous be rendered harmless, especially for children, who may play with the appliance or its parts.
- Make sure the product is in good condition after you have removed the packing.
- Packaging must never be left within the reach of

children since it is potentially dangerous. **KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

PRIOR TO FIRST USE

- Read all instructions carefully before use.
- Before using your kettle ensure the voltage of your electricity supply is the same as stated on the rating plate on your kettle.
- Before normal use of your kettle, fill with water to the Maximum mark on the water gauge and boil. Do this three times, to remove manufacturing dust, etc.

DESCRIPTION OF THE KETTLE

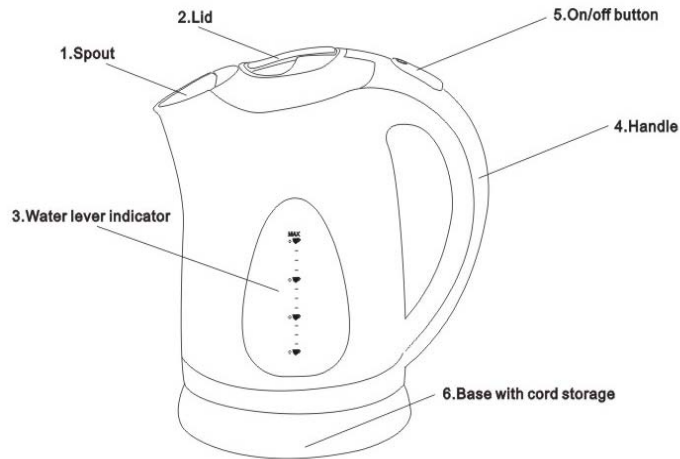

Parts Description

1. Spout
2. Lid
3. Water level indicator
4. Handle
5. On/off button
6. Base with cord storage

OPERATION INSTRUCTIONS

- Remove your kettle from the base and open the lid.
- Fill with water to the desired level.
- Never filling the kettle with too much or too little water as represented by the Maximum and Minimum markings on the water level gauge will result in poor operation, water leaking and spilling, or injury.
- Make sure the base is on a firm, level surface before placing your kettle on it. Then push the On/Off button Actuator down to On position. The indicator light will illuminate to show the kettle is switched on.
- When the water has boiled, the kettle will automatically turn itself off.
- Pour hot water carefully. Pouring too fast will result in splashing.
- You can switch on the kettle again after allowing the built-in thermal control switch enough time to cool down (15~20 seconds).

Boil-dry Protection:

This appliance is equipped with a dry boil protection switch, which prevents the kettle from overheating should it be operated with insufficient water. If this occurs, switch the kettle off at the mains and allow it to cool down before refilling and resuming normal use.

CLEANING AND MAINTENANCE

- Always disconnect the appliance from the main power supply when cleaning.
- Allow the appliance to cool completely before cleaning.
- Clean the outside of the kettle and the base by wiping with a damp cloth. To avoid scratching, only clean the outside of the kettle using a soft cloth with household detergent. Never use abrasive cleanser.
- Never immerse the kettle or the base in water or any liquid. Never place the kettle or the base in dishwasher.
- Rinse out the kettle at regular intervals and after extended non-use.
- If the inside of your kettle becomes stained, either fill with vinegar and leave to stand for 30 minutes before rinsing thoroughly with clean water or use a kettle cleaning liquid. If the staining persists, bring the vinegar to the boil, although this will leave a sharp smell, or follow instructions for heating the kettle cleaner.

- In hard water areas, it is necessary to remove scale and water deposit markings in the kettle. See Descaling for details.
- It is recommended that you clean your kettle regularly.

Descaling:

Over time, deposits may accumulate on the heating element of your kettle affecting its performance. If these deposits are not removed, damage may be caused to your kettle. Descale your kettle regularly to ensure efficient operation and long appliance life.

Descal your kettle if:

- Deposits are visible in the kettle.
- Boiling time is increased.
- The appliance operation becomes noisier

Descal the kettle by using common kettle descaler or cleaner but do not fill it to maximum. After descaling, boil your kettle several times with fresh water and rinse the kettle and its filter before normal use to remove any traces of the descaling solution and leave your kettle clean.

Trouble Shooting Guide:

- If your kettle is not operating correctly, before you return the appliance for service check that:
 - The mains supply socket is functional.

- The kettle has been descaled regularly to prevent malfunction.
- The kettle has reset after it has been dry boiled.

Warranty Information

The manufacturer provides warranty in accordance with the legislation of the customer's own country of residence, with a minimum of 1 year, starting from the date on which the appliance is sold to the end user.



The warranty only covers defects in material or workmanship.

The repairs under warranty may only be carried out by an authorized service centre. When making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted.

The warranty will not apply in cases of:

- Normal wear and tear
- Incorrect use, e.g. overloading of the appliance, use of non-approved accessories
- Use of force, damage caused by external influences

Correct Disposal of this product

 	<p>This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.</p>
--	---