



# SGH-M120 User's Guide

- Depending on the software installed or your service provider or country, some of the descriptions in this guide may not match your phone exactly.
- Depending on your country, your phone and accessories may appear different from the illustrations in this guide.

Printed in Korea  
Code No.: GH68-18086A  
English(SEA). 04/2008. Rev.1.0  
World Wide Web  
<http://www.samsungmobile.com>

**Silent mode** Press and hold # in Idle mode to disable all sounds on the phone. To exit, press and hold this key again.


**Voiceicemail server** Press and hold 1 in Idle mode to access your voicemail server.

**Keypad lock mode** Press and hold \* in Idle mode to lock the keypad. After locking, accidental key presses do not affect the phone functions. To unlock, press the **Unlock** soft key and \* key.

**SOS mode** Press the Volume keys four times when the keypad is locked to send an SOS message to preset numbers. Once the SOS message is sent, the phone will change to SOS mode and will receive calls only from the registered recipients. Upon receiving a call from the SOS message recipients, the phone will automatically answer the call. Press [S] to exit SOS mode.

## Display

Your phone is in Idle mode when you are not on a call or using a menu. You must be in Idle mode to dial a phone number.

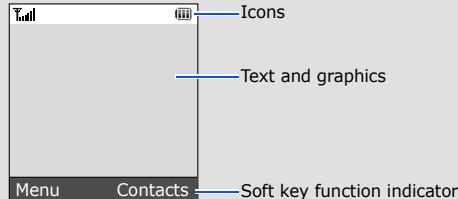


Your phone displays the following status indicators on the top of the screen:

Icon	Description	Icon	Description
	Signal strength		New message
	GPRS (2.5G) network		New voicemail
	Connecting to GPRS (2.5G) network		SOS message feature active
	Transferring data in GPRS (2.5G) network		Alarm set
	Call in progress		FM radio on
	Out of your service area or Offline mode		Silent mode (Mute)
	Connected to secured web page		Silent mode (Vibration)
	Synchronised with PC		Call ringer set to vibrate
	Call diverting active		Whisper mode, during a call
	Roaming network		Mute mode, during a call
			Battery power level

## Using the menus

In Idle mode, press the **Menu** soft key to enter the main menu.

Labels at the bottom corners of the display show the current soft key functions. Press the left soft key (C) or right soft key (D) to perform the function indicated.

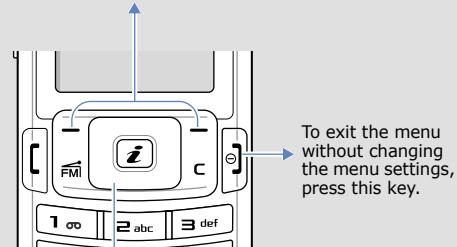

Use the Navigation keys as shortcuts to access your favourite menus. Up is fixed as a shortcut to My menu mode.

- In Idle mode, press the **Menu** soft key.
- Select **Settings** → **Phone settings** → **Shortcuts**.
- Select a key.
- Select a menu to be assigned to the key.

### To select or modify a menu or feature:


- In Idle mode, press the **Menu** soft key.
- Press the Navigation keys to reach a desired menu and then press the **Select** soft key or [I].
- If the menu contains any submenus, locate the one you want by pressing the Navigation keys. Press the **Select** soft key or [I] to enter the submenu.
- If the selected menu contains additional submenus, repeat this step.
- Press the Navigation keys to find the setting of your choice.
- Press the **Select** soft key or [I] to confirm your chosen setting.

### Shortcut numbers


You can quickly access the menu you want by using shortcut numbers. The shortcut number displays in front of the menu name in Menu mode.

## Installing the SIM card and battery

- Remove the battery cover and insert the SIM card.

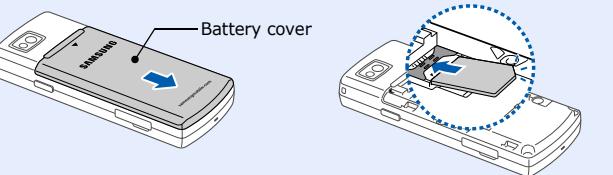


- Install the battery and reattach the cover.

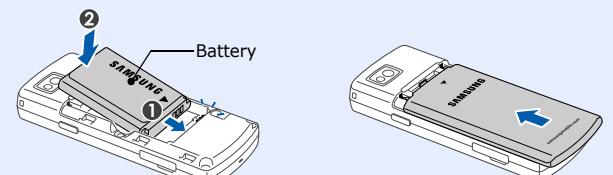


## Charging the battery

- Plug the supplied travel adapter.

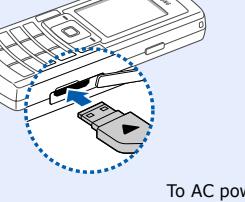

- When charging is finished, unplug the adapter.

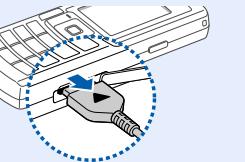

**Notes:** Do not remove the battery from the phone without unplugging the adapter first. Otherwise, the phone may be damaged.

## Phone layout and key functions

**Web access/Confirm key**  
In Idle mode, access the web browser. In Menu mode, select the highlighted option or confirm input.


**Soft keys**  
Perform functions indicated by the text above the key.

**Dial key**  
Makes and answers a call. In Idle mode, retrieves the most recent calls.

**FM radio key**  
Access the FM Radio menu.

**Keypad lock key**  
Keypad lock mode

**Alphanumeric keys**

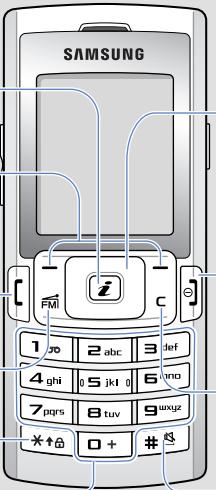

**Navigation keys**  
In Menu mode, scroll through menu options. In Idle mode, access the following menus directly:  
• Up: My menu mode  
• Down/Left/Right: your preset menus

**Power/End key**  
Turns the phone on or off when held down. Also, ends a call.

**Delete key**  
Deletes characters from the display or items in an application.

**Silent mode key**  
Silent mode

## Switching on or off the phone

- Press and hold [S] for more than one second to switch on the phone.
- To switch off the phone, press and hold [S] for more than two seconds.

## Changing the display language

- In Idle mode, press the **Menu** soft key.
- Select **Settings** → **Phone settings** → **Language**.
- Select a language.

## Making a call

- In Idle mode, enter an area code and phone number, and press [C].
- Press [S] to end the call.

## Answering a call

- When the phone rings, press the **Accept** soft key or [C] to answer a call.  
To reject the call, press [S].
- Press [S] to end the call.

## Adjusting the volume

- In Idle mode, press the **Menu** soft key.
- Select **Settings** → **Sound settings** → **Incoming call** → **Volume**.
- Press **Left** or **Right** to adjust the volume level.
- Press the **Save** soft key.

While a call is in progress, press the Volume keys to adjust the earpiece volume.

## Changing a ringtone for calls

- In Idle mode, press the **Menu** soft key.
- Select **Settings** → **Sound settings** → **Incoming call** → **Ringtone**.
- Select a ringtone and press the **Save** soft key.

## Redialling recent numbers

- In Idle mode, press [S].
- Press **Up** or **Down** to scroll to the number you want.
- Press [S] to dial the number.

## Menu map

<b>1. Call logs</b>	<b>3.5 Java world</b>	<b>6. My files</b>
1.1 Recent contacts	3.6 World clock	6.1 Images
1.2 Missed calls	3.7 Calculator	6.2 Videos
1.3 Dialled calls	3.8 Converter	6.3 Music
1.4 Received calls	3.9 Timer	6.4 Sounds
1.5 Delete all	3.10 Stopwatch	6.5 Other files
1.6 Call time	3.11 Memo	6.6 Memory status
1.7 Call costs*	3.12 SIM application toolkit*	
<b>2. Phonebook</b>	<b>4. Browser</b>	<b>7. Calendar</b>
2.1 Contact list	4.1 Home	8. FM Radio
2.2 Create contact	4.2 Enter URL	9. Settings
2.3 Group	4.3 Bookmarks	9.1 Time and date
2.4 Speed dial	4.4 Clear cache	9.2 Phone settings
2.5 My namecard	4.5 Browser settings	9.3 Display settings
2.6 Own number		9.4 Sound settings
2.7 Management		9.5 Light settings
2.8 Service numbers*		9.6 Network services
<b>3. Applications</b>	<b>5. Messages</b>	9.7 Security
3.1 Camera	5.1 Create message	9.8 Connection settings
3.2 Music player	5.2 My messages	9.9 Reset settings
3.3 Voice recorder	5.3 Templates	
3.4 Alarm	5.4 Delete all	
	5.5 Settings	
	5.6 SOS messages	
	5.7 Memory status	
		* Available only if supported by your SIM card.

## Entering text

### Changing the text input mode

- Press and hold \* to switch between T9 mode and ABC mode.
- Press \* to change case or switch to Number mode.
- Press and hold # to switch to Symbol mode.

### T9 mode

- Press 2 to 9 to start entering a word. Press each key once for one letter. The word you are entering appears on the display. It may change with each keypress. Finish entering the word before editing or deleting any keystrokes.  
Example: To enter "Hello" in T9 word mode, press 4, 3, 5, 5, and 6.
- Press # to insert a space and enter the next word.

### ABC mode

Press the keys labelled with the letter you want once for the first letter, twice for the second letter, and so on.

For example, press 2 three times to enter "C" and 5 two times to enter "K".

## Number mode

Press the keys corresponding to the digits you want.

## Symbol mode

Press the keys corresponding to the symbol you want and press the **OK** soft key. You can press **Up** or **Down** to display more symbols.

## Tips for entering text

- To move the cursor, press the Navigation keys.
- To delete characters one by one, press **C**. To delete all of the characters, press and hold **C**.
- To insert a space between characters, press **#**.
- To change case in T9 mode or ABC mode, press **\***.
- To enter punctuation marks in T9 mode or ABC mode, press **1**.

## Sending an SMS message

- In Idle mode, press the **Menu** soft key.
- Select **Messages** → **Create message** → **Text message**.
- Enter the message text.
- Press the **Options** soft key and add items using the following options:
  - Add image**: add images.

Feature	Description	Select
Use the SIM service	Use a variety of additional services offered by your service provider. Depending on your SIM card, this may available but labelled differently.	Menu > Applications > SIM application toolkit
Home	Connect your phone to the network and load the homepage of the wireless web service provider.	Menu > Browser > Home
Enter URL	Enter a URL address in order to quickly access web pages.	Menu > Browser > Enter URL
Bookmarks	Save URL addresses in order to quickly access web pages.	Menu > Browser > Bookmarks
Clear cache	Clear the cache, which is a temporary memory site that stores recently accessed web pages.	Menu > Browser > Clear cache
Browser settings	Select a connection profile to be used for accessing the wireless web.	Menu > Browser > Browser settings
Send SMS or MMS	Create and send messages to other mobile phones.	Menu > Messages > Create message > Text message or Multimedia message
Access SMS or MMS	Access messages that you have received, sent, or that you have failed in sending.	Menu > Messages > My messages

## Add animation

- Add animation**: add emoticons or animations.
  - Add melody**: add sounds.
  - Attach**: attach a contact, calendar item, memo, or task.
- Press the **Options** soft key and select **Send only** or **Save and send**.
  - Enter a destination number.
  - Press **[** to send the message.

## Quick feature reference

This section provides brief explanations of features on your phone.

Feature	Description	Select
View recent calls	View the most recent calls you have dialled, received, or missed.	Menu > Call logs > Recent contacts, Missed calls, Dialled calls, or Received calls
Delete recent calls	Delete the call logs in each call type, or all logs at once.	Menu > Call logs > Delete all
Call time display	View the duration of recent calls you have dialled and received. Also reset the time counter.	Menu > Call logs > Call time
Call cost display	View the cost of your calls.	Menu > Call logs > Call costs

## Find a contact

Search for contacts in Phonebook. Menu > Phonebook > Contact list

## Add a new contact

Add a new contact to Phonebook. Menu > Phonebook > Create contact

## Change properties of a caller group

Select a ringtone for incoming calls from members of a group. Also, change the group name. Menu > Phonebook > Group

## Speed dial

Assign speed dial numbers of your most frequently dialled numbers. Menu > Phonebook > Speed dial

## My namecard

Create a name card and send it to other people. Menu > Phonebook > My namecard

## Check your own phone numbers

Check your phone numbers or assign a name to them. Menu > Phonebook > Own number

## Manage contacts

Copy all contacts on the SIM card to the phone's memory, or delete all Phonebook contacts. You can also check memory information for Phonebook contacts. Menu > Phonebook > Management

## SDN (Service Dialling Numbers)

Access the list of service numbers assigned by your service provider. Menu > Phonebook > Service numbers

## Camera

Use the camera embedded in your phone to take photos and record videos. Menu > Applications > Camera

## Music player

Listen to music. Menu > Applications > Music player

## Voice memo

Record voice memos and listen to them. Menu > Applications > Voice recorder

## Alarm

Set an alarm to sound at a specific time. Menu > Applications > Alarm

## Java applications

Access the embedded Java games. Menu > Applications > Java world

## World clock

Set your local time zone and find out the current time in another part of the world. Menu > Applications > World clock

## Calculator

Perform basic arithmetic functions. Menu > Applications > Calculator

## Converter

Do conversions such as currency and temperature. Menu > Applications > Converter

## Timer

Set a period of time for the phone to count down. Menu > Applications > Timer

## Stopwatch

Measure elapsed time. Menu > Applications > Stopwatch

## Memo

Make memos for things that are important and manage them. Menu > Applications > Memo

## Privacy lock

Lock access to messages, files, or all menu functions on the phone, except for call functions. Menu > Settings > Security > Privacy

## SIM lock

Set the phone to work only with the current SIM card by assigning a SIM lock password. Menu > Settings > Security > SIM lock

## Fixed dialling mode

Set the phone to restrict calls to a limited set of phone numbers, if supported by your SIM card. Menu > Settings > Security > Fixed dialling mode

## Change PIN2 code

Change your current PIN2, if supported by your SIM card. Menu > Settings > Security > Change PIN2 code

## Mobile tracker

Track your phone when it is stolen or lost. When someone tries to use your phone with other SIM card, the phone will automatically send the preset tracking message to your family or friends. This feature may be unavailable due to certain features supported by your service provider. Menu > Settings > Security > Mobile tracker

## Connection settings

Create and customise the profiles containing the settings for connecting your phone to the network. Menu > Settings > Connection settings

## Reset the phone

Reset the phone to the factory default settings. Menu > Settings > Reset settings

## Sensible use

Use only in the normal position (held to your ear). Avoid unnecessary contact with the antenna when the phone is switched on.

## Emergency calls

Key in the emergency number for your present location, then press **[**. Do not end the call until given permission to do so.

## Small children and your phone

Keep the phone and all its parts including accessories out of reach of small children.

## Accessories and batteries

Use only Samsung-approved batteries and accessories, such as headsets and PC data cables. Use of any unauthorised accessories could damage your phone and may be dangerous.

**CAUTION** Risk of explosion if a battery is replaced by a substandard type.  
Dispose of used batteries according to the instructions.

 At very high volume, prolonged listening to a headset can damage your hearing.

## Qualified service

Only qualified service personnel may repair your phone.

## Correct disposal of this product

Only qualified service personnel may repair your phone.

## SAR information

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the European Union (EU) Council. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on the safety standards that were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies.

The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless phones employs a unit of measurement known as Specific Absorption Rate (SAR). The SAR limit set by the EU Council is 2.0 W/kg. The highest SAR value for this model phone was 0.797 W/kg.

## SAMSUNG ELECTRONICS

## SAMSUNG

## Declaration of Conformity (R&TTE)

Samsung Electronics

declare under our sole responsibility that the product

GSM Mobile Phone : SGH-M120

to which this declaration relates, is in conformity with the following standards and/or other normative documents:

**SAFETY** EN 60950-1 : 2001

**EMC** EN 301 489-1 V1.5.1 (11-2004)

EN 301 489-7 V1.2.1 (08-2002)

**SAR** EN 50360 : 2001

EN 62209-1 : 2006

**RADIO** EN 301 511 V9.0.2 (03-2003)

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex IV of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

BABT, Balfour House, Churchfield Road,

Walton-on-Thames, Surrey, KT12 2TD, UK\*

Identification mark: 0168

The technical documentation kept at :

Samsung Electronics QA Lab.

which will be made available upon request.

(Representative in the EU)

Samsung Electronics Euro QA Lab,

Blackbushe Business Park, Saxony Way,

Yateley, Hampshire, GU46 6GG, UK\*

2008.02.27

(place and date of issue)

(name and signature of authorised person)

\* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your phone.

CE 0168

X. C. Park

Yong-Sang Park / S. Manager

(name and signature of authorised person)