


pelouze®

ELECTRONIC WEIGHING INSTRUMENTS

OPERATOR'S MANUAL

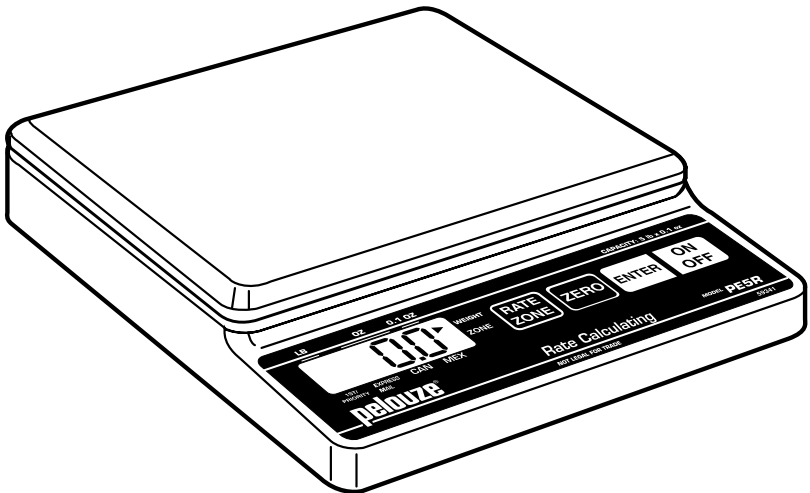

MODEL NO. PE5R
5 lb. Capacity



Envelopes/Small Packages

Please take a few minutes to read this Operator's manual so that you can become acquainted with the proper usage and special features of your **PELOUZE® DIGITAL SCALE**.

CONGRATULATIONS

Thank you for selecting a Pelouze® electronic weighing instrument. With proper care and usage, its loadcell technology should provide you with trouble-free service. We know you will be happy with your selection. Its outstanding quality and dependability are backed by the reputation Pelouze® Scales have earned since 1894!

GENERAL INFORMATION

MODEL PE5R operates on one 9V Battery or 120V AC Adapter Output: 9V DC 100 mA - Pelouze Model ADPT2

- If using Battery: Battery compartment is located on underside of scale. Connect battery \pm , accordingly.
- If using Adapter: First plug into rear of scale, then into wall outlet.
- Peel off protective plastic foil on display. Place scale on a vibration free, level surface.
- Replacement postal chip can be obtained from your dealer whenever postal rates change.

RATES CALCULATED

US Destinations

- 1st Class Mail up to 13 oz*
- Priority Mail from 13 oz to 5 lbs (consult your USPS rate guide for Priority rates under 13 oz).
- Express Mail.

International Destinations

- Canada Airmail Letter Post to 4 lbs.
- Mexico Airmail Letter Post to 4 lbs.

OPERATING INSTRUCTIONS

- **Press ON/OFF**, (without weight on platform): Display will show "PE5R" briefly and then "0.0" ounces. (When using Adapter, if Display fluctuates between "-----" and "0.0", reverse Adapter in wall outlet.

YOU CAN NOW WEIGH OBJECTS ON SCALE.

- **Press ZERO** TO RETURN DISPLAY TO 0.0 oz. BEFORE EACH WEIGHING AND BEFORE PLACING MATERIAL ON PLATFORM.
- Arrow in readout indicates mode displayed. **Press RATE/ZONE** until desired rate mode is indicated.
- **If the 1st Class package/letter is over 13 oz**, the scale will default to Priority Mail, When using Priority Mail a destination zone must be entered. The display will read "Ent". **Press ENTER** and then select the destination zone by toggling with the **RATE/ZONE** key. Press the **Enter** key when the correct zone is located. You will need an Official National Zone Chart from the United States Postal Service (visit your local post office or their web site: <http://postcalc.usps.gov/zonecharts>) to ensure the correct zone is being used.

NOTE: After Scale has been turned off and then again turned on, display will return to "0.0" in ounce mode.

Press ON/OFF to turn off Scale.


ZERO ADJUST (TARE): ZERO may be used to return Display to zero. **ZERO** is used to "tare" or offset weight:

- Place empty container on scale. **Press ZERO**.
- Place material to be weighed in container. Display will show NET WEIGHT of material in container.
- **Press ZERO** each time additional material is added to container. (Total not to exceed 5 lb. capacity of Scale).
- "-----" appearing in display indicates minus weight. **Press ZERO** to return display to zero.

NOTE: TO CLEAR ANY MODE, OR TO RETURN TO ZERO, REMOVE MATERIAL AND PRESS "ZERO"

* A nonmachinable surcharge will apply to letters weighing under 1 oz that are smaller than 5"L x 3 1/2"H or larger than 11 1/2"L x 6 1/8"H. There are additional criteria that will cause your letter to incur the nonmachinable surcharge. Please consult your USPS Service Guide or www.usps.com for complete details.

EASY TO READ DISPLAY

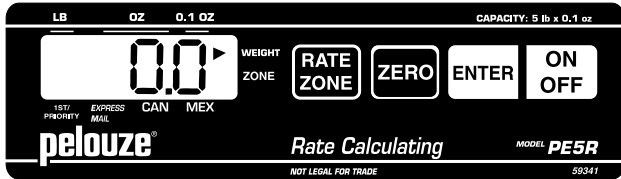

FEATURES

AUTOMATIC OFF: Scale will automatically turn off after approximately 30 seconds of inactivity (no weight change). This prolongs Battery life.

To deactivate Automatic Off: While scale is off, PRESS and hold **RATE/ZONE**. While still holding **RATE/ZONE** press **ON/OFF** until "SHOF" appears briefly in Display and automatically goes into normal weighing mode.

To reactivate Automatic Off: PRESS **ON/OFF** to turn off scale. Press **ON/OFF** again to turn the scale back on and Automatic Off will be activated.

OVERLOAD WARNING: "□□□□" appearing in the upper half of Display indicates you have exceeded Scale capacity.

LOW BATTERY WARNING: Blinking "bAtt" appearing on Display indicates low battery.

ERROR MESSAGES

If the display shows "Err1": The rate chip is missing, damaged, defective, or inserted in the wrong direction. Verify that the rate chip was inserted in the proper direction. If this does not correct the error message, return the scale for repair (see Warranty for details).

If the display shows "CNT0": The scale's calibration needs to be restored. Contact Pelouze Technical Support at 1-800-638-3722 for instructions.

CARE & CLEANING

Your PE5R is a precision instrument, engineered to give years of valuable service. Care should be given to maintain its accuracy and appearance. *PROTECT YOUR SCALE FROM:*

- Being Dropped
- Excessive weight
- Liquid Spills
- Shock Loading
- Extreme Temperatures
- Other Abuses

This scale is easily cleaned by wiping with a damp, soft cloth and mild nonabrasive detergent.

SPECIFICATIONS

DIMENSIONS: 5 7/8" x 8" x 1 1/2"

PLATFORM SIZE: 5 7/8" x 5 7/8"

CAPACITY: 5 lb. x 0.1 oz.

MODEL NO.: PE5R

POWER SOURCE: 9V Battery or Pelouze ADPT2 Adapter with 120V AC 60Hz 3W input/ 9V DC 100mA Output

1 YEAR LIMITED WARRANTY

What does this Warranty Cover?

Pelstar LLC scales are warranted from date of purchase against defects of materials or in workmanship for a period of 1 year. If product fails to function properly, return the product, prepaid and properly packed to Pelstar. If manufacturer determines that a defect of material or in workmanship exists, customers' sole remedy will be repair or replacement of scale at no charge. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. All parts including repaired and replaced parts are covered only for the original warranty period.

Who is Covered?

The original purchaser of the product must have proof of purchase to receive warranty service. Pelstar dealers or retail stores selling Pelstar products do not have the right to alter, or modify or any way change the terms and conditions of this warranty.

What is Excluded?

Your warranty does not cover obsolete dials or chips due to postal rate changes, normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instruction, abuse including tampering, damage in transit, or unauthorized repair or alternations. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province or jurisdiction to jurisdiction.

To get Warranty Service

Make sure you keep your sales receipt or document showing proof of purchase.

Call 1 (800) 638-3722 to receive a return authorization. Attach proof of purchase to your defective product along with your name, address, daytime telephone number and description of the problem. Carefully package the product and send with shipping and insurance prepaid to:

Pelstar LLC
Attention: R/A# _____
Repair Department
7400 W. 100th Place
Bridgeview, IL 60455

If your scale is not covered by warranty, or has been damaged, an estimate of repair costs or replacement costs will be provided to you for approval prior to servicing or replacing.



Technical Service>Returns: 800-638-3722

Customer Service: 800-654-8330

Postal Rate Increase: 888-807-2253

www.Pelouze.com

Pelstar LLC

Bridgeview, Illinois 60455

All rights reserved

Pelouze® is a registered trademark of Pelstar LLC

Made in China to our exact specifications

03.03

59341