



## TABLE OF CONTENTS

<b>What is Kiddie Jam?</b> .....	1
What's in the box? .....	1
Kiddie Jam Hardware .....	3
Kiddie Jam Remote Controller .....	4
<b>Setting Up Kiddie Jam</b> .....	5
Turning On and Off Your Kiddie Jam .....	5
<b>Kiddie Jam Launcher</b> .....	6
<b>Let's Sing!</b> .....	6
Song Search .....	7
Using Song Number .....	7
Using Song Title .....	7
Using Song List .....	8
Favorites .....	8
Add to Favorites .....	8
Remove from Favorites .....	9
Reserved Songs .....	9
Reserve/ Priority Reserve a Song .....	9
Cancel Reserved Song .....	9
Sound Effects .....	10
Video Backgrounds and Screensaver .....	10
Adjusting Tempo, Microphone Volume, and Key .....	11
Training Songs .....	13
Song Updater .....	13
How to Exit .....	14
<b>Let's Watch!</b> .....	15
Play Video .....	15
Video Player .....	15
Favorites .....	16
Add to Favorites .....	16
Remove from Favorites .....	17
Video Info .....	17
Scan External Storage .....	18
How to Exit .....	18
<b>Let's Play!</b> .....	19
<b>Menu</b> .....	19
Passcode .....	20
Create New Passcode .....	20
Change Passcode .....	20
Wi-Fi .....	21
Connect to Wi-Fi .....	21
Disconnect/Turn Off Wi-Fi .....	22
Internet .....	22
Manage Content .....	23
Add Content .....	23
Delete Contents .....	24
Soft Applications .....	24
AppMarket .....	25
TV Resolution .....	26

## What is Kiddie Jam?

KIDDIE JAM is your kid's first musical multimedia box. This unique device is not just the usual sing-along system but it has multimedia capabilities that allow your kids to watch videos and play exciting apps that will surely entertain them. It has child-appropriate contents to ensure that parents don't have to worry about improper visuals that their kids might see.



### Features:



KIDDIE JAM has over hundreds of songs to choose from. Keep them musically inclined as they sing their hearts out to the tune of nursery rhymes and famous modern songs.



KIDDIE JAM offers Wi-Fi connectivity that lets you stream, browse and download more applications on the internet.



KIDDIE JAM is especially made for youngsters. It embodies a warm, colorful interface with cute characters to encourage engagement and ensure a cheerful, positive mood while using this device.



KIDDIE JAM makes your event more special by allowing you to play and set your kiddies' video as a background while they sing.



KIDDIE JAM is compact and portable. Take it to parties and special events and let your kiddies shine like a real star.

## What's in the Box?



① Kiddie Jam Box



② Remote Controller  
\*actual item may vary



③ RCA to 3.5mm Phone Jack Cable



④ Power Adapter



⑤ User Manual




⑥ Songbook




⑦ Warranty Card

## Kiddie Jam Hardware

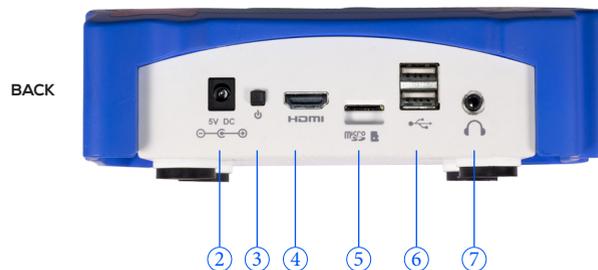

PART	DESCRIPTION
1. Microphone Port	Connect microphone
2. DC Input Jack	Connect power adapter
3. Power Button	Turn On/Off Kiddie Jam
4. HDMI Port	Connect HDMI cable to bigger high-resolution screen for display
5. Memory Card Slot	Place external micro SD card as content storage
6. USB Port	Connect USB peripheral devices such as external storage and keyboard
7. Speaker Out	Connect to speakers

## Kiddie Jam Remote Controller

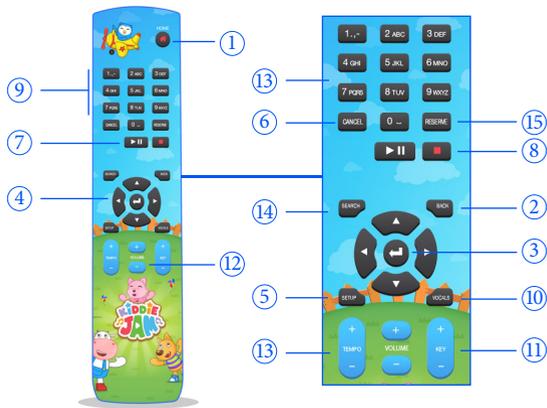

BUTTONS	DESCRIPTION
1. Home	Exit application then return to Launcher
2. Back	Return to previous screen
3. Enter	Select
4. Directional Arrows	Move
5. Setup	Display Song Options menu (SFX, BGV, Mic Volume, Screensaver, Volume)
6. Cancel	Cancel reserved songs/ letter input
7. Play/Pause	Play song and videos, Pause video
8. Stop	Stop song and video play
9. Alphanumeric	Song search via song number or song title
10. Vocals	Enable/disable mp3 accompaniment for Training songs
11. Key	Increase/decrease pitch
12. Volume	Increase/decrease audio sound
13. Tempo	Increase/decrease song speed/rhythm
14. Search	Display Song list menu
15. Reserve	Reserve song

## Setting Up Kiddie Jam


### Kiddie Jam Installation



### Turning On and Off Your Kiddie Jam

Make sure that all peripheral devices (i.e. TV screen/monitor, speakers, etc.) are powered ON before switching on the device.

Press and hold for 2-3 seconds the Power button located at the rear portion of Kiddie Jam. The LED in front of the device will light up when the device is ready. The monitor must display the boot-up screen followed by Kiddie Jam animation screen. To turn off the device, press and hold the Power button again. A shutdown confirmation screen will display. Select POWER OFF to turn off the device.

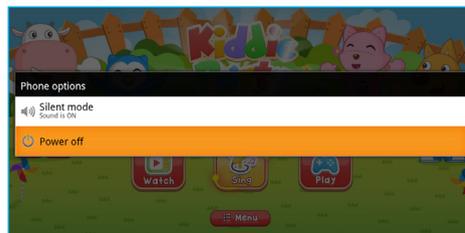

## Kiddie Jam Launcher

Kiddie Jam Home screen houses the three main applications and device settings. The main applications are Sing (sing-along), Watch (video book library), and Play (3rd party hub).



## Let's Sing!

Kiddie Jam is dedicated to bring out the artist in your child and one way of doing that is through singing.

The main interface of Sing app displays the Song list view of the following categories: All Song, Favorites, Nursery, Training Songs, and Pop Songs.



## Song Search

Kiddie Jam is loaded with hundreds of songs that will surely delight your kids and the whole family. Searching for songs is simple and easy:

### A. Using Song Number



1. Use the numeric keys to press the song number based on the songbook. A new window should display the number pressed and its search result.
2. Select **PLAY** to automatically play the chosen song. You may directly play the song using the hard button in the remote if there are no reserved songs. If there is a song currently playing or there are reserved songs, select **RESERVE** button.

### B. Using Song Title



1. Select a category from the Song list using directional arrows.
2. Press **ENTER** or down arrow to go to the Search bar.
3. Use the alphanumeric key on the remote to key-in the title of the song you want to play. The search results should display below the Search bar.
4. Use the directional arrows to select the song title from the search result.

### C. Using Song List



1. Press Search button on the remote to display Song list while song is playing.
2. Select a category from the Song list using directional arrows.
3. Press **ENTER** or down arrow to go to the Search bar. Use the directional arrows to choose a song you want to play.
4. Press **PLAY** to automatically play the chosen song. You may directly play the song using the hard button in the remote if there are no reserved songs. If there is a song currently playing or there are reserved songs, press **ENTER** then select **RESERVE**.

### Favorites

Using this feature, you can add and remove your favorite songs anytime you want.

#### A. Add from Favorites

1. Select a song from the song list then press **ENTER**. A submenu screen will display.
2. Select **ADD TO FAVORITES** button. A star icon will display in the list to indicate that the song is marked as a Favorite.



NOTE: You can only add 20 songs in the Favorites list.

### B. Remove from Favorites



1. Go to Favorites list. Select the song you wish to remove then press **ENTER**. A submenu screen will display.
2. Select **REMOVE FROM FAVORITES** button. The selected song will disappear from Favorites list. The star icon will disappear when removing the song as a Favorite from All Songs list.

### Reserved Songs

Never miss a song you like because you can always reserve it using this feature. It puts your song next in line and all you have to do is wait until your chosen song plays.



#### A. Reserve/ Priority Reserve a Song

1. Select a song from the song list then press **ENTER**. A submenu screen will display.
2. Select **RESERVE** or **PRIORITY RESERVE** button. The song number will display on the upper left section of the screen.

NOTE: You can only reserve up to 10 songs. Selecting Reserve will add the selected song on the last part of the list, while choosing Priority Reserve will put the song as the first entry in the song queue.

#### B. Cancel Reserved Song

1. Press **CANCEL** to remove the last reserved song in the list.

## Sound Effects



1. Press **SETUP** button while the song is playing. The Song Set-up menu will appear.
2. Select **SOUND EFFECTS** then press **ENTER**.
3. Press a number to play the corresponding sound effect audio.
4. Press **BACK** to return to song play.

## Video Backgrounds and Screensaver

Never have dull moments during your parties and events because Kiddie Jam's Video Background and Screensavers project colorful and exciting backgrounds. They are also customizable and you can add any background and screensaver you wish during your celebrations.



Note: Do not unmount external storage while videos are playing.

### A. Change Background Video using Default Video

1. Press **SETUP** button while the song is playing. The Song Set-up menu will appear.
2. Select **BACKGROUND** then press **ENTER**.
3. Press a number to play the corresponding video theme.
4. Press **BACK** to return to song play.

### B. Change Background Video from External Storage

1. Press **SETUP** button while the song is playing. The Song Set-up menu will appear.
2. Select **BACKGROUND** then press **ENTER**.

3. Press **No.5 (My Video)** on the remote.
4. Select the source of the video background. The chosen external storage should display the video contents.
5. Press **ENTER** to select/deselect the video to play. The selected video will have a check mark beside its title.
6. Select **CONFIRM** to play the video or **CANCEL** to return to Background options menu.
7. Press **BACK** to return to song play.

## Screensaver




1. Press **SETUP** button while the song is playing. The Song Set-up menu will appear.
2. Select **SCREENSAVER** then press **ENTER**.
3. Select the source of the video background. The chosen external storage should display the video contents.
4. Press **ENTER** to select/deselect the video to play. The selected video will have a check mark beside its title.
5. Select **CONFIRM** to play the video or **CANCEL** to return to Background options menu.

## Tempo



1. Press **TEMPO +/-** on the remote to adjust song rhythm. The Tempo control menu will display the cow's head adjusting accordingly based on the level pressed.
2. Press **BACK** to return to song play.

## Volume

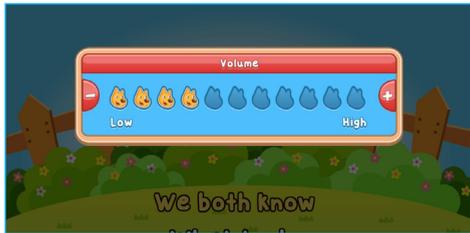

1. Press **VOLUME +/-** on the remote to adjust device audio. The Volume control menu will display the dog's head adjusting accordingly based on the level pressed.
2. From the song play mode, press **SETUP** button.
3. Select **VOLUME** then press **ENTER**.
4. Press **VOLUME +/-** or **LEFT/RIGHT** arrow buttons to adjust volume level.
5. Press **BACK** to return to song play.

## Microphone Volume



1. Press **SETUP** button while the song is playing. The Song Set-up menu will appear.
2. Select **MIC VOLUME** then press **ENTER**. The Mic Volume menu will display.
3. Press **VOLUME +/-** or **LEFT/RIGHT** arrow buttons to adjust microphone volume level.
4. Press **BACK** to return to song play.

## Key



1. Press **KEY** on the remote to adjust song pitch. The Key control menu will display.
2. Press **LEFT/RIGHT** arrows to display owl's head adjusting accordingly based on the level pressed.

## Training Song Vocals

In order for your kids to sing like a pro, they can remove the MP3 accompaniment of each song so they can practice their singing talent even more.

1. Select a song from the Training Songs list.
2. During the song play, press **VOCALS** button to enable or disable the mp3 accompaniment of the song.

## Song Updater



1. Attach the **USB Flash Drive** where the updated song package file is saved. Wait for the notification message "USB Connected" to display.
2. Press **SETUP** button then choose **UPDATE**.

Note: You can only update your song library when you are not playing a song. During the song play, the Update selection is disabled.

Select CONFIRM to start the song update. Please refrain from pressing any buttons while



the update is on-going. Wait for the notification "Update Complete" to confirm the process is finished.



### How to Exit



1. Press HOME > CONFIRM to return to Launcher.

## Let's Watch!

Kiddie Jam also works a multimedia device where you can instantly play videos. The main interface of Watch app displays the list view of the following categories: All Videos, Favorites, and External Storage.



### Play Video

1. Select a category then press ENTER or DOWN arrow button.
2. Choose a video then press PLAY or ENTER. Pressing Play button directly starts the video play while pressing Enter displays the Video Options menu.
3. Select PLAY in the Video Options menu.



### Video Player

While the video is playing, you can do the following commands:

1. Pause: press PAUSE to suspend video play then resume playing when PLAY button is pressed
2. Fast Forward: press the RIGHT arrow to move forward the video
3. Stop: press STOP to discontinue video play then return to Video Library screen
4. Volume Controls: press VOLUME +/- buttons to increase and decrease audio
5. Change Frame: press the corresponding number of video frame. To go back to the frame mode from full-screen view, just select the number of the frame you want to use.



## Favorites

You can always remember the videos you liked by putting them in your favorites tab so you can instantly check them and watch them whenever you want.

### A. Add to Favorites



1. Select a video from the list then press **ENTER**. The Video Options menu will display.
2. Select **ADD TO FAVORITES** button. A star icon will display on the thumbnail to indicate that the video is marked as a Favorite.




**NOTE:** You can only add 8 videos in the Favorites list.

### B. Remove from Favorites




1. Go to Favorites list. Select the video you wish to remove then press **ENTER**. The Video Options menu will display.
2. Select **REMOVE FROM FAVORITES** button. The selected video will disappear from Favorites list. The star icon will disappear when removing the song as a Favorite from All Videos list.

## Video Info

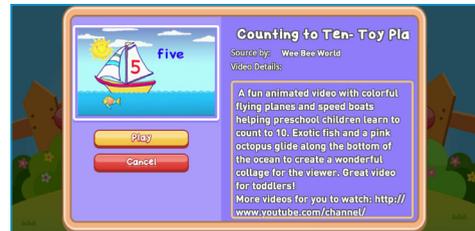

1. Select a video then press **ENTER**. A submenu screen will display.
2. Select **VIDEO INFO** then press **ENTER**. It will display the Video Info screen with the title, brief description, and video controls (Play or Cancel).
3. Press **RIGHT** arrow to go to the scrollable description of the video.

## Scan External Storage

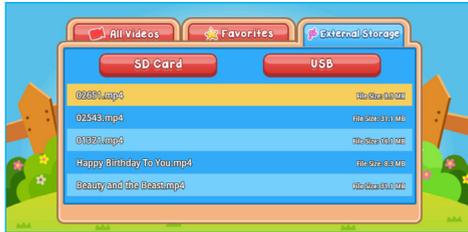

1. From the External Storage list, press **ENTER** or **DOWN** arrow button.
2. Select the video source (USB or SD Card) then press **ENTER**. It will display the available videos from the chosen external storage.
3. Select a video then press **ENTER/PLAY**.

## How to Exit

1. Press **HOME** > **CONFIRM** to return to Launcher.

## Let's Play!

Kids love to play and have fun and that is why it is vital that we include the Play operation in this multimedia device. It has fun and educational apps that your kiddies will surely enjoy. The Play section houses all third party applications of Kiddie Jam. The applications are divided into four categories: Stories, Numbers, Language, and Games.



1. Plug the mouse on the USB port of the device. There should be a cursor displayed on the screen to indicate that the Kiddie Jam detected the USB peripheral device.
2. You may navigate the Play main interface using the mouse or remote.

**NOTE:** You must use the mouse to play the applications. To manage the applications per category, refer to Manage Contents > Sort Apps.

## Menu

The Menu provides access to Passcode, Wi-Fi, Internet, Manage Content, AppMarket, and TV Resolution.



## Passcode

### A. Create New Passcode



1. Select the **MENU** button from the Launcher then press **ENTER**. The Create Passcode dialog box will appear.
2. Fill-out the information needed. The passcode should be 6-8 numeric characters.
3. Select **CONFIRM** button to set passcode.

### B. Change Passcode



1. Select the **MENU** button from the Launcher then press **ENTER**. The Log-in dialog box will appear.
2. Enter your numerical passcode then select **CONFIRM**. The Menu Options screen will display.
3. Select **PASSCODE** then press **ENTER**.
4. Input the information needed then press **CONFIRM**.

## Wi-Fi

### A. Connect to Wi-Fi



1. Select the **MENU** button from the Launcher then press **ENTER**. The Log-in dialog box will appear.
2. Enter your numerical passcode then select **CONFIRM**. The Menu Options screen will display.
3. Select **Wi-Fi** then press **ENTER**.
4. Choose a network using up & down arrow keys then press **ENTER**. If the network has no password, the device will establish the connection. However, if the network has a password, the Wi-Fi password text field will appear.
5. Input the password in the text field using the:

a. alphanumeric buttons on the remote or



b. select the keyboard icon to display the visual keyboard or enable USB keyboard input.




6. Select **CONNECT**. The chosen network will show "Connected" as its status once the connection is set.

#### B. Disconnect / Turn Off Wi-Fi



1. Select the **MENU** button from the Launcher then press **ENTER**. The Log-in dialog box will appear.
2. Enter your numerical passcode then select **CONFIRM**. The Menu Options screen will display.
3. Select **WI-FI** then press **ENTER**.
4. Press **#2** numerical button on the remote to turn off Wi-Fi connection.

#### Internet

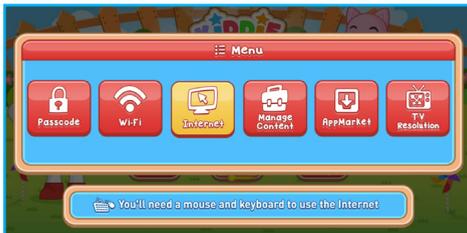

1. Select the **MENU** button from the Launcher then press **ENTER**. The Log-in dialog box will appear.
2. Enter your numerical passcode then select **CONFIRM**. The Menu Options screen will display.
3. Select **INTERNET** then press **ENTER**.

**NOTE:** Plug the mouse and USB keyboard to navigate the browser.

#### Manage Content



1. Select the **MENU** button from the Launcher then press **ENTER**. The Log-in dialog box will appear.
2. Enter your numerical passcode then select **CONFIRM**. The Menu Options screen will display.
3. Select **MANAGE CONTENT** then press **ENTER**. The Manage Content Settings screen will display.

#### A. Add Contents



1. From the Manage Content Settings screen, select **ADD CONTENT** then press **ENTER**.
2. Select the source of content (USB or SD Card) you want to add. It will display the list of external storage.
3. Choose the content/s you wish to add using arrow keys then press **ENTER** to select. A check mark will display on the tick box corresponding to the contents selected.
4. Select **CONFIRM** to start importation.

**NOTE:** Do not unmount external storage during the installation process to avoid data loss.




### B. Delete Contents

1. From the Manage Content Settings screen, select **DELETE CONTENT** then press **ENTER**.
2. Select the content category then press **ENTER**.
3. Choose the contents to delete using arrow keys then press **ENTER** to select. A check mark will display on the tick box corresponding to the contents selected.
4. Select **CONFIRM**.



### AppMarket

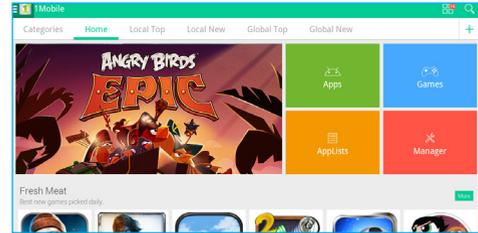

### Sort Applications



1. From the Manage Content Settings screen, select **SORT APPS** then press **ENTER**.
2. Select the app category where you want to manage then press **ENTER**.  
NOTE: All imported applications will fall under Uncategorized section by default.
3. Select an application you wish to move then press **ENTER**.
4. Choose what category where you want to place it then press **ENTER**.

1. Select the **MENU** button from the Launcher then press **ENTER**. The Log-in dialog box will appear.
2. Enter your numerical passcode then select **CONFIRM**. The Menu Options screen will display.
3. Select **APPMARKET** then press **ENTER**.

**NOTE:** Plug the mouse and USB keyboard to navigate the application market.

## TV Resolution



1. Select the **MENU** button from the Launcher then press **ENTER**. The Log-in dialog box will appear.
2. Enter your numerical passcode then select **CONFIRM**. The Menu Options screen will display.
3. Select **TV RESOLUTION** then press **ENTER**.
4. Choose the appropriate display resolution of your television from the list.

