

USER MANUAL

High Definition HDD Multimedia Player

Include

- ☆ Feature
- ☆ Installation Guide
- ☆ Management Guide



CONTENTS

1. Before You Get Started.....	3
1.1 SAFTY INSTRUCTION.....	3
1.2 TAKE A LOOK TO THE MEDIA PLAYER.....	4
1.3 Specification.....	5
1.4 Package Contents.....	8
2. EASY INSTALLATION GUIDE.....	9
2.1 Front / Back Panel Introduce.....	9
2.2 Hardware Installation.....	11
3. USING MEDIA PLAYER.....	15
3.1 REMOTE CONTROL INTRODUCE.....	15
3.2 GETTING STARTED.....	22
3.3 Format Hard Disc.....	26
3.4 The REC List.....	30
3.5 Timer Record Menu.....	31
3.5.1 CREATING A NEW SCHEDULE.....	31
3.5.2 EDITING SCHEDULES	33
3.5.3 DELETING SCHEDULES	34
3.5.4 VIEWING SCHEDULE STATUS VIEWING SCHEDULE STATUS	35
3.5.5 VIEWING RECORDING HISTORY	36
3.6 Setup Menu.....	37
3.6.1 CHANGING SYSTEM SETTINGS	37
3.6.2 CHANGING VIDEO SETTINGS	41
3.6.3 CHANGING AUDIO SETTINGS	41
3.6.4 CHANGING RECORD SETTINGS.....	46
3.6.5 CHANGING PHOTOS SETTINGS.....	48

3.6.6 CHANGING NETWORK SETTINGS.....	51
3.7 Browser Menu.....	53
3.7.1 BROWSING MUSIC.....	55
3.7.2 BROWSING PHOTOS.....	56
3.7.3 BROWSING MOVIES.....	57
3.7.4 BROWSING ALL.....	58
3.7.5 File Edit Menu	59
3.8 File Copy Menu.....	62
STEP 1. SELECT SOURCE DEVICE.....	63
STEP 2. SELECT DESTINATION DEVICE.....	64
STEP 3. SELECT COPY FILES OR FOLDERS.....	65
STEP 4. SELECT THE FOLDERS OF DESTINATION.....	66
4. Utilities.....	67
■ TranscodeServer.....	67

1. Before You Get Started

1.1 Safety Instruction

1. Always unplug the power cable before inserting Hard Drive.
2. A power supply with a different voltage rating will damage and make void of this product warranty.
3. Keep this equipment away from humidity or any type of moisture.
4. Do not drop or shack the device.
5. Do not press or put any weight on the device.
6. Do not clean the device with alcohol, thinner or benzene.

1.2 Take a look to the Media Player

Front Panel



Rear Panel



1.3. Specification:

■ Hardware Spec

	Feature	Description
Main Board	Main Chipset	RTD1262 256pin LQFP
System I/O	Ethernet	x 1
	IrDA Receiver	x 1 (for Remote Controller)
	USB Device	x 1 (USB type B USB connector)
	Power Jack	12V Adaptor
AV I/O	HDMI Output	X 1
	CVBS Input+ L/R	3 in 1
	YPbPr Output	RCA x 3
	CVBS Output+ L/R	RCA x 3
	Fiber Optical Output	x 1
	Co-axial Output	x 1 RCA
Front Panel	LED 1	Power (Red & Green)
	LED 2	Recording
	LED 3	One Touch Copy (Card Reader to HDD)
	Buttons(9)	Power/One Touch Copy/ Up/Down/Right/Left/Enter(play)/Stop/Return(Guide)
Option Board & I/O	USB Host	X 1 (Connect other device)
	Card Reader	x 1 (SD /SDHC/ MS)

■ Wireless Dongle: (Option)

External Option Device	Wireless USB Dongle	802.11g Wireless USB Dongle
-------------------------------	---------------------	------------------------------------

■ Software Spec

	Feature	Description
Playback	Video	
	High Definition Video Playback	MPEG1 (DAT, MPG), MPEG2 (VOB, MPG, TS), MPEG4 (AVI, DIVX, XVID), ISO, IFP up to 1080i output
	Trick Play	FF/FR: 1.5, 2, 4, 8, 16, 32x Slow: 3/4, 1/2, 1/4, 1/8, 1/16x
	Smooth Playback	3/4, 1/2, 1.5, 2x Video and Audio smooth playback *The 1.5 and 2x audio in HD Movie will be turned off
	Zoom in	2, 3, 4, 8x
	DivX subtitle Supported	SRT, SMI, SUB, SSA
	CM skip	step forward 30sec
	Instant Replay	step backward 10sec
	Photo	
	High Definition Photo Playback	JPG/JPEG/BMP
	Preview, Rotate and Zoom in	2, 4, 8, 16x with high speed & high resolution
	Transition effect	Cross fade, Left to right, top to button, waterfall, snake, dissolve, Strip Left Down, All Effect Shuffle
	Music	
	WMA, AAC,OGG	
	Trick Play	FF/FR: 2, 4, 8, 16, 32x
	Music and Photo Mix play	Music on Photo's Directory/Play List
	Music Play List	yes
	Screen Saver	yes
	One Touch Copy	Copy Photos from USB mass storage and memory card
	Ethernet	Streaming playback (video, audio, image) via Network
Realtime Transcoding	Transcoding on PC (RM, RMVB, WMV, H.264...) and real-time streaming playback via network	

Recording	Feature	Description
-----------	---------	-------------

	One Touch Record	Record to FAT32 HDD
	Recording Quality Adjustable	HQ/SP/LP/EP/SLP
	Recording	HDD & USB selectable
	Timeshift	HDD
	Schedule Recording	The Schedule Recording menu allows you to create, edit and delete recording schedules and view all schedule status and history.

	Feature	Description
System	OSD	Scrolling Text or File Name
	Partition	NTFS+FAT32
	Multi-Language UI	English, español, français, Deutsch,italiano,Dutch
	FAT32	for Recording & File copy
	NTFS	for Multi-media file storage (only read)
	TV System	NTSC/480P/PAL/576P/720p@60, 50HZ/1080i@60, 50HZ
	File Copy	HDD<->Net , USB<-> HDD, USB<->Net

VIDEO RECORDING MODE				
Mode	DVD	80 GB	120 GB	160 GB HDD
HQ	1hr	16hrs	24hrs	33hrs
SP	2hrs	32hrs	48hrs	66hrs
LP	3hrs	48hrs	72hrs	99hrs
EP	4hrs	64hrs	96hrs	132hrs
SLP	6hrs	96hrs	144hrs	198hrs

 
Note: The specifications and design of this product are subject to change without notice.

 
 
1.4 Package Contents:

- Multimedia-Player Unit x 1
- DC Power Adapter x 1
- AV Cable x 2 -(RCA x3 , 3 IN 1)
- USB Cable x1
- YPbPr Cable x1
- Remote Control x1
- Tools_CD x1
- User Manual x1
- Plastic Stand x1
- Screw Package

2. Easy Installation Guide

2.1 Front / Back Panel Introduce

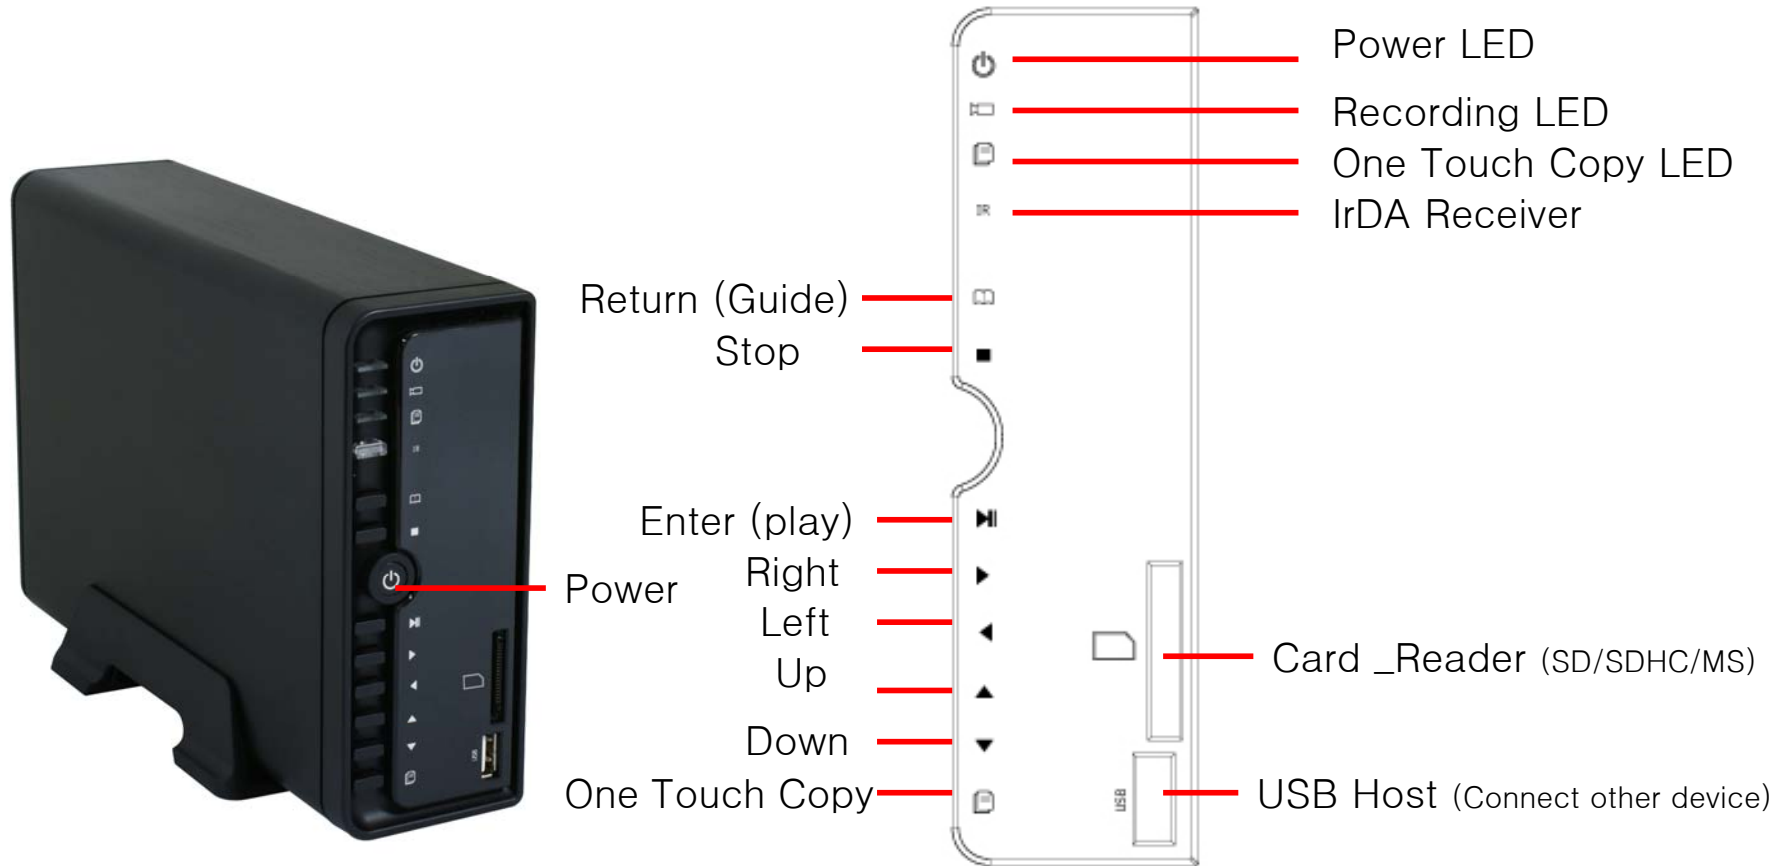


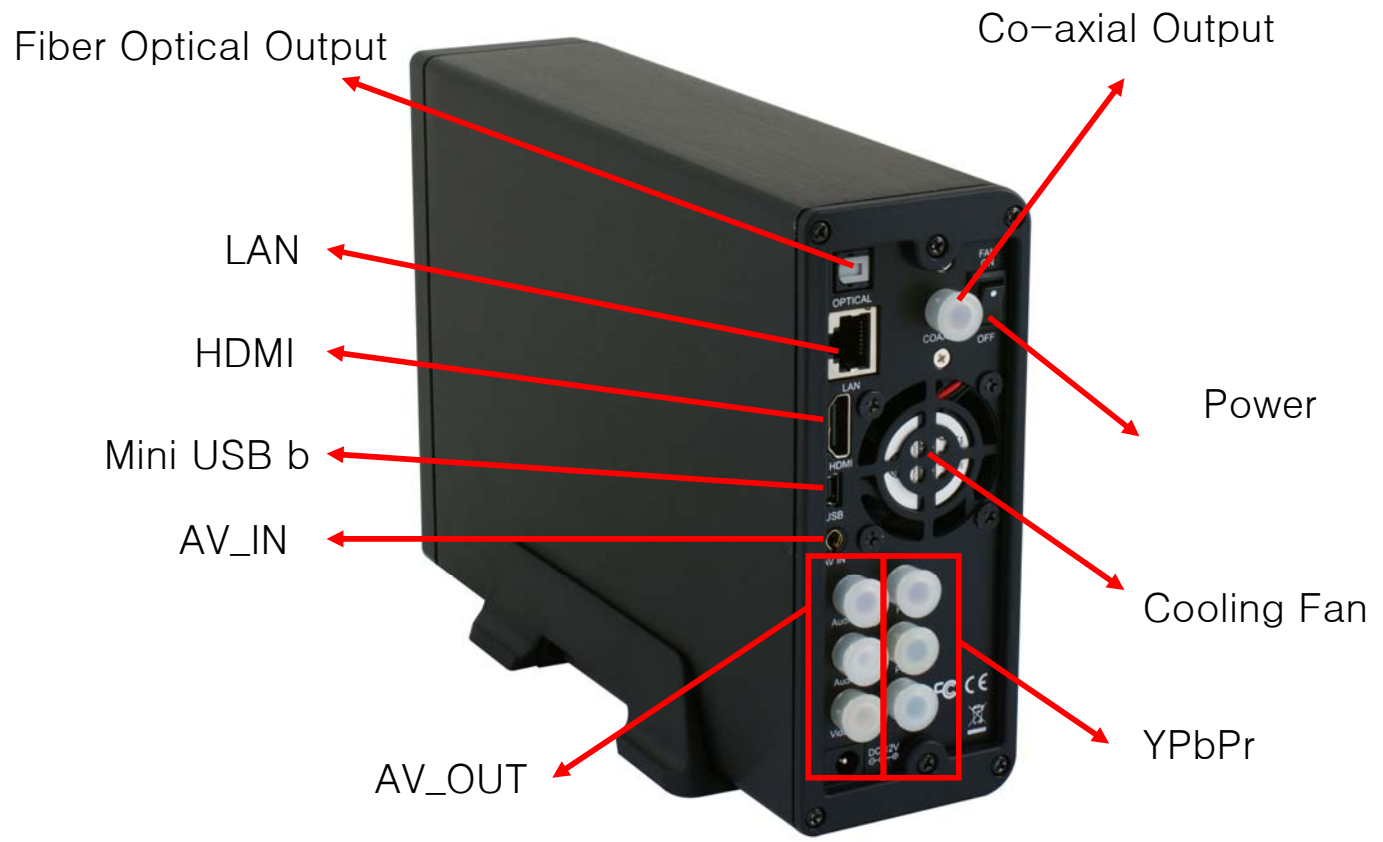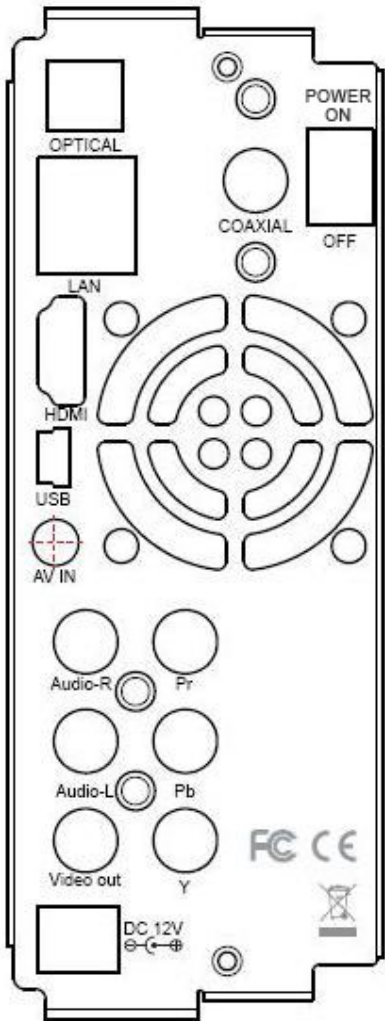


2.2 Hardware Installation

■ Install a Hard Disk Drive for the Device

 
1. Unscrew the 2 screws and pull out the tray.

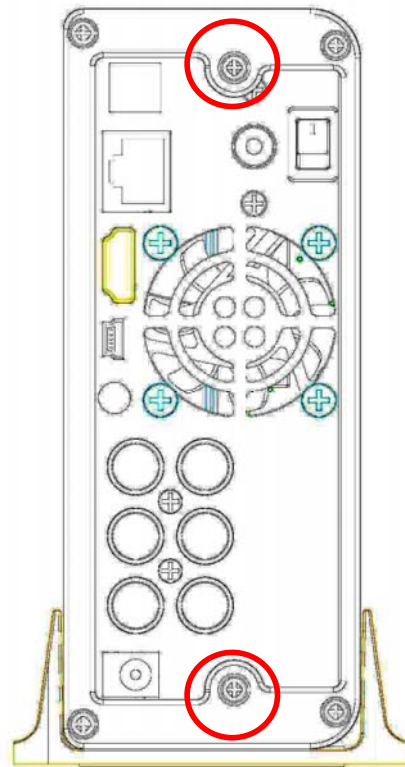

 2. Place the Hard Disk drive evenly on the hard disk drive base.
Slides the Hard Drive to connect to the connector cable on the device.

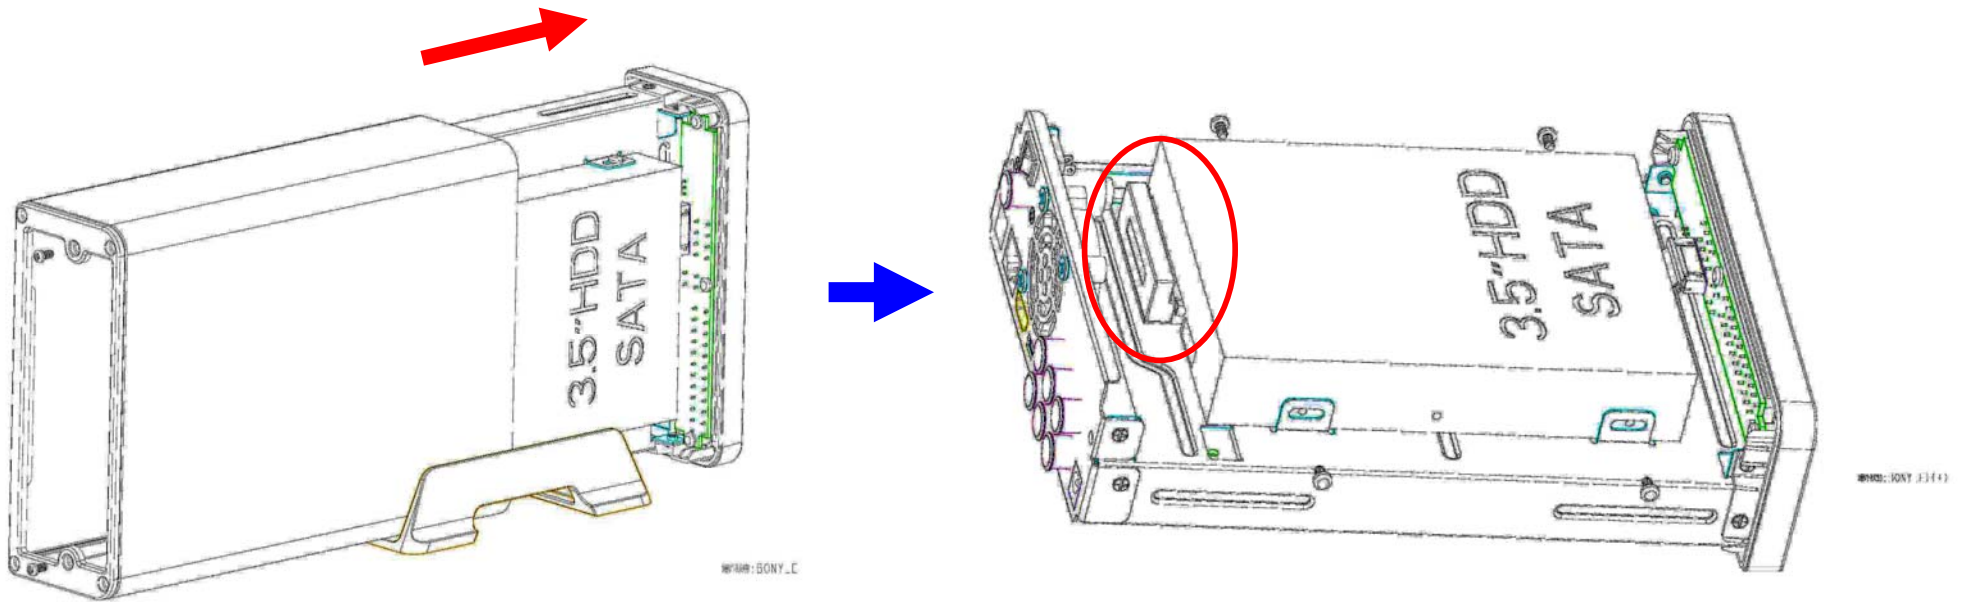

 4. Push tray into Aluminum housing and screw the two pieces together.

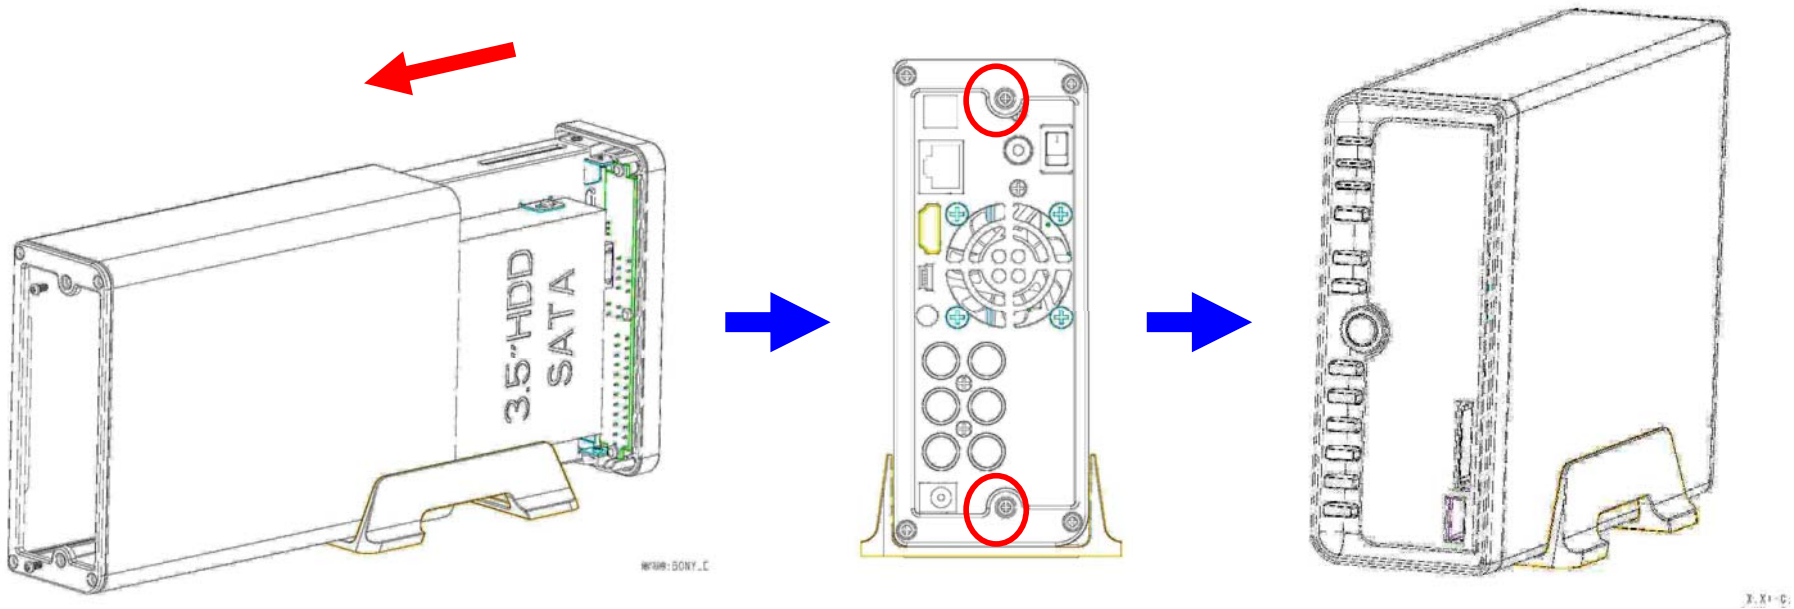


 3. Using Media Player





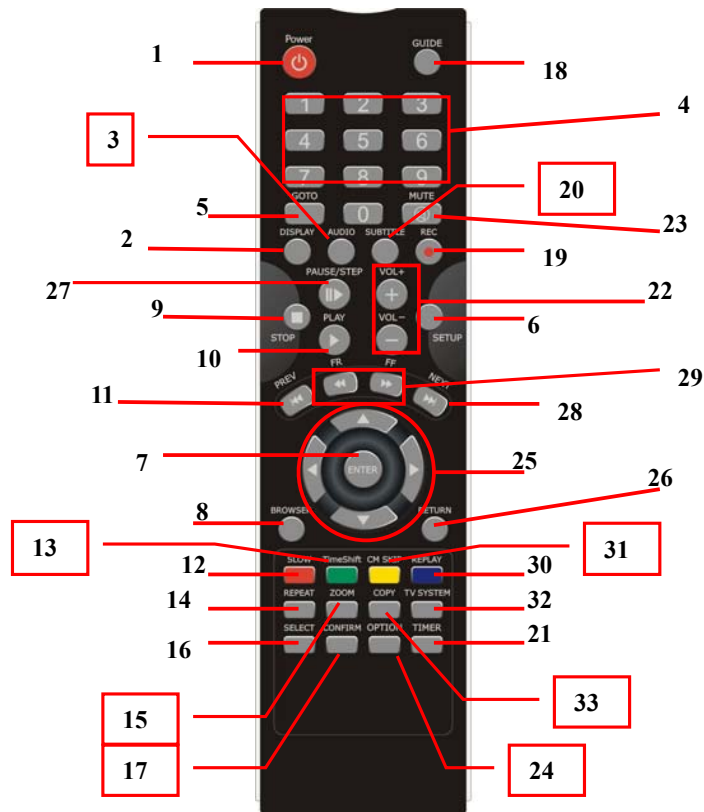


3.1 Remote Control Introduce











All procedures in this manual can be carried out using the remote control buttons. Certain functions can also be carried out using the front panel at the front of the Multi media Player.







 
See the following for details on each button and its function:


 












- | | | |
|------------------------|-------------------|----------|
| 1. POWER | 2. DISPLAY | 33. Copy |
| 3. AUDIO | 4. Number buttons | |
| 5. GOTO | 6. SETUP | |
| 7. ENTER | 8. BROWSER | |
| 9. STOP | 10. PLAY | |
| 11. PREV | 12. SLOW | |
| 13. TIMESHIFT | 14. REPEAT | |
| 15. ZOOM | 16. SELECT | |
| 17. CONFIRM | 18. GUIDE | |
| 19. REC | 20. SUBTITLE | |
| 21. TIMER | 22. VOL+/- | |
| 23. MUTE | 24. OPTION | |
| 25. Navigation buttons | 26. RETURN | |
| 27. PAUSE/STEP | 28. NEXT | |
| 29. FR/FF | 30. INS REPLAY | |
| 31. CM SKIP | 32. TV SYSTEM | |



No.	Button	Function
1		<p>POWER button: Press to POWER on or off the AVHDD recorder.</p>
2		<p>DISPLAY button: Press to display current status. Press during playback and an onscreen display appears, showing track number and time elapsed/remaining. Press during recording and an onscreen display appears, showing the recording quality setting and time elapsed.</p>
3		<p>AUDIO button: Press to select an audio track on a HDD or USB file.</p>
4		<p>Numeric buttons: Press to enter channel numbers or numeric input when changing settings.</p>
5		<p>GOTO button: Press to jump to a specific point on the disc or title. Specify the point using Title, Chapter and Time.</p>
6		<p>SETUP button: Press to access the Setup Menu directly to change system settings.</p>
7		<p>ENTER button: Press to select confirm in menus.</p>

8		<p>BROWSER button:</p> <p>Press to browse the music , photo, movie, all files on USB,HDD.</p>
9		<p>STOP button:</p> <p>Press to stop playback.</p>
10		<p>PLAY button:</p> <p>Press to begin playback of a DVD or HDD title.</p>
11		<p>PREVIOUS buttons:</p> <ul style="list-style-type: none"> ● Press to go the prev. on a HDD or USB file when playing music. ● Press to page up the file list at Browser. ● When play photo ,the button is enable; play Movie and Mp3 file, the button is disable.
12		<p>SLOW MOTION button:</p> <p>Press to play back in slow motion. Three motion settings are available. Five slow motion levels (3/4,1/2,1/4,1/8,1/16x) are available.</p> <p>Press  to resume regular playback.</p>
13		<p>TIME SHIFT button:</p> <p>Press to activate the timeshift function, which allows you to pause live TV and resume the program from the point you left it. While paused, the program is recorded to the HDD, as long as space is available.</p> <p>Press to activate TIME SHIFT function and wait for the PLAY arrow to appear on the screen.</p> <p>Press  and the program is paused.</p> <p>Press  to resume viewing the program.</p> <p>Timeshift mode remains active until you press the  button.</p>

14		<p>REPEAT buttons: Press REPEAT 1 / ALL to set repeat option - Chapter, Title or Off.</p>
15		<p>ZOOM button: Press to zoom in/out when playing back photos or Video programs. Photo zoom levels:2X,4X,8X,16X; Video zoom levels:2X,3X,4X,8X.</p>
16		<p>SELECT buttons: Press to select file or folder to rename or delete.</p>
17		<p>CONFIRM button: Press to select confirm.</p>
18		<p>GUIDE button: Press to view the Guide menu. See “3.2 <i>Getting Started</i>” for more details.</p>
19		<p>RECORD button: Press to begin recording or to resume when recording has been paused. Press repeatedly to set OTR length (30 mins / 60 mins / 90 mins / 120 mins / 180 mins /240 mins/Off).</p>
20		<p>SUBTITLE button: Press to activate available subtitles when play the DIVX file. DivX subtitle supported: SRT,SMI ,SUB,SSA format file.</p>


21		<p>TIMER button:</p> <p>Press to enter the Timer Menu directly to add, edit and delete recording schedules. See “<i>Creating a New Schedule</i>” for more details.</p>
22		<p>VOL + / - buttons:</p> <p>Press to increase or decrease the volume.</p>
23		<p>MUTE button:</p> <p>Press to mute audio output, and press again to resume.</p>
24		<p>OPTION button:</p> <p>Press to select option bar.</p>
25		<p>Navigational buttons:</p> <p>Press the arrow buttons to navigate the menus.</p>
26		<p>RETURN button:</p> <p>Press to return to the previous screen when navigating the menus.</p>

27		<p>PAUSE / STEP button:</p> <p>Press to pause current playback.</p> <p>Press again to step to the next frame.</p> <p>Press  to resume playback.</p>
28		<p>NEXT buttons:</p> <ul style="list-style-type: none"> ● Press to go the next on a HDD or USB file when playing music. ● Press to page down the file list at Browser. ● When play photo ,the button is enable; play Movie and Mp3 file, the button is disable.
29		<p>FAST REWIND / FAST FORWARD buttons:</p> <p>Press to fast rewind or fast forward the current playback.</p> <p>Press repeatedly to select faster rewind or fast forward speeds.</p>
30		<p>INS REPLAY button.</p> <p>Press to backward 10 seconds of the current playback, which suitable for sport program.</p>
31		<p>CM SKIP button:</p> <p>Press to advance 30 seconds when in playback or record mode.</p>

<p>32</p>		<p>TV SYSTEM button:</p> <p>Press to switch between NTSC Interlaced, NTSC Progressive, PAL Interlaced, and PAL Progressive.</p>
<p>33</p>		<p>COPY button:</p> <p>Press to copy file from one device to other.</p> <p>See “<i>FILE COPY MENU</i>” for more details.</p>

3.2 Getting Started

 - Power on the Multimedia player system, you can see the star up page.

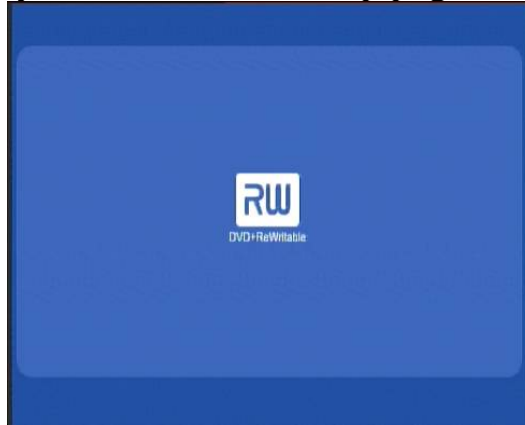

- After a few second, the system will enter a guide menu.

- To enter this menu, press  on the remote control too.



Selecting Video In

To select the a input source, select **Video In** button on the guide menu page.



Selecting file Copy

A clip recorded in HDD or USB disc is called a Title.

Select **Browser** button on the guide menu page to browser the file which under the “My Recording” folder.



Selecting Browser

Select **Browser** button on the guide menu page to browser movie, photo, music files stored either on a HDD, USB, Card Reader, NET or a USB device.




Selecting Setup

To enter the setup menu, select  on the remote control or select **Setup** button on the guide menu page.




Selecting Time REC



 
To enter the Time REC setup page, select  on the remote control or select **Timer REC** button on the guide menu page.




3.3 Format Hard Disc

When you insert a Hard disc on the system at the first time, System will remain you to enter the Hard disc format interface. You can also press  into Setup menu and select HDD Format to Format HDD.


First, the system will jump a warning page.

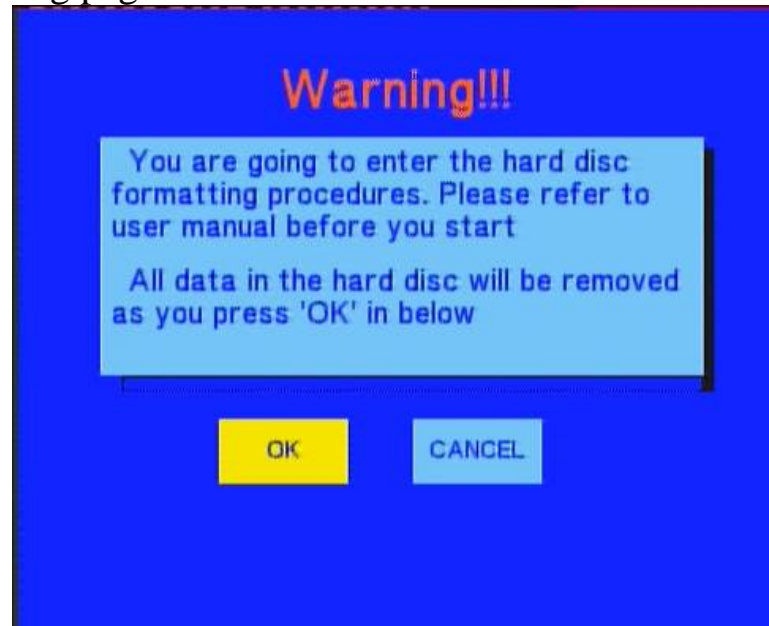

Press  and  on the remote control to select you wish.

When highlight move the OK button, Press  to enter the next step. Otherwise, select cancel to return.

 Step 1: Please according the screen remain to adjust the capacity.

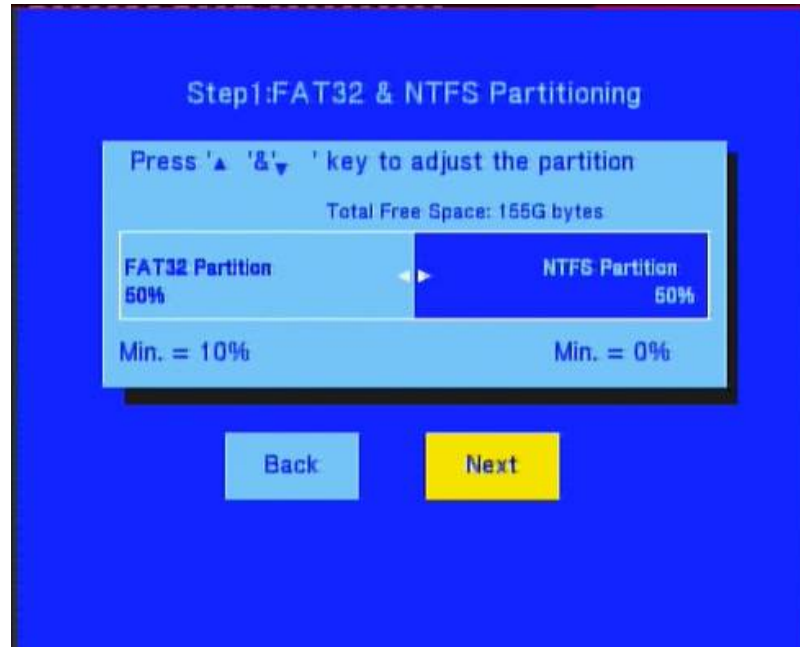


Use ▲ and ▼ to adjust the Fat32 and NTFS partition.

Press ◀ and ▶ on the remote control to select back or next.

When highlight move the Next button, Press ENTER to enter the next step. Otherwise, select back button to return.

 Step 2: Hard disk format

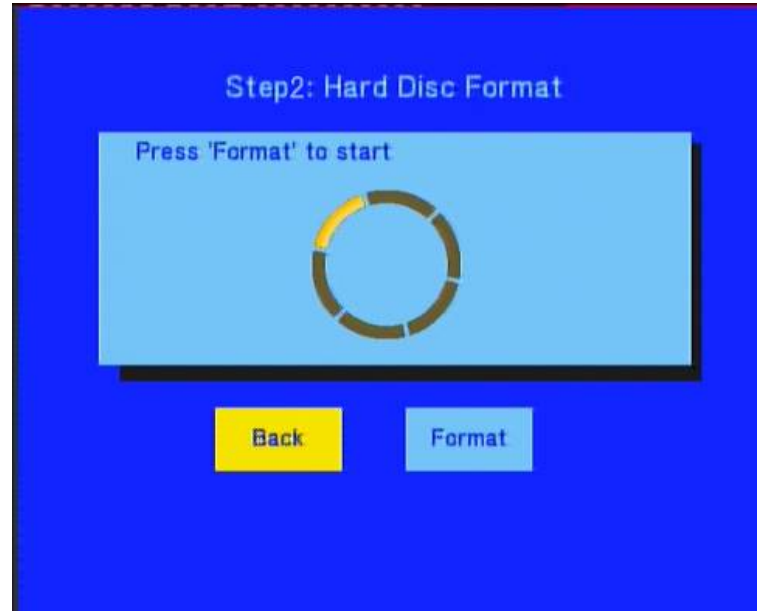

Press ◀ and ▶ on the remote control to select back or format.
When highlight move the Format button, Press **ENTER** to start. Otherwise, select back button to back.

Step 3: Congratulation page

 
When complete the format, the system will display the congratulation page.




Select OK button and Press  to exit.

3.4 The REC List

The **REC List** menu allows you to play all saved titles.

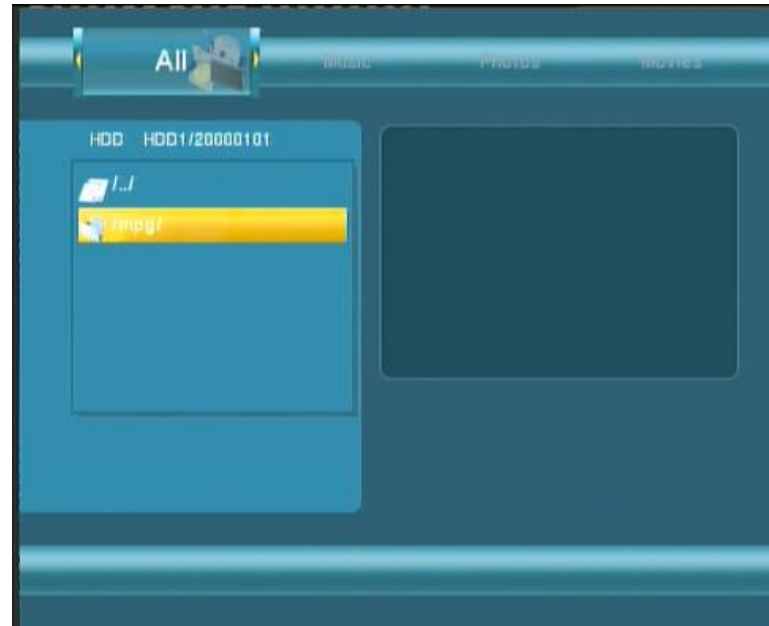




REC List Menu

 
When you press  to begin recode. System will make a “My Recordings” folder at “HDD1” or USB device automatically for the first time. And your recode movie file will be saved at this folder. The file name will be rename according system time.





3.5 Timer Record Menu

The **Timer Record** menu allows you to create, edit and delete recording schedules and view all schedule status and history. To enter the menu, select **Timer Record** from the **Guide** menu .

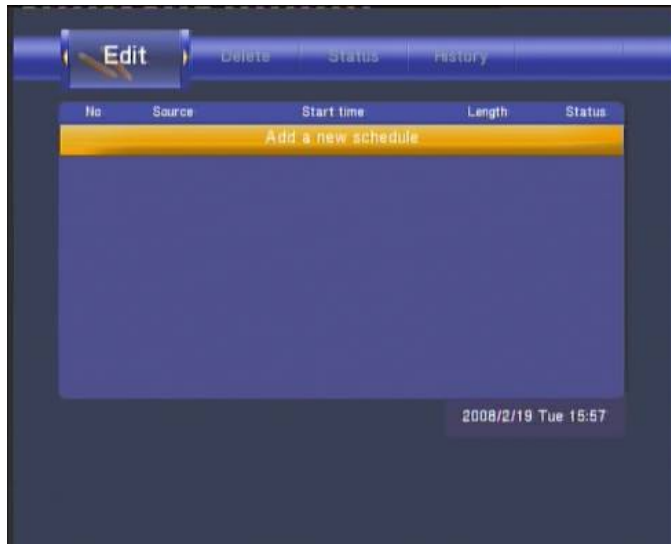3.5.1 Creating a New Schedule

Press  and  on the remote control to select the **Edit** tab from the menu bar. Select **Add a New Schedule** and press . The schedule setting screen appears.





Use  and  on the remote control to move between fields and Press  and  to adjust each setting.

Start Time	Enter the date and time of the recording.
Length	Enter the length of the recording
Repeat	Select how often you want the schedule to record. Choose from Once, Everyday, Mon-Fri, Mon-Sat or for an individual day of the week.
Quality	Select the recording quality. Choose from HQ, SLP, EP, LP and SP. The higher the quality, the more space required on the hard drive. See HDD/USB Free Space on the left of the screen for details of how long you can record for using each setting.
Preview	This small preview window will show the current program of the select channel.

3.5.2 Editing Schedules

 
Press  and  on the remote control to select the **Edit** tab from the menu bar.

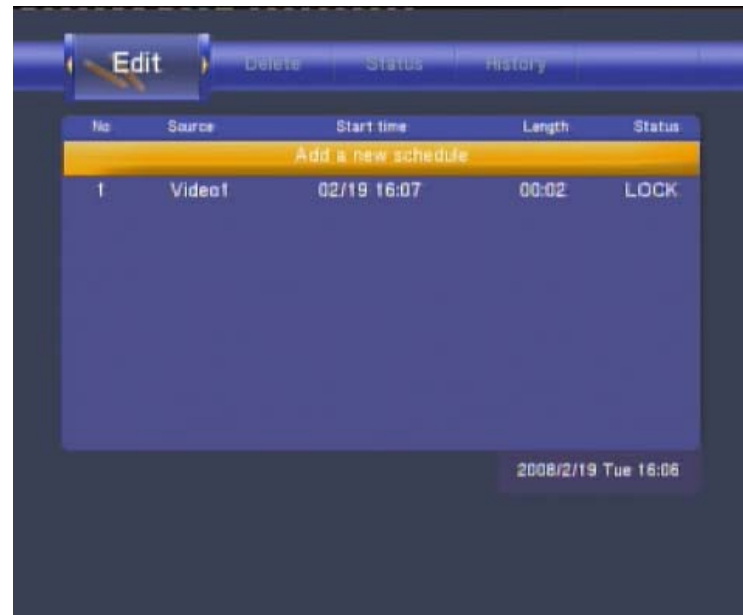

Select the schedule you want to edit from the list and press . The schedule setting screen appears. Modify the schedule as described in “*Creating a New Schedule*”.

3.5.3 Deleting Schedules

 
Press ◀ and ▶ on the remote control to select the **Delete** tab from the menu bar. Select the schedule you want to delete and press **ENTER**. A confirmation message appears.

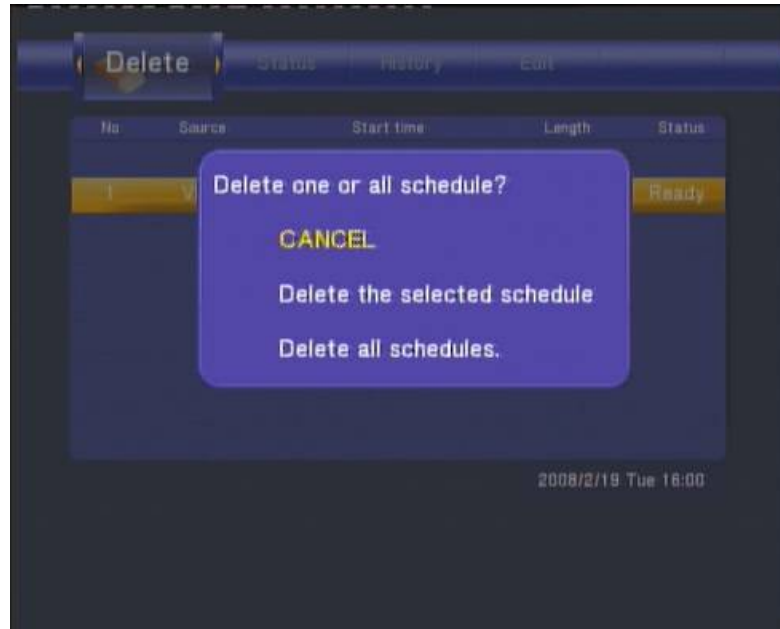

Select **CANCEL**, **Delete the selected schedule** or **Delete all schedules**. Press **ENTER** to confirm.

3.5.4 Viewing Schedule Status Viewing Schedule Status

 Press ◀ and ▶ on the remote control to select the **Schedule** tab from the menu bar. The schedule list is displayed. Select a schedule and press **ENTER**.

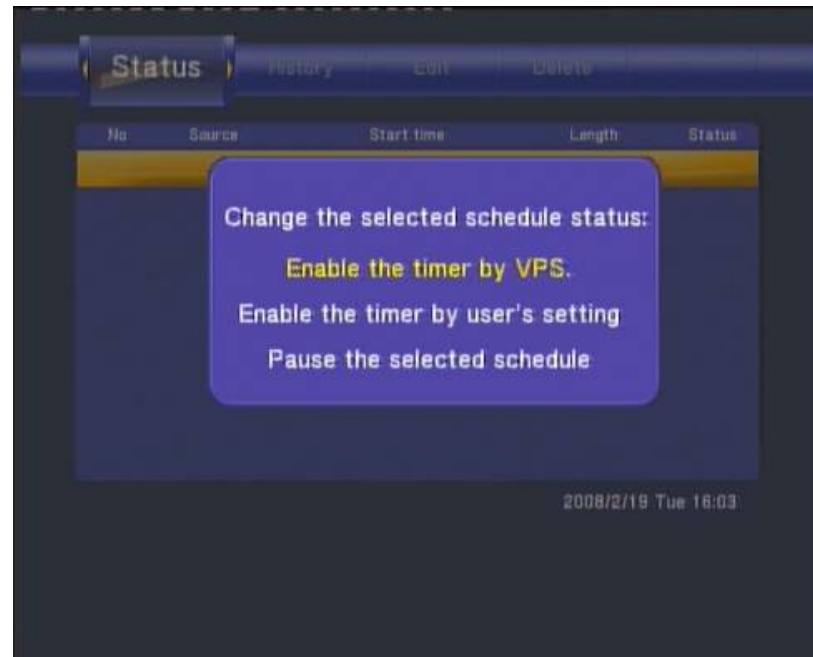


Select **Enable VPS**, **Disable VPS** or **Pause the selected schedule**.

Press **ENTER** to confirm.

3.5.5 Viewing Recording History

 Press the left and right navigation arrows on the remote control to select the **History** tab from the menu bar.

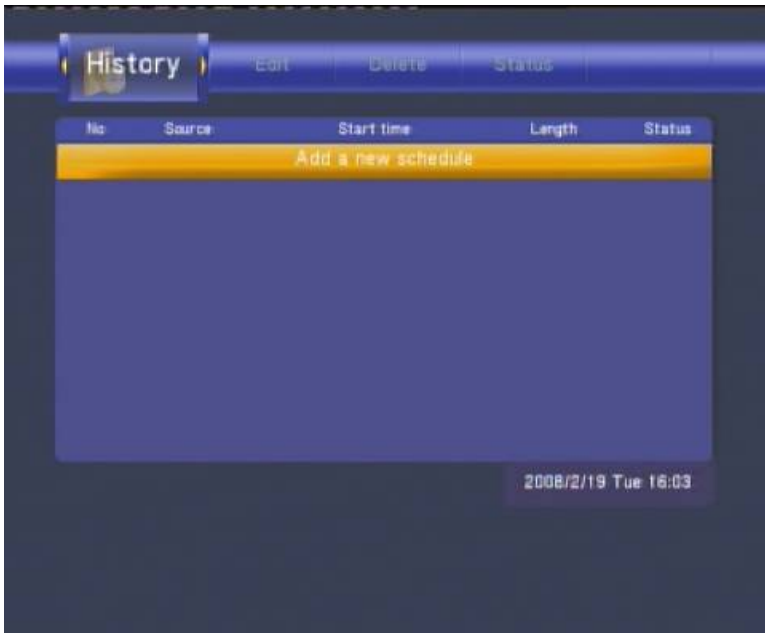

Here you can view a complete history of all recordings that were set.

 


3.6 Setup Menu

The Setup Menu allows you to configure video, record and system settings.
To enter the menu, select **Setup** from the **Guide** menu.

3.6.1 Changing System Settings

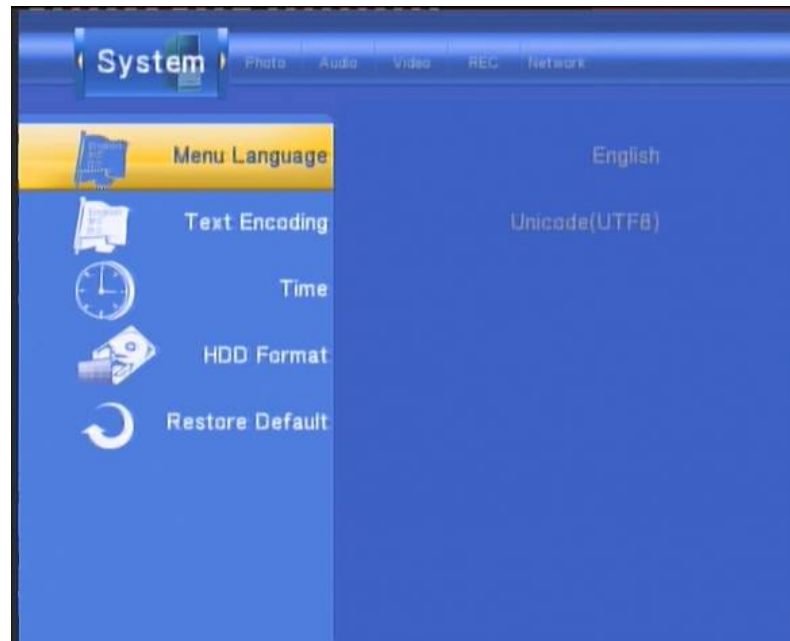


Press  and  on the remote control to select the **System** tab from the menu.



Menu Language

 
Select to choose the OSD (On Screen Display) language.






Press  and  to select the language. Press  to confirm.

Text Encoding

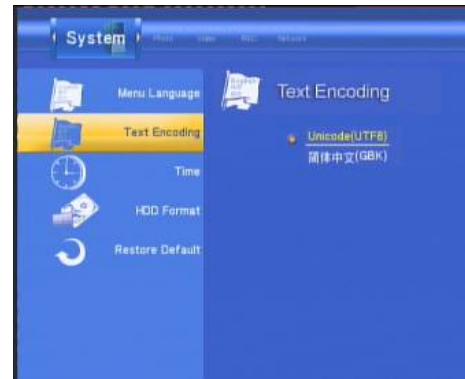 
Select to choose the text encoding language.




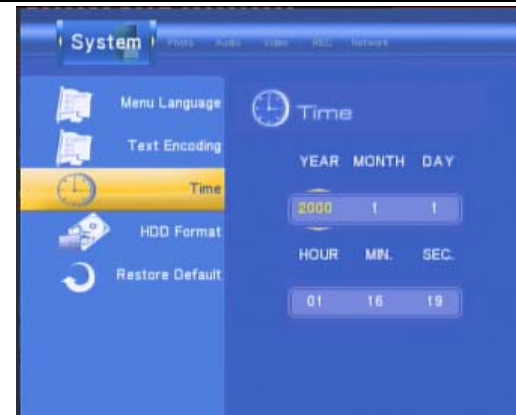 
Press  and  to select the text encoding language. Press  to confirm.



Time

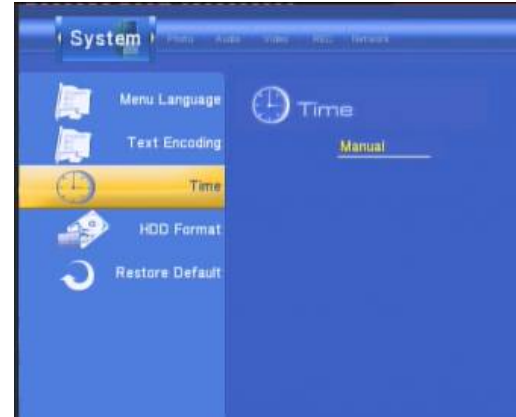Select to set the system time.



Press  and enter Manual setup.




Enter the system menu and press  and  to select each field and the up and down navigation arrows to adjust each setting.

Press  to confirm.

HDD Format

 
Select to HDD Format.



Press  and  button on the remote control to select **Cancel** or **CONFIRM** from the menu.

Restore Default




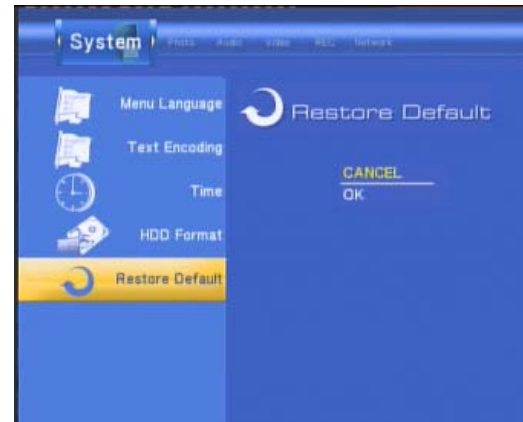

Select to restore factory defaults.





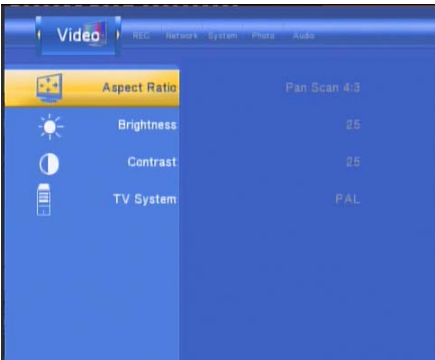 





A confirmation message appears. Select **CONFIRM** and press **RETURN** to restore all settings to defaults.

3.6.2 Changing Video Settings

Press  and  on the remote control to select the **Video** tab from the menu bar.

<p style="text-align: center;">Aspect Ratio</p>  <p>The screenshot shows the 'Video' menu with 'Aspect Ratio' highlighted in yellow. Below it are 'Brightness' (25), 'Contrast' (25), and 'TV System' (PAL).</p>	<p>Select to set aspect ratio.</p>  <p>The screenshot shows the 'Aspect Ratio' sub-menu with three options: 'Pan Scan 4:3', 'Letter Box 4:3', and '16:9'. The 'Pan Scan 4:3' option is currently selected.</p> <p>Press  and  to select from Pan Scan 4:3, Letter Box 4:3, or 16:9. Press  to confirm.</p> <p>Pan Scan 4:3: Display a wide picture on the entire screen and cuts off the redundant portions. Select when a standard 4:3 TV is connected.</p> <p>Letter Box 4:3: Display a wide picture with two black borders on the top and bottom of 4:3 screen Select when a standard 4:3 TV is connected.</p> <p>16:9: Compress the image to convert the whole image. Select when a 16:9 TV is connected.</p>
--	---

<p>Brightness</p>	<p>Select to set brightness levels.</p>  <p>Press  and  to adjust brightness. The new setting is previewed onscreen. Press  to confirm.</p>
<p>Contrast</p>	<p>Select to set contrast levels.</p>  <p>Press  and  to adjust contrast. The new setting is previewed onscreen. Press  to confirm.</p>

TV System

Select to adjust TV system.



 
 



When insert HDMI TV, TV System only choose Auto EDID,480P,576P,720P 50HZ,720P 60HZ,1080i 60HZ.



Press  and  to set the HD Resolution, depending on your viewing preferences. Press  to confirm.

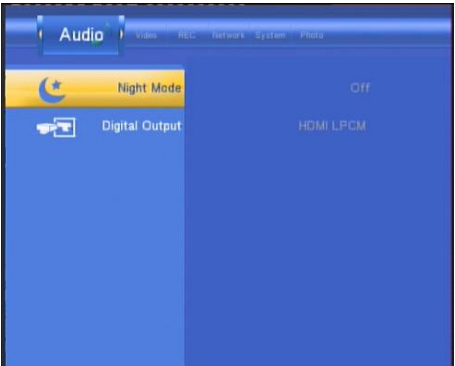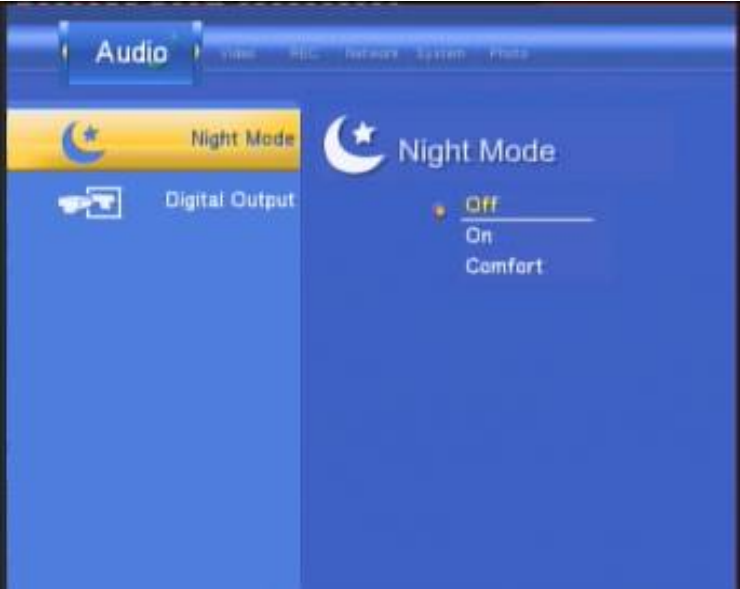

3.6.3 Changing Audio Settings

Press  and  on the remote control to select the **Audio** tab from the menu bar.

<p style="text-align: center;">Night Mode</p> 	<p>Select to toggle Night Mode on and off. This function reduces the maximum dynamic audio range.</p>  <p>Press  and  to to enable or disable the function. Press  to confirm.</p>
---	--

Select to set Digital output type.





Press  or  to select from HDMI and SPDIF RAW or LPCM. S/PDIF (Sony/Phillips Digital Interface Format) carries digital audio signals between the DVD recorder and other component devices, such as a home theater setup with surround sound.






The HDMI (**H**igh **D**efinition **M**ultimedia **I**nterface) is a compact audio/video connector interface for transmitting uncompressed digital streams. It represents a digital alternative to consumer analog standards such as Radio Frequency (RF) coaxial cable, composite video, S-Video, SCART, component video, D-Terminal, and VGA.

RAW data is the original bit stream and will provide a better audio output quality.

LPCM is the default setting, and provides 2 channels audio output.

3.6.4 Changing Record Settings

Press  and  on the remote control to select the **Record** tab from the menu bar.

<p style="text-align: center;">Quality</p> 	<p>Select to set the default recording quality setting.</p>  <p>Press  and  to select the quality setting you require. The highest quality setting is HQ which requires the most storage space. The other settings reduce recording quality sequentially but also require less storage space. Press  to confirm.</p>
---	---

Permanent timeshift

Select to set the Permanent timeshift on or off.






Press  and  to select. Press  to confirm.

Record Device


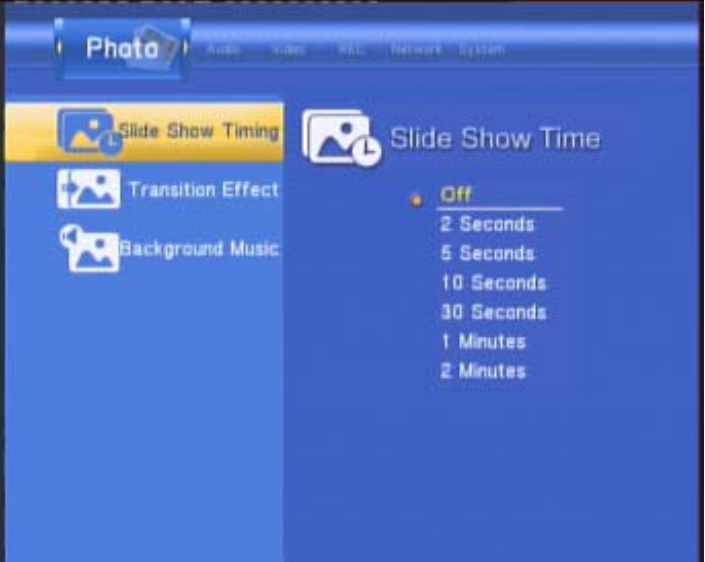 



Select to choose the device to which to record .



Press  and  to select to record on either HDD or USB.
Press  to confirm.


3.6.5 Changing Photos Settings



Press  and  on the remote control to select the **Photos** tab from the menu.

<h4 style="text-align: center;">Slide Show Time</h4> 	<p>Select to set slide show time.</p>  <p>Press  and  to select the interval you require. Press  to confirm.</p>
---	---

 Transition Effect

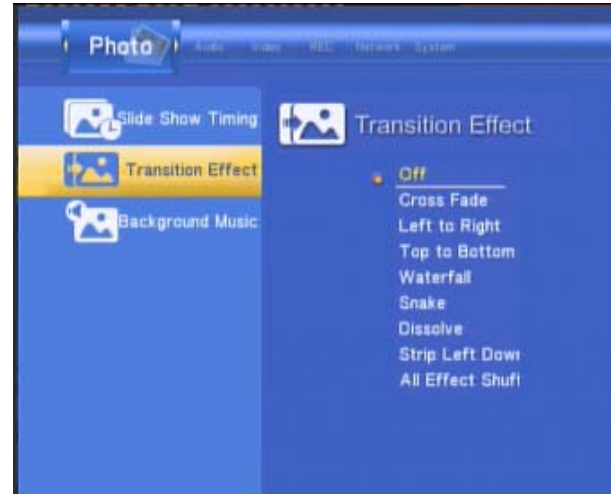Select to set the transition effect of photos.



 
Press  and  to select the transform of photo you require:



- 1) Cross Fade – fade in and fade out
- 2) Left to Right- from left to right
- 3) Top to Bottom- from top to bottom
- 4) Waterfal l- like a steep descent of water from a height
- 5) Snake – like snake motion
- 6) Dissolve – like water dissolve
- 7) Strip Left Down – like strip cover from top of left to bottom of right
- 8) All Effect Shuffle – shuffle in and out

Press  to confirm.

Background Music

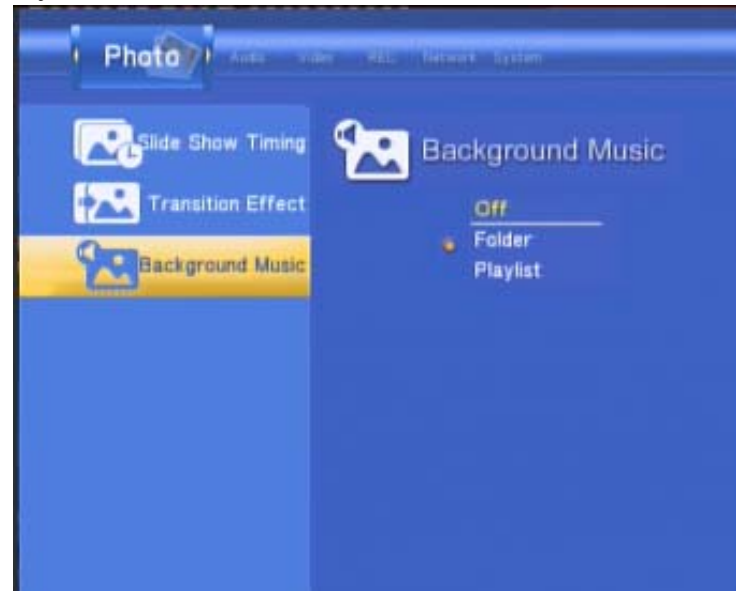

Select to play the music file under the same folder.

 






Press  and  to select the position of the background music. Select "off" to close the function.

Press  to confirm.

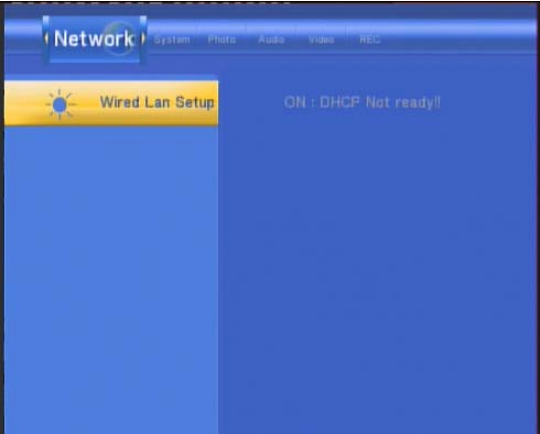
3.6.6 Changing Network Settings

Press  and  on the remote control to select the **Network** tab from the menu.

<h3 style="text-align: center;">Wired Lan Setup</h3> 	<p>Select to set the Network Setting. Before use the Network functions, please check following items:</p> <ol style="list-style-type: none"> 1) Connect the MKAVHDD to Network first. 2) Please enable NetBIOS of TCP/IP on computer. 3) Please turn off your PC's firewall. 4) Please share the folders which you wish to browse in your PC.  <p>Press  and  to select DHCP(AUTO) or FIXED IP(MANUAL). Press  to confirm.</p>
--	---


DHCP DNS(AUTO)

 Set the DNS server IP address by auto. Press **ENTER** to confirm.

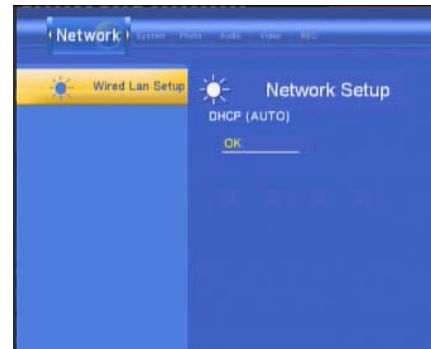


FIX IP (MANUAL)

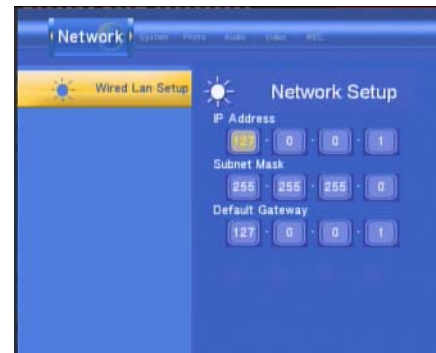 


Using Fixed IP, it is required to enter followings. IP address, Subnet Mask, Default Gateway. For further assistant to above settings, please contact to the network administrator. Press **▲▶▼◀** to enter the IP address. Press **ENTER** to confirm.



 3.7 Browser Menu

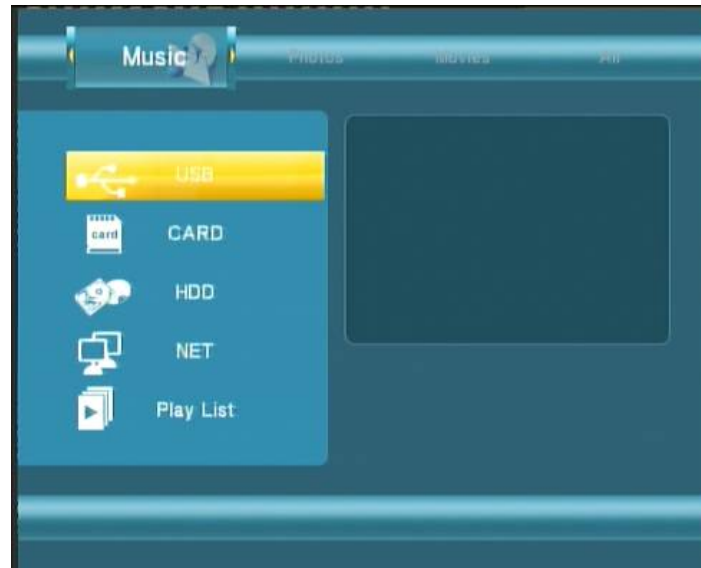The Browser menu allows you browse and play music, photo and movie files stored on a HDD or an external USB device and Card reader, Network. To enter the menu, select **Browser** from the **Guide** menu.

 


Press  and  to select the device on which the media is stored. Choose from HDD, USB (for media stored on an external flash disk), Card reader, NET and press .

When data on HDD, USB device or Card reader is connected the system to Network, you can also browse photos, listen to MP3 files, and watch videos.


My Short Cut

When you are browsing NET, you can choose the PC name from the menu or you can set “Specific File Server IP” and access it from “My Short Cut” in the menu.

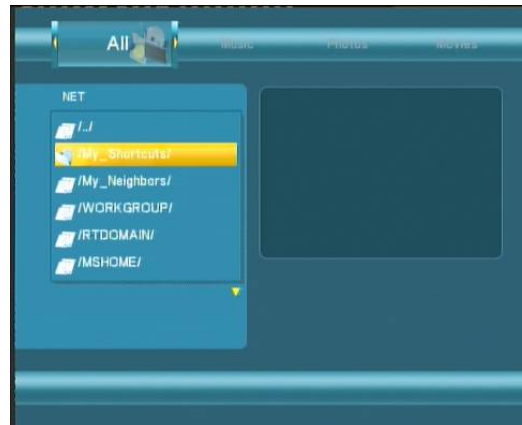

My Neighbors

 When you are browsing NET, When you install “Transcode Server” in your PC. you can choose the PC name from the menu or you can select “My Neighbors” to access .

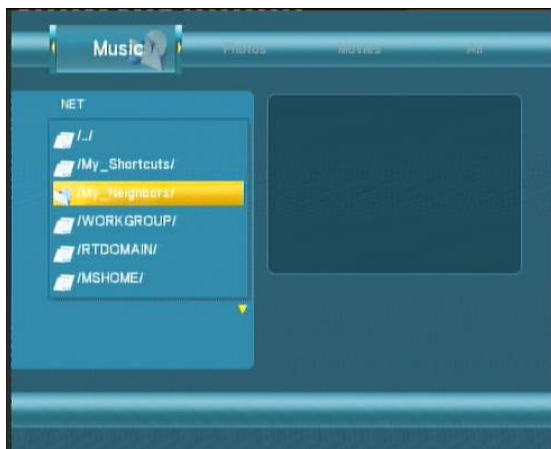







Note:

 If you install the “Transcode Server” in your PC, the system will support the H.264, RMVB, WMV, RM... format playback through the NET.

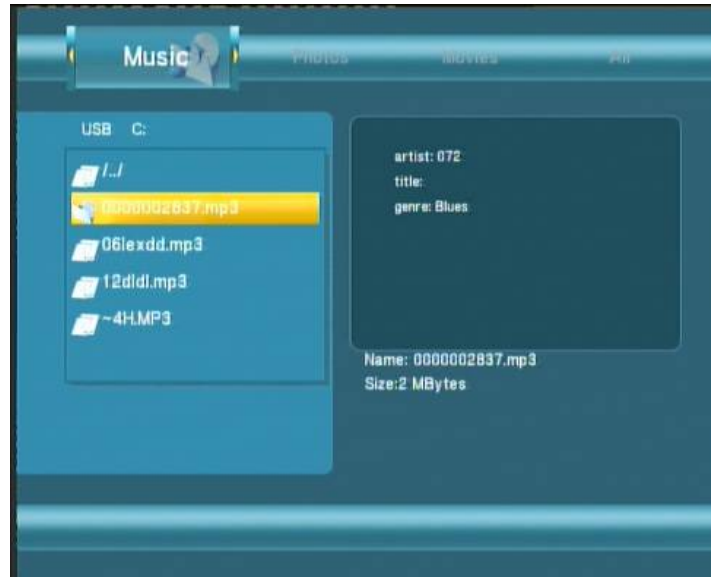3.7.1 Browsing Music

Use the left and right navigation arrows to select the **Music** tab.



Press  and  to select the folder containing your audio files. A thumbnail strip appears at the bottom of the screen, along with song information. Press  and  to select the file you want to play and press .

This browsing music function supports WMA, AAC, OGG format Playback.






3.7.2 Browsing Photos




Use the left and right navigation arrows to select the **Photos** tab.



Note:

1. When the photo is displayed in full screen mode, the slide show starts automatically.
2. While listening to MP3 files, you can browse the photos at the same time.

Press  and  to select the folder containing your photo files. Enter the folder press  and  to select the photo you want to view and press . The photo is displayed full screen.

While browsing a photo, you can press  or  to rotate a photo in any angle. Beside rotating a photo, you can press  to zoom in/out that photo, three zoom levels are available.

This browsing photos function supports High Definition Photo (JPG, PEG, BMP) Playback.






3.7.3 Browsing Movies

Use the left and right navigation arrows to select the **Movies** tab.



Note:

When play the HD Video, you can according the movie resolution to adjust HD Video output. See “*HD Output of SETUP menu*” for more details.

Press  and  to select the folder(s) containing your movie files. Enter the folder press  and  to select the movie you want to view and press . The movie is played full screen.

 
This browsing movies function supports High Definition Video (720P, 1080i) Playback.

For example:




1. MPEG1(DAT ,MPG)
2. MPEG2(VOB, MPG, TS)
3. MPEG4(AVI,DIVX,XVID)

3.7.4 Browsing All

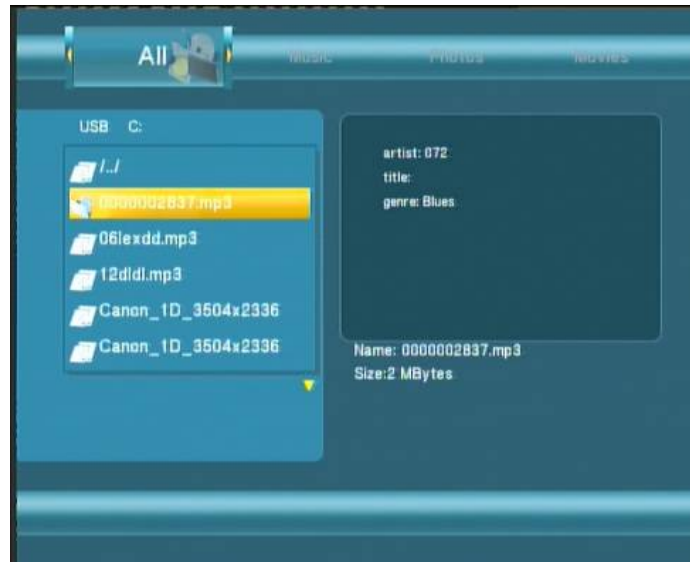


Use the left and right navigation arrows to select the **All** tab.









Press  and  to select the folder(s) containing your all files (Beside Music, Photo and Movie).

Enter the folder press  and  to select the file you want to view and press  to play.

3.7.5 File Edit Menu






Press  and  to select the file or folder, press  to display the Edit tab.



Return	Select to return to the main screen.
Rename	<p>To rename a file, do the following:</p> <ol style="list-style-type: none"> 1. Press  and  on the remote control to select the Rename tab from the menu bar. 2. Press  on the remote control. The name entry screen appears. <div data-bbox="865 553 1516 1073" data-label="Image"> </div> <ol style="list-style-type: none"> 3. Use the navigation arrows to select letters and numbers. Select CAPS to toggle between uppercase and lowercase letters. Press <- to delete a letter. Press -> to insert a space. Press  to input each letter or number. 4. Once you have entered the new name, select OK and press  to confirm all changes. <p>If you want to cancel the naming during the process, press </p>

Delete

To delete a title, do the following:

1. Press  and  on the remote control to select the **Delete** tab from the menu bar.
2. Press  to confirm and delete the file.
3. A confirmation message appears. Press  or  and select **OK**.





4. Press  to delete the selected file. To cancel delete, select **Return**.

3.8 File Copy Menu

 
The Setup Menu allows you to copy files at NET,USB,HDD each other.

To enter the menu, select **File Copy** from the **Guide** menu or select  on the remote control.


Step 1. Select Source Device

When you enter the File copy interface, press  and  to select the device which your want to copy first.

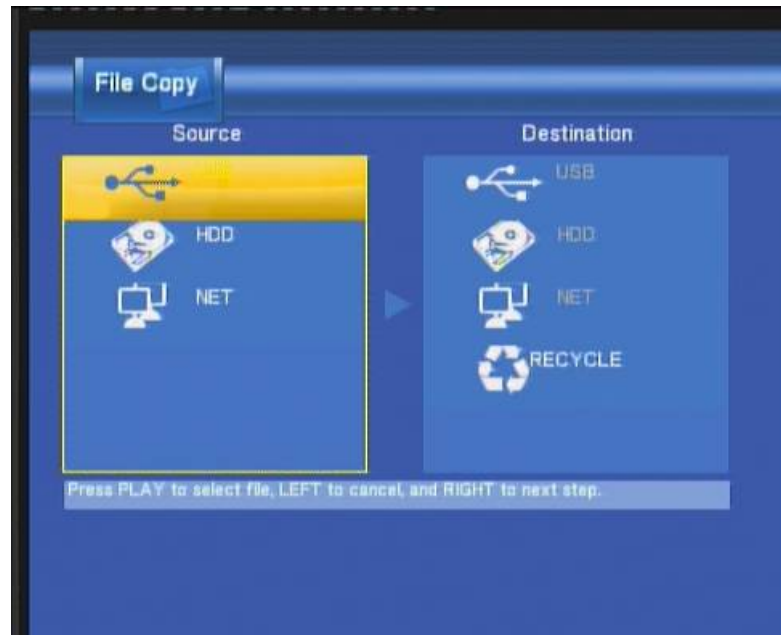

Then press  to select Destination Device, press  to return.






Step 2. Select Destination Device

When into Destination sector, press  and  to select the device of the Destination.





Then press  to next step, and press  to return.

Step 3. Select copy files or folders

 
At Source sector, press  and  to select and press **Enter** to select file or folders which you want to copy. When you succeed to select, at the file or folder name right side will display .





Then press  to next step, and press  to return.

Step 4. Select the folders of Destination

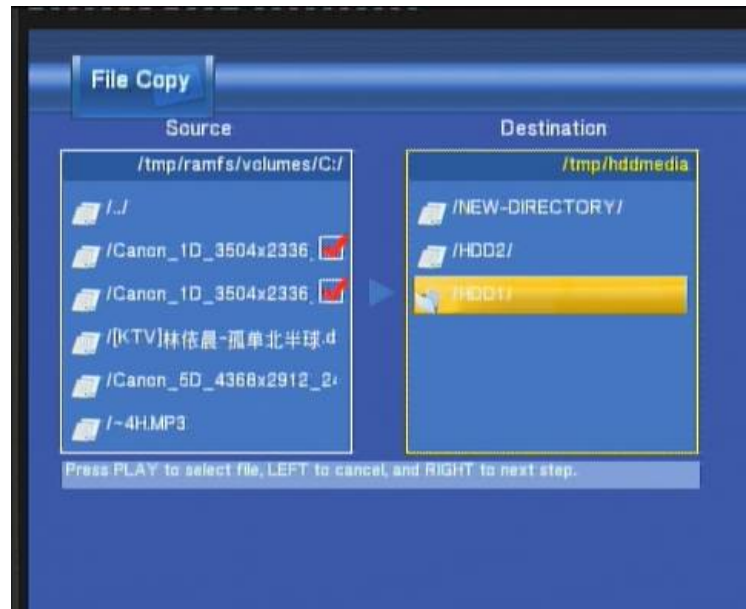
At Destination sector, press  and  to select the folders of destination.




Then press  to next step, and press  to return.

Step 5. Copy Status

 At Pop menu, select OK to copy, select No to cancel.

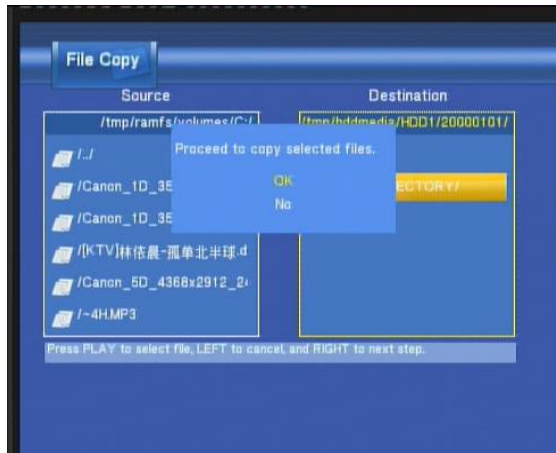

 When copy succeed, the system will display **“File Copy Completed!”** ; if failed, the system will display **“File Copy failed!”**

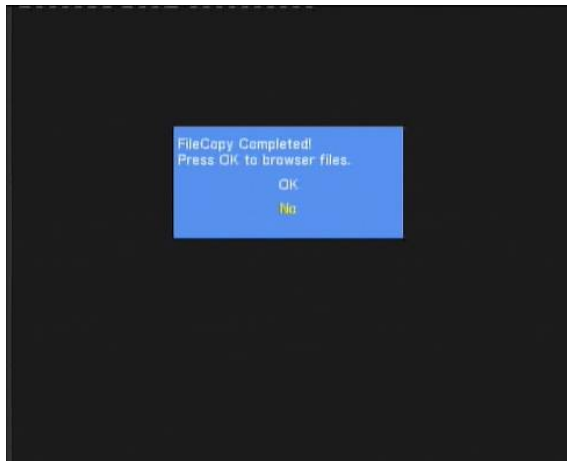

When the File Copy completed! You can select **“OK”** to browser files, or select **“No”** return Video1

4. Utilities

■ TranscodeServer

 
Transcoding on PC (RM, RMVB, WMV, H.264...) and real-time streaming playback via network.

Please follow the instructions to install the software.


Step 1:

Insert CD , copy the contents of the Transcodeserver to the designated directory.


Double click to run the program. Transcodeserver will then automatically installation.

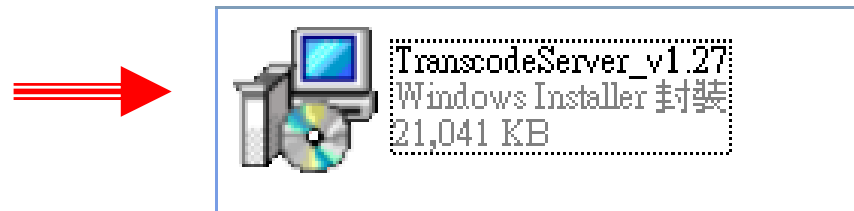

 
Step 2: “ Next ”

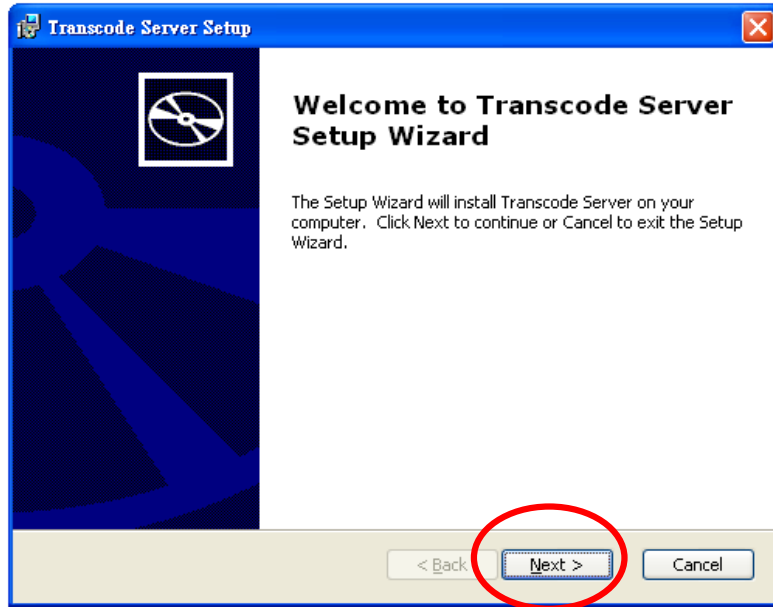

 
Step 3: “ Browser folder ”

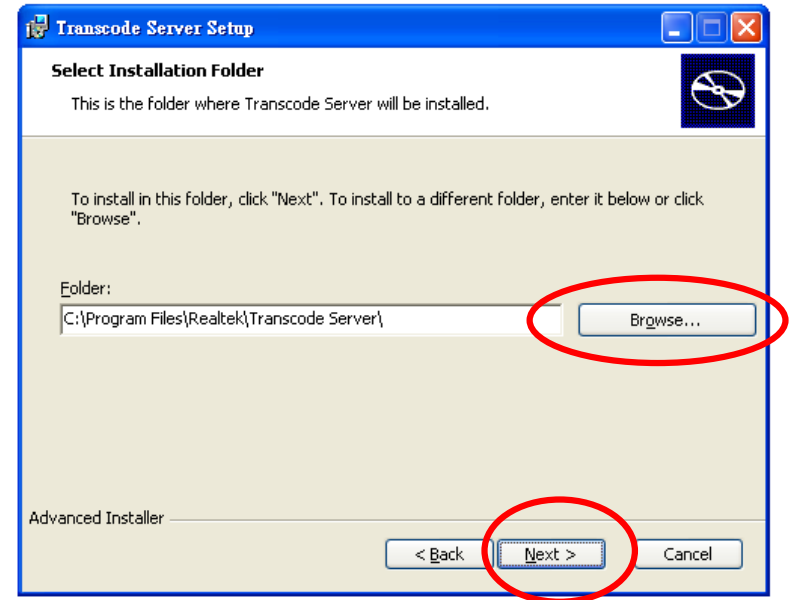

 
Step 4: “Install”

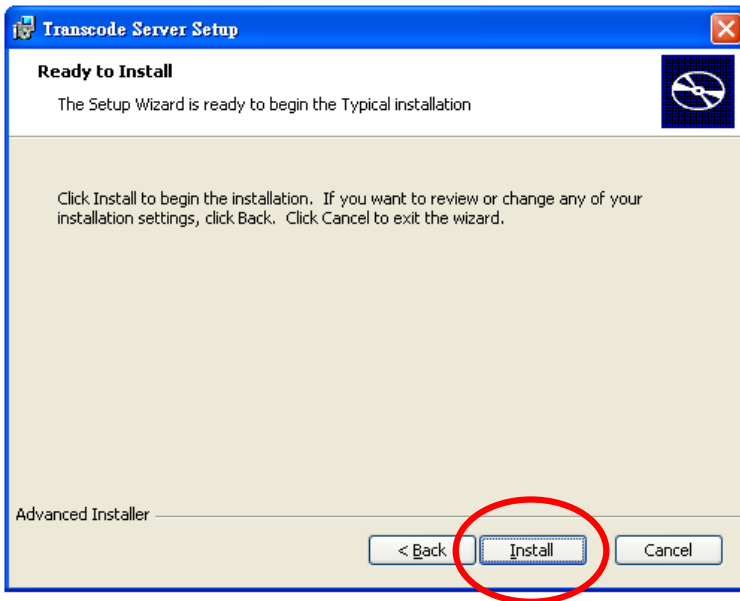

 Step 5: “Copying new files”

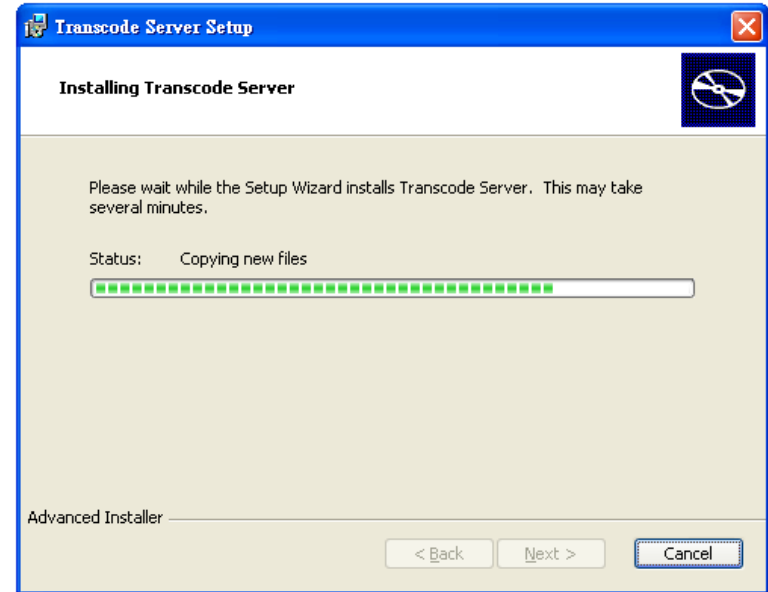

 Step 6: “Finsh”. You can start use the software.

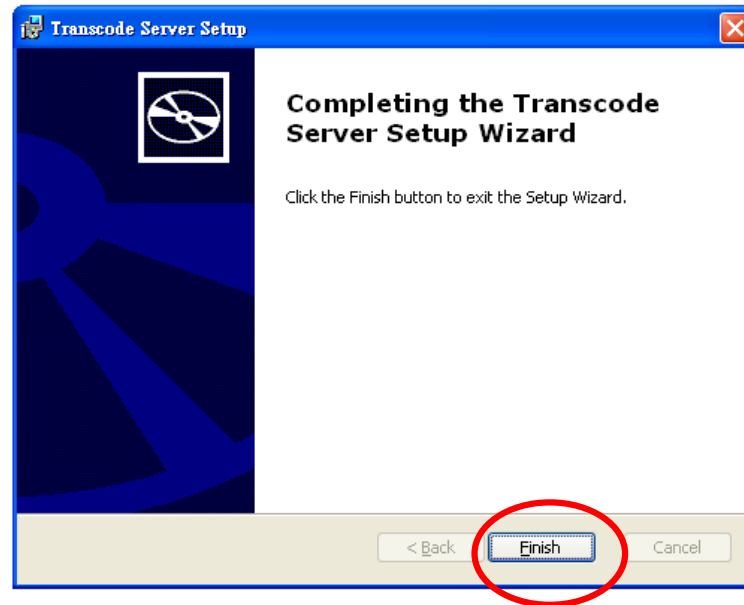


■ Run the software

Step 1: Double click to run the program. You can enter the software page.




 Step 2: Transcode Status: Transcoding information.

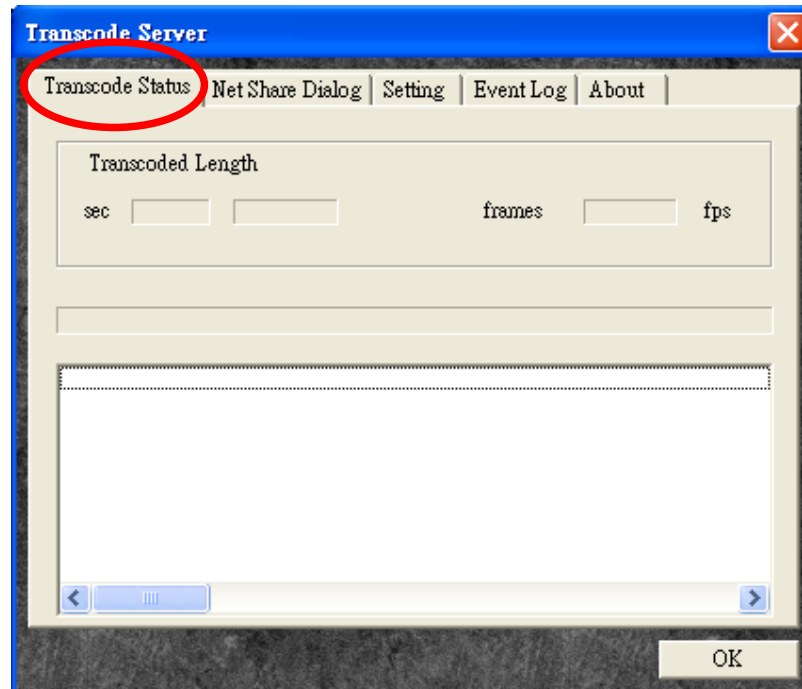


Step 3: Net Share Dialog:

 
Add your files on PC (RM, RMVB, WMV, H.264...) and real-time streaming playback via network

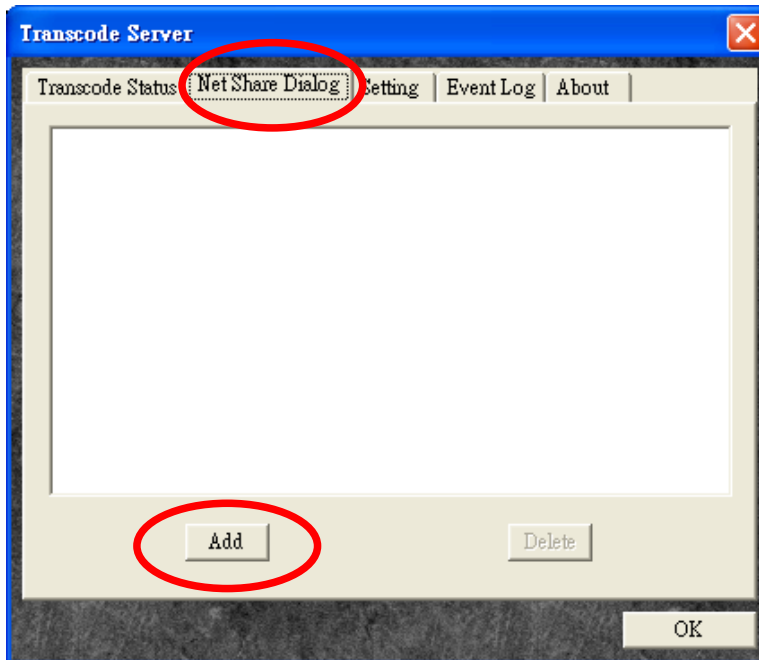

 Setting: Auto Run System Starup “Yes” or “No”.

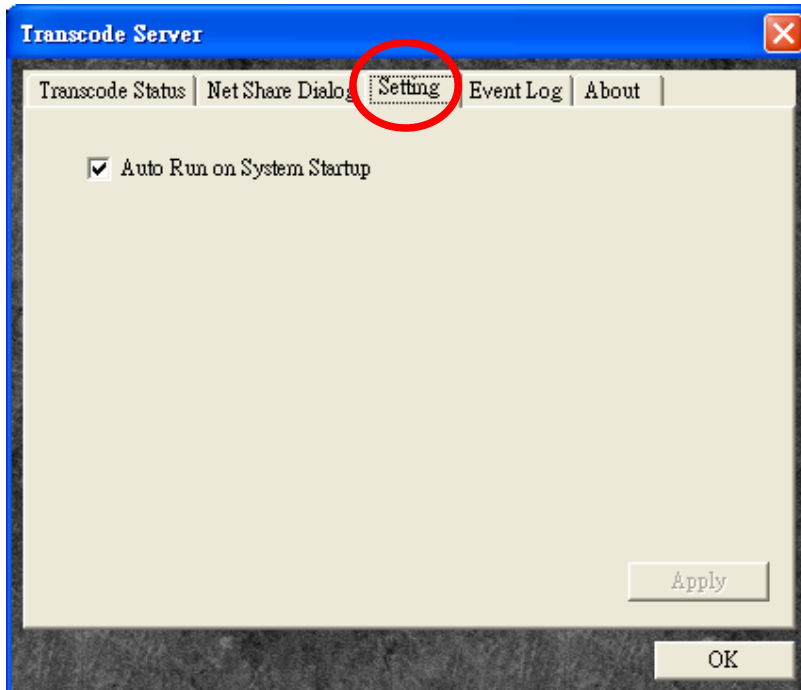

 EventLog: Event log is helpful for troubleshooting

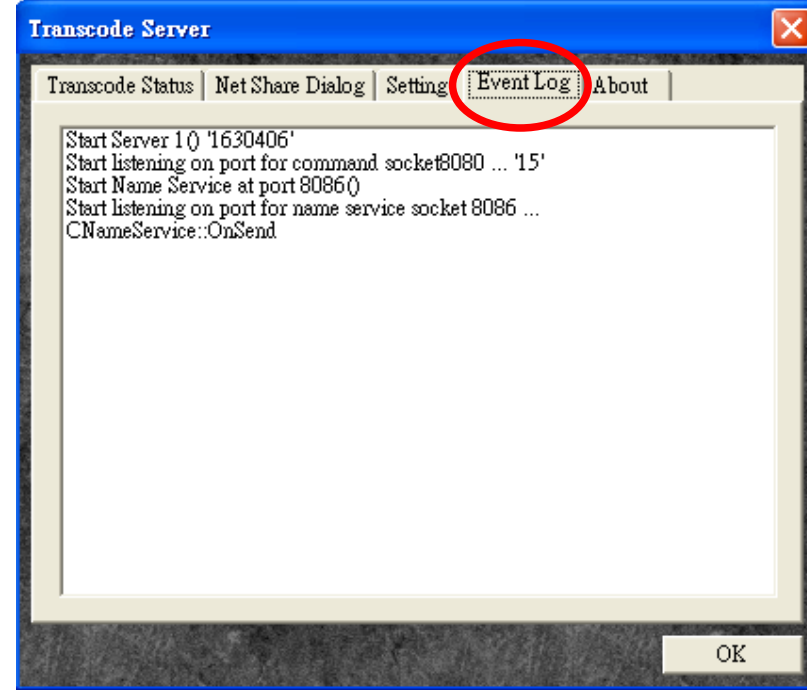

About: Transcodeserver Version information.

