


# GB AWE 9723

For further details please refer to the User Guide

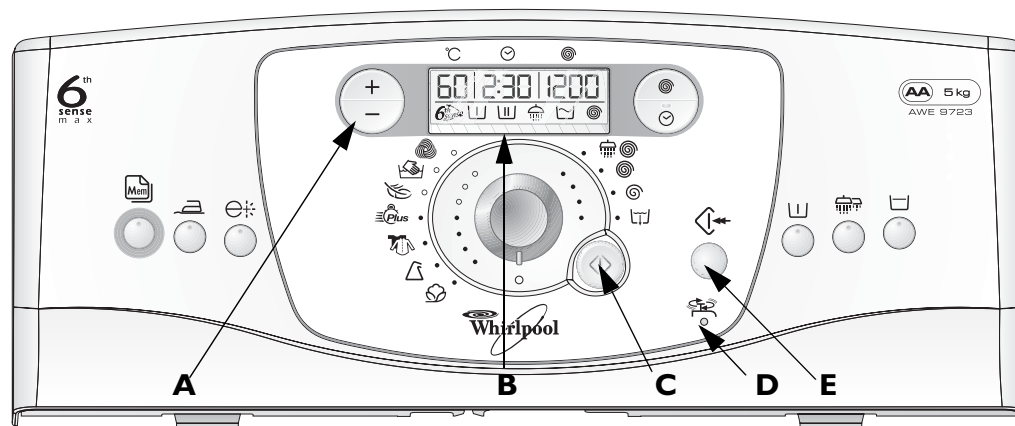

## Favorites Button

You have the possibility to store preferred programme and option combinations. For further details please refer to User guide.

## 6th Sense

Lights up when time, energy and water settings are being automatically updated to optimise the washing performance.

## Drum Up

Lights up during the automatic re-adjustment of the drum opening.

## Reset Button

When selected before start button is pressed all selections and options are reset.

When selected after start button is pressed water is drained for about 2 minutes and End symbol will light up. New programme and options can be selected.

## End

Appears in display when programme is ended and drum opening is in position.

## A. Temperature Adjustment Button

## B. Programme Sequence Indicators













 
 










 

















 




 






 







 




 

 




## C. Start/Pause button (press to start or pause programme)

## D. Water tap indicator (lights up when water inlet is closed, please open tap)

## E. Reset button

When you select an option, the corresponding indicator lights up, except if the combination of programme, additional options and temperature is not possible.

Programme		Care Labels	Type of wash / Notes	Max. load  kg	Detergents and additives				Special Options						Tempera- ture  °C	Max. Spin Speed  rpm	
					Prewash 	Main Wash 	Softener 	Bleach 	Easy Ironing 	Eco plus 	Prewash 	Intensive Rinse 	Rinse Hold 	Spin Speed Reduction 			Start Delay 
Cotton		  	Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. <i>For heavily soiled laundry the additional “Prewash” option can be selected as well.</i>	5.0	 <sup>1)</sup>	Yes									20 to 90	1200	
Synthetics			Normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2.0	 <sup>1)</sup>	Yes		—							20 to 60	1000 <sup>2)</sup>	
Daily Mixed			Slightly to normally soiled textiles made of cotton and/or synthetics	3.0	—	Yes		—		—	—				30 to 60	1200	
Rapid		 	Shortly worn outer clothing made of cotton, polyester, polyamide or blends with cotton.	3.0	—	Yes		—	—	—	—				20 to 30	1200	
Delicates			Curtains and delicate clothing, dresses, skirts, shirts and blouses.	1.5	 <sup>1)</sup>	Yes		—	—	—		—		 <sup>2)</sup>		20 to 40	800 <sup>2)</sup>
Handwash			Textiles made of silk, linen, wool and viscose marked as “handwashable”. <i>If you select “Rinse Hold” do not leave items to soak for too long.</i>	1.0	—	Yes		—	—	—	—		— <sup>3)</sup>		20 to 30	— <sup>3)</sup>	
Wool			Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable. <i>If you select “Rinse Hold” do not leave items to soak for too long.</i>	1.0	—	Yes		—	—	—	—		 <sup>2)</sup>		20 to 40	800 <sup>2)</sup>	
Rinse + Spin		—	<i>Programme for treating the laundry with starch and softener or to moisten the laundry. For delicate laundry reduce the spin speed to 400 - 800 rpm.</i>	5.0	—	Yes		—	—	—					—	1200	
Spin		—	<i>Programme to spin cotton or linen laundry intensively with maximum spin speed.</i>	5.0	—	—	—	—	—	—	—	—			—	1200	
Gentle spin		—	<i>Programme to spin delicate laundry gently with a restricted spin speed.</i>	1.5	—	—	—	—	—	—	—	—	 <sup>2)</sup>		—	800 <sup>2)</sup>	
Drain		—	<i>Drain only - no spinning. Alternative method of terminating programme after “Rinse Hold”.</i>	—	—	—	—	—	—	—	—	—	—		—	—	

**N.B. This appliance is controlled by sensors. Please avoid excessive detergent dosing.**

\* : option / Yes: dosing required

<sup>1)</sup> Do not use liquid detergents.

<sup>2)</sup> For improved garment care spin speed is restricted to lower spin speed in this programme.

<sup>3)</sup> For improved garment care spin speed is zero in this programme.

## CONSUMPTION DATA

Programme	Temperature Selector (°C)	Load (kg)	Water (l)	Energy (kWh)	Approx. Programme Duration (hours : minutes)*
Cotton	90/40	5.0	49**/48	1.60/0.60	2:05/2:00
Cotton	60	5.0	48	0.95	2:05
Cotton with Eco plus***	60	5.0	48	0.85	2:10
Daily Mixed	40	3.0	45	0.45	1:00
Synthetics	60/40	2.0	55/50	0.70/0.50	1:30/1:15
Rapid Plus	30	3.0	35	0.40	0:30
Delicates	40	1.5	50	0.50	0:45
Wool	40	1.0	50	0.50	0:45
Handwash	30	1.0	35	0.40	0:35

Prewash cycle increases programme duration approximately 15 min. Consumption values were measured in normalized conditions in compliance with standard IEC 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.




 


\* The remaining time indicator can similarly deviate from the values in the table, because it takes into account the household conditions applicable at that time.

\*\* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

\*\*\*Reference Programme for Energy Label


## PREPARATION OF WASH CYCLE

- Close the drum door flaps and check that they are properly locked.
- Add detergents and additives into the dispenser to no more than the **"MAX"** level mark, as follows:

- Programme with pre and main wash 
- Main wash programme without prewash 
- Fabric softeners and conditioners 
- Chlorine bleach 
- Stain remover agents 
- Anti-scale agents (if necessary) 

- Turn the **programme selector knob** to the desired programme.

The remaining time of the chosen programme is shown in the display (in hours and minutes) and the indicator light of the **"Start/Pause"** button flashes.

The predefined temperature & spin speed corresponding to the selected programme are indicated in the display. The temperature (+/-) and spin speed  can be changed by pressing the corresponding button.

## SELECT THE DESIRED OPTION

**When you select an option authorized by the programme, the corresponding indicator lights up, except if the combination of programme, additional options and temperature is not possible.**

### "Easy Ironing" button

- Can be used together with "Cotton", "Synthetic" and "Daily Mixed" programmes to make ironing easier.
- Increases the water quantity in rinsing and the clothes are spun in a softer manner.

### "Eco plus" button

- With a modified temperature profile and a slightly prolonged washing duration, the optimum combination of excellent washing result and even lower energy consumption can be achieved.

### "Prewash" button

 
- Only for heavily soiled loads (for example mud, granular dirt).

### "Intensive Rinse" button

- The amount of water is increased to ensure a more intensive rinse.
- This option is particularly suitable for areas with very soft water or washing linen laundry for people with skin allergies.

### "Rinse Hold" button


- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing from fading.
- This option is particularly recommended for the "Synthetic", "Delicate" and "Daily Mixed" programmes.
- Use this option if you want to postpone spinning to a later time, or if you want to drain only.

**Note:** The programme with "Rinse Hold" stops when the "Rinse Hold"  is indicated in the display.


### Appliance in "Rinse Hold":

- If you want to continue the programme press the **"Start/Pause"** button again: The programme will terminate automatically with the selected spin cycle. If the load is dry then please press the **"Start/Pause"** button.
- If you do not wish to spin the load, turn the programme selector knob to the "Drain" programme and press the **"Start/Pause"** button.

### "Spin Speed Reduction" button

- Every programme has an automatically allocated maximum spin speed.
- Press the button  until you have reached the requested spin speed indicated in the display.
- If the spin speed **"0"** is selected, the final spin is cancelled, but not the intermediate spins. The programme ends with a drain cycle.

## START DELAY

The "Start Delay" button  allows the user to run the appliance at his convenience, for example at night when electricity is cheaper.

- Select programme, temperature and options.
- Press the "Start Delay" button several times to select the delay time by 1 to 24 hours (selected delay is indicated in display);
- Press the **"Start/Pause"** button. The indicator light of the **"Start/Pause"** button lights up, the lamp of the "Start Delay" button flashes and the selected delay is indicated in the display.
- The time delay indication disappears when the programme starts and is replaced by the remaining time.
- The number of hours preselected can be reduced later by pressing the "Start Delay" button again.

### To cancel the pre-selected "Start Delay"

- Turn the programme selector to the **"0"** position.
- Reselect the desired programme and options and press the **"Start/Pause"** button.

## PROGRAMME START

Open the tap and press the **"Start/Pause"** button. The indicator light of the **"Start/Pause"** button lights up. At programme start the sequences reached by the programme are indicated in the display.

**Note:** If there's a power cut during the cycle, the programme will continue automatically from where it was interrupted.

## LID LOCK

For safety reasons, the lid is locked during certain phases of the cycle. At the end of the cycle or during an interruption, the lid unlocks automatically after about 1 minute.

## END OF WASH CYCLE

- Upon programme end **"End"** is shown in the display.
- 1. Turn the programme selector to the **"0"** position.
- 2. Close the tap.
- 3. Open the lid and the door flaps and unload the appliance.

## CHANGE THE PROGRAMME OR OPTIONS DURING THE CYCLE

Press **"Start/Pause"** button. Select new programme and/or new options, temperature and spin speed and press **"Start/Pause"** button again. The new programme will continue at the same position where the previous programme was interrupted. Do not add detergent for this programme.

**Note:** The "Start Delay" and "Prewash" cannot be selected after a programme change.

## PAUSE/INTERRUPT A PROGRAMME

If, for adding some forgotten pieces of clothing or any other reasons, you wish to interrupt or pause the programme for a certain time and continue it later:

- Press the **"Start/Pause"** button. The light flashes.
- After the desired pause, press again on the **"Start/Pause"** button.

## CANCEL PROGRAMME

To cancel a programme please press **Reset** button for 3 seconds.

**Note:** After power cuts or disconnection from the mains after programme end, the LCD display may show the previously selected settings. In this case we suggest to check laundry's humidity in drum. If laundry is damp, the cycle finished properly. Unload the drum and press **Reset Button** for 3 seconds before selecting a new cycle for next laundry.