



Digital Video Recorder System



USER MANUAL



TABLE OF CONTENTS


Chapter 1. Main System Application (Control) -----	4
3.1 Startup Screen-----	4
3.2 Login-----	4
3.3 Exit/Logout-----	5
3.4 Control Screen-----	5
3.5 Setup-----	6
3.5.1 System -----	6
3.5.1.1 System Information-----	6
3.5.1.2 System Power Management-----	7
3.5.1.3 Auto Switching Interval-----	7
3.5.1.4 E-Map-----	7
3.5.1.5 TV-out-----	9
3.5.1.6 On-Screen Display-----	10
3.5.1.7 Text Inserter-----	11
3.5.1.8 Hard Disk Usage-----	11
3.5.1.9 I-Phone -----	11
3.5.1.10 Version Info.-----	12
3.5.1.11 Maintenance Log-----	12
3.5.2 Device-----	12
3.5.2.1 Camera-----	13
3.5.2.2 Output Device -----	19
3.5.2.3 Input Device-----	20
3.5.2.4 Audio -----	21
3.5.2.5 Alert-----	22
3.5.3 Event-----	23
3.5.3.1 Input-----	23
3.5.3.2 Motion Detection-----	24
3.5.3.3 No Video Signal-----	25
3.5.4 Schedule -----	25
3.5.4.1 Camera-----	25
3.5.4.2 Input-----	26
3.5.5 Network-----	27
3.5.5.1 DVR Server-----	27
3.5.5.2 Web Sever-----	28
3.5.5.3 Central Station-----	28
3.5.5.4 E-mail -----	29
3.5.5.5 Dial Alarm-----	30
3.5.6 User-----	30
Chapter 2 View Log Application (Status) -----	32
4.1 Screen Features-----	33
4.1.1 Event Log-----	33
Chapter 3 Playback Application (Search) -----	34
5.1 Search Features 1 -----	34
5.2 Search Features 2 -----	35
5.2.1 Playback-----	35
5.2.2 Event/Object Search -----	35
5.2.3 Bookmark & Go To-----	37
5.2.4 Save -----	38
5.2.5 Print -----	40
5.2.6 Backup-----	41
Chapter 4 Remote Monitoring System (Client) -----	43

Appendix 2 I-Phone -----86
2.1 Installation -----86
2.2 Execution -----87
2.3 Audio Setup -----88

CHAPTER 1


Main System Application (Control)

3.1 Startup Screen

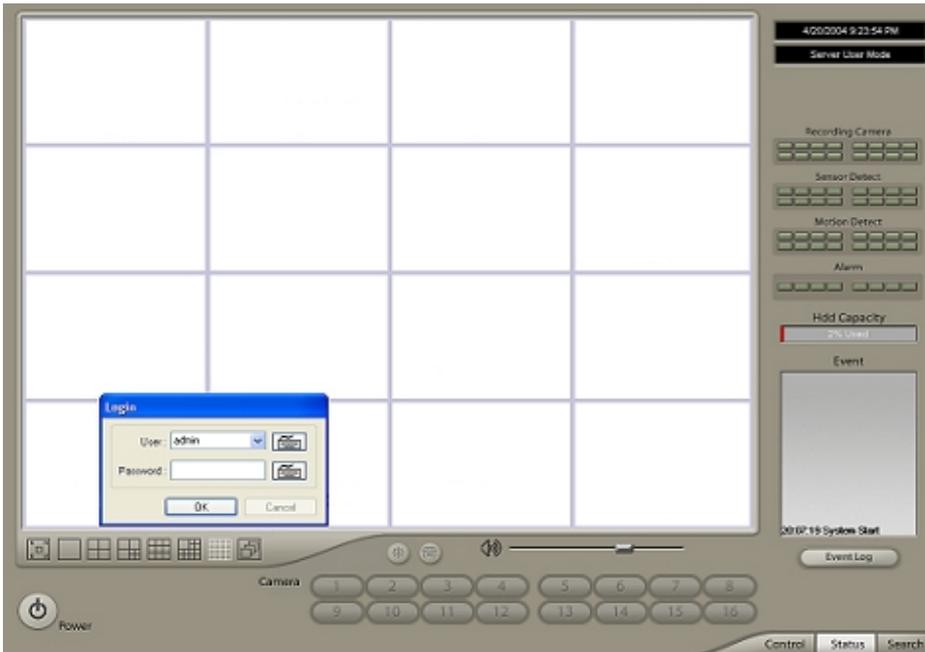

The above screen will appear as the system starts.

3.2 Login

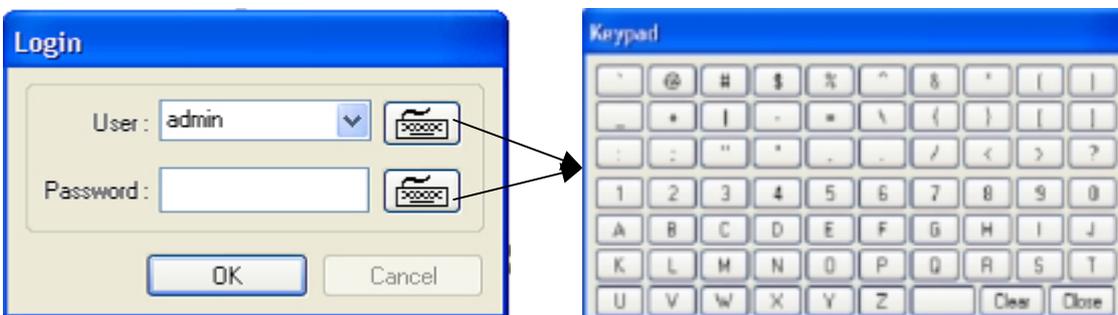


The default values for User and Password are “admin” and “no password”. Click “OK” to execute the Barracuda DVR system. To give “admin” a password and to create new users, certain configurations in the Setup are required. Only “admin” and users with appropriate authorization have access to the Setup menu.

3.3 Exit/Logout




By clicking the power button, a user will be asked as above. Select "Exit" to end the Barracuda DVR system. Note that there's a password required to exit.

3.4 Control Screen

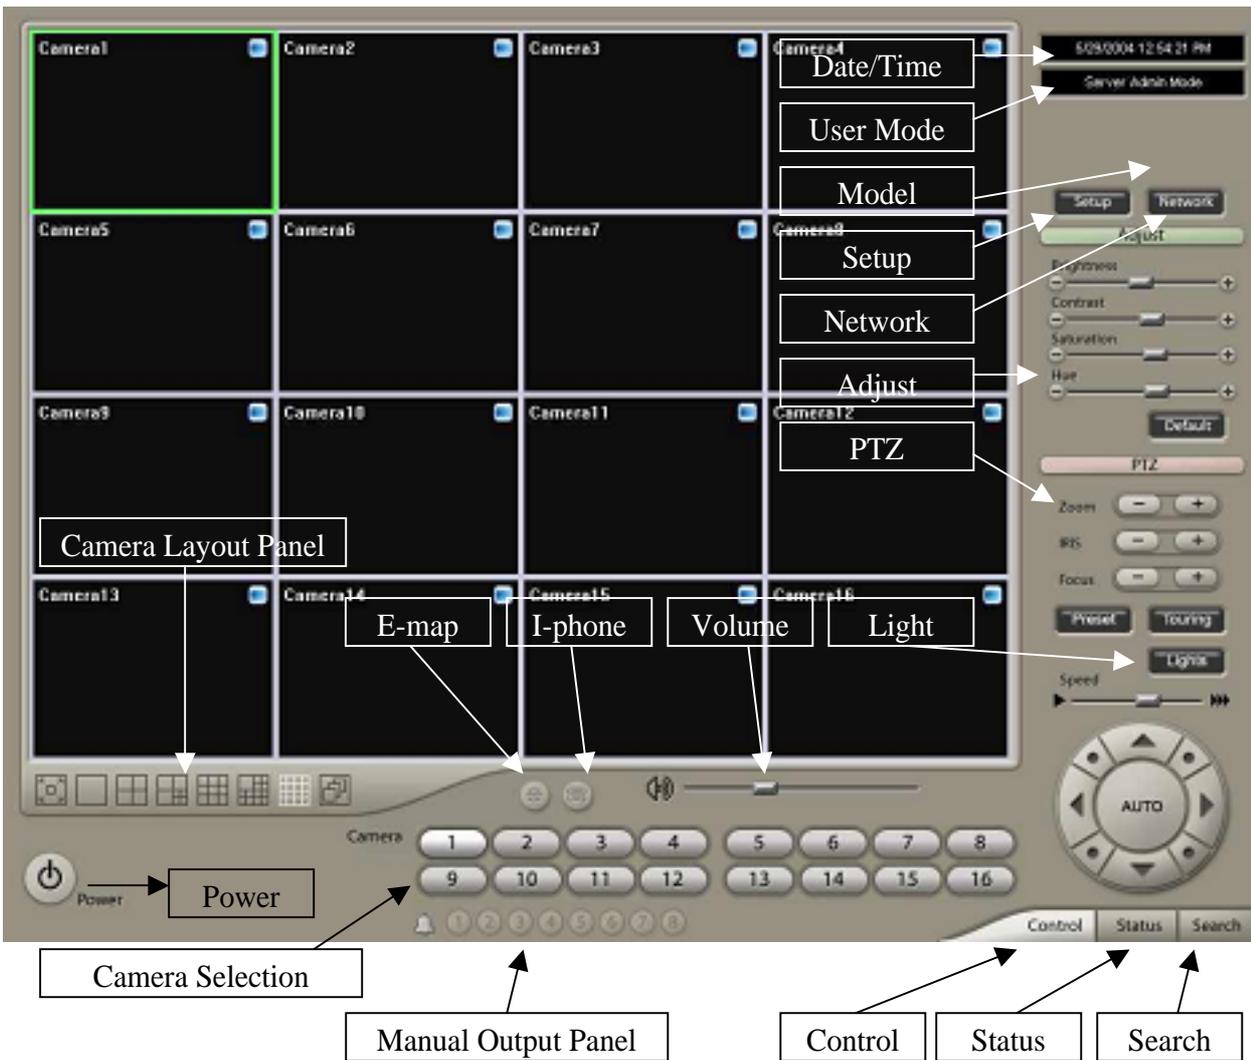


3.5 Setup

3.5.1 System

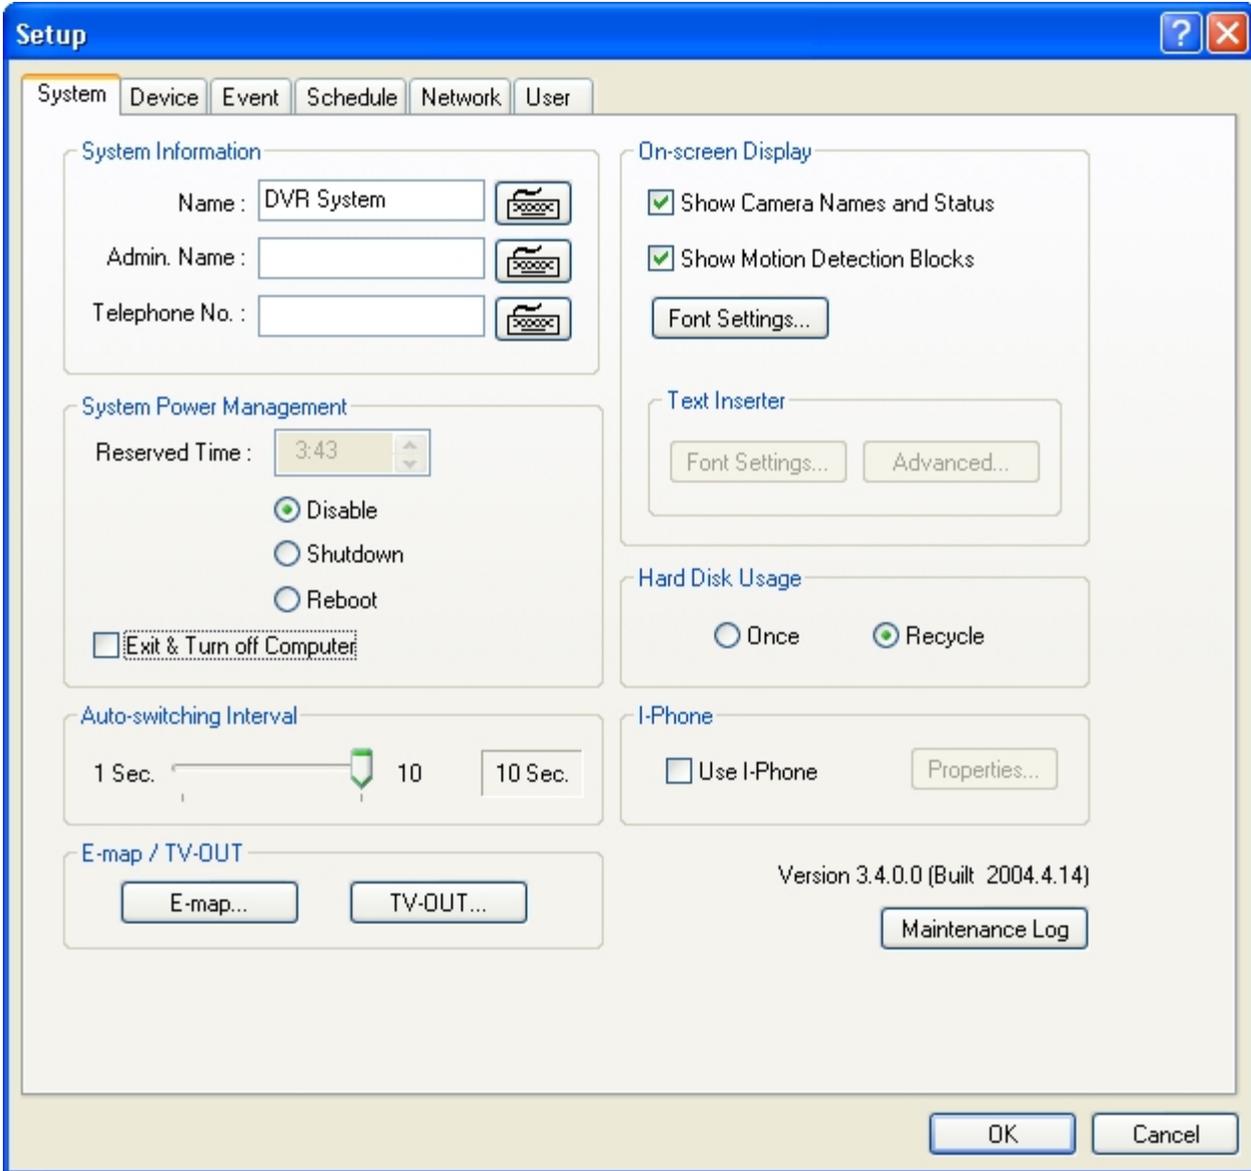


3.5.1.1 System Information

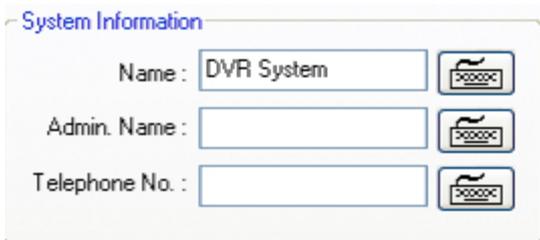

Create a name for your DVR system and put in admin info. They will be displayed on outgoing E-mails.

3.5.1.2 System Power Management

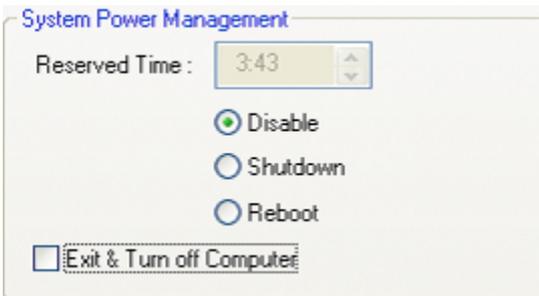



- * Reserved time: Time set to shut down or reboot computer
- * Disable: selected when the system power management is not to be used
- * Shutdown: selected when shutting down computer is required at the time set
- * Reboot: selected when rebooting computer is required at the time set
- * Exit & Turn off Computer: By checking the box, computer will be turned off automatically as a user exits from the DVR system.

3.5.1.3 Auto-switching Interval






Auto-switching Interval is a function that allows the green square around a selected camera to move to the next one at the interval set. e.g.) Camera 1 -> 10 sec. -> Camera 2 ->10 sec. -> Camera 3....


3.5.1.4 E-map

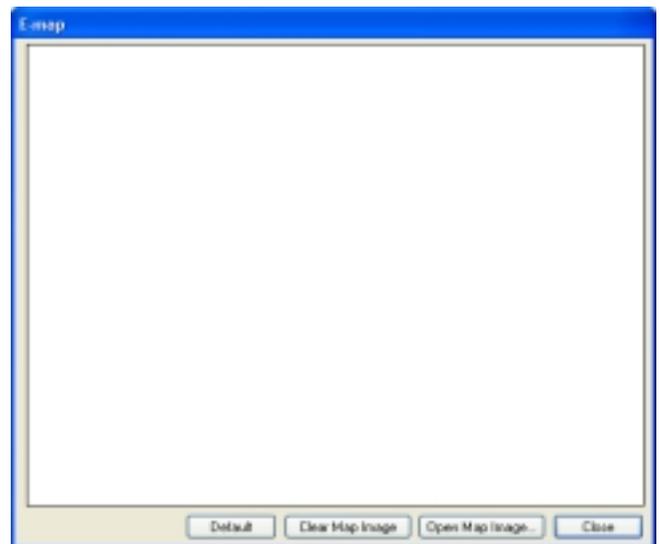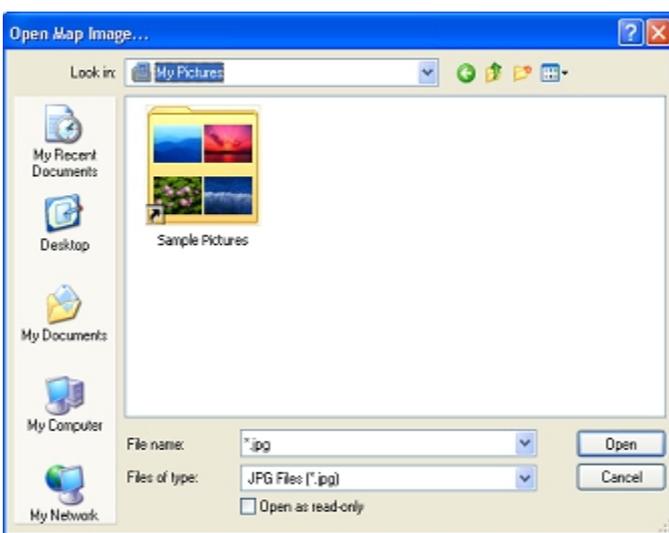

The dialog box above will be opened as a user clicks on the “E-map” button. Click on “Open Map Image” to select an E-map image.

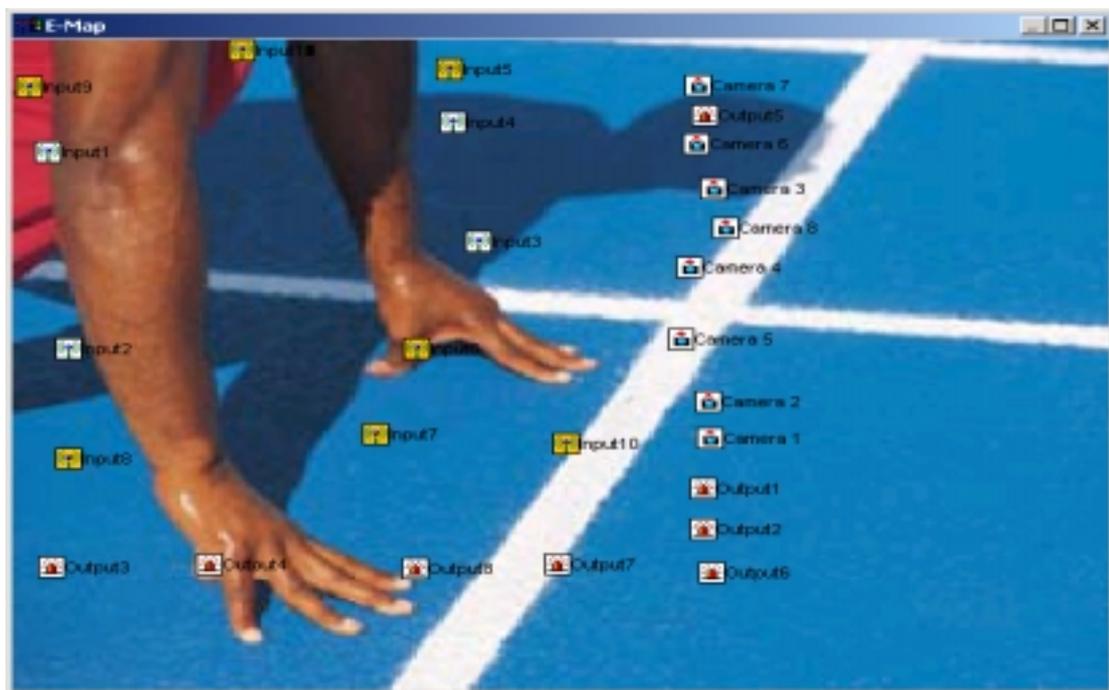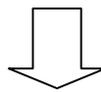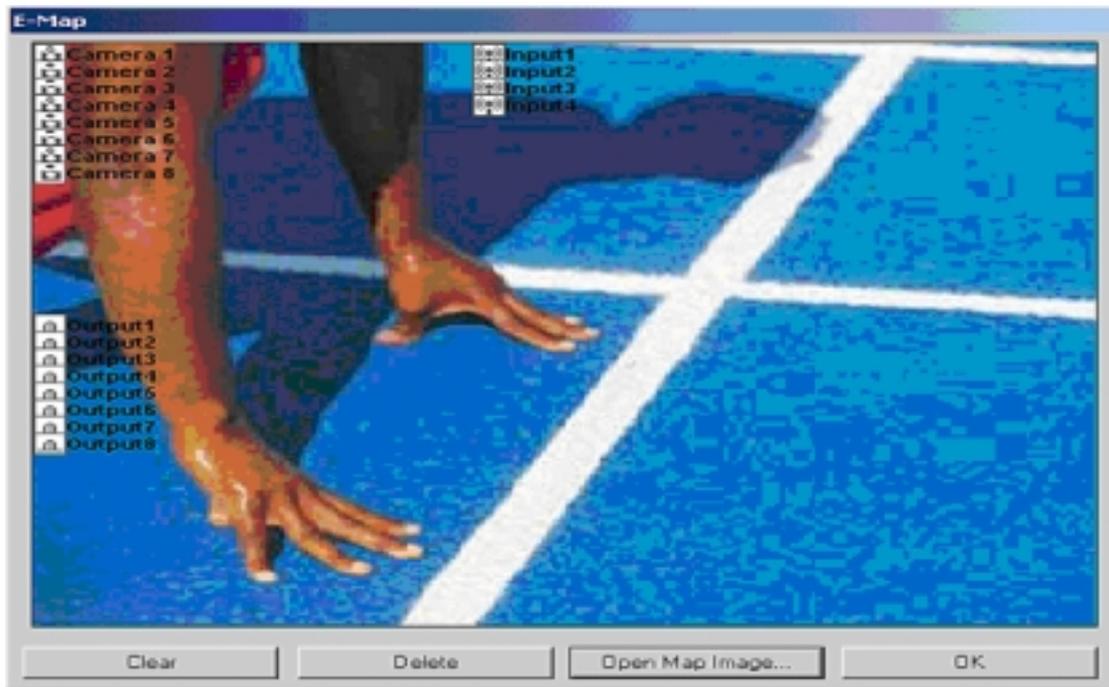

The above is a sample picture. Drag your mouse to position Camera/Input/Output and design your own E-map.

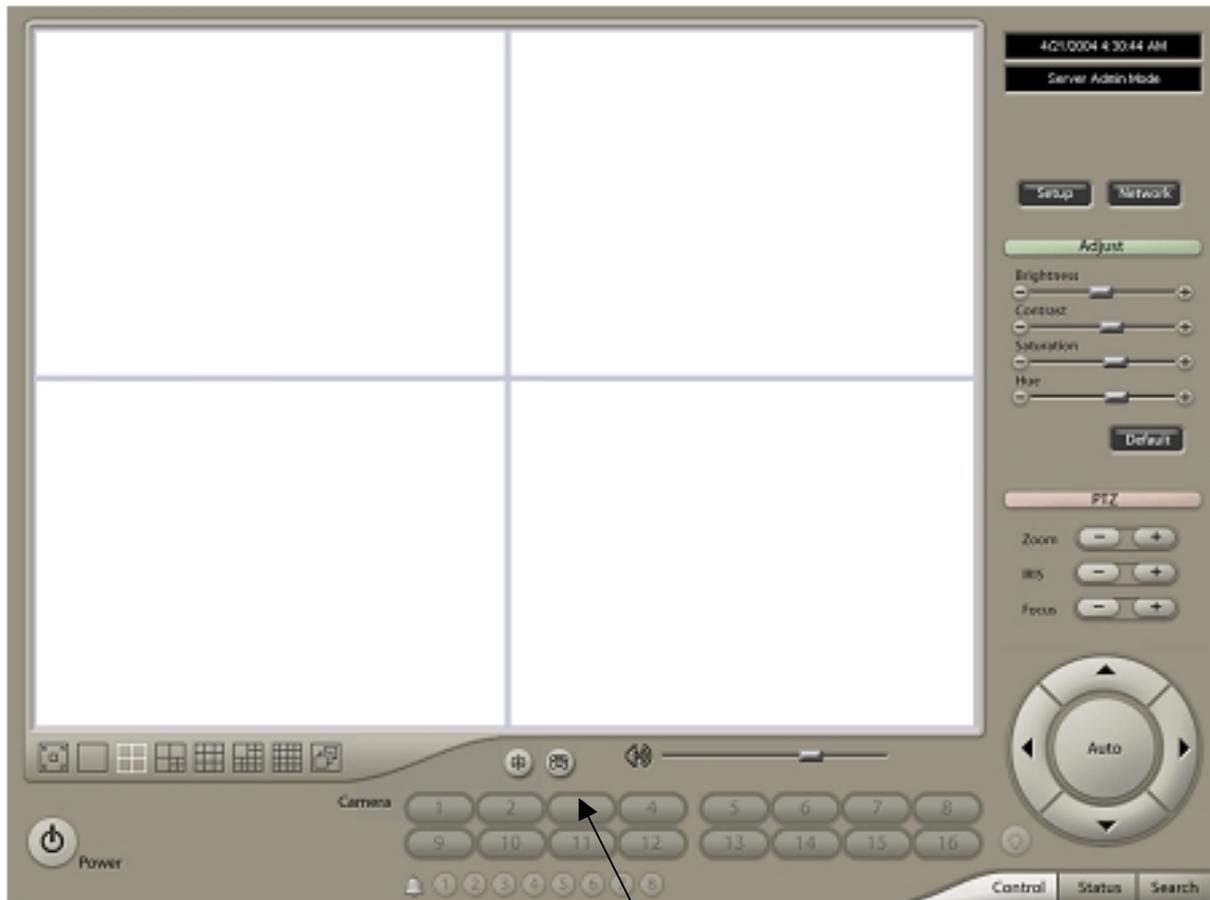


The E-map screen will appear as a user clicks on the E-map button positioned next to the I-phone button.
 White Camera: Not on Recording, Yellow Camera: On Recording,
 White Input/White Output: Not Activated, Yellow Input/Yellow Output: Activated

3.5.1.5 TV-OUT



TV-OUT is a function that sends a selected camera to a call monitor (external analog monitor). Click on the “TV-OUT” button for setup.

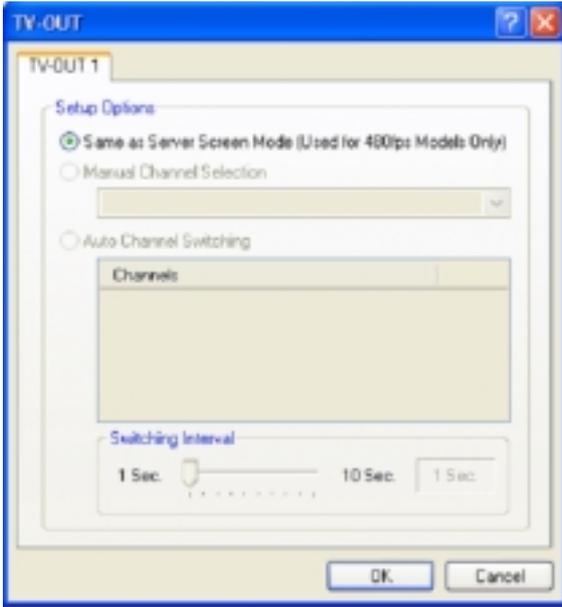



* The models such as CD (240FPS/240FPS) & LD16 (480FPS/240FPS) support 2 TV-Outs and the rest of models support 1.

* Setup Options:

1. Same as Server Screen Mode (For LS (480FPS/120FPS) only) - TV-OUT Monitor displays what's on DVR server.
2. Manual Channel Selection - A user manually selects a channel to be displayed. Once the "Manual Channel Selection" is selected, a user can also change channels manually on the Control screen by placing the mouse on a camera picture and clicking right mouse.
3. Auto Channel switching - Selected Cameras rotate to display at the switching interval set.

* Switching Interval: The length of time to stay at one camera


3.5.1.6 On-Screen Display

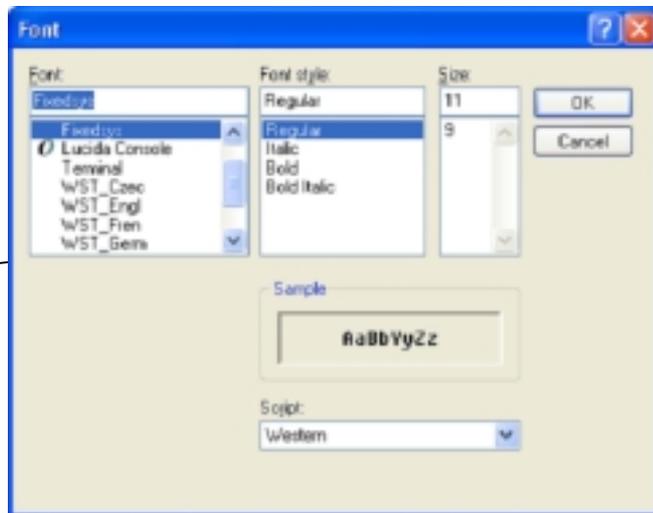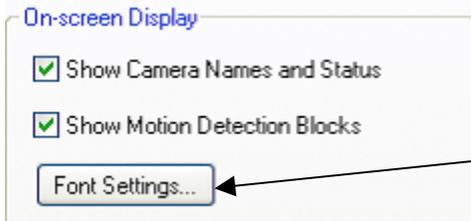

* Show Camera Names and Status: By checking it, camera names and status will be displayed on camera pictures.


* Show Motion Detection Blocks: By checking it, green motion detection blocks will be displayed on camera pictures as a user sets cameras under "M" (Setup/Schedule).

3.5.1.7 Text Inserter

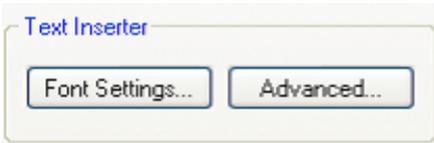


Text Inserter is a function that allows DVRs to integrate with POS machines. Simply install “text_inserter_plugin_for_pos” on DVR Server, and transactions that occur will be displayed on selected camera pictures. It enables users to search data as well. For more detailed installation, refer to Appendix 1.

3.5.1.8 Hard Disk Usage

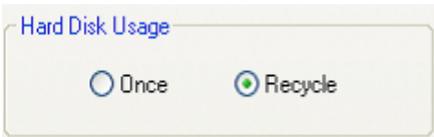


Hard Disk Usage is to select data storage method. If a user selects “Once”, data will be stored up to the point where HDD reaches its maximum capacity. If a user selects “Recycle”, data will be overwritten from the point HDD reaches its maximum capacity based on “First In First Out”.


3.5.1.9 I-Phone

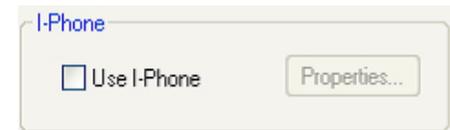

I-Phone is also called “Two-Way Communication”. Check the box, go to the Control Screen, and click on the I-Phone button for audio communication with a user on the other side of the world. For more detailed I-Phone setup, refer to Appendix 2.

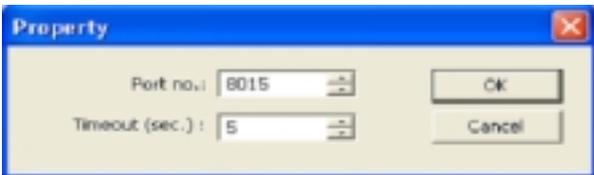

* Port No.: A port number for I-Phone use has To be set up. Normally the default value is good to use.
 * Timeout: It indicates the maximum length of connection trial. If there is no response within the value set, the call will be cancelled.

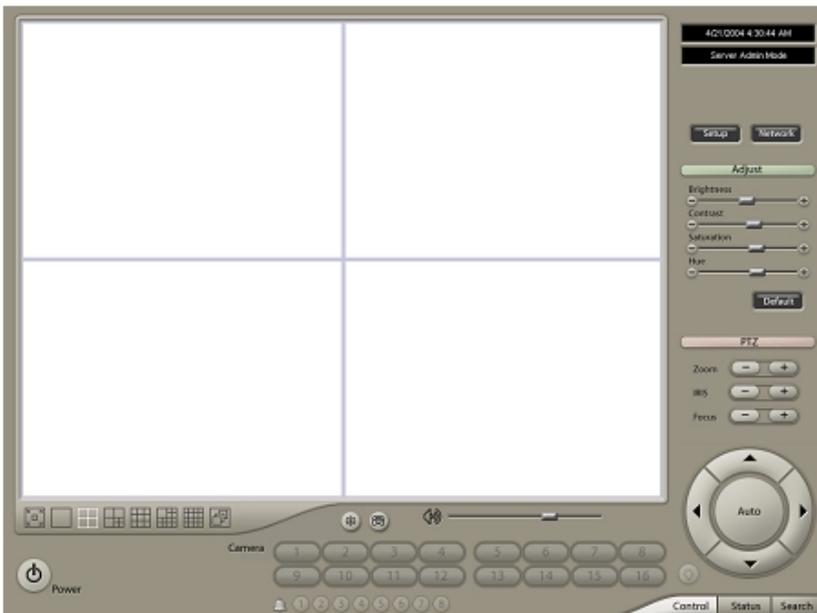

3.5.1.10 Version Info.


Version 3.4.0.0 (Built 2004.4.14)

- * Version 3.4.0.0: version name
- * Built 2004.4.14: built date


3.5.1.11 Maintenance Log

Maintenance Log

It is used to record and view maintenance history.

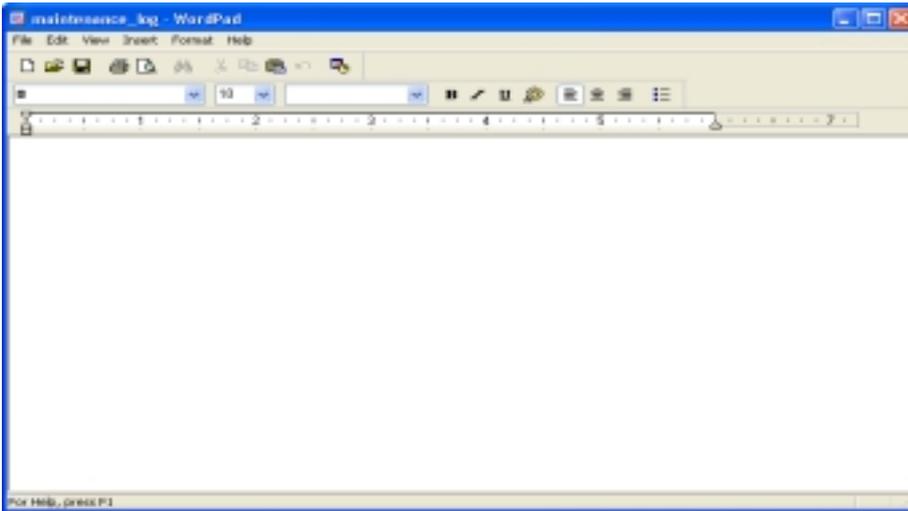

3.5.2 Device

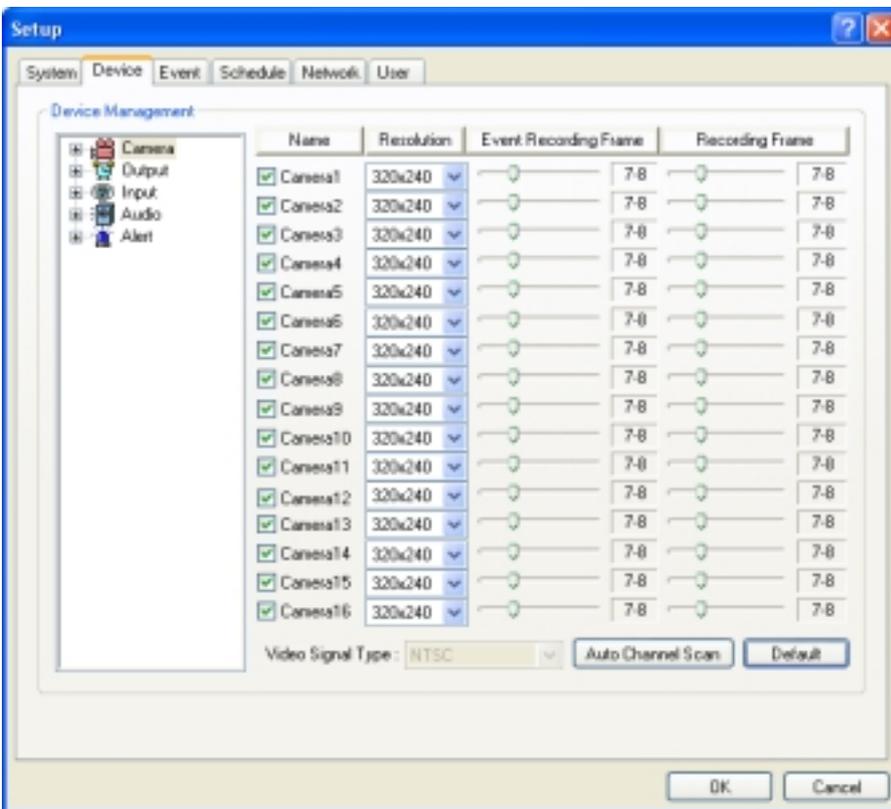


The device sub-screen is divided into 5 different setup categories; Camera, Output, Input, Audio and Alert. All devices in each category can be set up on one same page.

3.5.2.1 Camera

Checking the boxes will enable cameras.

Different resolutions and recording frame rates can be set up for different cameras.


* Video Signal Type: Select either NTSC or PAL.
 * Auto Channel Scan: It automatically identifies all the active video channels with active cameras. Make sure to always click and scan after a S/W version change.
 * Default: It sets "Event Recording Frame" and "Recording Frame" on default values.

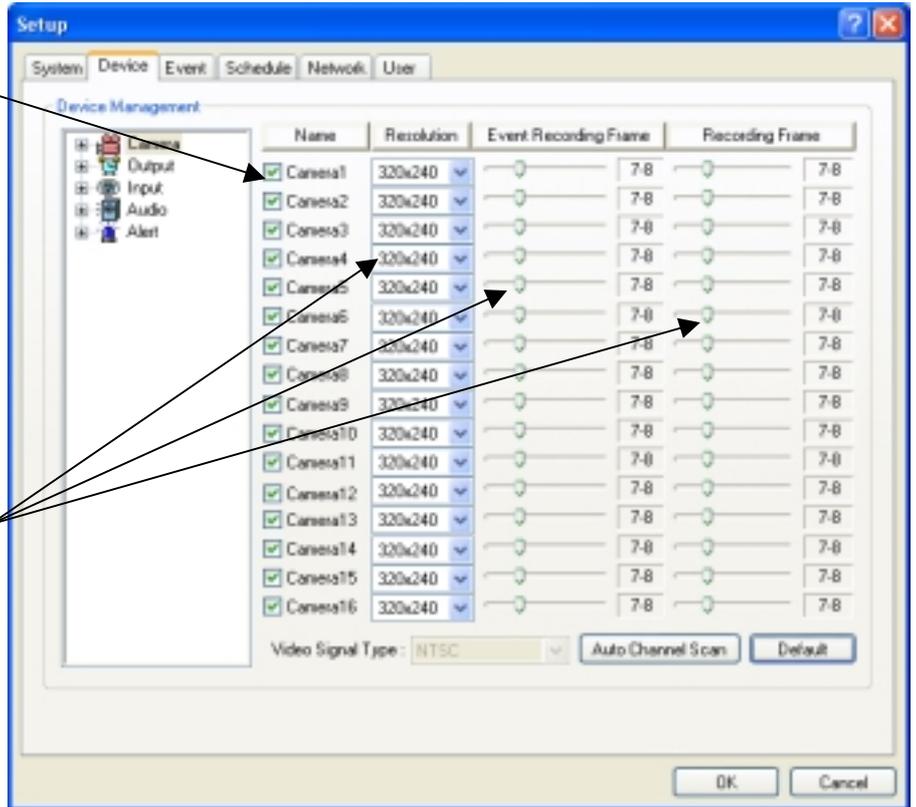

[Camera]

Double-clicking on "Camera" will lead users for more individual Camera setup.

Select recording picture quality.

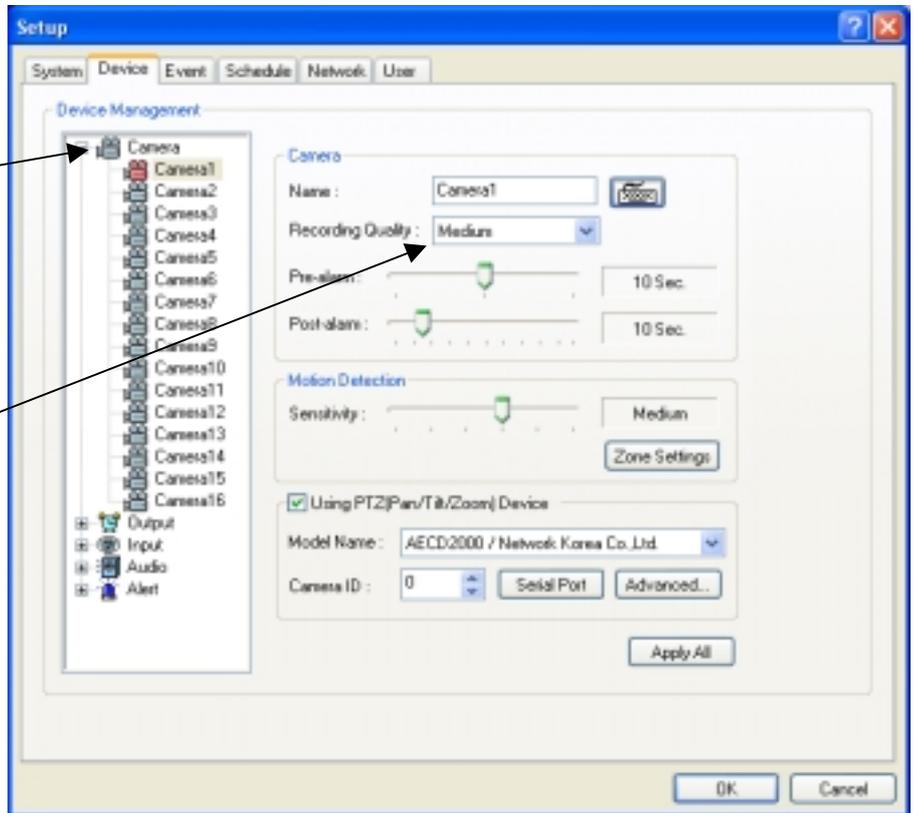


* Pre-alarm (max. 20 sec.): Length of time to be recorded before event
 * Post-alarm (max. 60 sec.): Length of time to be recorded after event

[Motion Detection]




Barracuda is designed to have unlimited motion detection zones and to have different motion detection sensitivity levels.

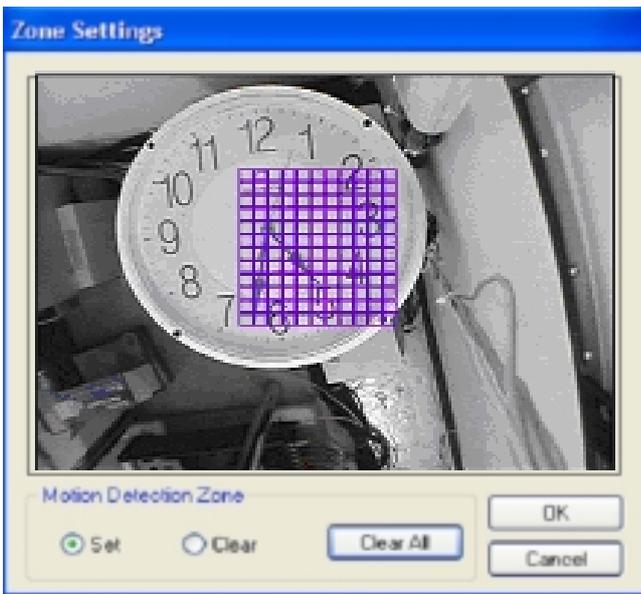

Zone Settings: 1. Select "Set", drag the mouse to set motion detection zones and click "OK". As stated above, there are no Limits in the number of zones.
2. Select "Clear" to clear certain areas inside the motion detection zones.
3. Click on "Clear All" to clear all the motion detection zones.

[PTZ Camera Setup]

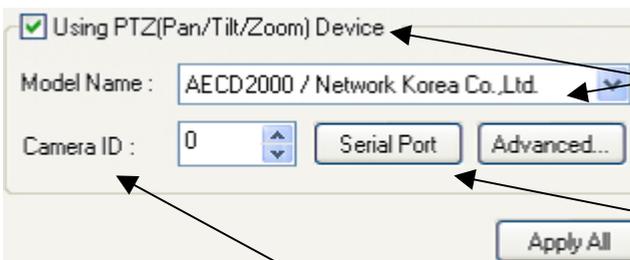


If the selected camera for setup is a PTZ camera, check the box and select a model name. Barracuda supports nearly 40 different protocols.

* Camera ID: Leave it as it is if only one PTZ camera is used. Otherwise, give each camera a different number.

Select the port that the PTZ camera is connected.


* Bit per Second: It is 9600 for most of PTZ cameras. But a few can have different values. Refer to camera manuals.

* Apply All: The same settings will be applied to the rest of the cameras by clicking "Apply All".

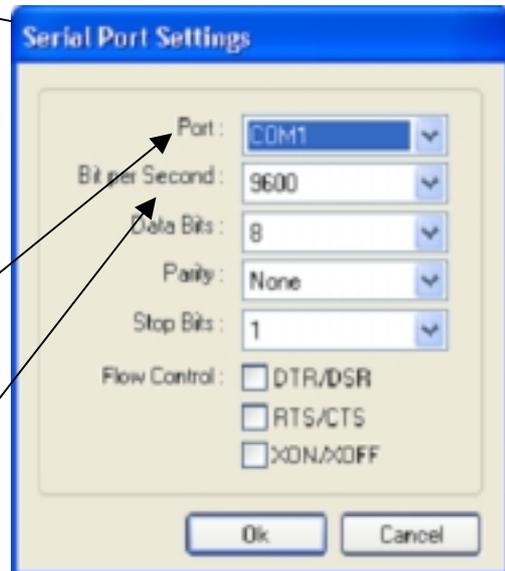


[Preset & Touring]

If a camera supports Preset and Touring, a right-mouse click will give users the below menu.

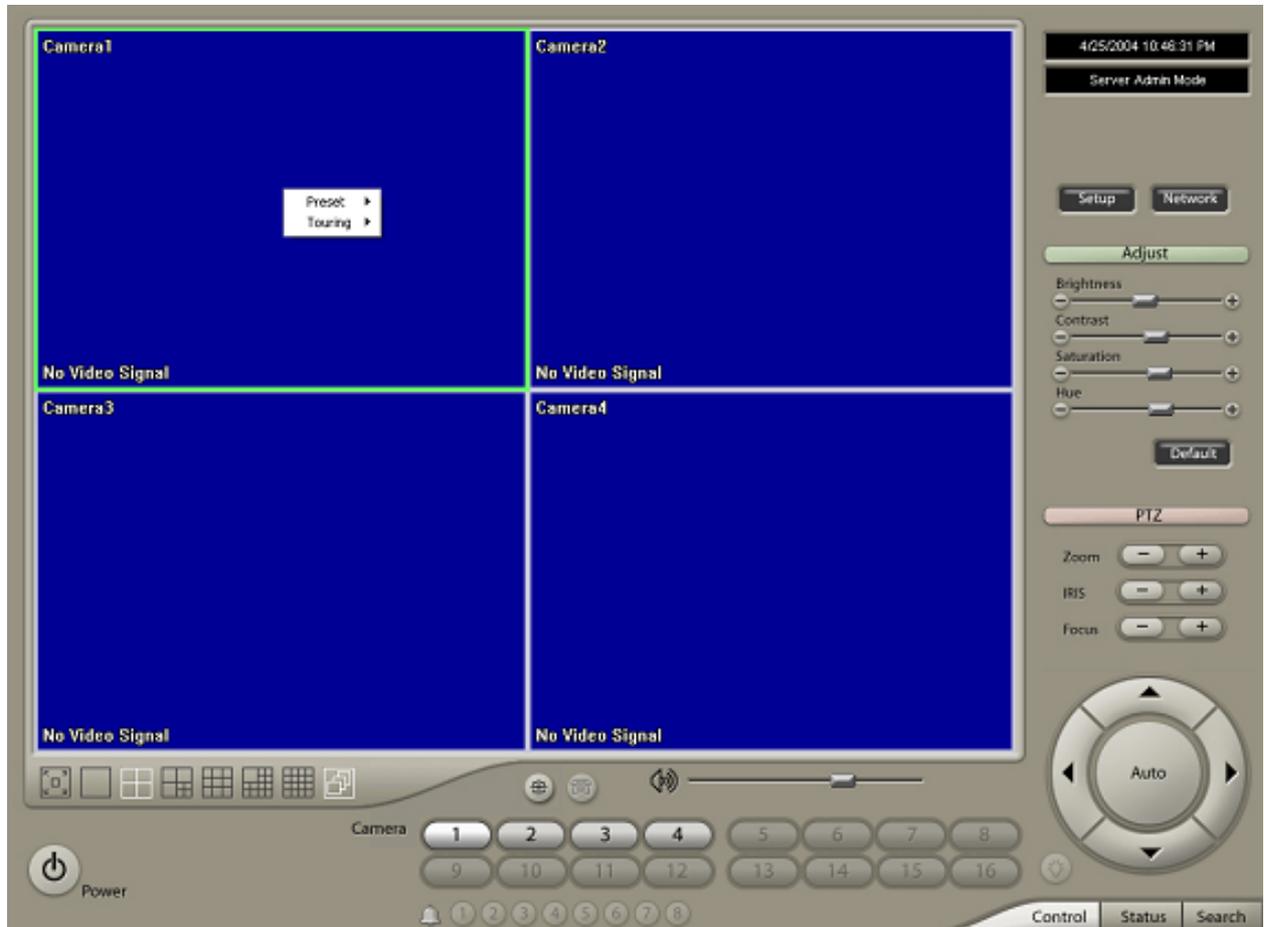

[Preset]

“Preset” is a function that enables a camera to move from one position to another automatically.

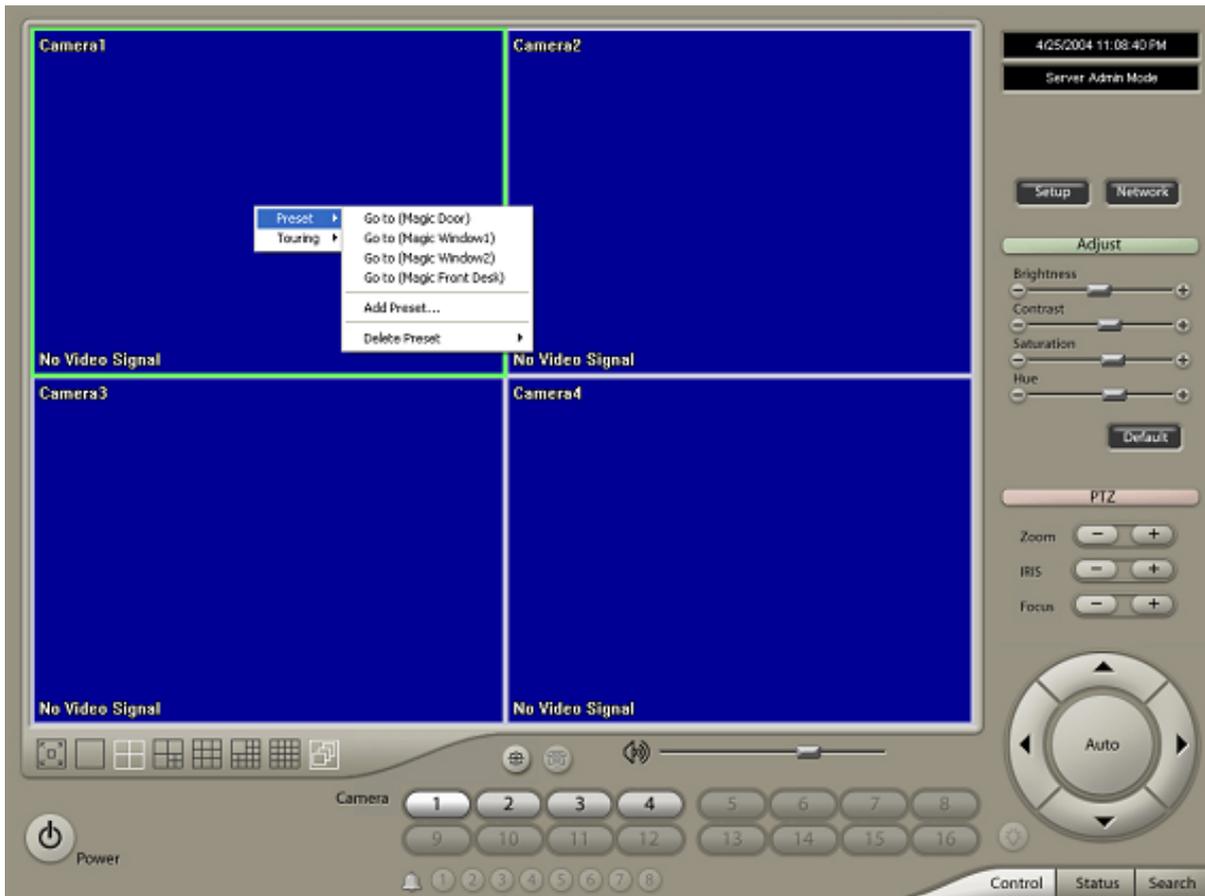


*** Steps to Set up Presets ***

1. Move the camera to a desired position using the PTZ Control on the main Control Screen.
2. Click the right mouse.
3. Name the preset.
4. Repeat the above for setting up as many as 256 presets.
5. Click the right mouse to run a preset and click the "Auto" button to stop it.



[Touring]

“Touring” is a function that enables a group of selected presets to work repeatedly.


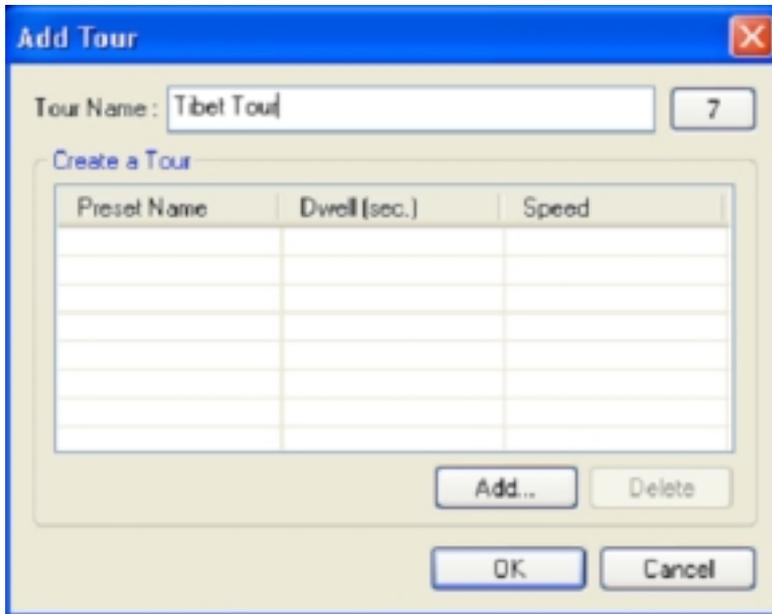


* Steps to Set up a Tour *


1. Click the right mouse.
2. Name the tour.
3. Click on “Add”.
4. Select a preset.
5. Click “OK”.
6. Repeat the above to have more than 1 preset in the tour.
7. Click the right mouse to run the tour.




- * Dwell: The length of time that a camera will pause before moving to the next preset.
- * Speed: Moving speed for a selected preset.

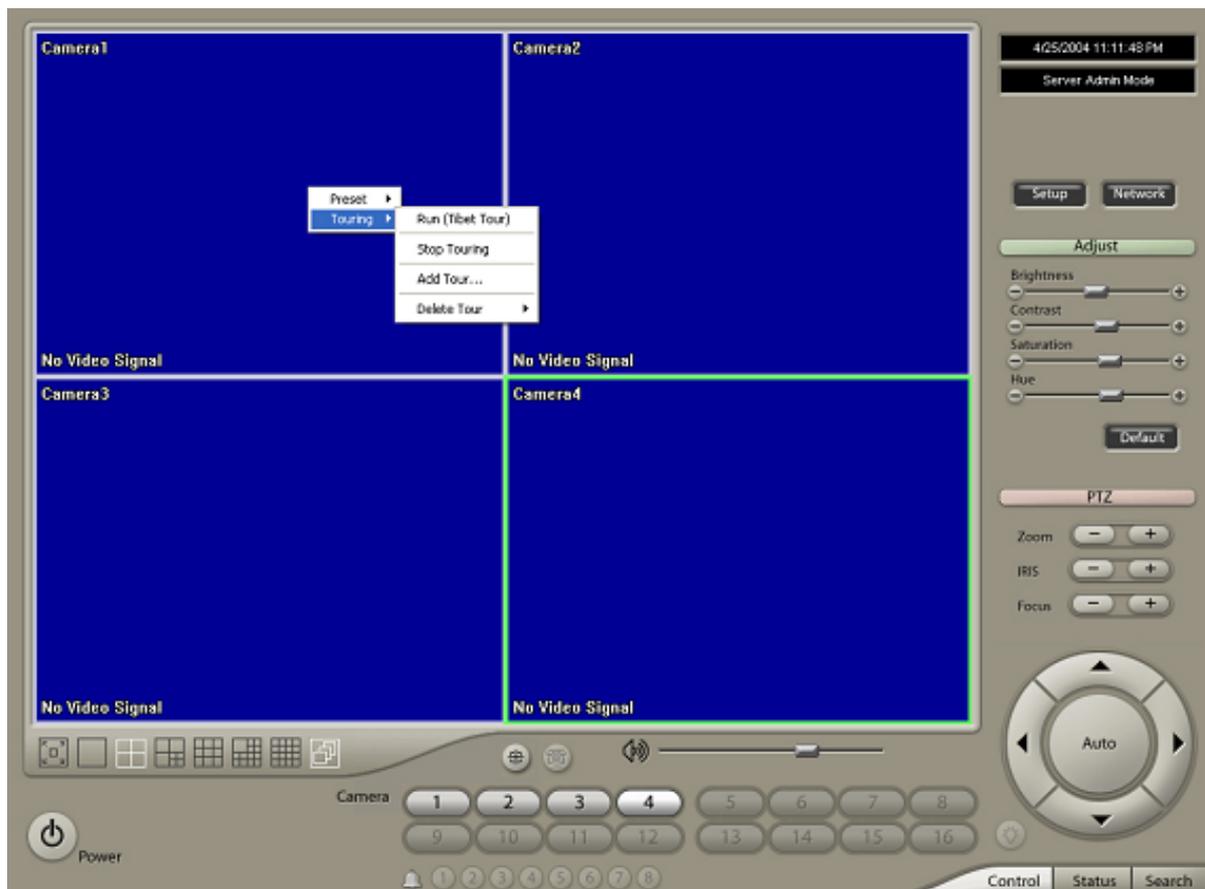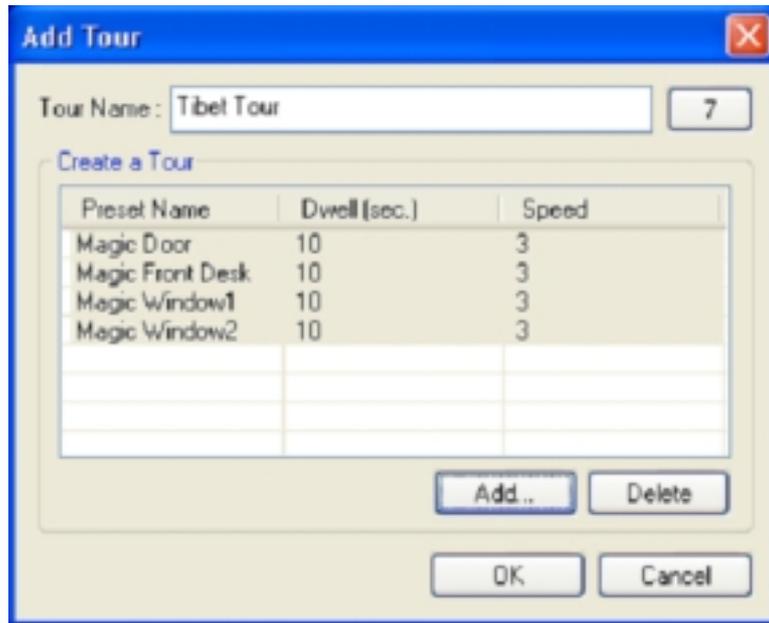

3.5.2.2 Output Device

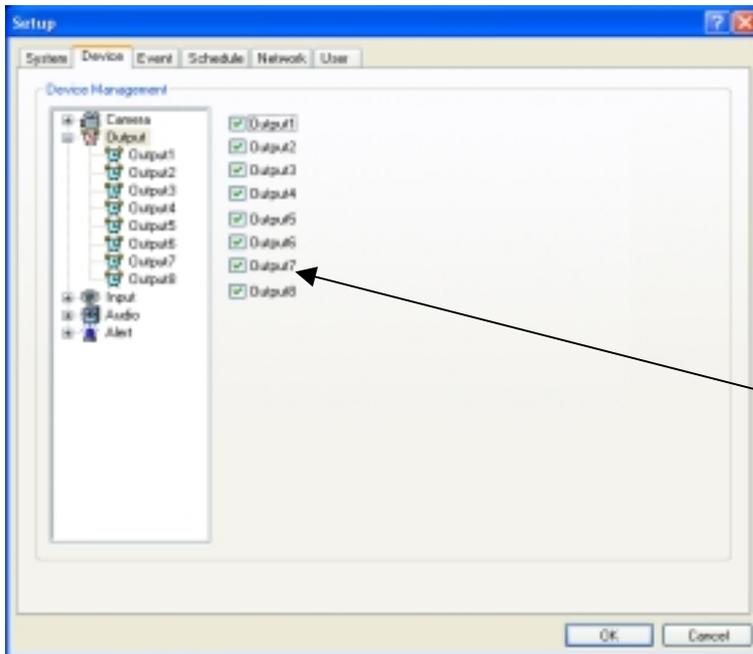



Barracuda can be equipped with as many as 8 output devices. Simply check boxes for use. In addition, outputs can be manually activated from the main control screen (Manual Alarm).

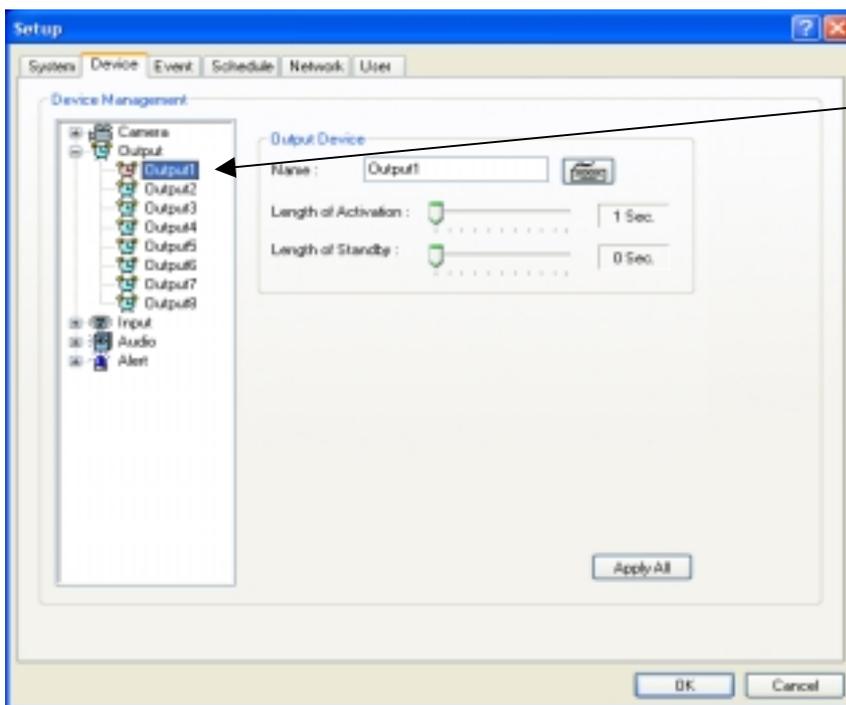



Double-click on "Output" for individual output setup.

- * Name: Users can personally name output devices.
- * Length of Activation: Users can determine how long a certain output device should be activated in the case of an event (1-60 sec.).
- * Length of Standby: It will determine how long a certain output device should be deactivated until its reactivation (0-60 sec.).
- * Apply All: The same settings will be applied to the rest of the output devices.


3.5.2.3 Input Device

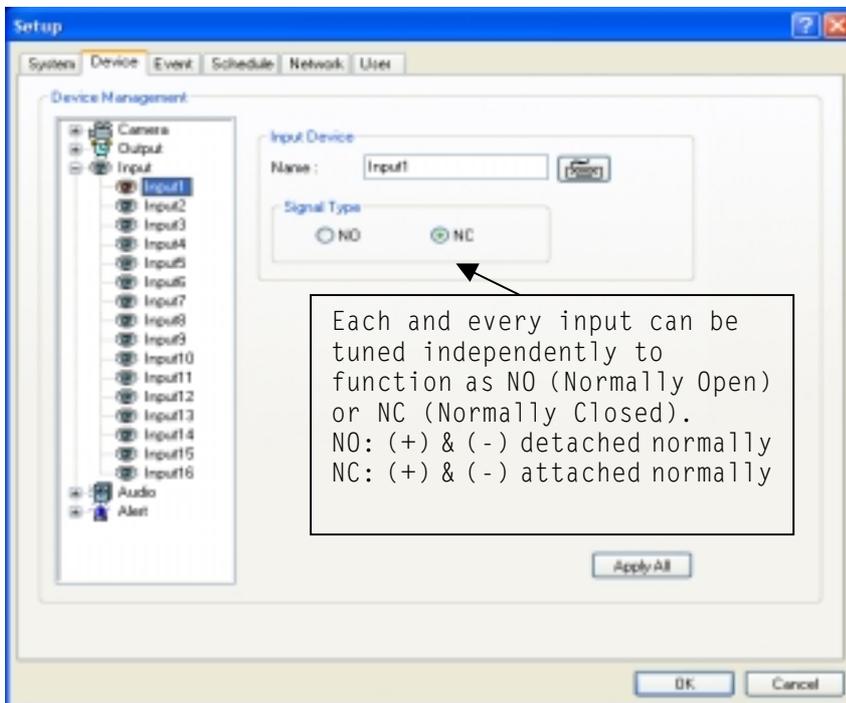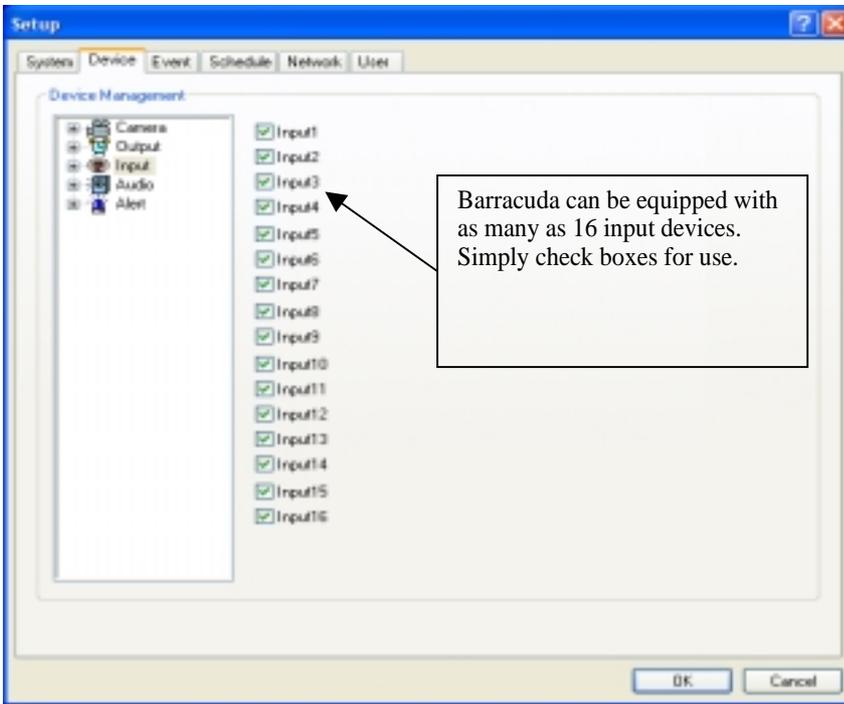


3.5.2.4 Audio

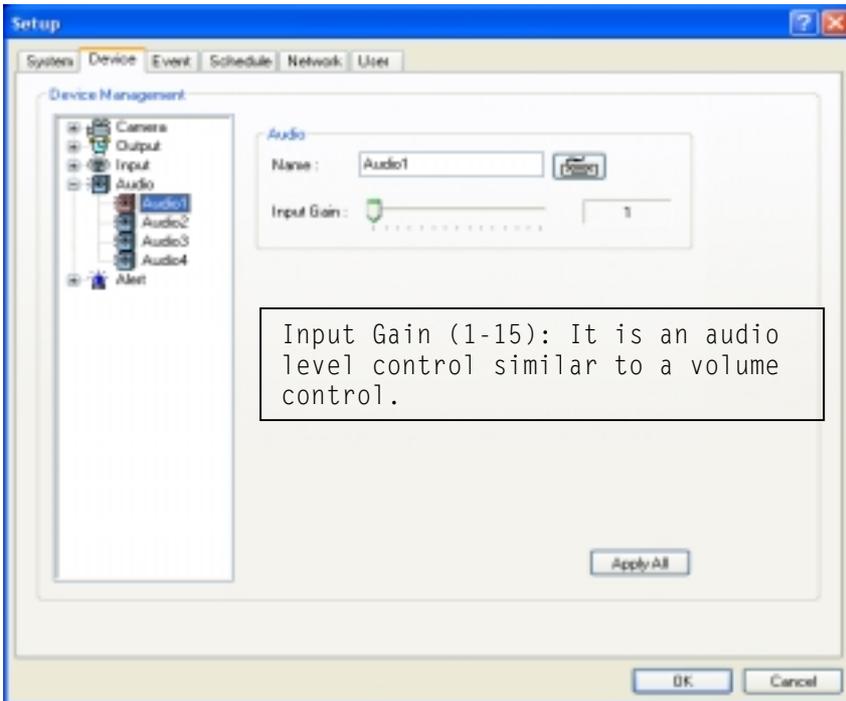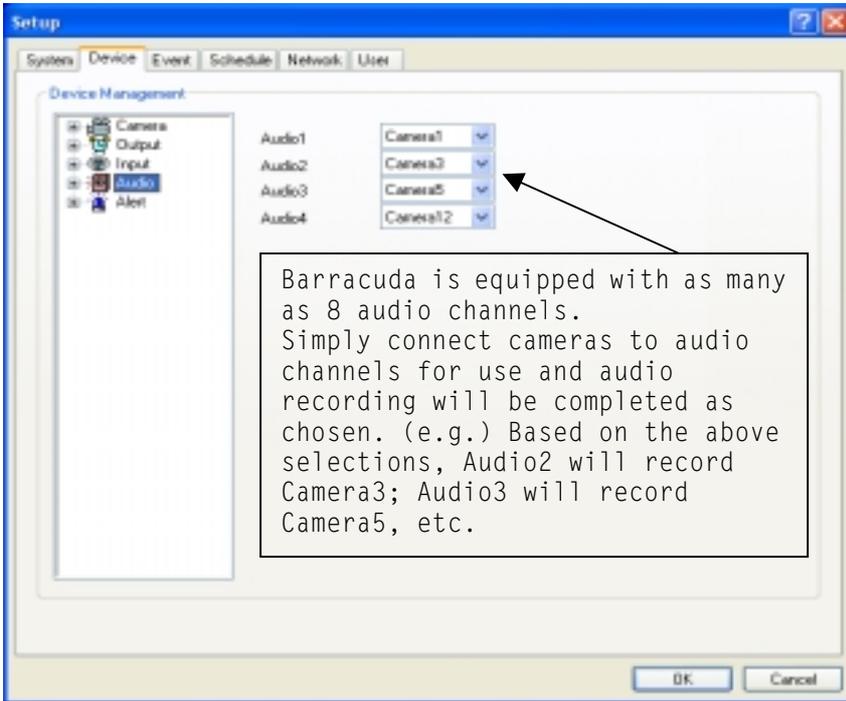

3.5.2.5 Alert

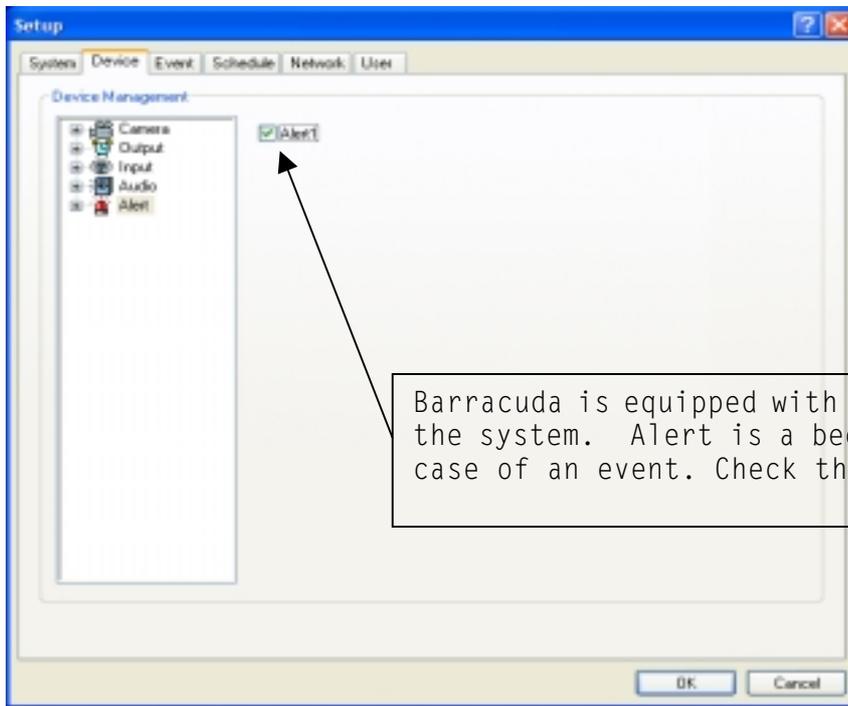

Barracuda is equipped with 1 alert device inside the system. Alert is a beep that sounds in the case of an event. Check the box for use.

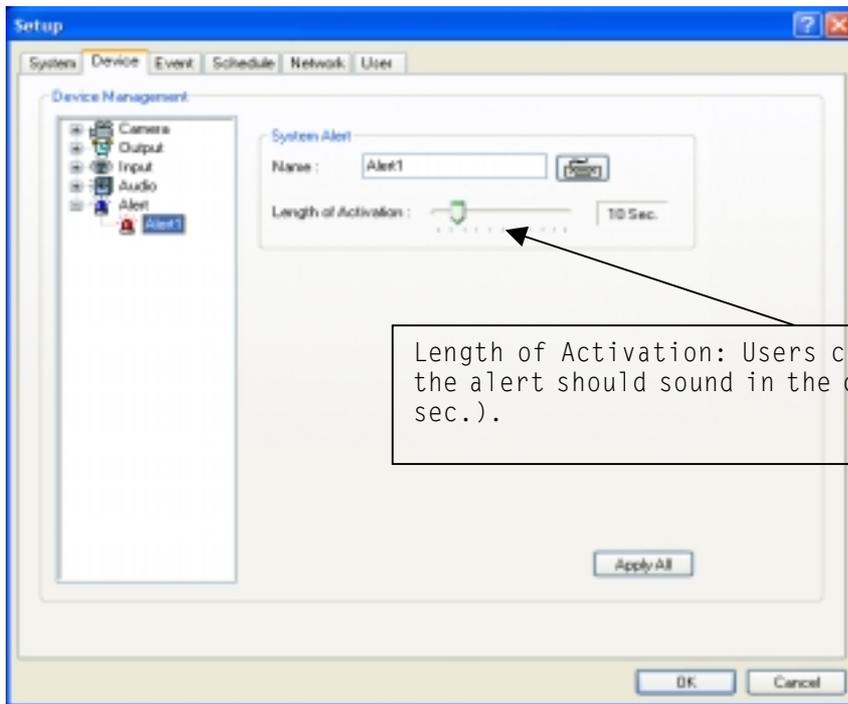


Length of Activation: Users can determine how long the alert should sound in the case of an event (1-60 sec.).

3.5.3 Event


Event consists of 3 different groups; Input, Motion Detection and No Video Signal. On this menu, users can assign devices to respond to different events.

3.5.3.1 Input

* Length of Full Screen Display: It indicates the time length for full screen display in the case of input device activation.
 * Full Screen Display Channels: Users can select camera channels to be full-screen displayed.

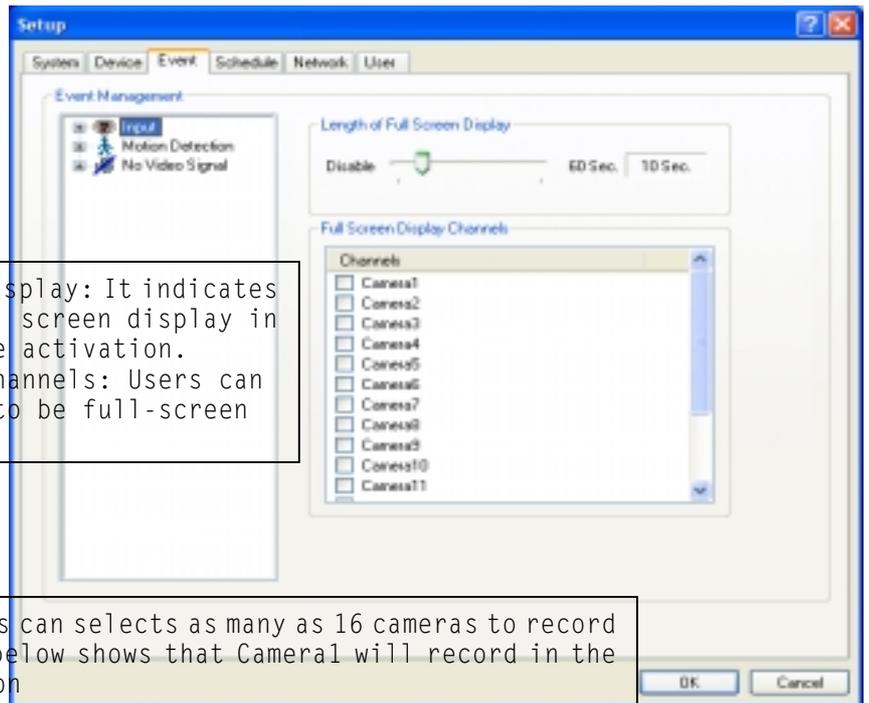



* Link to Recording: Users can select as many as 16 cameras to record for 1 input device. The below shows that Camera1 will record in the case of Input1 activation

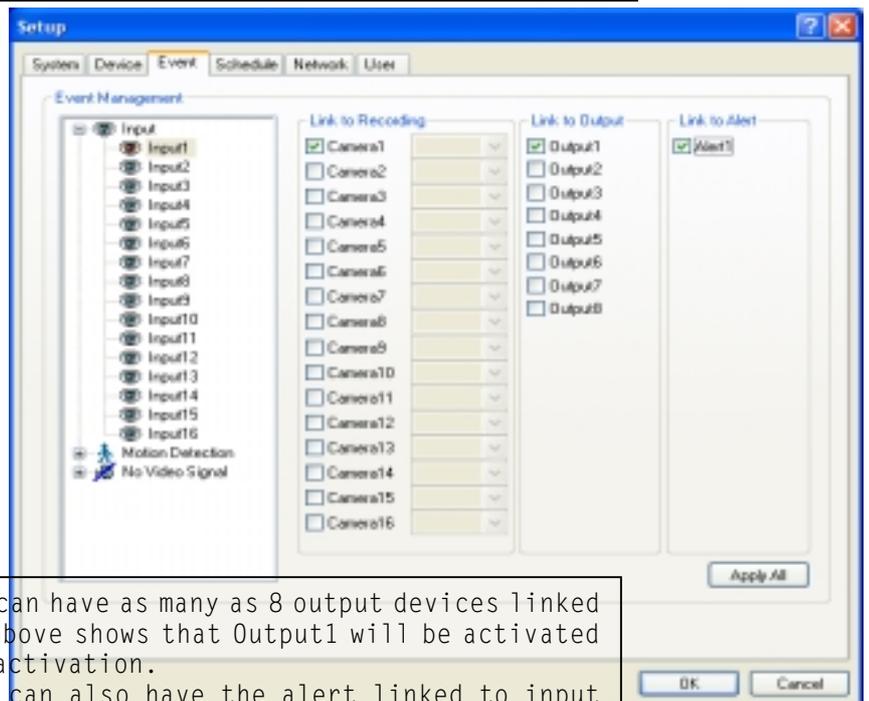


* Link to Output: Users can have as many as 8 output devices linked to 1 Input device. The above shows that Output1 will be activated in the case of Input1 activation.
 * Link to Alert: Users can also have the alert linked to input devices.

3.5.3.2 Motion Detection

The same identical concepts and methods as “Input” are applied to the “Motion Detection” setup.

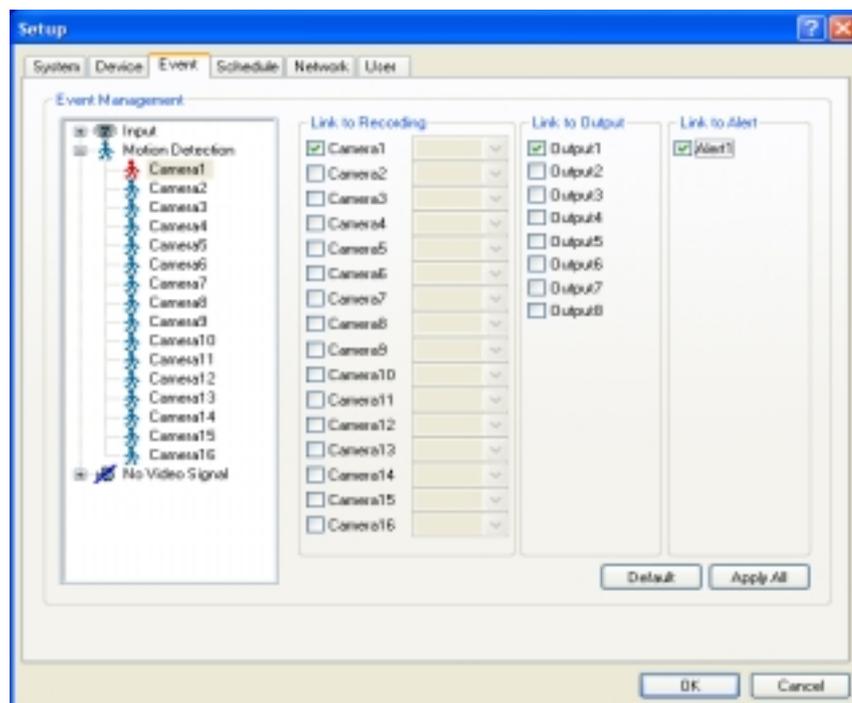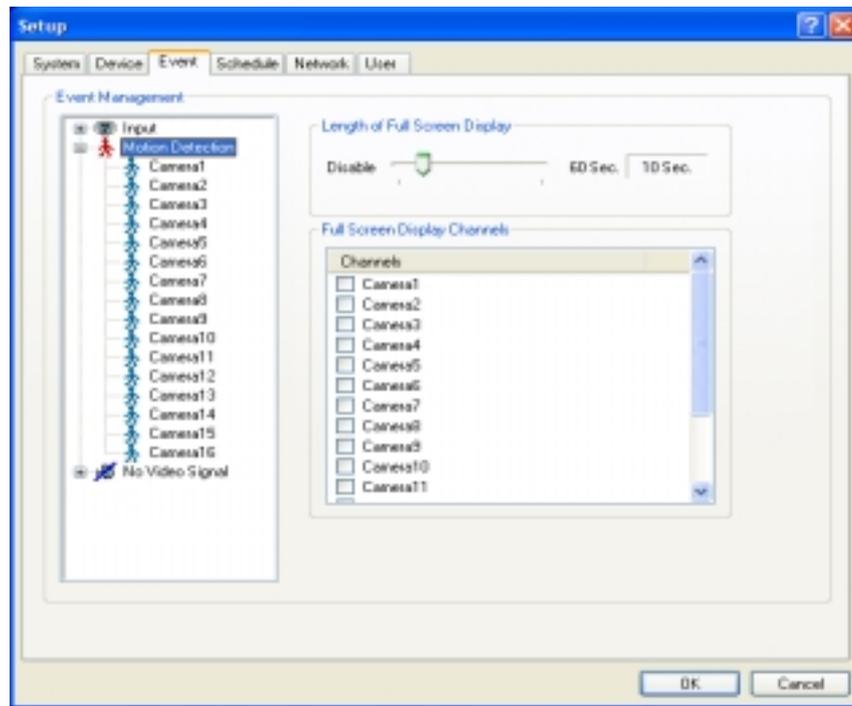


3.5.3.3 No Video Signal

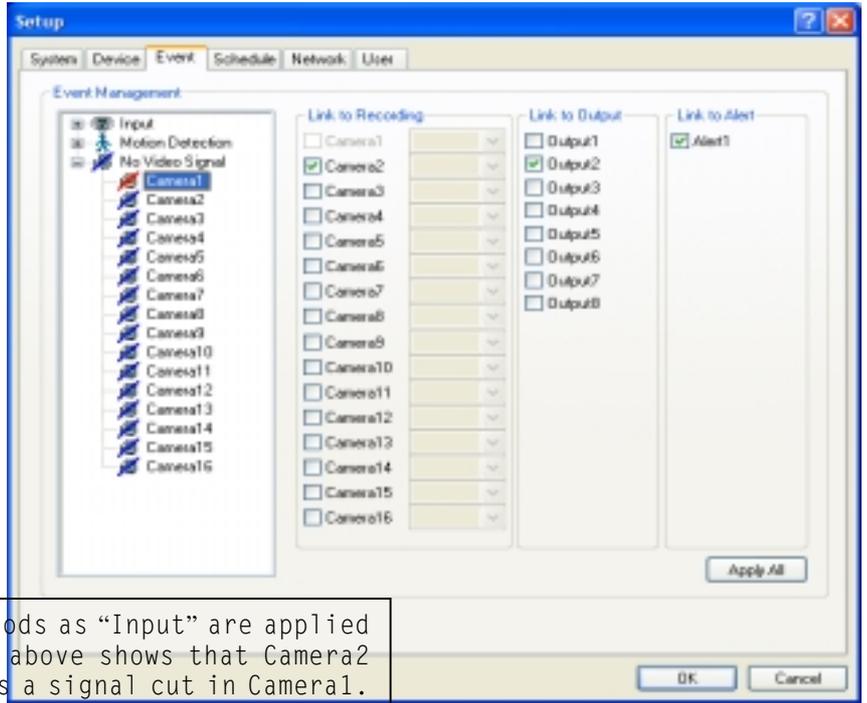

The same identical concepts and methods as “Input” are applied to the “No Video Signal” setup. The above shows that Camera2 will take over and record if there is a signal cut in Camera1.

3.5.4 Schedule


“Schedule” enables users to assign each camera, input or output its own activities.

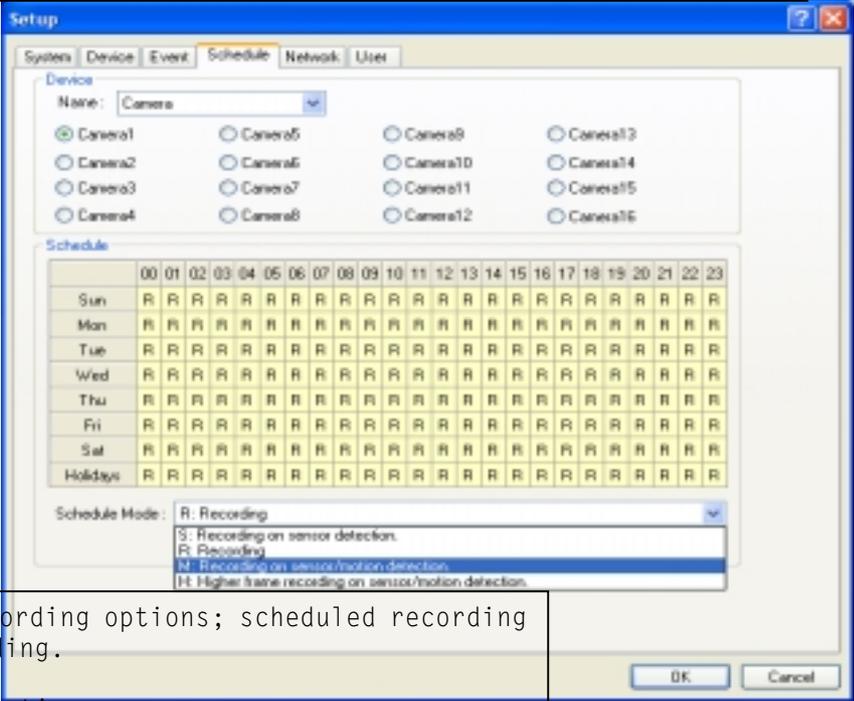

3.5.4.1 Camera


Each camera can have different recording options; scheduled recording by time & day and selective recording.

- * R: Recording at all times
- * M: Recording only on motion detection
- * S: Recording only on sensor detection
- * H: Recording at all times and higher frame recording on sensor/motion detection

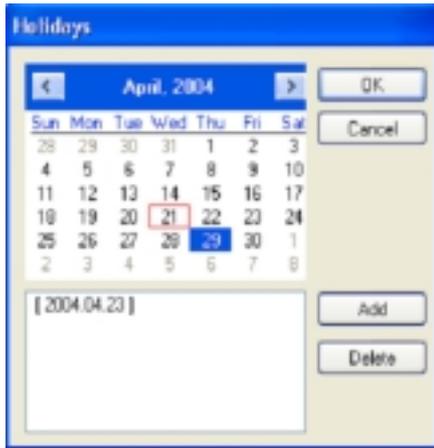


Holiday recording schedule set at the bottom of the "Schedule" table will be applied to selected dates.



3.5.4.2 Input

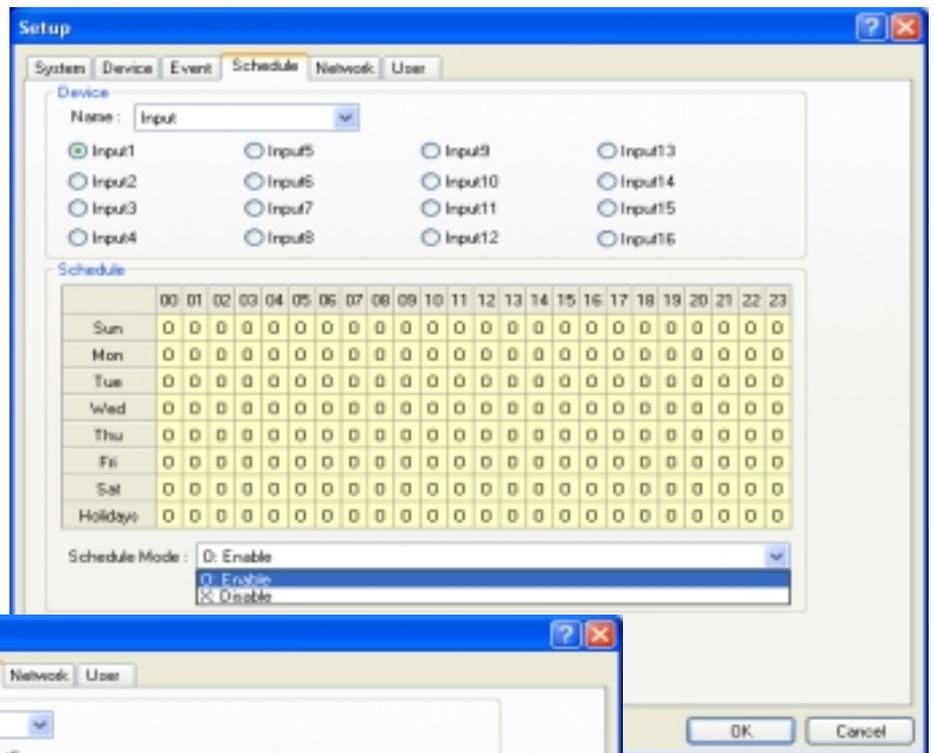

3.5.4.3 Input

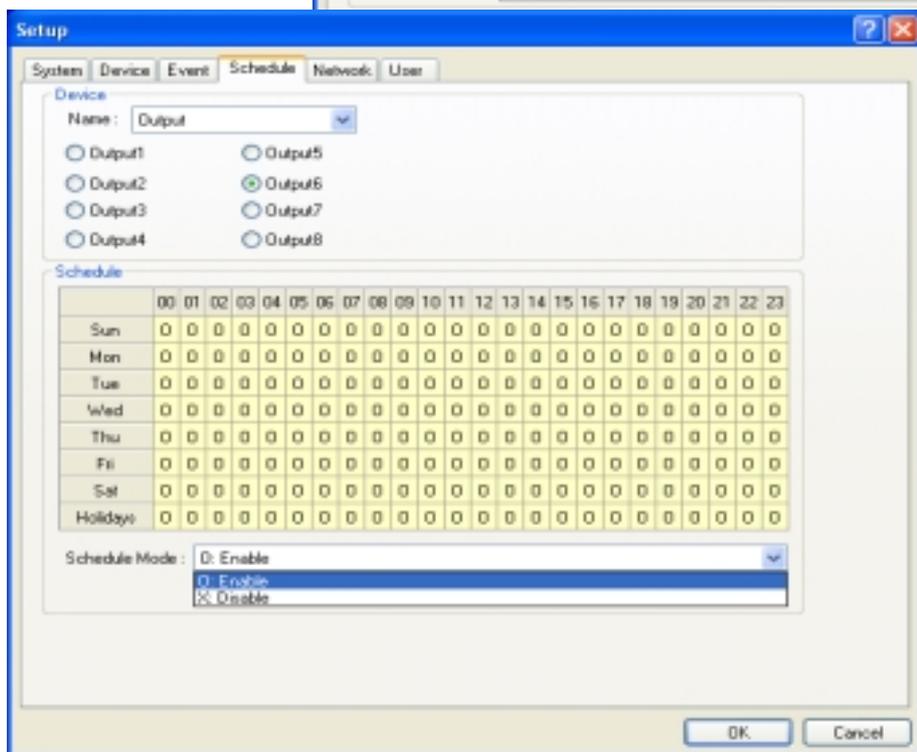

3.5.5 Network

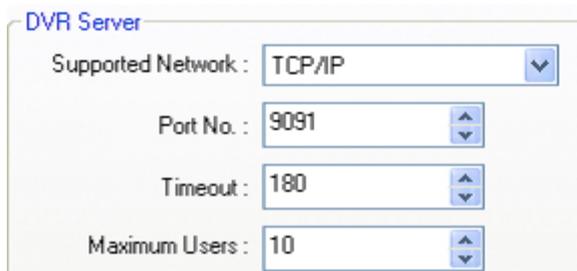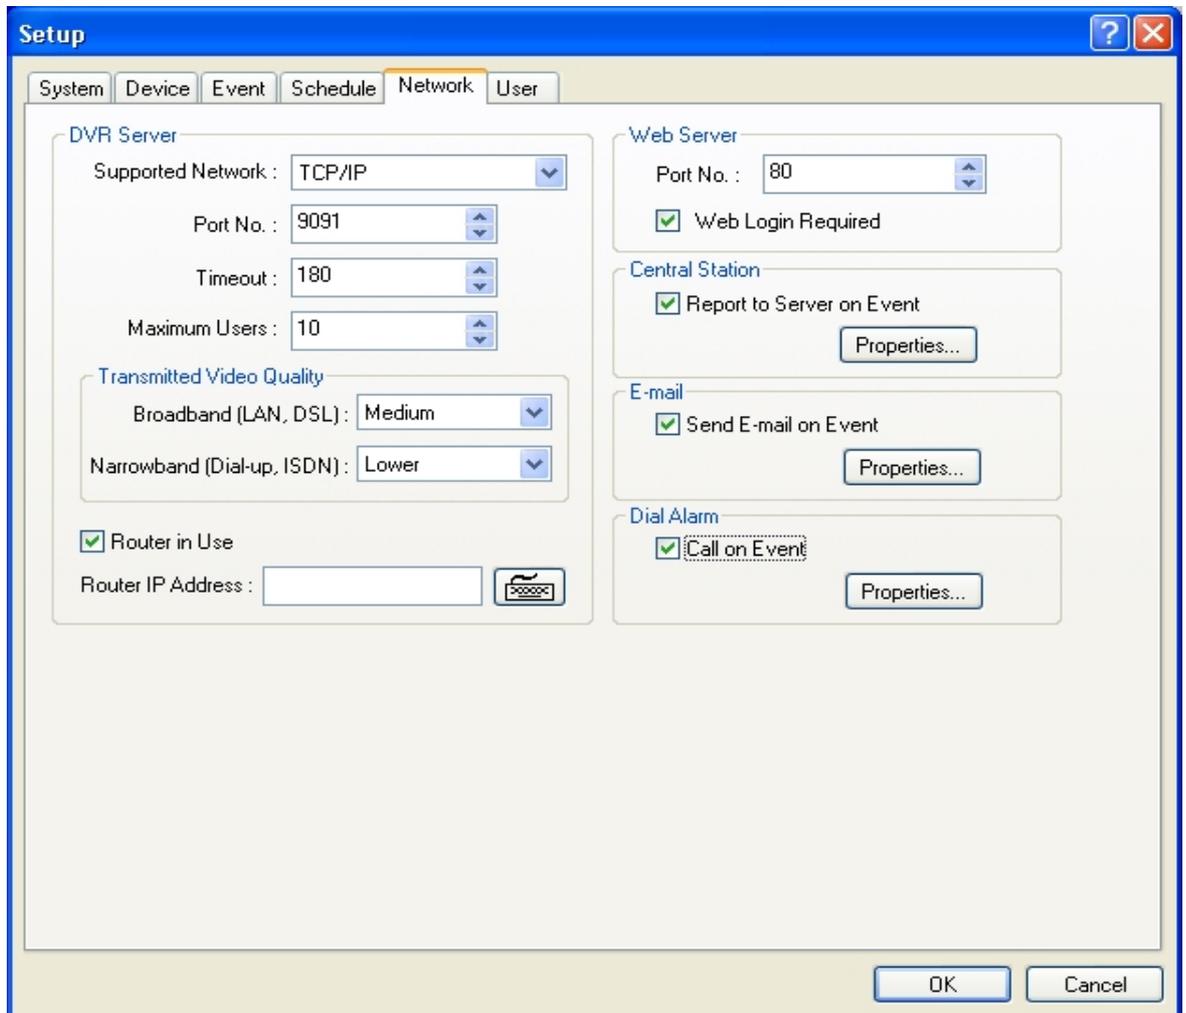

3.5.5.1 DVR Server

- * Supported Network:
 1. TCP/IP - Connecting to a DVR Server from a Client using LAN or DSL
 2. PSTN - Connecting to a DVR Server from a Client using a PSTN or ISDN modem
 3. None - not allowed to connect to a DVR Server remotely
- * Port No.: The default port number is 9091.
- * Timeout: The time length of trials to connect to a DVR Server from a Client
- * Maximum Users: The maximum number of users that can be logged in remotely.

Transmitted Video Quality

Broadband (LAN, DSL):

Narrowband (Dial-up, ISDN):

Router in Use

Router IP Address:

* Transmitted Video Quality: Users can select video quality to be transmitted to a Client. As a reminder, the higher video quality gets, the slower network transmission speed becomes. Therefore, it is often recommended to select low video quality when using "Narrowband".

Router in Use: If there is a router in use, follow the steps below:
 Check the box above. Type in router's IP address Go to router's setup Register DVR's IP address.

3.5.5.2 Web Server

Web Server

Port No.:

Web Login Required

* Port No.: Fixed HTTP Port No.
 * Web Login Required: If the box is checked, login is required as a user tries to connect to a DVR server using the web browser. If the box is NOT checked, a user will be automatically logged in as "anonymous".

3.5.5.3 Central Station

Central Station

Report to Server on Event

"Central Station" is a function that enables a Client with a static IP to manage multi DVR sites. Check the box and click on "Properties" for setup.
 * Note: "DVR Manager" must be installed on Central Station Server. For more details, refer to Appendix 3.


Central Station

Server Information

IP Address:


Port No.:

Type in the IP address of Central Station Server (Client with Static IP) and click on "Reported Events" for more setup.

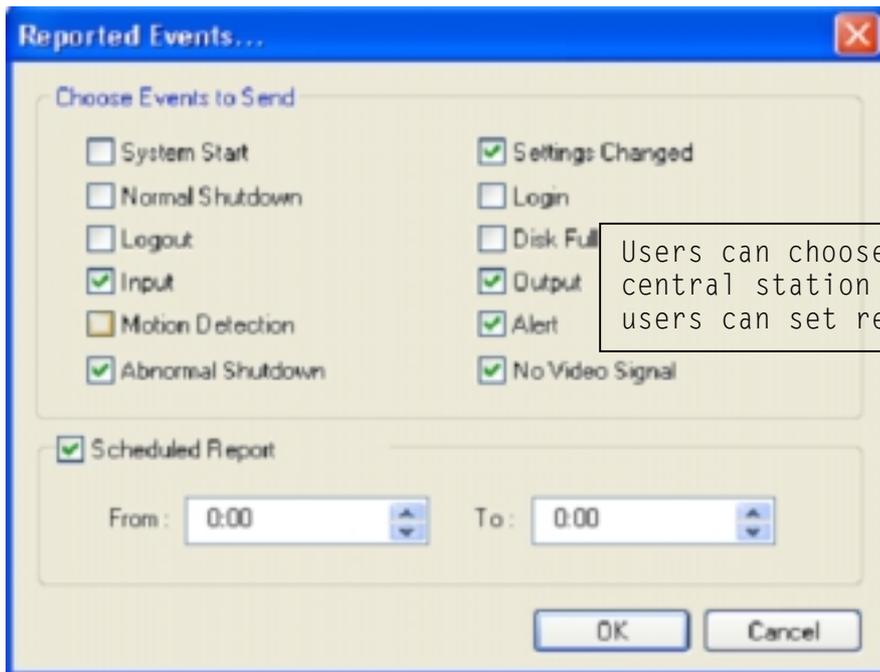


Users can choose events to report to a central station server. Additionally, users can set reporting time period.

3.5.5.4 E-mail

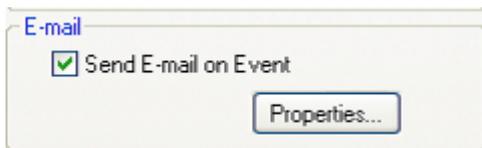


E-mail is a function that enables DVR to send out e-mails when selected events occur. Check the box and click on "Properties" for setup.

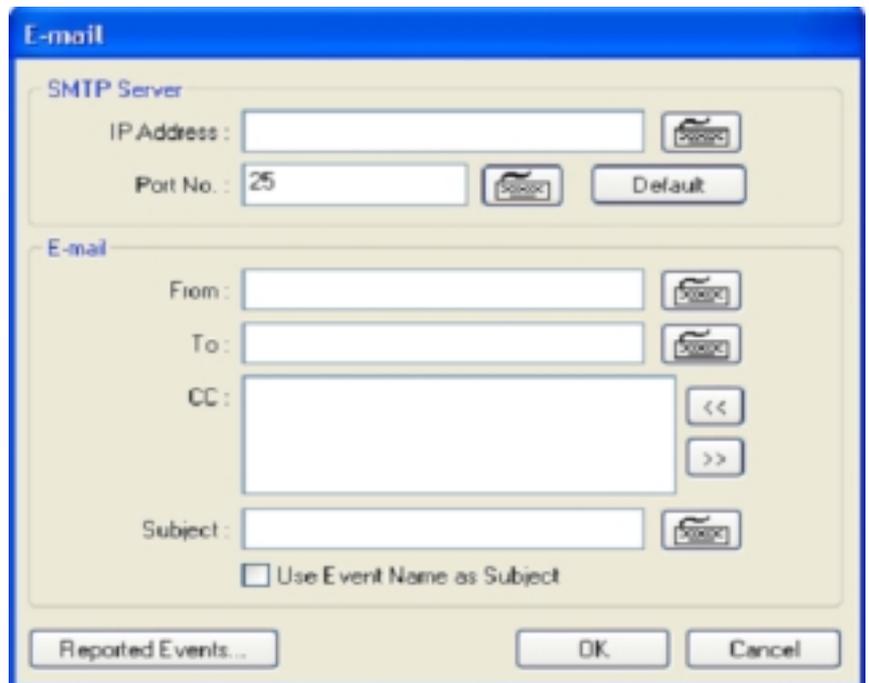


Make sure to put in the "RIGHT" IP Address of SMTP Server. Then, click on "Reported Events" for more setup. The "Reported Events" menu is the same as Central Station.

3.5.5.5 Dial Alarm


“Dial Alarm” is a function that enables DVR to give a registered user a call and leave its number. Then, the user will know something unusual is happening at the site. Check the box and click on “Properties” for setup.

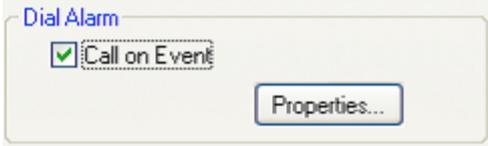


A modem card must be installed inside the system to make this function work. Type in a phone (mobile) number to report. Click on “Reported Events” (same setup as Central Station) for more setup.

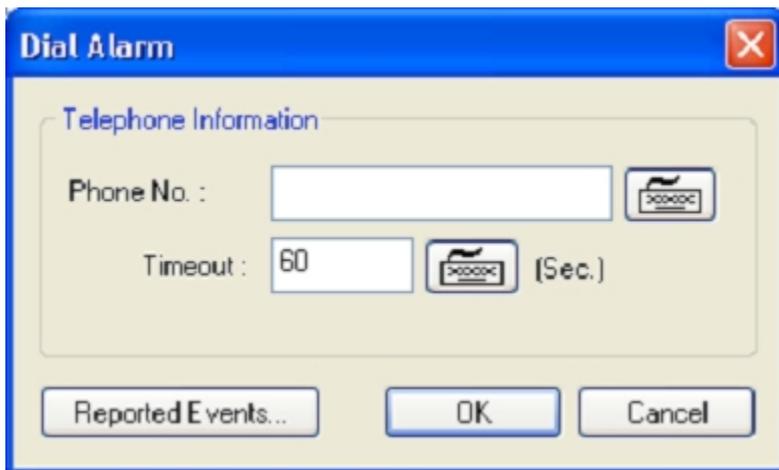



3.5.6 User

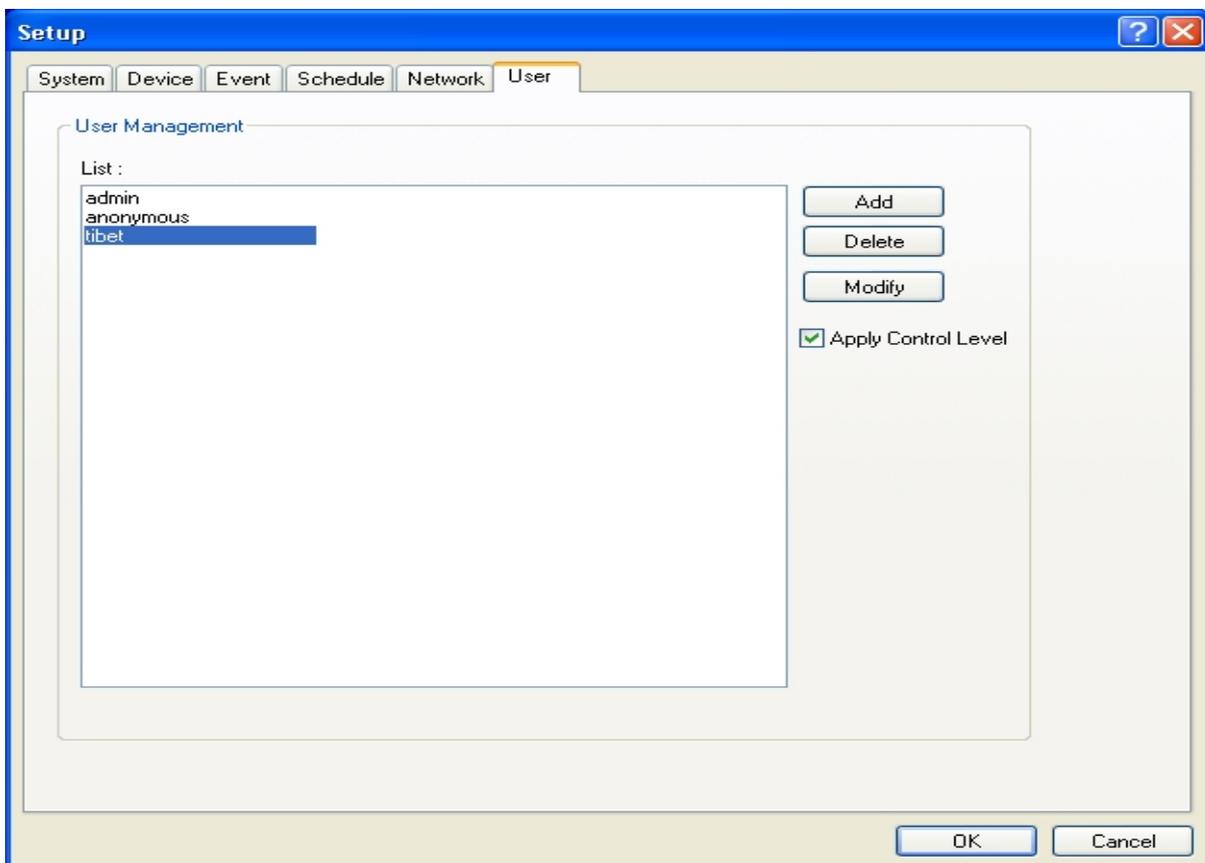

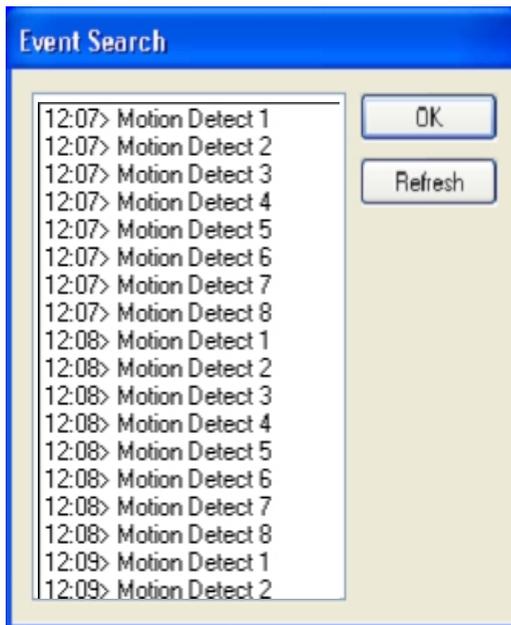


Choose one event from the list and click “OK” for Event Search. The list will be updated by clicking on the “Refresh” button.

[Object Search]

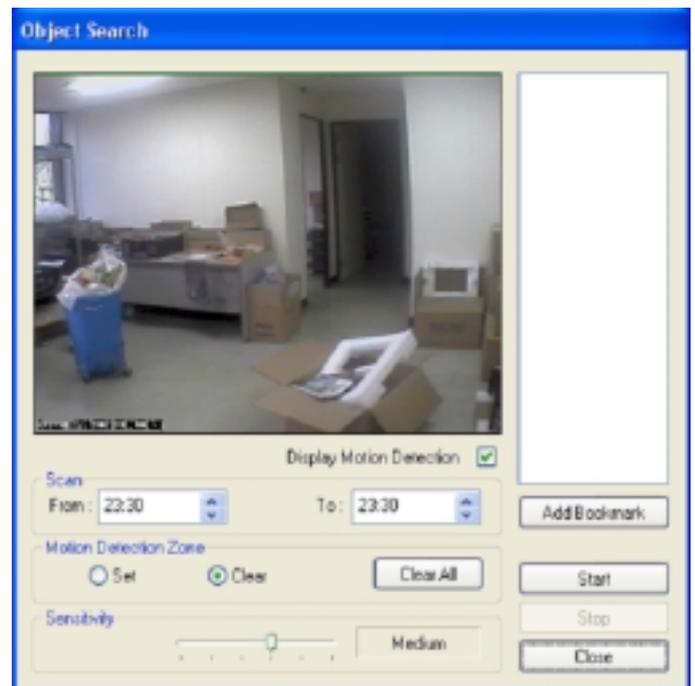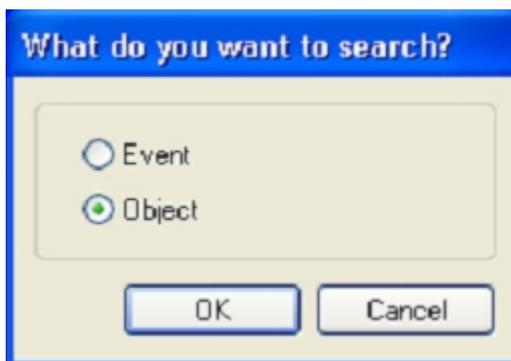

Object Search is only to search certain selected objects for a certain period of time.
 Scan: Set the time period for object search
 Motion Detection Zone: Select “Set” and mark areas for object search by dragging the mouse. “Clear” is used when erasing certain areas inside motion detection zones.
 Sensitivity: It means “Motion Detection Sensitivity”.
 Clear All: It clears all the motion detection zones set.

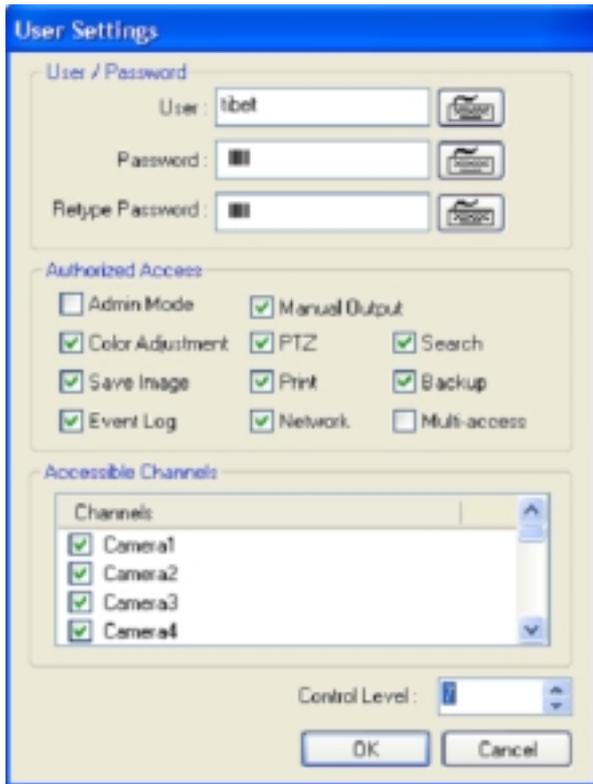


* Authorized Access: Checked functions will be allowed to access remotely.
 * Accessible Channels: Checked channels will be allow to view remotely.
 * Control Level: A user with the lowest number of control level will be allowed to have the first priority to set up, control, etc remotely.
 * Admin Mode: A user who can go into the setup and program (given the same authorization as "Admin"). Only ONE user with "Admin Mode" can log in remotely.
 * Network: If checked, a user can have access Remotely.
 * Multi-access: If checked, multi-users with the same user name can log in remotely at the same time.

CHAPTER 4

View Log Application (Status)


4.1 Status Screen

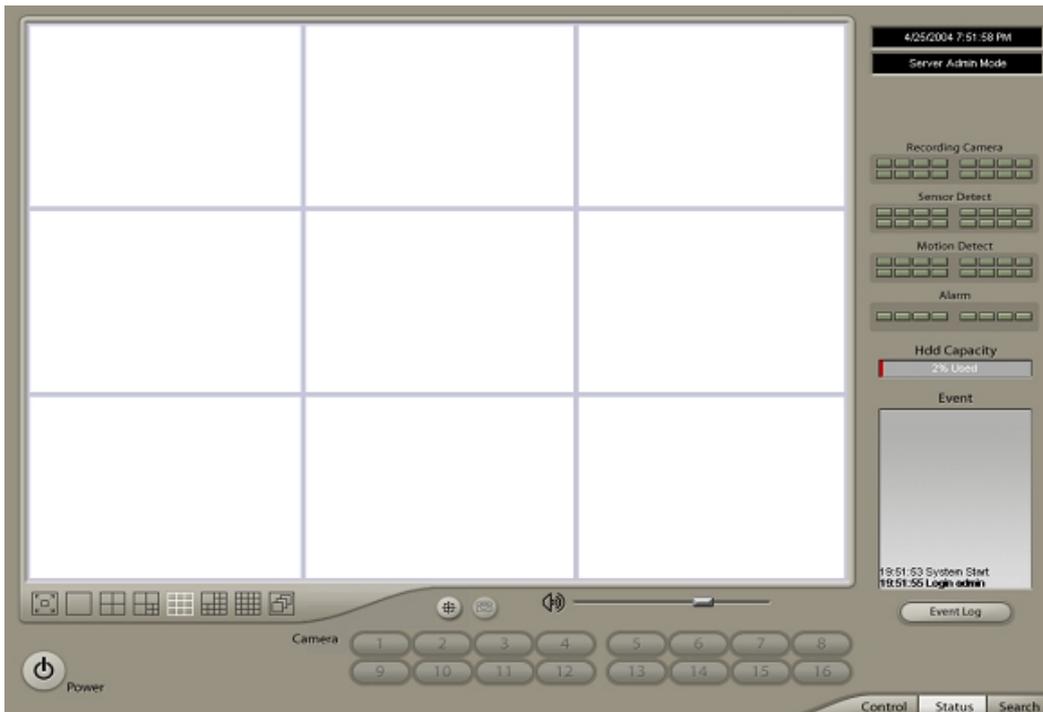

4.1 Screen Features

Recording Camera: It shows whether or not cameras are being recording.
 Sensor Detection: It shows whether or not sensors are being activated.
 Motion Detection: It shows whether or not motions are being detected.
 Alarm: It shows whether or not alarms are being activated.
 HDD Capacity: It shows how much capacity has been used for recording.
 Event: It shows a list of events that have occurred.
 Event Log: It is a function that enables users to view all the previous events.

4.1.1 Event Log

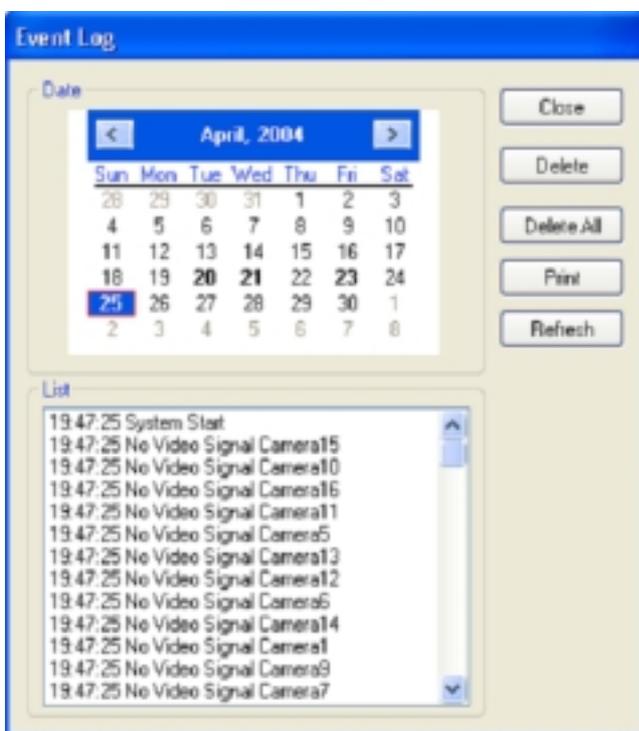


* Date: Any dates with events will be marked in bold numbers.
 * List: All events for a certain selected date will be shown.
 * Delete All: If clicked, all the previous records will be deleted.
 * Delete: If clicked, only the events for a certain selected date will be deleted.
 * Refresh: If clicked, events will be updated.

CHAPTER 5

Playback Application (Search)

5.1 Search Screen

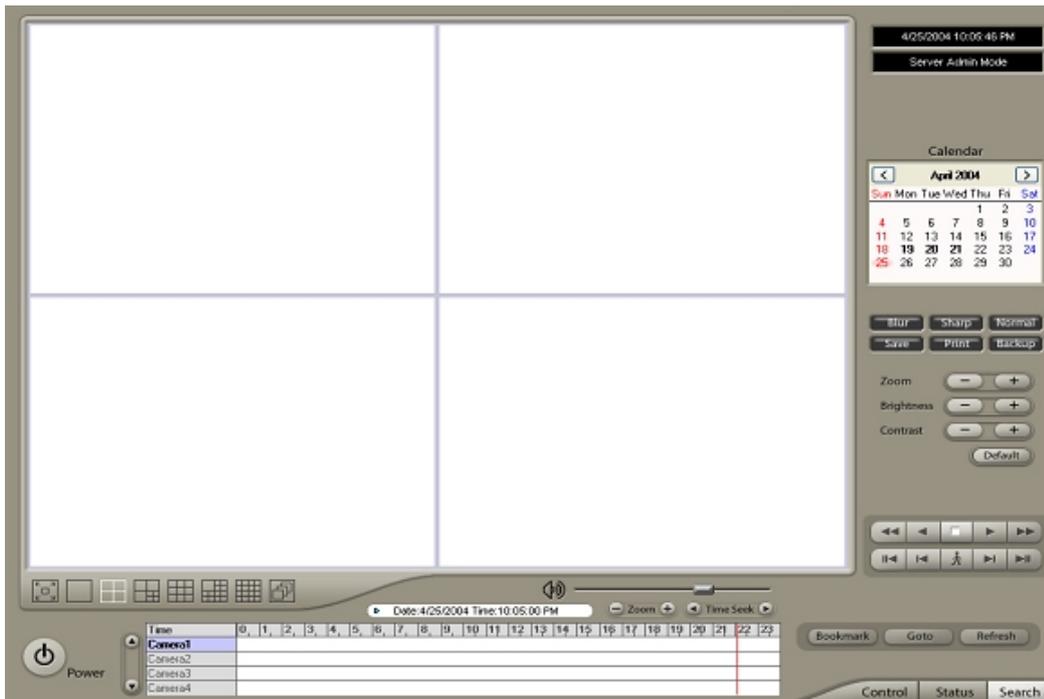

5.1 Search Features 1

Calendar: Any dates with recorded data will be marked in bold numbers.

Blur/Sharp/Normal: Buttons to adjust sharpness of images


Zoom: Buttons to zoom in/out the screen

Brightness: buttons to adjust brightness of the screen

Contrast: buttons to adjust contrast


Default: Default for Zoom/Brightness/Contrast

5.2 Search Features 2

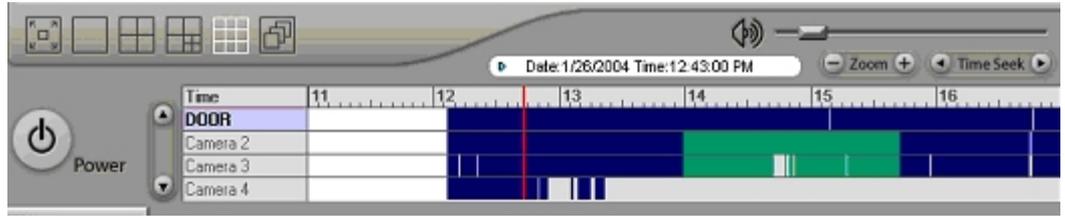

5.2.1 Playback

For playback, simply select a date, a screen mode (1, 4, 9, 16, etc.), time by one click on the time bar and click the play button.
 What different colors mean on the time bar: Blue - recorded data by sensor & motion Detection; Purple - recorded data by 24-hour-recording; White - no recorded data in all cameras; Gray - no recorded data for some cameras; Green - Blue + audio; Light Green - Purple + audio

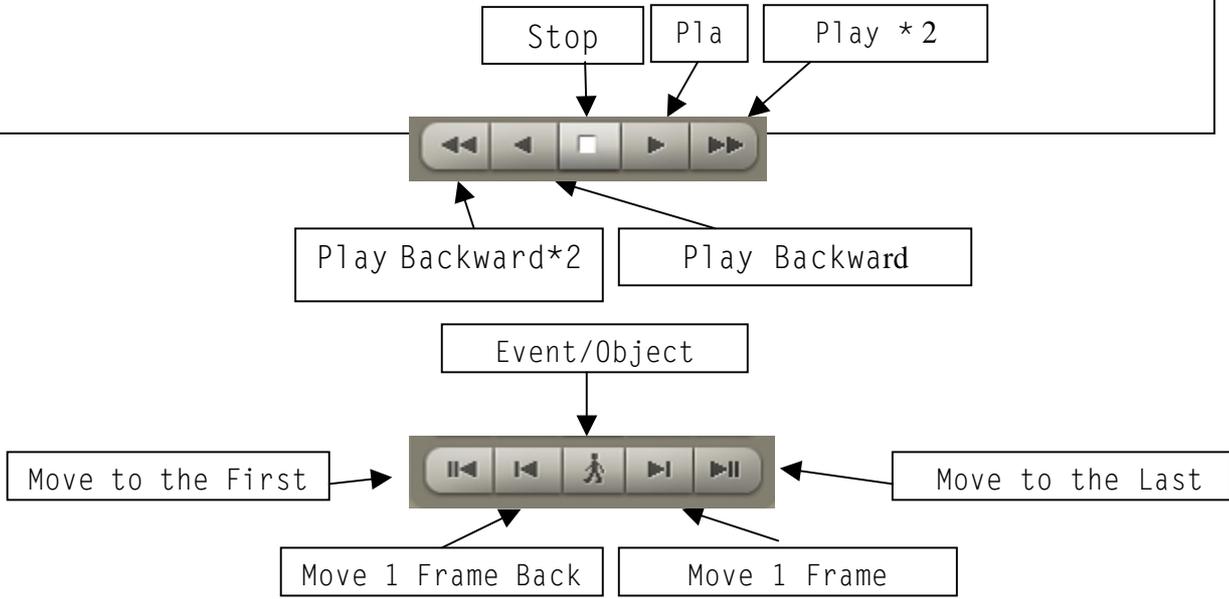


5.2.2 Event/Object Search

[Event Search]




Click the Event/Object Search button and select "Event".

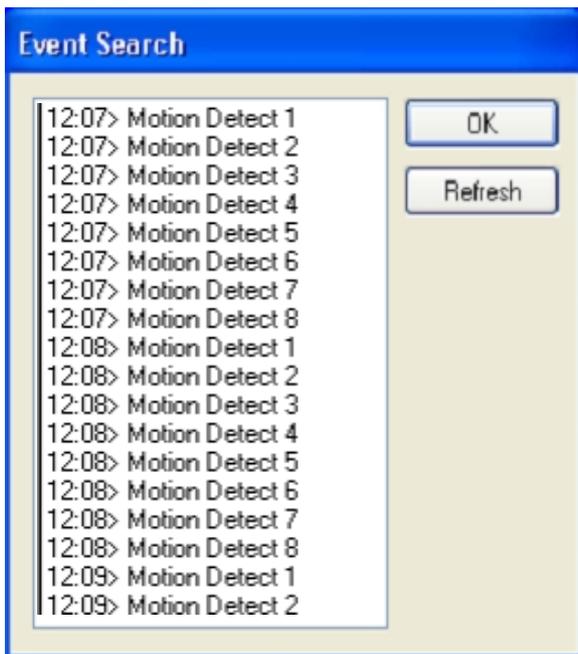


Select one event from the list and click "OK", and the selected event will be displayed. Click "Refresh" to update the list.

[Object Search]


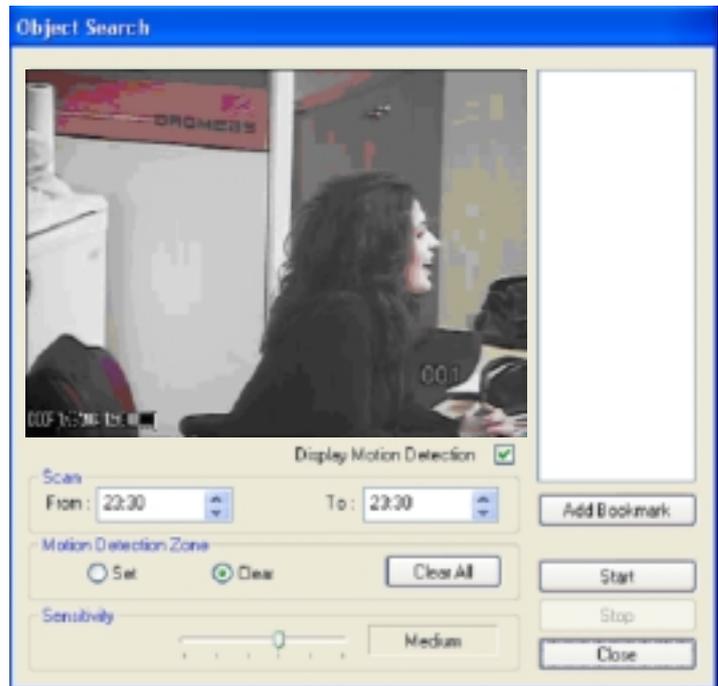


Object Search is only to search certain selected objects for a certain period of time.

- * Scan: Set the time period for object search.
- * Motion Detection Zone: Select "Set" and mark areas by dragging the mouse. "Clear" is used when erasing certain areas inside motion detection zones.
- * Sensitivity: It means "Motion Detection Sensitivity".
- * Display Motion Detection: If checked, green motion detection blocks will be displayed.
- * Clear All: Click "Clear All" to clear all the zones set.
- * Start: Click "Start" for object search.
- * Add Bookmark: Select a searched data from the list and click "Add Bookmark", and it will be stored in the Bookmark (Favorites).

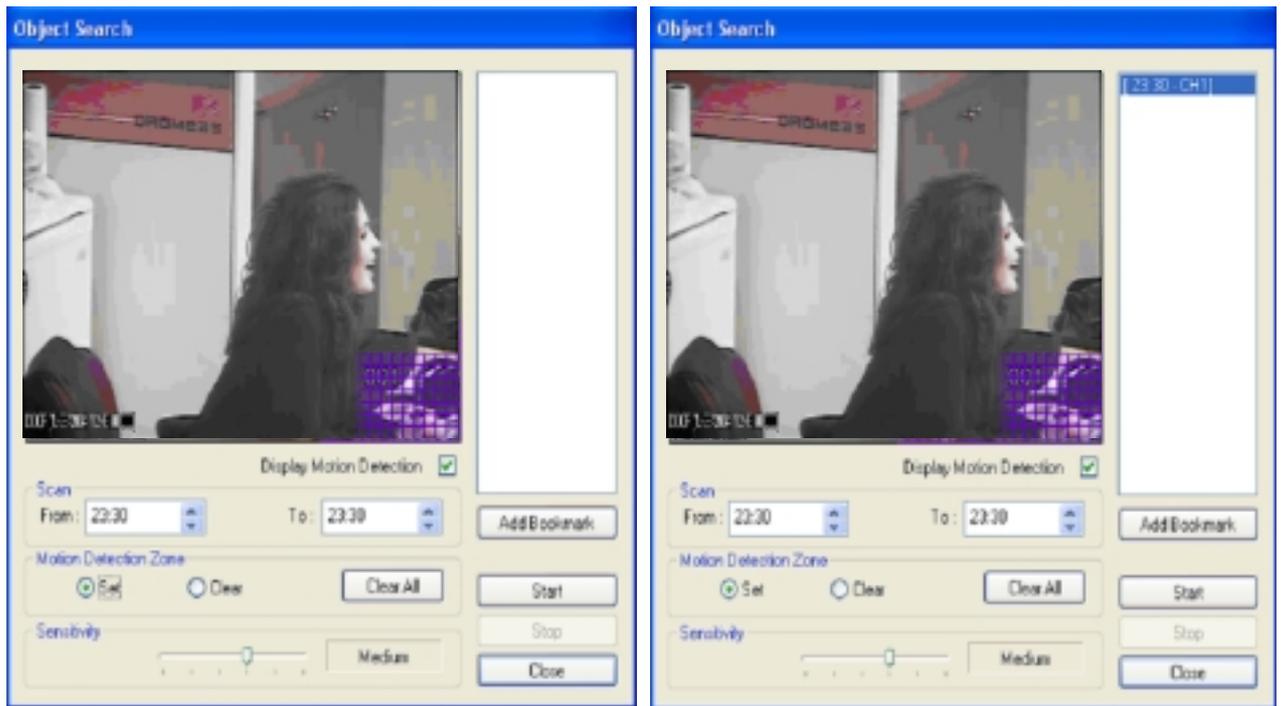


5. 2. 3 Bookmark & Go To

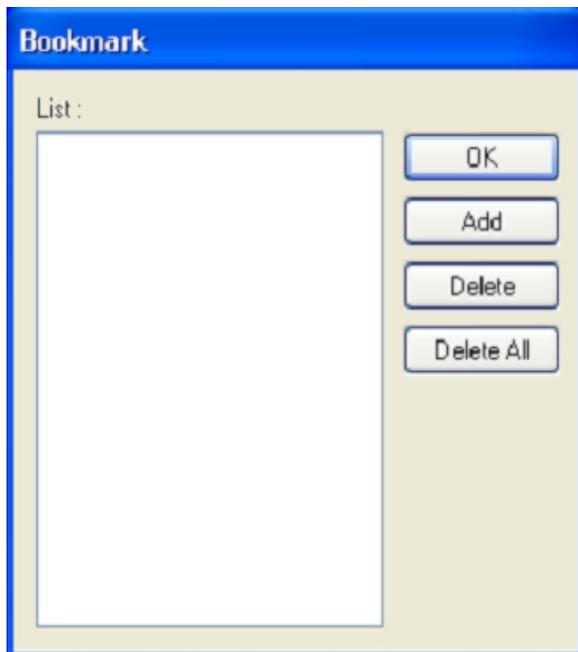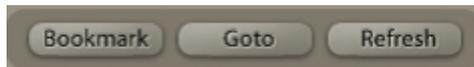

Bookmark (Favorites): Added data from “

Go To: It enables users to “Go To” the time set

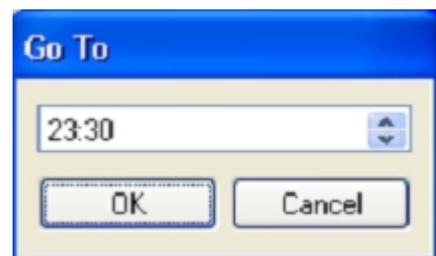



5.2.4 Save



AVI: For saving motion pictures and audio
 BMP: For saving images Watermarked images can be saved.
 JPEG: For saving regular still images.
 Quality is not as good as BMP but less HDD is used.



[Save in AVI Format]

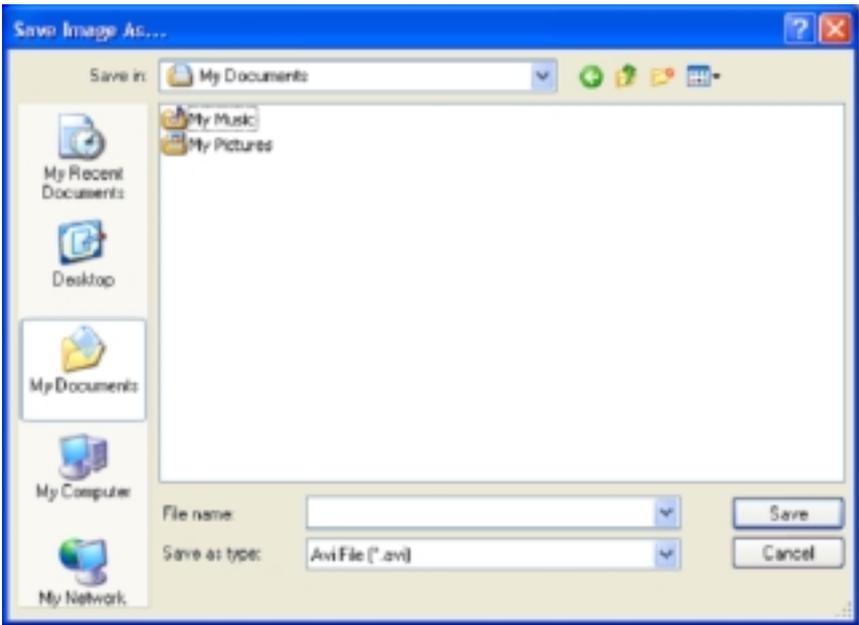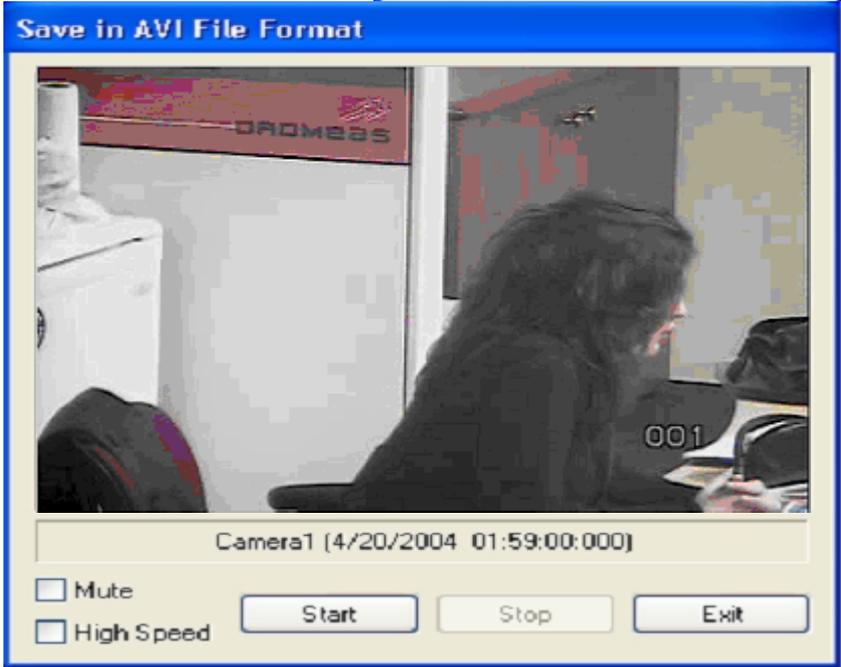


Click "Start" to start save and "Stop" to stop save.
 Mute: Save video only (no audio)
 High Speed: Save in high speed

[Save in BMP Format]




Click "Start" and select "BMP" as you save images. Saved images can be checked using "Watermark Proofer".



[Watermark Proofer]

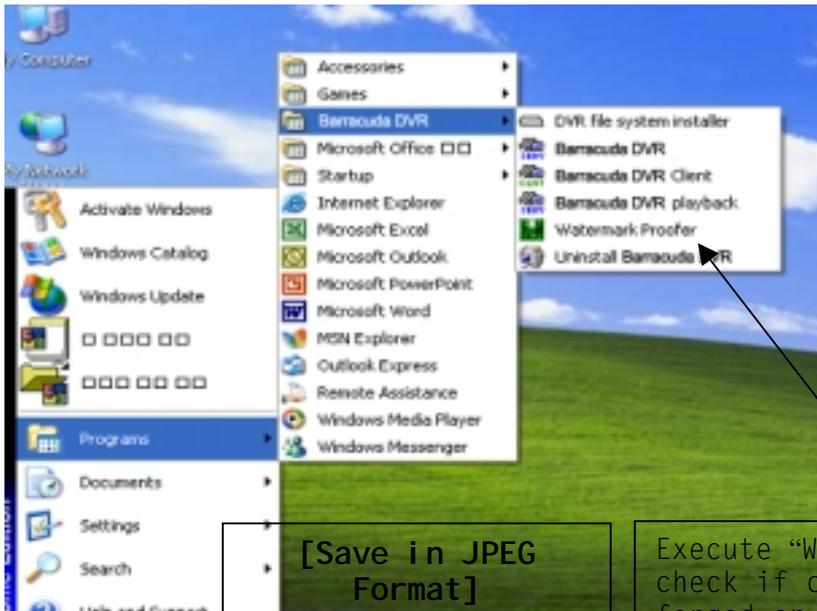

[Save in JPEG Format]

Execute "Watermark Proofer" and check if certain saved images are forged or not.

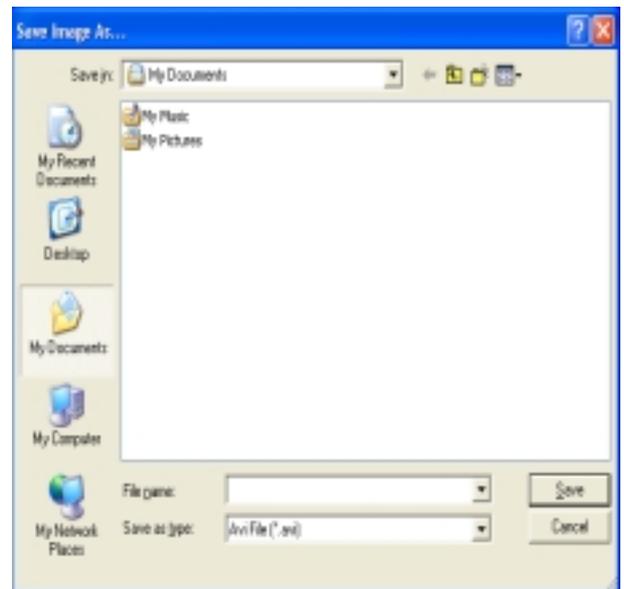

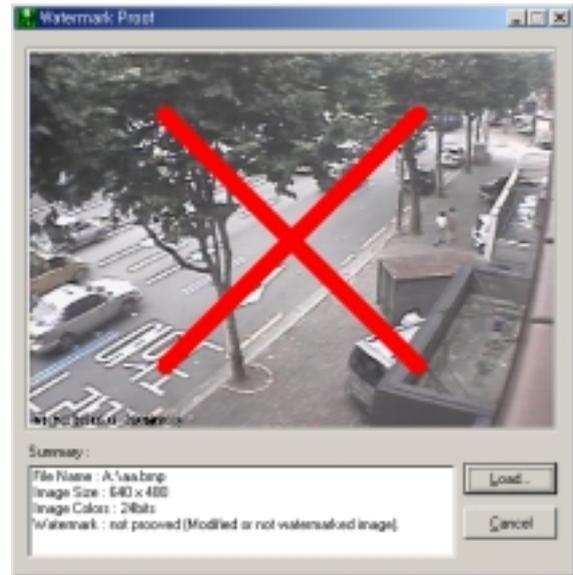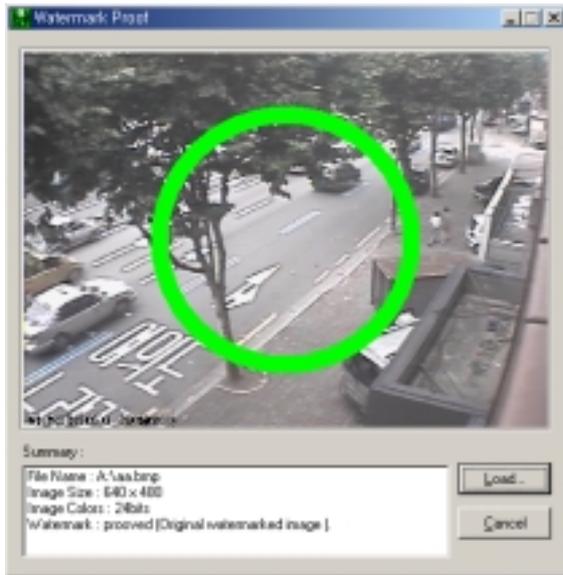


[Save in JPEG Format]




Click "Start" and select "JPEG" as you save images.

5.2.5 Print

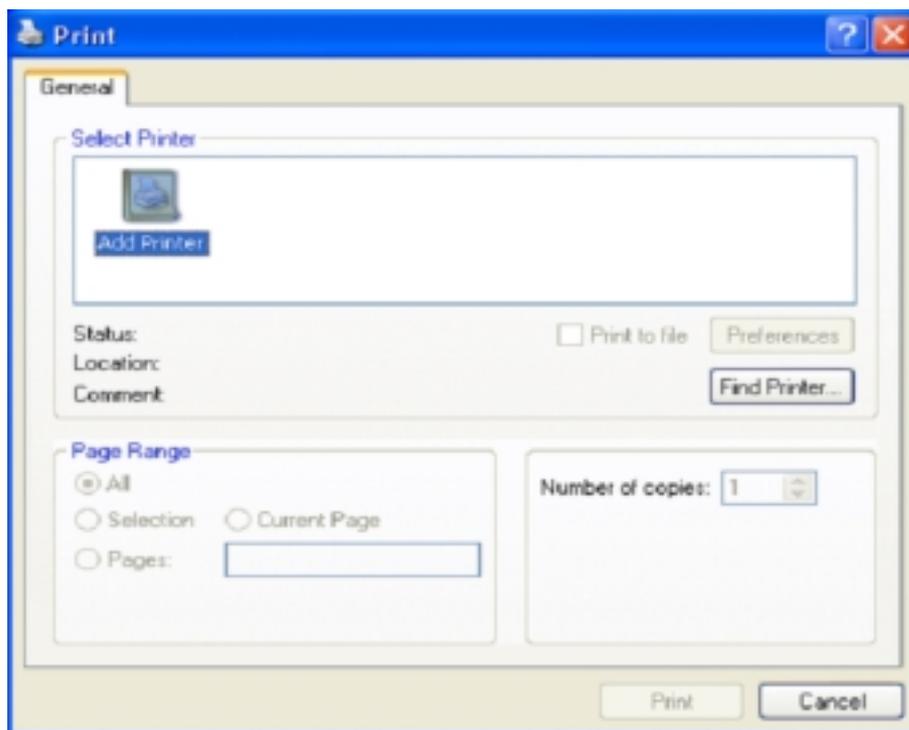


Click the "Print" button and follow the same printing procedure, as you would normally print out documents.


5.2.6 Backup

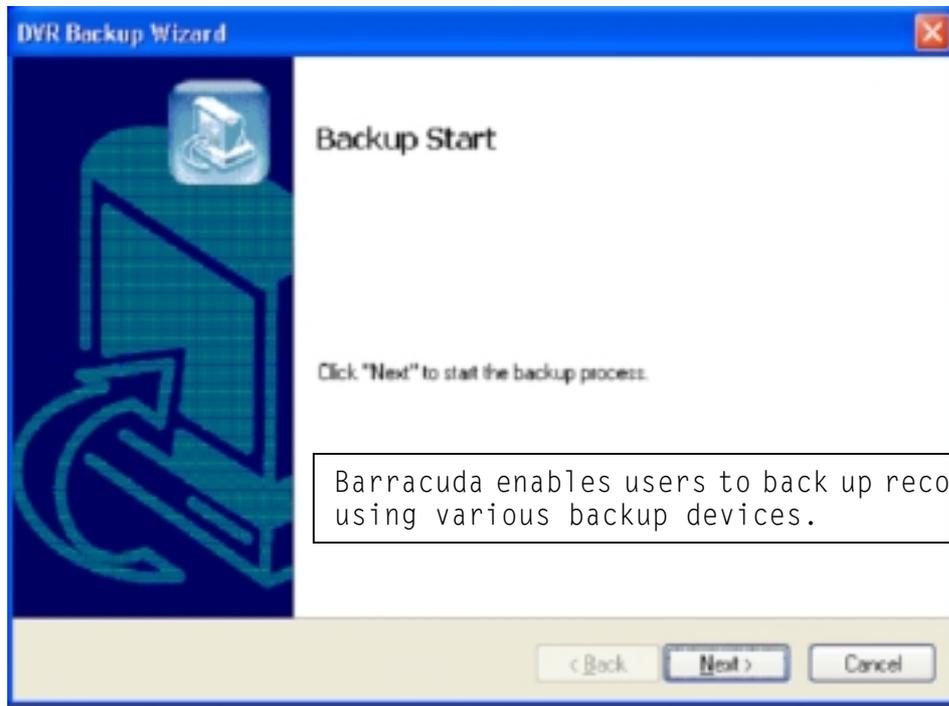

Barracuda enables users to back up recorded data using various backup devices.

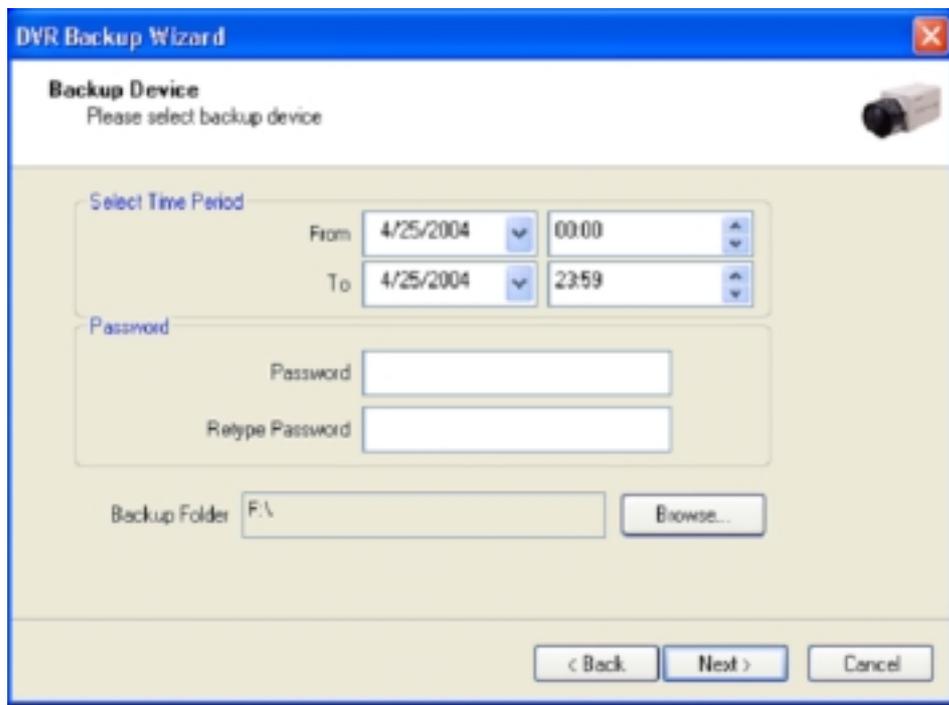

If a password is set, the system will ask users to type it in as they try to view backup data.


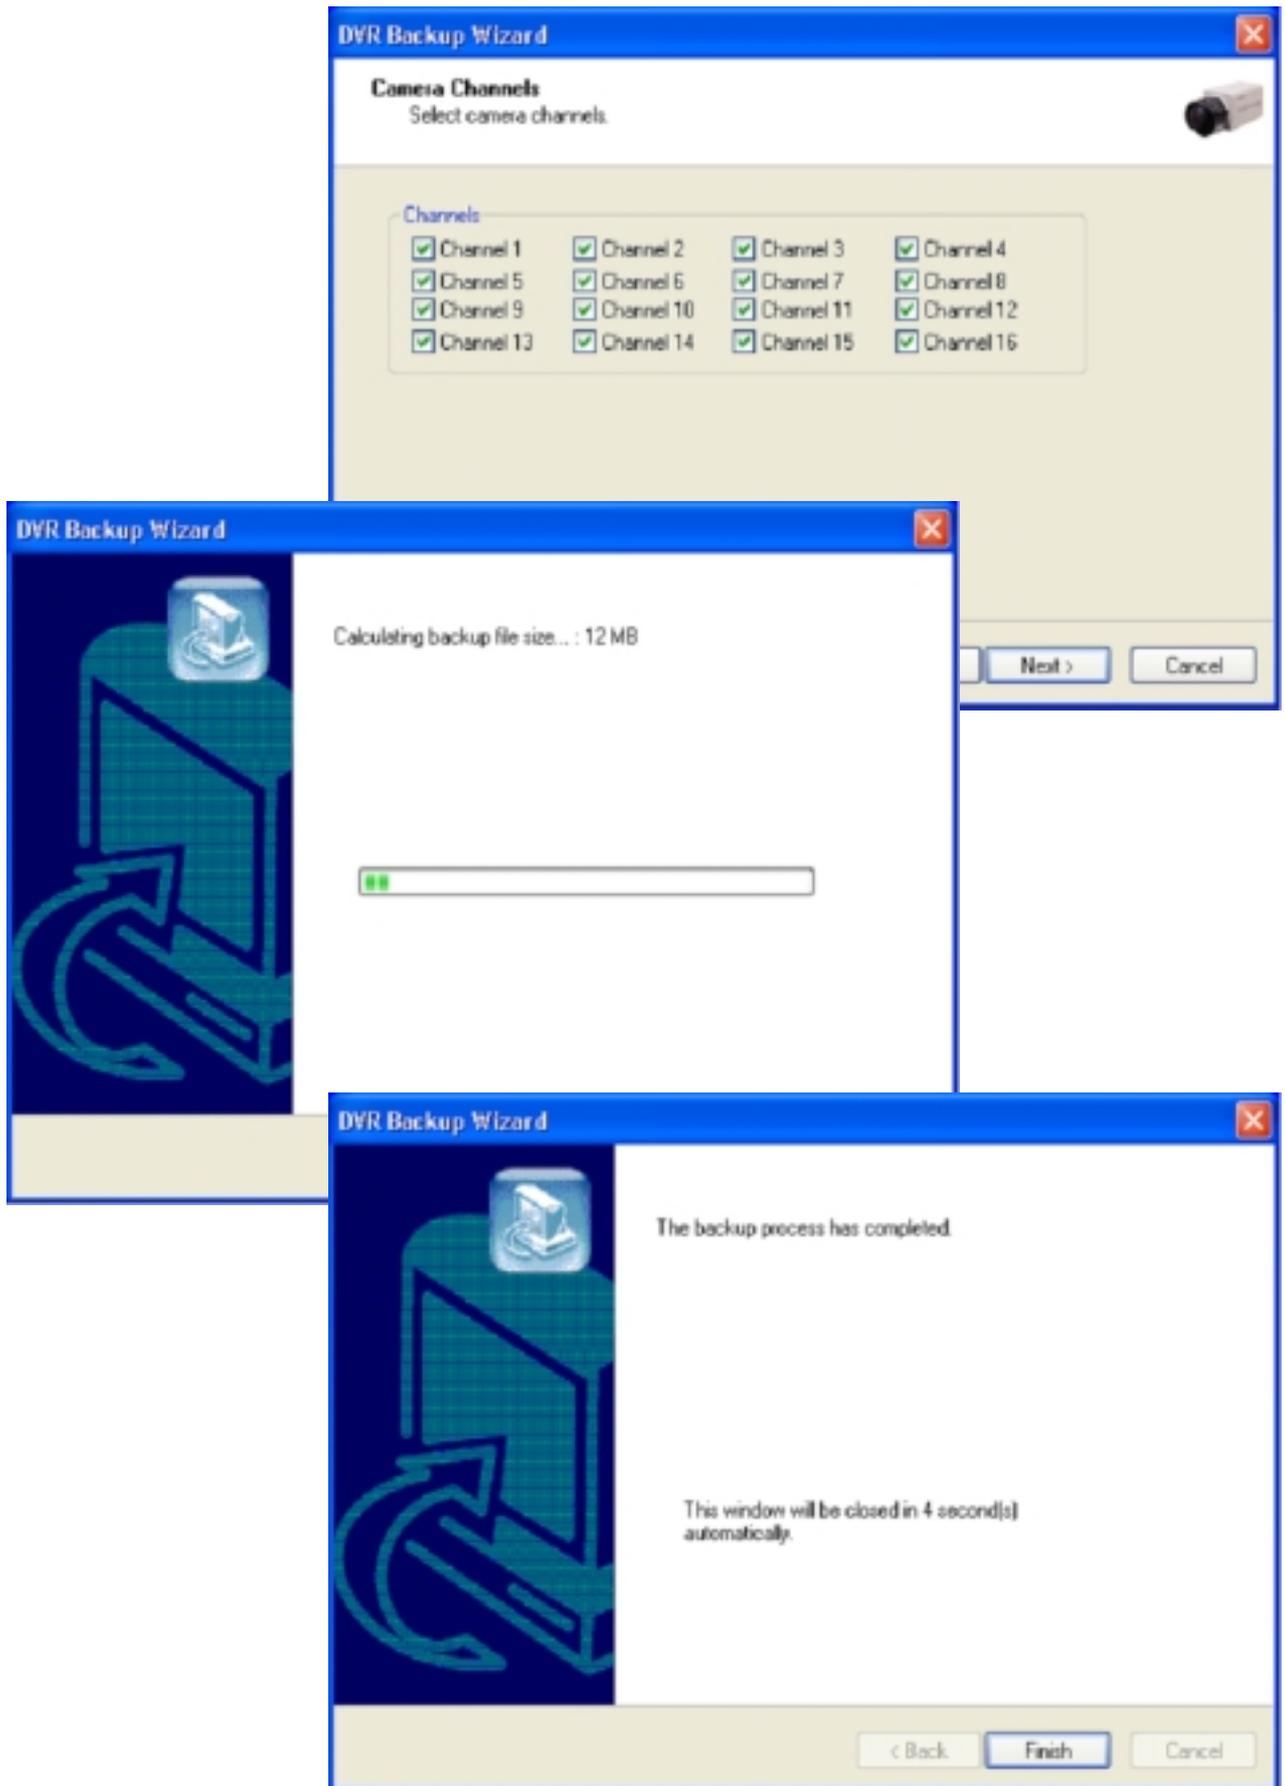


CHAPTER 6 Remote Monitoring System

6.1 Program Execution



Double-click on the “Barracuda DVR Client” icon on the desktop to execute the remote monitoring system.

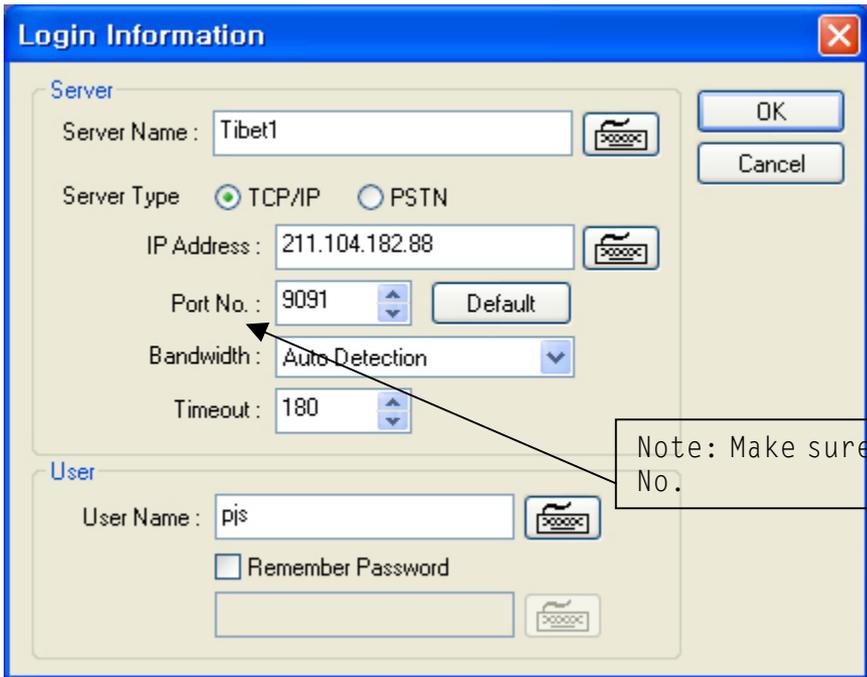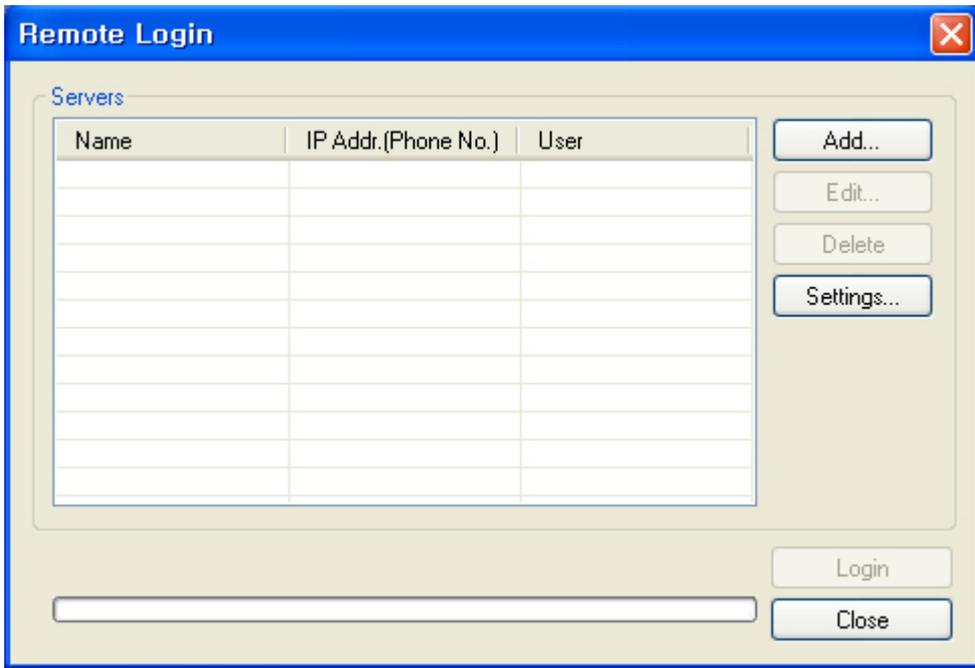



Users can have more than one DVR server registered for their own convenience. Select one from “Servers”, click on “Login”, type in password to log in.
 * Edit: Login info. Changes can be made here.
 * Delete: Registered servers can be deleted with one click.



Full Screen Display on Event: If checked, a full screen will be displayed on events.

**Appendix 2
I-Phone**

Table of Contents

- 2.1 Installation
- 2.2 Execution
- 2.3 Audio Setup

2.1 Installation





phone(1.0.1.0).exe

If a Remote Client is used for “Two-way Communication”, it must have a fixed IP and “iphone(1.0.1.0).exe” must be installed.

For I-Phone installation, double-click on “iphone(1.0.1.0).exe”.




Click “Next” to start the installation process and select “Automatic Installation”.

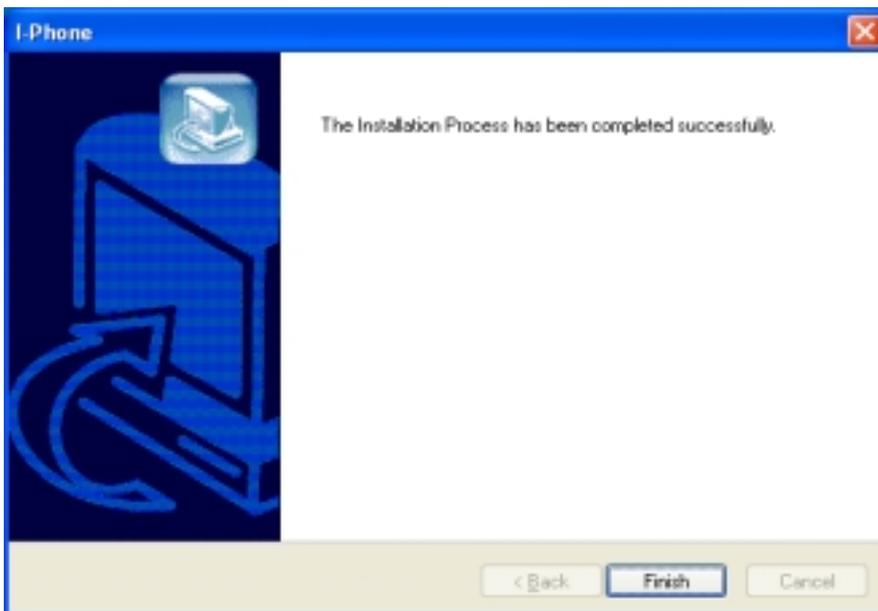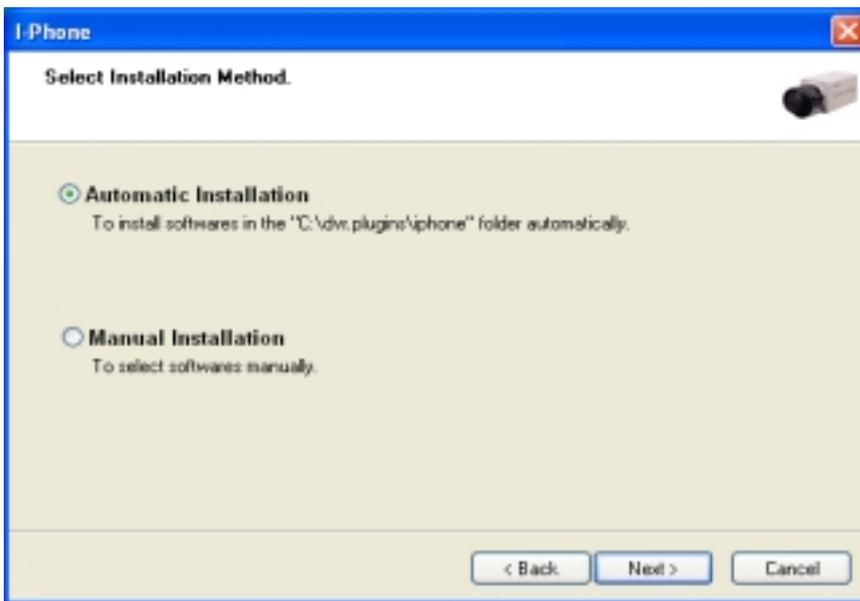


Click "Finish" to complete the process.

2.2 Execution

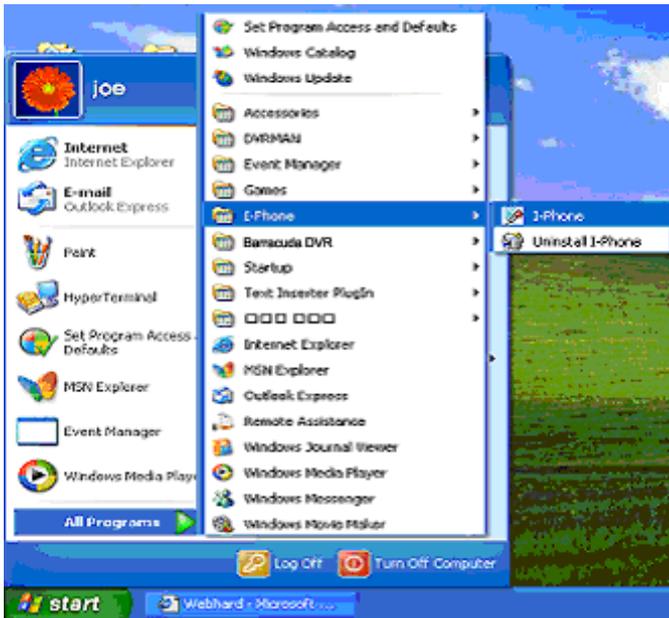



Go to “Start”, “All Programs”, find “I-Phone” and select it for execution.

2.3 Audio Setup

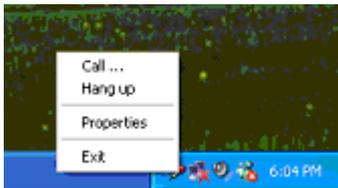


Find the I-Phone icon at the right bottom and click it for the next step.



Select “Call” for Two-Way Communication”, type in IP address and click “Connect”.

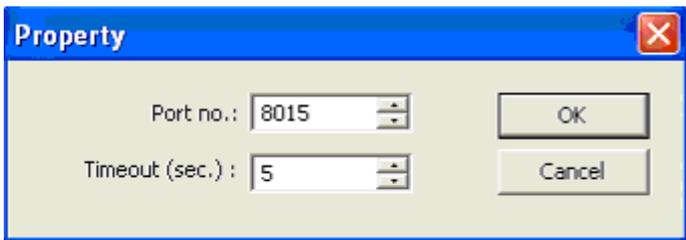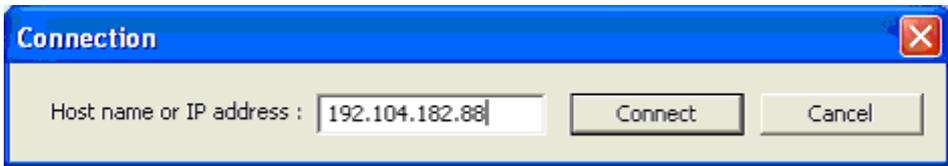

Property: The default port number is 8015 and the default timeout value is 5 seconds. Leave them as they are unless other values must be used.

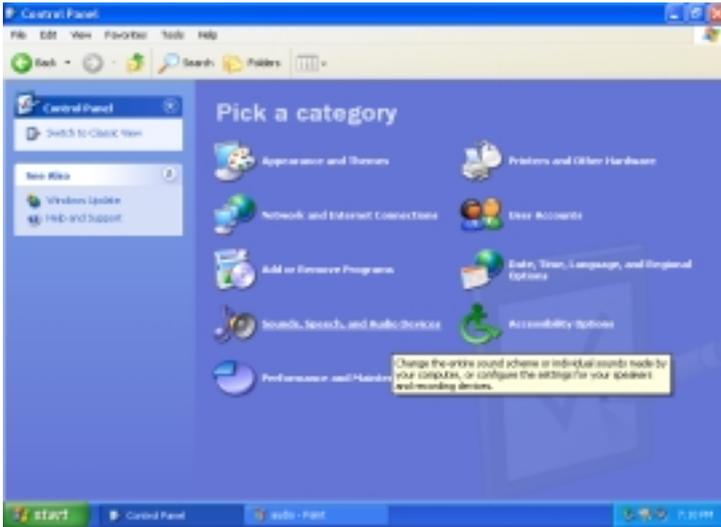

Go to "Control Panel", "Sounds, Speech and Audio Devices" and "Sounds and Audio Devices". Then, go to "Audio", "Sound playback" and "Volume".

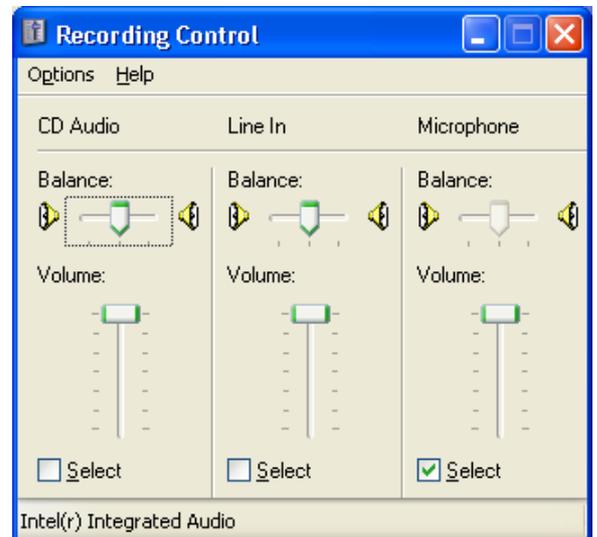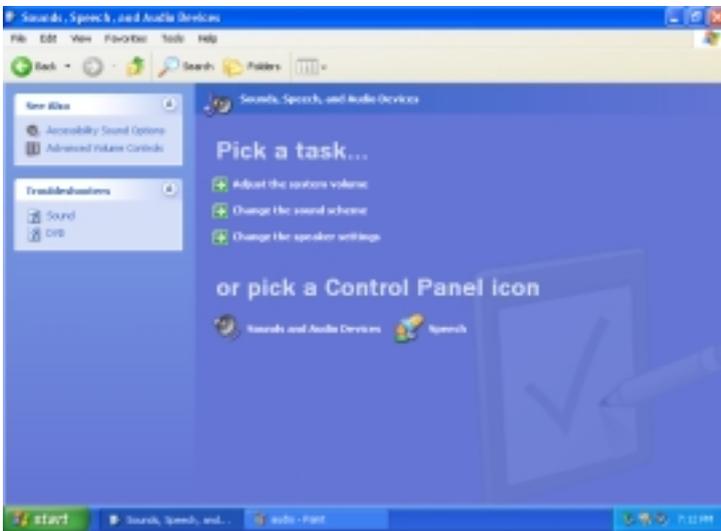

The ideal audio setup should look like this.