

# Russell Hobbs

**INSTRUCTIONS AND WARRANTY**



**MODEL NO. RHEM36G  
RUSSELL HOBBS 36L ELECTRONIC MICROWAVE OVEN  
WITH GRILL**

Congratulations on purchasing our Russell Hobbs 36L Electronic Microwave Oven with Grill. Each unit is manufactured to ensure safety and reliability. Before using this appliance for the first time, please read the instruction manual carefully and keep it for future reference.

## **FEATURES OF THE RUSSELL HOBBS 36L ELECTRONIC MICROWAVE OVEN WITH GRILL**

- 36L Capacity
- Digital LED display with Clock
- Microwave frequency: 2450MHz
- **Microwave input: 1500W; Microwave output: 1000W; Grill input: 1100W**
- 5 power levels
- Programmable multi-stage cooking
- 8 Auto menus: pizza, potato, meat, fish, vegetable, beverage, pasta and popcorn
- 95 minute cooking timer with end signal
- Defrost by time or weight
- With quick start and **delay start** functions
- Smart Info function
- Elegant black mirror finish front
- 315mm glass turntable diameter
- User friendly control panel
- Easy to use push button door
- Enamel interior for easy cleaning
- With child lock safety feature
- Product dimensions: 519 x 405,4 x 313mm
- For domestic use only
- 1 year warranty

## IMPORTANT SAFEGUARDS

When using any electrical appliance, basic safety precautions should always be followed including the following:

1. Please read the instructions carefully before using any appliance.
2. Always ensure that the voltage on the rating label corresponds to the mains voltage in your home.
3. Incorrect operation and improper use can damage the appliance and cause injury to the user.
4. The appliance is intended for household use only. Commercial use invalids the warranty and the supplier can not be held responsible for injury or damage caused when using the appliance for any other purpose than that intended.
5. Avoid any contact with moving parts.
6. Close supervision is required when any appliance is used near or by children or invalids.
7. Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by the manufacturer or a qualified person in order to avoid an electrical hazard.
8. Do not use the appliance if it has been dropped or damaged in any way. In case of damage, take the unit in for examination and/or repair by an authorised service agent
9. Do not operate the oven when empty.
10. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been damaged or dropped. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
11. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
12. **WARNING:** Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
13. Do not operate the microwave unit without any food contents inside the cavity.
14. To reduce the risk of fire in the oven cavity:
  - ✧ When heating food in a plastic or paper container, check the oven frequently in terms of the possibility of ignition.

- ✧ Remove wire twist-ties from paper or plastic bags before placing the bag in oven.
- ✧ If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- ✧ Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils or food in the cavity when not in use.

WARNING: Liquid or other food must not be heated in sealed containers since they are able to explode.

15. Microwave heating of beverages can result in delayed eruptive boiling, therefore care has to be taken when handling the container.
16. Do not fry food in the oven. Hot oil can damage oven parts and utensils and even result in burns.
17. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode even after microwave heating has ended.
18. Pierce foods with heavy skins such as potatoes, whole squashes, apples and chestnuts before cooking.
19. The contents of feeding bottles and baby jars should be stirred or shaken and the temperature should be checked before serving in order to avoid burns or scalding.
20. Cooking utensils may become hot because of heat transferred from the heated food. Potholders/ oven gloves may be needed to handle the utensil.
21. Utensils should be checked to ensure that they are suitable for use in microwave oven.
22. WARNING: It is hazardous for anyone other than a trained person to carry out any service or repair operation which involves the removal of any cover which gives protection against exposure to microwave energy.
23. This product is Group 2 Class B ISM equipment. The definition of Group 2 which contains all ISM (Industrial, Scientific and Medical) equipment in which radio-frequency energy is intentionally generated and/or used in the form of electromagnetic radiation for the treatment of material, and spark erosion equipment. For Class B equipment is equipment suitable for use in domestic establishments and in establishments directly connected to a low voltage power supply network which supplies buildings used for domestic purpose.
24. Never immerse the unit in water or any other liquid for cleaning purposes.
25. Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains. Always unplug the unit when not in use, before cleaning or when adding or removing parts.

26. The use of accessory attachments that are not recommended or supplied by the manufacturer may result in injuries, fire or electric shock.
27. A short cord is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.
28. Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled on inadvertently.
29. Do not allow the cord to touch hot surfaces and do not place on or near a hot gas or electric burner or in a heated oven.
30. Do not use the appliance on a gas or electric cooking top or over or near an open flame.
31. Use of an extension cord with this appliance is not recommended. However, if it is necessary to use an extension lead, ensure that the lead is suited to the power consumption of the appliance to avoid overheating of the extension cord, appliance or plug point. Do not place the extension cord in a position where it can be pulled on by children or animals or tripped over.
32. This appliance is not suitable for outdoor use. Do not use this appliance for anything other than its intended use.
33. DO NOT carry the appliance by the power cord.
34. Do not leave this appliance unattended during use. Always unplug the unit when not in use or before cleaning.
35. Always operate the appliance on a smooth, even, stable surface. Do not place the unit on a hot surface.
36. Ensure that the switch is in the "Off" or "0" position after each use.
37. The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use, or for repairs carried out by unauthorised personnel.
38. In case of technical problems, switch off the machine and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with the above mentioned pre-cautions and instructions, could affect the safe operation of this machine.
39. The microwave oven should not be placed in a cabinet unless it has been tested in a cabinet.
40. Appliances are not intended to be operated by means of an external timer or separate remote-control system.
41. The door or the outer surface may get hot when the appliance is in operation.
42. The rear surface of the appliance should be placed against a wall.

## **PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY**

- Do not attempt to operate this oven with the door open since open door operation can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the
  - a. Door (bent),
  - b. Hinges and latches (broken or loosened),
  - c. Door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- If the microwave appliance is not maintained in a good state of cleanliness, its surface could become degraded, its lifespan affected and could result in a possibly hazardous situation.


## **INSTALLATION**

1. Make sure that all the packing materials are removed from the inside of the door.
2. **WARNING:** Check the oven for any damage, such as a misaligned or bent door, damaged door seals and sealing surface, broken or loose door hinges and latches and dents inside the cavity or on the door. If there is any damage, do not operate the oven and contact qualified service personnel.
3. This microwave oven must be placed on a flat, stable surface to hold its weight and the heaviest food likely to be cooked in the oven.
4. Do not place the oven where heat, moisture, or high humidity are generated, or near combustible materials.
5. For correct operation, the oven must have sufficient airflow. The minimum installation height is 85cm. Leave a minimum clearance of 30cm above the oven, a minimum clearance of

20cm is required between the oven and any adjacent walls. Do not cover or block any openings on the appliance. Do not remove feet.

6. Do not operate the oven without a glass tray, turntable ring, and shaft in their proper positions.
7. Make sure that the power supply cord is undamaged and does not run under the oven or over any hot or sharp surfaces.
8. The socket must be readily accessible so that it can be easily unplugged in an emergency.
9. Place the oven as far away from radios and TV's as possible. Operation of microwave oven may cause interference to your radio or TV reception.
10. **WARNING:** Do not install oven over a range cooktop or other heat-producing appliances. If installed near or over a heat source, the oven could be damaged and the warranty will become void.
11. **NOTE:** The accessible surface may be hot during operation.
12. Blocking the intake and/or outlet openings can damage the oven.
13. Remove any protective film found on the microwave cabinet surface. Do not remove the light brown Mica cover that is attached to the oven cavity to protect the magnetron.
14. Never place the glass tray upside down. The glass tray should never be restricted.
15. Both glass tray and turntable ring assembly must always be used during cooking.
16. All food and containers are always to be placed on the glass tray for cooking.
17. If the glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.

## TURNTABLE INSTALLATION

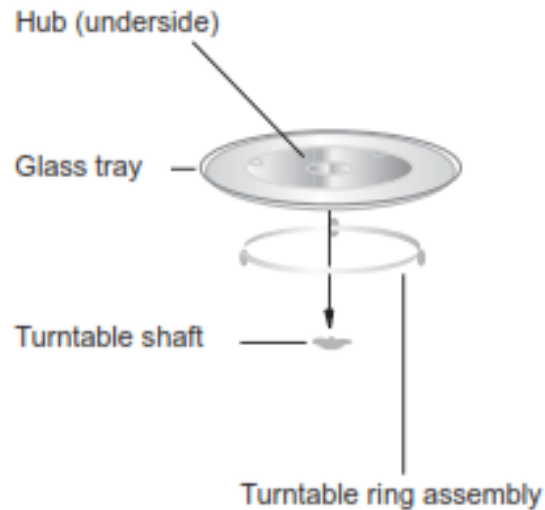

## RADIO INTERFERENCE

Operation of the microwave oven can cause interference to your radio, TV, or similar equipment. When there is interference, it may be reduced or eliminated by taking the following measures:

- Clean the door and sealing surface of the oven.
- Reposition the receiving antenna of the radio or television.
- Relocate the microwave oven with respect to the receiver.
- Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.

## MICROWAVE COOKING PRINCIPLES

- Arrange food carefully. Place thickest areas towards outside of dish.
- Watch cooking time. Cook for the shortest amount of time indicated and add more as needed. Food severely overcooked can smoke or ignite.
- Cover foods while cooking. Covers prevent spattering and help foods to cook evenly.
- Turn foods over once during microwave cooking to speed cooking of such foods as chicken and hamburgers. Large items like roasts must be turned over at least once.
- Rearrange foods such as meatballs halfway through cooking both from top to bottom and




from the center of the dish to the outside.

## UTENSILS GUIDE


- The ideal material for a microwave utensil is material which is transparent. This allows energy to pass through the container and heat the food.
- A microwave cannot penetrate metal, so metal utensils or dishes with metallic trim should not be used.
- Do not use recycled paper products when microwave cooking, as they may contain small metal fragments which may cause sparks and/or fires.
- Round /oval dishes rather than square/oblong ones are recommend, as food in corners tends to overcook.
- The list below is a general guide to help you select the correct utensils:

<b>COOKWARE</b>	<b>MICROWAVE</b>
Heat-Resistant Glass	Yes
Non Heat-Resistant Glass	No
Heat-Resistant Ceramics	Yes
Microwave-Safe Plastic Dish	Yes
Paper Kitchen Towels	Yes
Metal Tray	No
Metal Rack	No
Aluminium Foil & Foil Containers	No
Parchment Paper	Yes
Plastic Wrap	Yes
Wax Paper	Yes
Containers containing metal parts	No
Metal Twist-ties	No
Paper Bags	No
Plastic Foam	No
Wood	No


# PARTS DIAGRAM

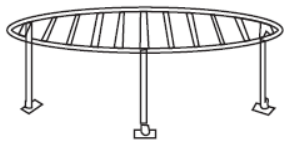

Grill Rack( Only for Grill series )

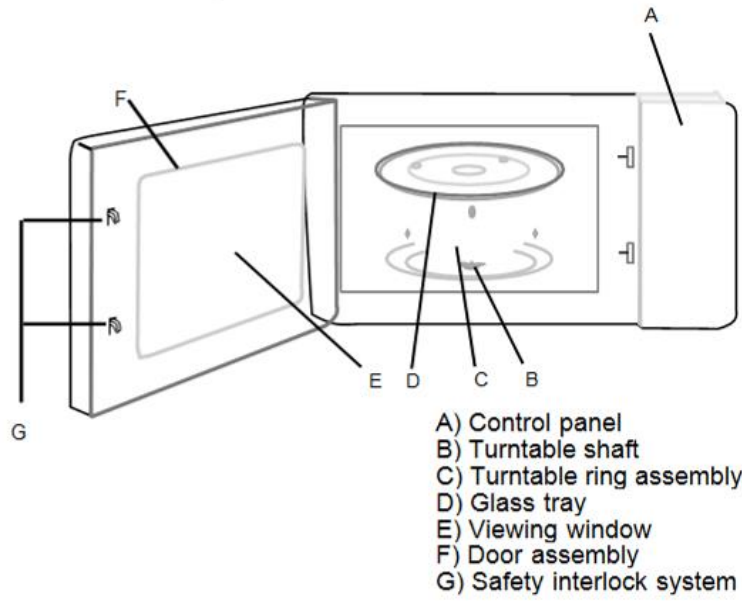

# CONTROL PANEL

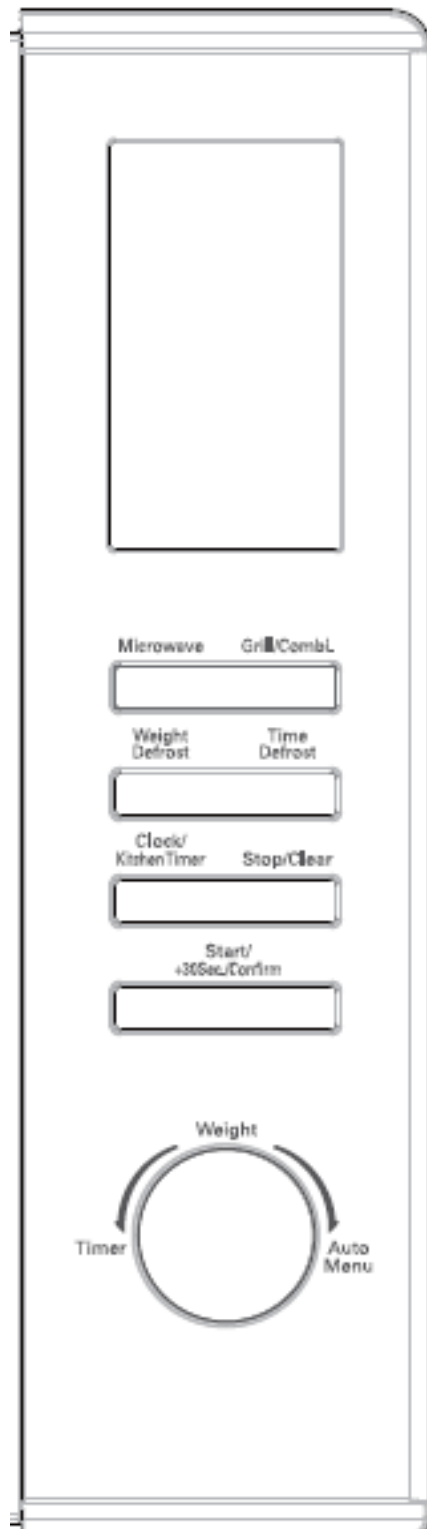


## OPERATING INSTRUCTIONS

### HOW TO SET THE OVEN CONTROLS

Each time a button is pressed, a beep or alert tone will sound to acknowledge the selection.

#### SETTING THE DIGITAL CLOCK

---

With the oven is switched on and ready for input, the LED display will show “0:00” and the alert tone will ring once. Press the CLOCK/KITCHEN TIMER  button twice to select the clock function.

FOR EXAMPLE: Suppose you want to set the clock time to 8:30am.

1. Press the CLOCK/ KITCHEN TIMER button twice and the hour figure will begin to flash
2. Turn the control dial to adjust the hour figure to digit 8. Here the input time should be within 0—23 hours.
3. Press the CLOCK/ KITCHEN TIMER button and the minute figure will begin to flash.
4. Turn the control dial to adjust the minute figure to digit 30. Here the input time should be within 0—59 minutes.
5. Press the CLOCK/ KITCHEN TIMER to confirm the clock setting. Now ":" will flash.

Note:


- If the clock is not set then it will not show when the microwave is switched on.
- During the process of setting the clock, if you press PAUSE, the oven will revert to the previous status automatically and clear your clock selection.

#### MICROWAVE COOKING

---

The longest cooking time is 95 minutes.

To cook with microwave power alone, press the MICROWAVE  button a number of times

to select the desired cooking power level and then use either the PLAY  button to confirm

this selection. Turn the control dial to set a desired cooking time from 0:05 to 95:00 minutes. Now press the PLAY button to start cooking.

Microwave Power Chart:

Display	Microwave Power
P100	100%
P80	80%
P50	50%
P30	30%
P10	10%

For example, suppose you want to cook for 20 minutes at 80% of microwave power.


1. Press the MICROWAVE button once and "P100" will show on the LED display.
2. Press MICROWAVE one more time or turn the control dial to select 80% microwave power.
3. Press the PLAY button to confirm this selection.
4. Now turn the control dial to adjust the cooking time to 20:00 minutes. (The time setting should be between 0:05- 95:00.)
5. Press PLAY button to start cooking.

**NOTE:** the step quantities for the adjustment time of the coding switch are as follows:

- 0---1 min : 5 seconds
- 1---5 min : 10 seconds
- 5---10 min : 30 seconds
- 10---30 min : 1 minute
- 30---95 min : 5 minutes

## GRILL OR COMBI COOKING

---

To use the grill and cook combination, press the GRILL/ COMBI  button once. The LED will display "G". Press GRILL/ COMBI a number of times to select the desired power level. It will show either "G" , "C-1" or "C-2" each time you press GRILL/ COMBI. Then press PLAY to

confirm your power level selection. Now turn the control dial to set a desired cooking time from 0:05 to 95:00 minutes. Press PLAY again to start cooking.

For example, suppose you want to use 55% of microwave power and 45% grill power (C-1) to cook for 10 minutes:

1. Press the GRILL/ COMBI button once and "G" will show on the LED display.
2. Press GRILL/ COMBI again or turn the control dial to choose combi. 1 mode.
3. Press PLAY to confirm this selection. The LED display will show "C-1".
4. Now turn the control dial to adjust the cooking time until the LED display shows "10:00".
5. Press PLAY to confirm this selection and start cooking.

Display	Microwave Power	Grill Power
G	0%	100%
C-1	55%	45%
C-2	36%	64%

**NOTE:** If half the amount of grilling time passes and the oven chimes twice, this is normal. This is built in for your convenience. In order to achieve better grilling results, the chime reminder is there to indicate that you should turn the food over. Once turned, you should close the door and press PLAY to continue cooking.

## QUICK START

---

This feature allows you to start the microwave quickly.

- a. TIP 1: In standby mode, press the PLAY button to cook with 100% microwave power for a 30 second duration. Each time you press on the same button then the cooking period will increase by 30 seconds. The maximum cooking time is 95 minutes.
- b. TIP 2: In standby mode, you can also turn the control dial to adjust the cooking time (still at 100% microwave power) then press the PLAY button to start cooking.
- c. TIP 3: During the microwave cooking cycle and defrost-by time process, you can press the PLAY button to increase the cooking or defrost period of time by 30 seconds. If using an auto menu or defrost-by weight then the cooking or defrost period of time cannot be


increased.

## DEFROST BY-WEIGHT

---

The time and the defrosting power levels are adjusted automatically once the weight is programmed in.

FOR EXAMPLE: Suppose you want to defrost food.


1. Place food to be defrosted into the microwave.
2. Press the WEIGHT DEFROST  button once and the screen will display dEF1.
3. Turn the control dial to select the necessary weight of your food. The range is 100-2000g.
4. Now press PLAY to start defrosting.

## DEFROST-BY TIME

---

The weight and the defrosting power levels are adjusted automatically once the time has been programmed in.

FOR EXAMPLE: Suppose you want to defrost food.

1. Place food to be defrosted into the microwave.
2. Press the TIME DEFROST  button once and the screen will display dEF2.
3. Turn the control dial to select the desired defrost cycle time. The range goes up to 95 minutes.
4. Now press PLAY to start defrosting. The defrost power is P30 and it cannot be changed.

The following example shows the steps to set up a program multi-stage cooking programme. Some recipes may require setting a multi-stage program involving defrosting as well as different microwave power levels.

## IN MULTI STAGE COOKING

---

A maximum of two stages can be set. If one stage is defrosting, it should be inputted in at the first stage. The alert tone will ring once after each stage and the next stage will begin. **Note:** The auto menu cannot be set as a selection of multi-stage cooking.


Example: suppose you want to defrost food for 5 minutes, then cook with 80% microwave power for 7 minutes. The steps are as follows:

1. Press TIME DEFROST once and the LED screen will display dEF2.
2. Turn the control dial to adjust the defrost cycle time to 05:00 minutes.
3. Press MICROWAVE once. The LED display will show "P100".
4. Now turn the control dial to choose 80% microwave power. P80 will show on the LED display.
5. Press PLAY to confirm this selection.
6. Turn the control dial to adjust the cooking cycle time to 07:00 minutes.
7. Finish your multi-stage selection by pressing the PLAY button to start cooking.

A handy chime will sound once for the first selection where the defrosting time will begin counting down. The chime will sound twice thereafter when the unit has entered the second stage of cooking. Finally, the chime will sound five times to indicate the cooking cycle is completed.

## MEMORY FUNCTION

---

1. Press the MEMORY FUNCTION  button to choose memory mode 1-2.
2. If the memory function has already previously been set, press PLAY to use this memory function. If not, continue to set the function up. Only one or two stages can be set.
3. After completion of setting the function up, press PLAY once to save the function and return to standby mode.
4. If you press PLAY again, the microwave will begin cooking in accordance with your memory function setting.



## PRESET (DELAY START) FUNCTION


---

1. Ensure that you have set the digital clock first. (Check "Setting the Digital Clock")
2. Start by inputting the desired cooking program. Remember that two multi-stages can be selected at most. Note that defrosting should not be set in the preset function.  
Example: if you want to cook with 80% microwave power for 7 minutes.
3. Press MICROWAVE once.
4. Turn the control dial to choose 80% microwave power. P80 will show on the display.
5. Press START/ +30SEC/ CONFIRM to confirm this selection.
6. Turn the control dial to adjust the cooking time to 7 minutes.
7. After completion of the above steps, please do not press START/ +30SEC/ CONFIRM button. Proceed as follows:
  - Press CLOCK/ PRE-SET and the minute figure will flash on the display.
  - Turn the control dial to adjust the minute figure. The input time should be within 0—59 minutes.
  - Now press the CLOCK/ PRE-SET button and the hour figure will flash.
  - Turn the control dial to adjust the hour figure. Here the input time should be between 0—23 hours.
  - Press START/ +30SEC/ CONFIRM to finish this setting. ":" will show.
  - The alert tone will ring twice when the cooking start time arrives and the cooking cycle will start automatically.

Note: The digital clock must be set first. If it is not set, then the preset (delay start) function will not work.

## AUTO COOK MENU

---

1. Whilst in standby mode, press the AUTO COOK  button.
2. Turn the control dial right to choose the menu from "A-1" to "A-8".
3. Press PLAY to confirm the menu you have chosen.
4. Now turn the control dial to choose the food weight.
5. Press PLAY to start cooking.
6. After the cooking has finished, an alert tone will sound five times for your convenience.

Menu	Weight	Display
A-1 Pizza	200 g	200
	400 g	400
A-2 Meat	250 g	250
	350 g	350
	450 g	450
A-3 Vegetable	200 g	200
	300 g	300
	400 g	400
A-4 Pasta	50g(with 450 ml cold water)	50
	100g(with 800 ml cold water)	100
A-5 Potato	200 g	200
	400 g	400
	600 g	600
A-6 Fish	250 g	250
	350 g	350
	450 g	450
A-7 Beverage	1 cup(120 ml)	1
	2 cups(240 ml)	2
	3 cups(360ml)	3
A-8 Popcorn	50 g	50
	85 g	85
	100 g	100

## SMART INFO FUNCTION



---

- During the cooking cycle, you can press the MICROWAVE button to observe the cooking power level. This will be displayed for 2-3 seconds.
- During this cycle, press CLOCK/ KITCHEN TIMER to check the amount of cooking time. This will also be displayed for 2-3 seconds.
- When in the preset (delayed start) mode, you can press CLOCK/ KITCHEN TIMER to enquire the time for delayed start cooking. The preset time will flash for 2-3 seconds and then the microwave will return back to the usual clock display.

## CHILD LOCK

---

Use to prevent unsupervised operation of the microwave by children.

To set the CHILD LOCK: Press and hold the PAUSE  button for 3 seconds. A beep will sound indicating that the child lock function has been activated and the display will show the LOCKED  indicator.

To cancel the CHILD LOCK: Press and hold the PAUSE button for 3 seconds until the beep has sounded and the lock indicator on the display goes off.

## KITCHEN TIMER

---

Press the CLOCK/ KITCHEN TIMER button once. The LED will display 00:00 and the clock indicator will light.

Turn the control dial to enter the correct time. (The maximum time is 95 minutes).

Press PLAY to confirm the setting. The clock indicator light will light indicating your selection. When the desired kitchen time has been reached, the clock indicator light will disappear. The handy chime will ring 5 times.

Note: The Kitchen Timer is purely a timer and must not be confused with Setting the Clock. If the clock is set (using the 24 hours system) then the LED will display the current time.

## GETTING TO KNOW YOUR NEW MICROWAVE

---

- A beep or alert tone will sound once when turning the knob at the beginning.
- PLAY must be pressed to continue cooking if the door is opened during the cooking cycle.
- If the cooking programme has been set but the PLAY button is not pressed within 1

minute then the setting will automatically cancel itself out. The LED display will revert to the current time.

- The beep or alert tone sounds once by pressing on buttons efficiently. Response will not be received if you are pressing too lightly.
- The beep or alert tone will sound five times to remind you when the cooking has completely.

## TROUBLE SHOOTING

---

<b>Normal</b>	
Dim oven light	During cooking with low microwave power, the oven light may become dim. It is normal.
Steam accumulating on door/ hot air out of vents	Foods may generate steam during the cooking process. Most steam will escape via the vents however some may accumulate on the oven door. This is normal.

<b>Trouble</b>	<b>Possible Cause</b>	<b>Remedy</b>
Microwave does not start up	(1) Power cord not plugged in correctly	Unplug. Then plug in again after 10 seconds
	(2) Fuse blowing or circuit breaker works	Replace the fuse or reset the circuit breaker (repaired by Home Of Living Brands (Pty) Ltd. Service Department)
	(3) Trouble with the power outlet	Test the power outlet with other electrical appliances
Microwave does not heat	(4) The door is not closed properly	Close the door well
Glass turntable makes noise when microwave is in operation	(5) Dirty roller and cavity bottom	Refer to "Cleaning and Maintenance" section of the instruction manual to clean dirty or soiled parts.

According to the Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time you need to dispose of this product, please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available.

## **CLEANING AND MAINTENANCE**

---

- This appliance is for household use only and is not user-serviceable.
- Do not open or change any parts by yourself. Please refer to a qualified electrical service department or return to the supplier if servicing is necessary.
- Turn off the oven and remove the power plug from the wall socket before cleaning.
- Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergent may be used if the oven gets very dirty. Avoid the use of spray and other harsh cleaners as they may stain, streak or dull the door surface.
- The outside surfaces should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
- Wipe the door and window on both sides as well as the door seals and adjacent parts frequently with a damp cloth to remove any spills or splatters. Do not use abrasive cleaner.
- Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.
- If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity condition. And it is normal.
- It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm soapy water or in a dishwasher.
- The roller ring and oven floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent. The roller ring may be washed in mild soapy water or dishwasher. When removing the roller ring from cavity

floor for cleaning, be sure to replace in the proper position.

- Remove odors from your oven by combining a cup of water with the juice and rind of one lemon in a deep microwaveable bowl, microwave for 5 minutes. Wipe thoroughly and dry with a soft cloth.
- When it becomes necessary to replace the oven light, please consult a dealer to have it replaced.
- The oven should be cleaned regularly and any food deposits removed. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- Please do not dispose this appliance into the domestic rubbish bin; it should be disposed to the particular disposal center provided by the municipalities.
- Do not use bleach or other abrasive substance or solvents to clean your appliance as it can be damaging to the finish.

## **STORING THE APPLIANCE**

---

- Unplug the unit from the wall outlet and clean all the parts as instructed above. Ensure that all parts are dry before storing.
- Store the appliance in its box or in a clean, dry place.
- Never store the appliance while it is still wet or dirty.
- Never wrap the power cord around the appliance.

## **SERVICING THE APPLIANCE**

---

There are no user serviceable parts in this appliance. If the unit is not operating correctly, please check the following:

- You have followed the instructions correctly
- That the unit has been wired correctly and that the wall socket is switched on.
- That the mains power supply is ON.
- That the plug is firmly in the mains socket.

If the appliance still does not work after checking the above:

- Consult the retailer for possible repair or replacement. If the retailer fails to resolve the problem and you need to return the appliance, make sure that:

- The unit is packed carefully back into its original packaging.
- Proof of purchase is attached.
- A reason is provided for why it is being returned.

If the supply cord is damaged, it must be replaced by the manufacturer or an authorised service agent, in order to avoid any hazard. If service becomes necessary within the warranty period, the appliance should be returned to an approved Home of Living Brands (Pty) Ltd service centre. Servicing outside the warranty period is still available, but will, however, be chargeable.

## CHANGING THE PLUG


---

Should the need arise to change the fitted plug, follow the instructions below.

**This unit is designed to operate on 230V~240V current only. Connecting to other power sources may damage the appliance. Connect a three-pin plug as follows:**

The wires in this mains lead are coloured in accordance with the following code:

Green/Yellow = Earth  
Blue = Neutral  
Brown = Live

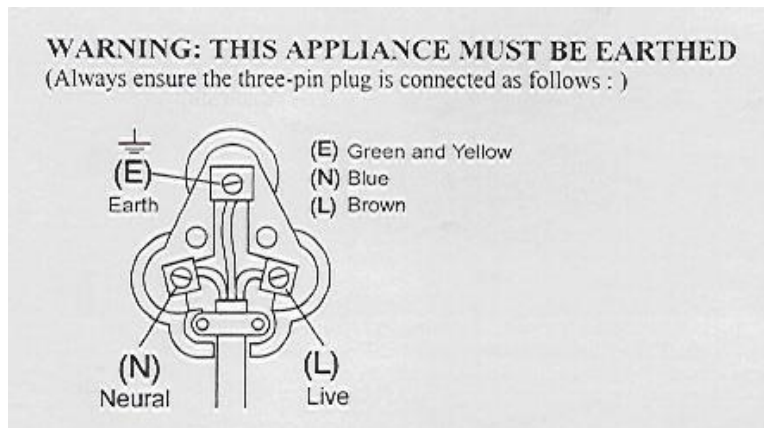

**W A R R A N T Y**

1. Home of Living Brands (Pty) Limited warrants to the original purchaser of this product (“the customer”) that this product will be free of defects in quality and workmanship which under normal personal, family or household use and purpose may manifest within a period of 1 (one) year from the date of purchase (“warranty period”).
2. Where the customer has purchased a product and it breaks, is defective or does not work properly for the intended purpose, the customer must notify the supplier from whom the customer bought the product (“the supplier”) thereof within the warranty period. Any claim in terms of this warranty must be supported by a proof of purchase. If proof of purchase is not available, then repair, and/or service charges may be payable by the customer to the supplier.
3. The faulty product must be taken to the supplier's service centre to exercise the warranty.
4. The supplier will refund, repair or exchange the product in terms of this warranty subject to legislative requirements. This warranty shall be valid only where the customer has not broken the product himself, or used the product for something that it is not supposed to be used for. The warranty does not include and will not be construed to cover products damaged as a result of disaster, misuse, tamper, abuse or any unauthorised modification or repair of the product.
5. This warranty will extend only to the product provided at the date of the purchase and not to any expendables attached or installed by the customer.
6. If the customer requests that the supplier repairs the product and the product breaks or fails to work properly within 3 (three) months of the repair and not as a result of misuse, tampering or modification by or on behalf of the customer, then the supplier may replace the product or pay a refund to the customer.
7. The customer may be responsible for certain costs where products returned are not in the original packaging, or if the packaging is damaged. This will be deducted from any refund paid to the customer.

**HOME OF LIVING BRANDS (PTY) LTD**

[www.homeoflivingbrands.com](http://www.homeoflivingbrands.com)

011 490-9600 (Jhb)

031 792-6000 (Dbn)

021 552-5161 (CT)

[www.russellhobbs.co.za](http://www.russellhobbs.co.za)

[www.facebook.com/RussellHobbsSA](https://www.facebook.com/RussellHobbsSA)