

User's Manual for LED Bay Lighting

▶ Maintenance instruction

1. Before maintenance, please ensure the light have been powered off already;
2. Clean the lens of the light regularly, to keep a good light transmittance;
3. Clean the cover and the heat sink of the light regularly, to ensure good heat dissipation;
4. Please be noted that do not use water or Strong corrosive solution to clean the lamp, and dry cloth shall be the best choice;
5. When change the power supply, a screwdriver could be used to open the rear cover and get out the power supply. Wiring methods for AC three-core power cord shall be as follows: the red wire shall correspond with the “L” mark on the power supply, the blue wire shall correspond with the “N” mark on the power supply, and the yellow-blue or yellow wire shall correspond with the “ ” mark on the power supply. The red wire of the DC power cord shall correspond with the positive pole of the power supply, and the black wire shall correspond with the negative pole of the power supply. Please make sure do not connect the positive pole and the negative pole reversely.



▶ Guarantee and after-sale service

For the LED bay lights manufactured by our company, two year limited warranty is available for the built-in constant current driver and three year limited warranty is available for the LED light source on condition that the light is used under normal environment, suitable maintenance and storage. Any product damages caused by improper installation, use and violation of the operation instructions shall not apply to the above mentioned warranty policy. For quality issues within the warranty period, we provide the solutions of repairing, changing (the components and parts) or replacing new item. Once the warranty is expired, appropriate cost for the material and the labor should be charged.

▶ Contact us

Phone: 86-755-3366-2660 (English Service)
Fax: 86-755-3366-2986

Website:www.fobsun.com
Email:sales@fobsun.com