


ICEBERG 3.500

GB

# Teläir

AIR CONDITIONER

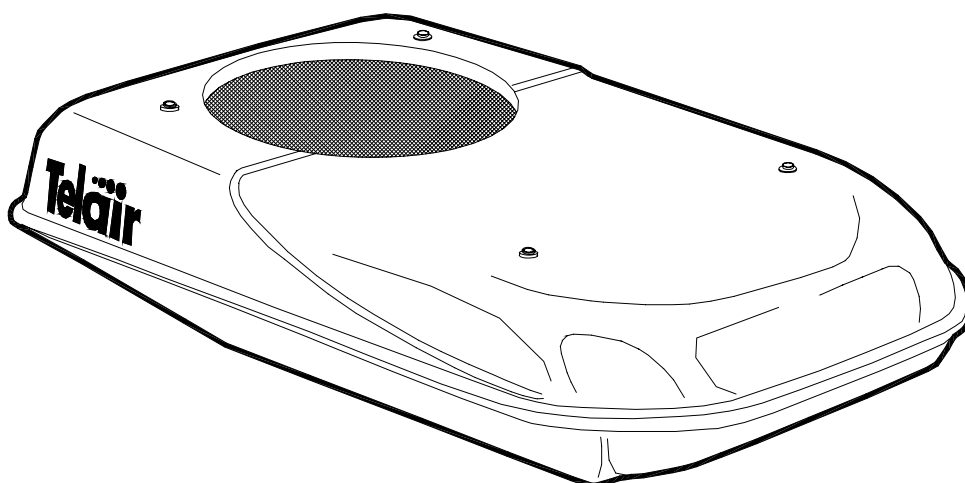

*INSTALLATION AND USER MANUAL*

VERS. 001

**Teläir***Via E. Majorana , 49 48022 Lugo (RA) ITALY***“CE” COMPLIANCE STATEMENT**

Under Machine Directive 89/392/EEC, attachment II A

We hereby represent that the air conditioner, the data concerning which appear below, has been designed and built to correspond to the essential safety and health requirements laid down by the European Directive on Machine Safety.

This statement shall not be valid any longer if any changes are made on the machine without our written approval.

Machine: AIR CONDITIONER

Model: ICEBERG .....

Serial number: .....

Directive of reference:

Machine Directive (89/392/EEC) in version 91/31/EEC

Low Voltage Directive (73/23/EEC)

Electro-magnetic Compatibility (89/336/EEC) in version 93/31/EEC

Harmonised standards applied, especially: EN 292-1; EN 292-2; EN 60204-1

DATE ...03/01/2000.....

THE PRESIDENT





---

---

**CONTENTS**

---

---

<b>1 FOREWORD .....</b>	<b>pag. 4</b>
1.1 Purpose and scope of this manual .....	pag. 4
1.2 Symbols and Definitions .....	pag. 4
1.3 General Information .....	pag. 4
<b>2 AIR CONDITIONER IDENTIFICATION DATA .....</b>	<b>pag. 5</b>
2.1 Components .....	pag. 5
2.2 Identification plate .....	pag. 5
2.3 Technical features .....	pag. 5
<b>3 SHIPPING, HANDLING, STORAGE .....</b>	<b>pag. 6</b>
3.1 Storage .....	pag. 6
3.2 Weight .....	pag. 6
3.3 Handling .....	pag. 6
<b>4 INSTALLATION .....</b>	<b>pag. 6</b>
4.1 Preliminary information .....	pag. 6
4.2 Installation .....	pag. 6
4.2.1 Using the ventilation portholes .....	pag. 7
4.2.2 Opening a new hole .....	pag. 7
4.2.3 Power supply cable .....	pag. 8
4.3 Positioning the air conditioner .....	pag. 9
4.4 Installing the diffuser .....	pag. 10
<b>5 USER INSTRUCTIONS .....</b>	<b>pag. 11</b>
5.1 Foreword .....	pag. 11
5.2 Preliminary checks .....	pag. 11
5.3 Air diffusion outlets .....	pag. 11
5.4 Control panel .....	pag. 11
5.5 Turning on .....	pag. 11
5.6 Ventilation .....	pag. 12
5.7 Heating .....	pag. 12
5.8 Turning off .....	pag. 13
5.9 Safety rules .....	pag. 13
5.10 Some problems and how to solve them .....	pag. 13
<b>6 MAINTENANCE .....</b>	<b>pag. 14</b>
<b>7 DISPOSAL .....</b>	<b>pag. 14</b>
<b>8 TROUBLESHOOTING .....</b>	<b>pag. 15</b>
<b>WIRING DIAGRAM .....</b>	<b>pag. 18</b>
<b>EXPLODED VIEW .....</b>	<b>pag. 19</b>
<b>SPARE PART LIST .....</b>	<b>pag. 21</b>
<b>GENERAL TERMS OF WARRANTY .....</b>	<b>pag. 23</b>

## 1 FOREWORD



**MANUAL** Refer carefully to this manual before performing any operation on the air conditioner.

### 1.1 Purpose and scope of this manual

This manual has been drawn up by the Manufacturer in order to provide basic information and instructions for performing every operation for servicing and using the air conditioner in a proper and safe manner.

It is an integral part of the conditioner equipment should be kept clean and safe throughout its working life.

It must follow the conditioner if the latter is installed on a new vehicle, or if its ownership changes hands. The information in this manual is addressed to the personnel which must install the air conditioner, and to all those involved in its maintenance and use.

This manual sets out the purpose the machine was designed for, and contains all the information required to guarantee that it is used in a safe and proper fashion.

Constant attention to the instructions laid down here will guarantee the safety of the user, economy and longer life of the machine.

To facilitate reference, this manual has been subdivided into chapters which specify the main notions; for quick consultation, refer to the table of contents.

The most important parts of the text are in bold letters and preceded by symbols described below. Please read the contents of this manual carefully. This is the only way to ensure that the air conditioner will work properly through time and be reliable, while safeguarding people and things.

**Note:** *The information contained in this publication was correct at the time it went to print, but may be modified without advance notice.*

### 1.2 Symbols and Definitions



#### **DANGER**

This means that you must pay attention to avoid serious consequences which might lead to the death of the operators or at least to possible damage to their health.



#### **WARNING**

This means a situation which could take place during the lifetime of a product, system or installation, and which is considered to be hazardous in terms of damage to people, property, the environment or financial loss.



#### **CAUTION**

This means you must pay attention in order not to incur serious consequences which might lead to damage to material goods, such as resources or the product itself.



#### **INFORMATION**

Especially important instructions.

The drawings are only provided by way of example.

Even though the machine you actually have may differ from the illustrations contained in this manual, safety and information about the same are guaranteed.

The manufacturer, as part of his policy of constant development and updating, may effect changes without providing advance notice.

### 1.3 General Information

The **ICEBERG 3500** air conditioners have been designed for installation on the roofs of vehicles. They run on 230 VAC 50 Hz alternate current power supply.



#### **WARNING**


***The power supply must never fall below 210 VAC, and the frequency must stay steadily at 50 Hz.***

The use of air conditioners at a different voltage from the above would compromise their good performance and could also be dangerous for the integrity of the equipment.

## 2. AIR CONDITIONER IDENTIFICATION DATA

### 2.1 Components (fig. 1)

- 1 Ventilation grid
- 2 Top hood
- 3 Identification label
- 4 Diffuser
- 5 Adjustable air outlets
- 6 Ambient air suction grid
- 7 Fan speed selector switch
- 8 Hot-cold air selector switch
- 9 Thermostat control
- 10 ON/OFF switch

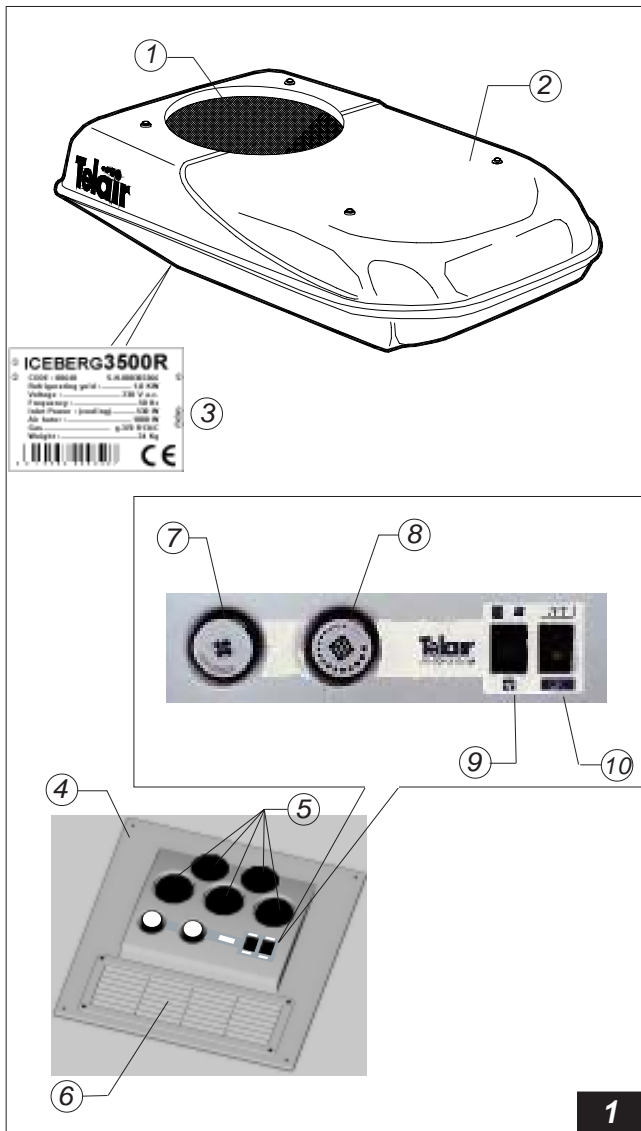

### 2.2 Identification label

- 1 Model
- 2 Machine code
- 3 Serial number
- 4 Compressor and fans consumption
- 5 Heater power
- 6 Coolant gas type and quantity

① **ICEBERG3500R**

② **CODE : 00640 S.N.000303266**

**Refrigerating yeld : ..... 1,0 KW**

**Voltage : ..... 230 V a.c.**

**Frequency : ..... 50 Hz**

**Inlet Power : (cooling) ..... 530 W**

**Air hater : ..... 1000 W**

**Gas ..... g.370 R134C**

**Weight : ..... 34 Kg**

8 0 1 5 5 6 4 0 0 6 0 4 0 7

CE

### 2.3 Technical features

	ICEBERG	
	3.500	3.500R
Cooling power	3500 BTU	3500 BTU
Fan speed number	3	3
Power supply	230 V 50 Hz	230 V 50 Hz
Consumption	2,4 A	2,4 A
Start up current	15 A (0,15 sec.)	15 A (0,15 sec.)
Absorbed power	530 W	530 W
Coolant gas	R 134 C	R 134 C
Generator requested	1500 W	1500 W
Air circulation	240 m³/h	240 m³/h
Heating power	-	1000 W
Diffuser height	5.5 cm	5.5 cm
Dimensions (HxLxW)	24x101x62cm	24x101x62cm
Weight	34 Kg	34 Kg

## 3 SHIPPING, HANDLING, STORAGE

### 3.1 Storage

The air conditioner is protected during shipping by suitable packaging. The air conditioner must be stored horizontally, in a covered, dry and ventilated area.

The packaging is designed so as to allow stacking of a maximum of 5 (five) air conditioners.

**CAUTION** *Do not turn the unit upside down. The right position is the one shown by the symbol printed on the package (↑).*

**DANGER** *Stacking more than 5 air conditioners will not only compromise the integrity of the equipment, but will also be a risk to personnel.*

### 3.2 Weight

Weight without packing.

**ICEBERG 3500**      Kg 34

### 3.3 Handling

The air conditioners, complete with their packaging, can be moved using common lifting and transport vehicles.

The boxes are provided with spacers in order to allow for the introduction of transpallet forks.

**DANGER** *During lifting and transport, comply with accident prevention and safety regulations. Use lifting and transport equipment with a capacity greater than the load to be lifted.*

## 4 INSTALLATION

### 4.1 Preliminary information

**INFORMATION** *Before installing the air conditioner, it is essential to read these instructions, in order to avoid errors during installation*

**WARNING** *Improper installation of the air conditioners can cause irreparable damage to the equipment and compromise the safety of the installation engineer.*

Should the air conditioners be installed in a manner which does not comply with the instructions in this manual, the Manufacturer shall be held blameless for malfunctions or for the safety of the air conditioner, under D.M. 89/392/EEC. Furthermore, he shall be held blameless for any damage or injury to persons or things.

**DANGER** *Installation must be performed by qualified and properly trained personnel only.*

### 4.2 Installation

**WARNING** *Before starting to install, you must disconnect all the power supply of the vehicle*

- Positive battery pole
- Generator set (if present)
- Outside power source.

**DANGER** *Lack of compliance with these instructions implies a risk of electrical shock.*

**DANGER** *Before going onto the roof of the vehicle, you must make sure that it has been designed to be walked on. Check with the person who equipped the vehicle. Otherwise, you will have to prepare suitable scaffolding.*


In order to install the air conditioner, you must first make sure the roof of the vehicle is able to hold its weight. If not, reinforce it. Choose a central, level and flat area on the roof. Make sure that no obstacle inside the vehicle can hinder fastening of the diffuser [Fig.1 ref. 4] and the exit of the cooled air from the adjustable outlets [Fig. 1 ref. 5].

To install the air conditioners, you can choose either of two solutions:

- Remove existing rooflight and use aperture
- Cut new aperture.


#### 4.2.1 Using rooflight aperture

You can do so on condition that the aperture of the rooflight measure of 400 x 400 mm. For the dimensions of the air conditioners and of the holes required to install them, refer to figure 2.

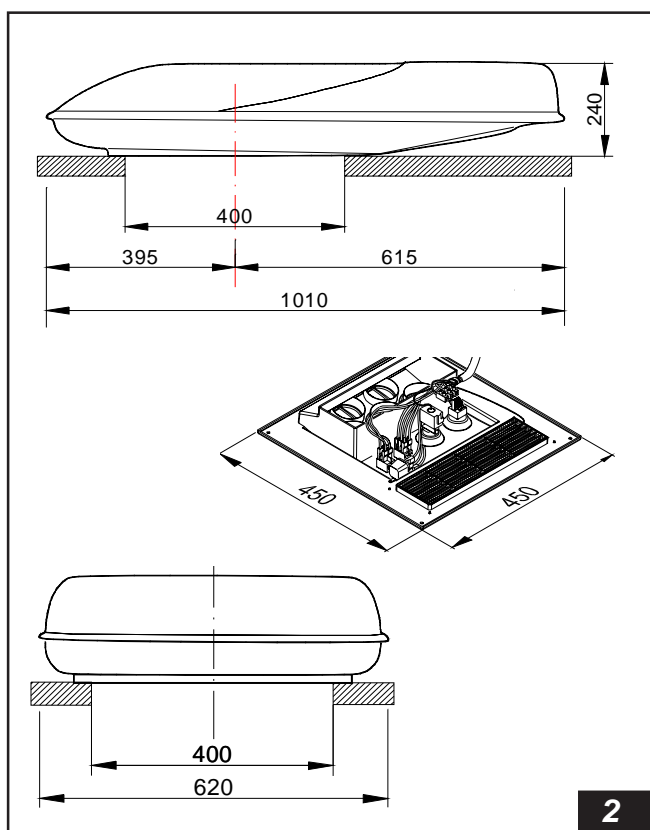

Remove existing rooflight and sealants making sure roof surface is clean and even [Fig. 3 ref. 1] Seal any screw holes and or cable entrance holes so that no water can penetrate the roof space, using a suitable sealant [Fig. 3 ref. 2].

**INFORMATION** All the waste material - glue, silicone, lining - must not be disposed of in the open, but in special containers and delivered to a Waste Collection and Disposal Centre.

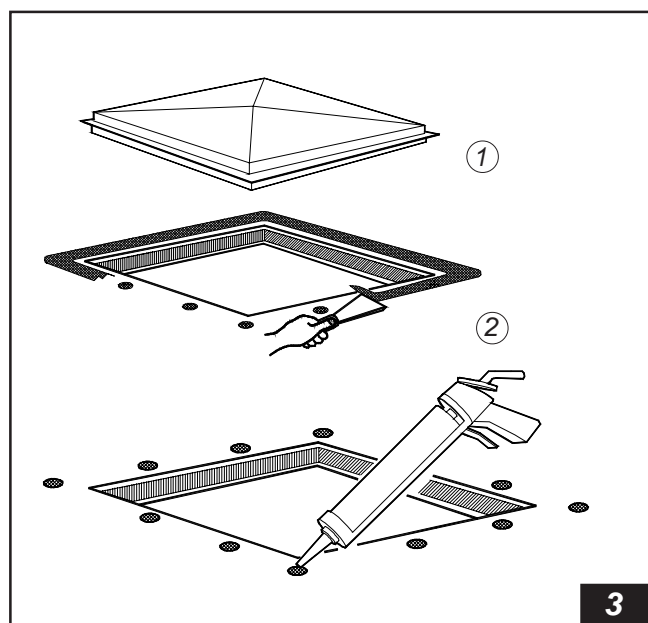

#### 4.2.2 Opening a new hole

Choose a flat level position on the vehicle roof between the support structure. Mark the aperture 400 x 400 mm square [Fig. 4 ref. 1].



Carefully cut out the opening on the roof, making sure that no damage will be caused e.g. cables, hoses, furniture, fittings. [Fig. 4 ref. 2].



**CAUTION** Wear safety goggles and gloves before using any power tools or hand-saws.


Make a reinforcing frame along the perimeter of the opening. Make a hole on one side in order to lead the power supply cable through [Fig. 5].



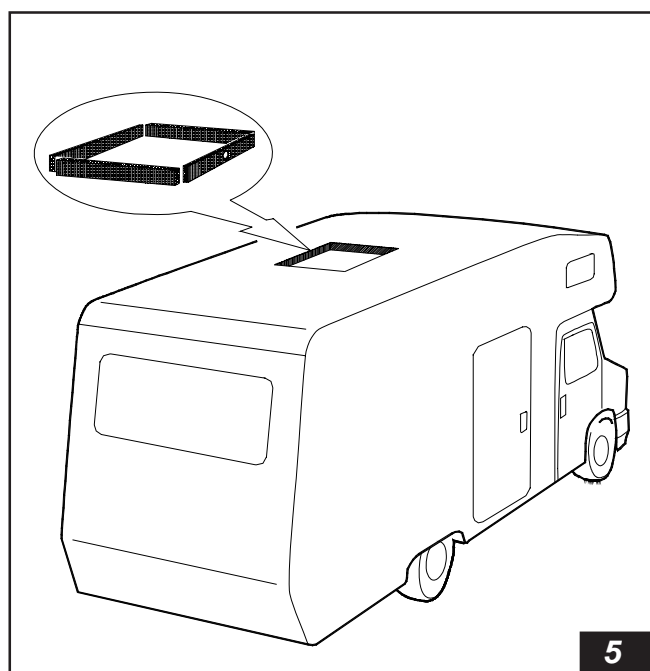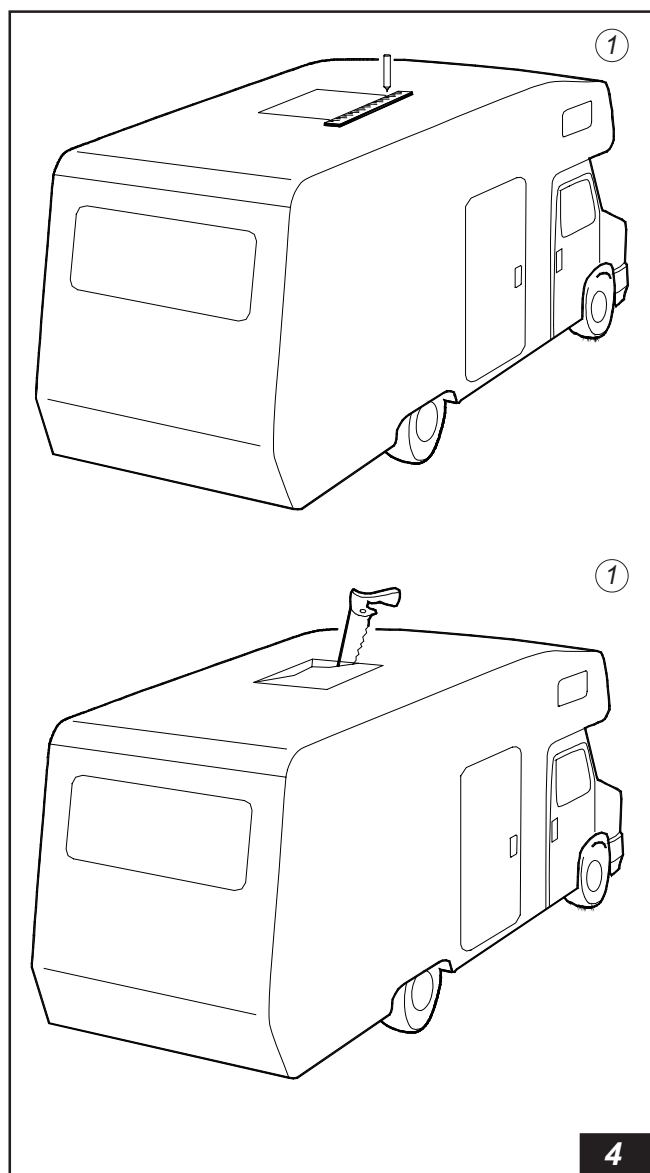

## 4.2.3 Power supply cable

To set up the power supply for the air conditioner, lay a three-pole (positive-neutral-earth), power supply cable with a cross section of at least 2.5 mm<sup>2</sup>. This cable must be connected at one end to the differential cut-off switch previously placed inside the distribution board of the vehicle, while the other end must reach the opening on the roof. Let the cable come out from the reinforcing frame by about 50 cm to allow easier connection to the air conditioner [Fig. 6].

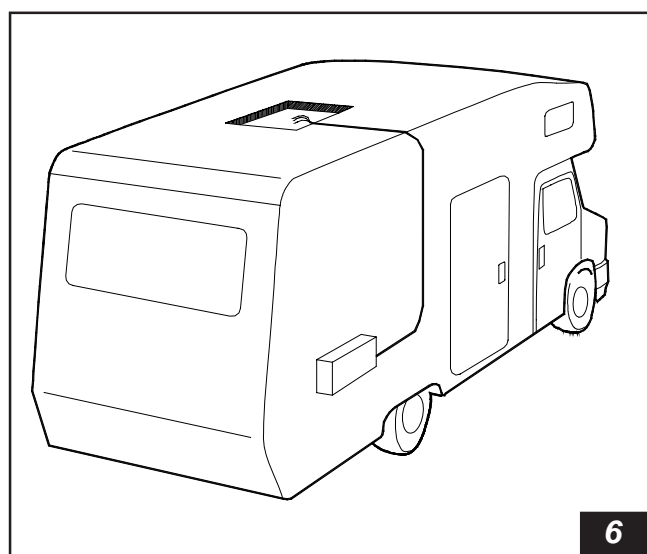

**⚠ DANGER** Before performing any kind of connection, always make sure that there is no power inside the distribution board or at the cable end.

The air conditioner must be powered from a separate cable, which must be provided with a 10A fuse.


**⚠ DANGER** The cable must be sheathed so it can provide proper insulation under any condition of use of the vehicle.



### 4.3 Positioning the air conditioner

Before positioning the air conditioner on the roof of the vehicle, spread a sufficient quantity slow-drying sealant around the edges of the opening. Take the air conditioner on to the roof of the vehicle [Fig. 7 ref. 2] and position it over the opening (previously treated with sealant). Remember that the side with the ventilation grid must face the rear end of the vehicle. The arrow on Figure 7 shows the driving direction of the vehicle.

**INFORMATION** The support gasket must be placed flush with the edge of the hole drilled, on the back of the air-conditioning unit [fig. 7 ref. 1].


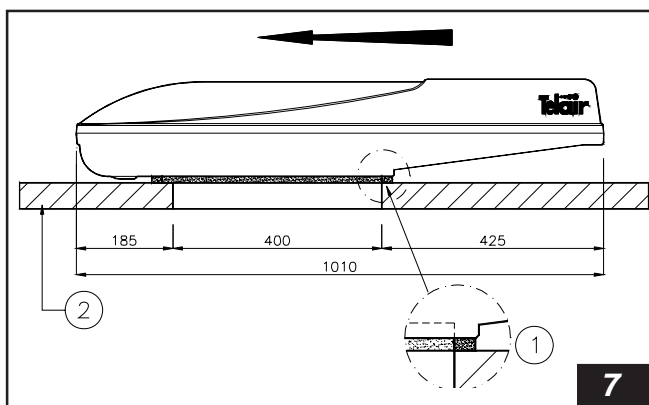


From within the vehicle, move the air-conditioning unit until the gasket is flush with the rear section of the roof opening.

**INFORMATION** The air ducts may be extended, [fig. 8], they may therefore be used with roof thickness 30 to 80 mm. Should the roof be thicker, longer air ducts are available.

Fix the anchor frame to the air conditioner [Fig. 9 ref. 1], as shown on Figure 9, using the four relevant screws [Fig. 9 ref. 2] without tightening them all the way.

**WARNING** Do not crush the foam sealing too much - it must be at least 10 mm thick [Fig. 9 ref. 3].  
If the lining is crushed too much, this will damage the support of the air conditioner and will compromise the watertightness of the junction.

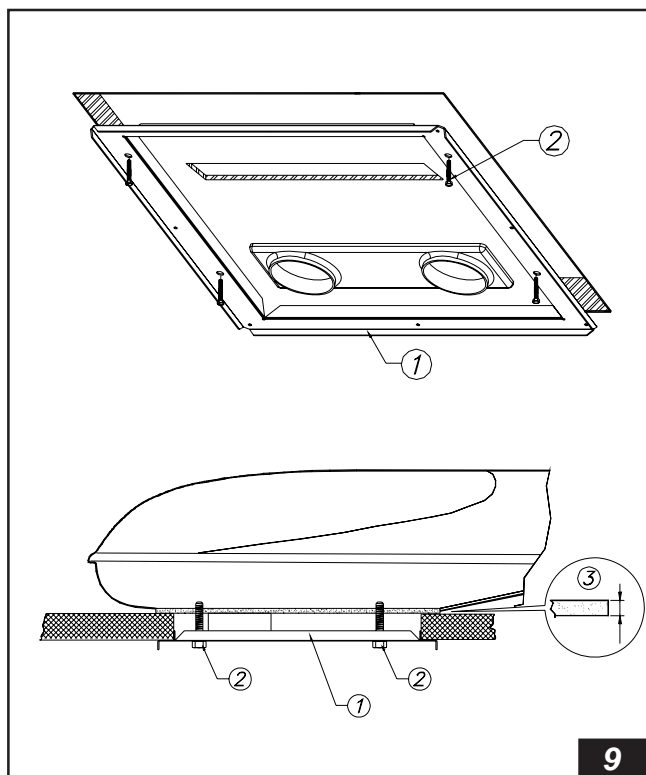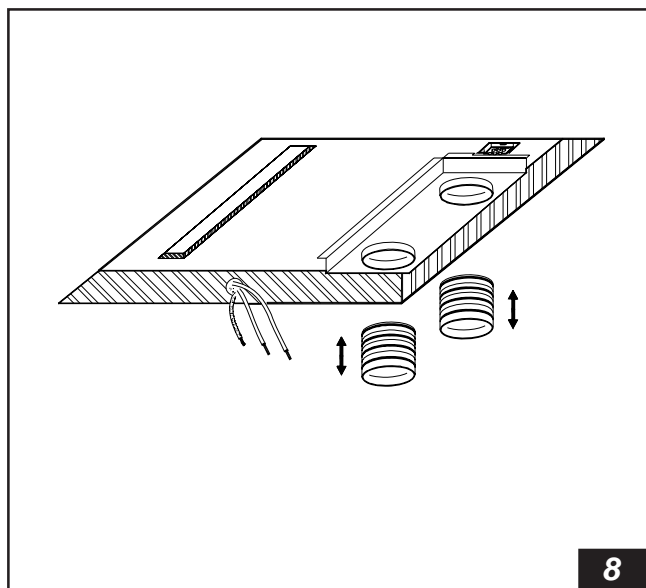

## 4.4 Installing the diffuser


After securing the air conditioner to the roof of the vehicle, connect the power supply cable to the connection terminal board [Fig. 10 ref. 3], located on the diffuser, complying with the positions shown on the adhesive label:

**blue wire: neutral**

**brown wire: positive**

**yellow-green wire: earthing ( $\perp$ )**

Fit the multi-pole cable connector [Fig. 10 ref. 2] coming from the diffuser into the connector of the conditioner [Fig. 10 ref. 1]. Fit both connectors,


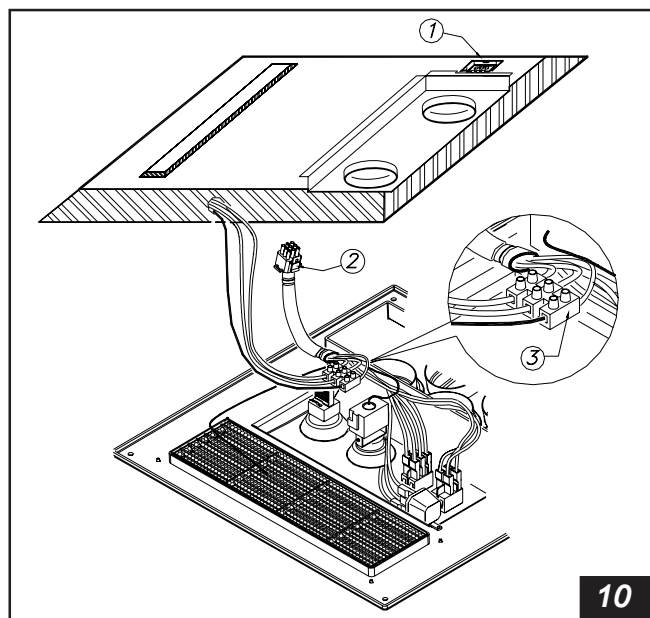


pressing until they are firmly fastened.


**WARNING** Before fastening the diffuser to the ceiling of the vehicle, make sure that no cable is in contact with the resistances of the fan speed selector switch [Fig. 11 ref. 1], because - when the air conditioner is running - these become very hot and can cause a serious hazard for the insulation of the power cables.

Make sure that both resistances of the fan speed selector switch are not in contact with each other [Fig. 12 ref. 1] but are clearly separated [Fig. 12 ref. 2].

Make sure that the power supply cable is not too long, to avoid jamming the air intake holes [Fig. 1 ref. 6].

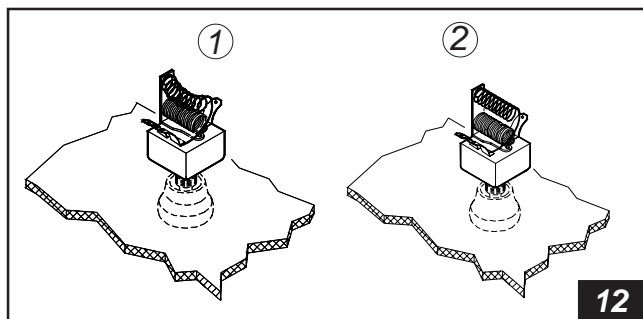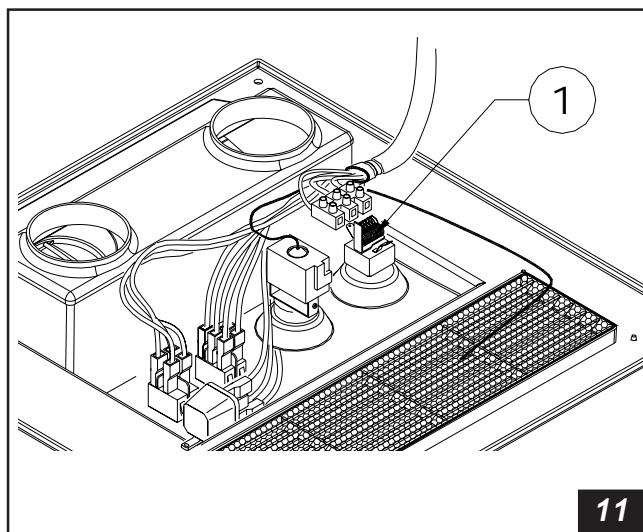

Extend the air ducts [fig. 13 ref. 1] by 1 cm beyond the roof thickness and fit them between the diffuser [fig. 13 ref. 2] and the air conditioner openings [fig. 13 ref. 3]. Fasten the diffuser to the frame, using the relevant four screws [fig. 13 ref. 4]. Fit the air ducts [fig. 13 ref. 1] between the diffuser [fig. 13 ref. 2] and the linings [fig. 13 ref. 6].

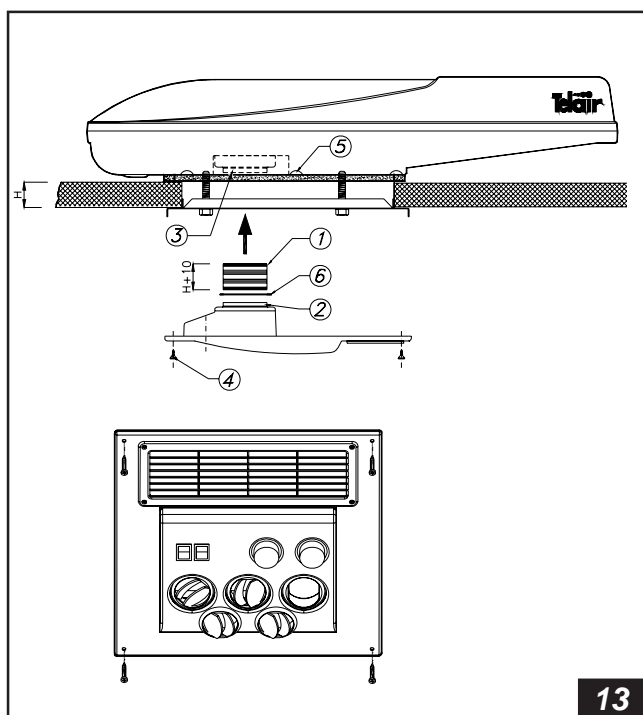

## 5. USER INSTRUCTIONS

### 5.1 Foreword

**INFORMATION** *The Manufacturer shall not be held liable for any damage due to the air conditioner not working.*

The air conditioner consists of a compressor running at 230 VAC 50 Hz. The compressor compresses the coolant gas inside a coil pipe which, when ventilated, gives off the heat developed during compression. The coolant gas is then conveyed into a condenser where it can expand and thus absorb heat from the air going through the condenser.

The cooled air is spread through the inside of the vehicle by a fan which works at an adjustable speed. A thermostat adjusts the air temperature.

**ICEBERG** can provide cold air in summer and hot air in winter.

When your vehicle has been exposed for a long time to sunlight, it is good practice, before starting up the air conditioner, to open the doors and windows in order to let out the heat which has built up inside.

When the indoor temperature becomes the same as the outdoor temperature, close all the doors and windows again and start up the air conditioner. Do not open doors or windows when the conditioner is running except in case of need.

To obtain better performance, we suggest you aim one of the outlets towards the door so that hot air does not come in when you open it.

### 5.2 Preliminary checks


Before turning the air conditioner on, you must perform a few simple operations.

- Make sure that the condensate drainage system is not clogged [Fig. 13 ref. 5].
- Make sure that the power supply voltage and frequency are those listed in the previous paragraph.
- Make sure that nothing is preventing the air from circulating freely inside the ventilation conduits and outlets. The outside ventilation grids must always be free for the air conditioner to be truly efficient.

### 5.3 Air diffusion outlets

The diffuser panel [Fig. 1 ref. 4] houses five cooled or heated air diffusion outlets [Fig. 1 ref. 5].

Each outlet is provided with two mobile baffle plates which allow you to choke and direct the air jet [Fig. 14]. Press on the baffle plates to choke the air jet until you close it completely off. Turn the baffle plates to point the air jet in any direction.

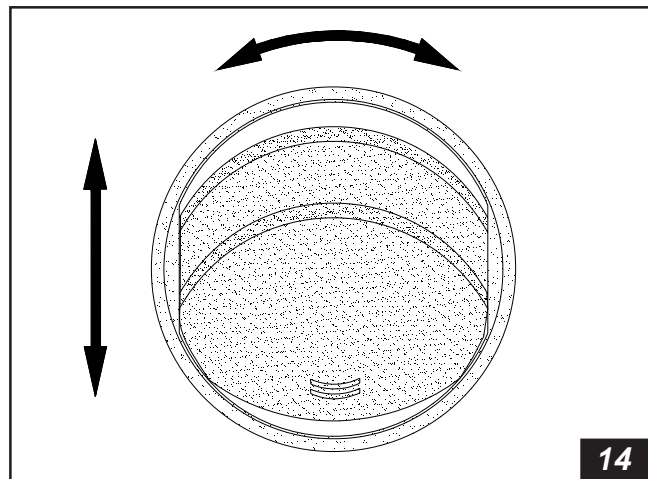

### 5.4 Control panel (Fig. 15)

Fan speed selector switch [Fig. 15 ref. 1].



Ventilation / cooling selector switch with thermostat [Fig. 15 ref. 2].

Cold/hot air selector switch [Fig. 15 ref. 3].

ON/OFF switch [Fig. 15 ref. 4].


### 5.5 Turning on

**INFORMATION** *The air conditioner is provided with an environmental thermostat, with a minimum working temperature of 18°C (+/-1°C). Below this temperature, the thermostat does not enable operation of the compressor. This prevents the risk of ice developing inside the air conditioner. The fans and heating function are still enabled.*

To turn the air conditioner on, set the ON/OFF switch [Fig. 15 ref. 4] to the ON position. Position the **cold/hot air** selector switch [Fig. 15 ref. 3] on the symbols   and then turn the thermostat [Fig. 15 ref. 2] clockwise, positioning it on the temperature value you want.

The thermostat keeps the temperature you have chosen constant, and does so automatically, turning the air conditioner compressor on and off.

The temperature scale is marked by a series of dots of different sizes.

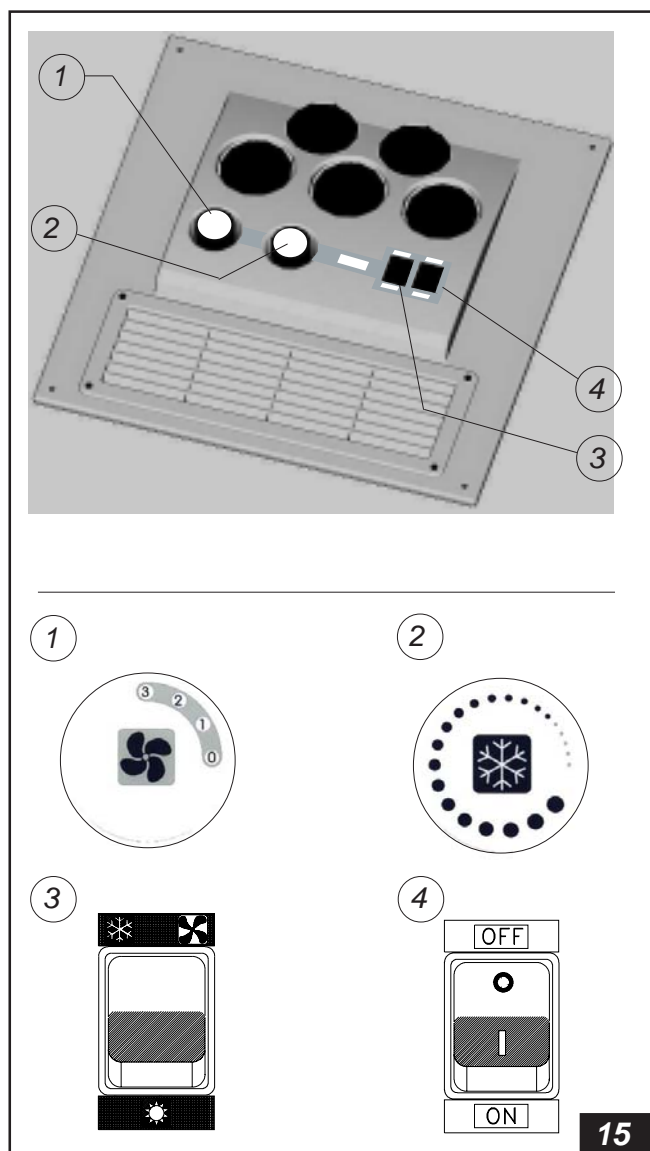

The minimum cooling value is marked by the smallest dot, the maximum cooling value is marked by the largest [Fig. 15 ref. 2].

The thermostat controls the temperature automatically, but the speed of the fan must be set manually by the user.

Set the fan speed required on the relevant selector switch [Fig. 15 ref. 1].

To use the air conditioner in the most effective manner, we suggest the following settings:




- Minimum speed - Minimum cool (night-time)
- Medium speed - Maximum cool
- Maximum speed - Medium cool

To use the conditioner more efficiently, we suggest you perform the following operations:

- First choose Maximum Cool and the second ventilation speed.
- When you have reached the temperature you want, choose the first ventilation speed, then turn the thermostat knob counter-clockwise until the compressor goes off (you can tell this has happened when the noise diminishes).
- Now select the second ventilation speed again, and the system will preserve the temperature you have set.

## 5.6 Ventilation

If you want to move the air inside the vehicle without heating or cooling, proceed as follows:

- Press the Cold Air /Hot Air selector [Fig. 15 ref. 3] in the position 
- Position the Thermostat [Fig. 15 ref. 2] selector in the position 
- Press the ON/OFF switch [Fig. 15 ref. 4] to position it 
- Choose the ventilation speed required [Fig. 15 ref. 1].

## 5.7 Heating

The electrical heater of the air conditioner cannot replace a conventional heating system, but it does help to warm up the air in the morning or on cool days.

Press the Cold Air /Hot Air selector in the position




Position the Thermostat [Fig. 15 ref. 2] selector in the position 

Press the ON/OFF switch [Fig. 15 ref. 4] to position 

Choose the ventilation speed required [Fig. 15 ref. 1].

## 5.8 Turning off

To turn the air conditioner off, position the switch [Fig. 15 ref. 4] on the  position.



### CAUTION

*After having turned the air conditioner off, either using the thermostat knob or the ON-OFF switch, wait at least three minutes before turning it back on again, so the coolant can stabilise its pressure. Lack of compliance with this rule may damage the compressor irreparably.*

## 5.9 Safety rules

- Always use earthed power sources protected by differential switches.
- Never use the air conditioner near flammable liquids.
- Never use the air conditioner for any purpose other than that designed for by the Manufacturer.
- Never modify or tamper with any part of the air conditioner.
- Use only original spare parts.
- Maintenance and repairs must be performed by specialised personnel only.
- Installation must only be performed by qualified personnel.
- Never allow animals or children near the equipment.
- Never put your hands inside the ventilation grids.
- Never put foreign objects into the ventilation outlets.
- Should the air conditioner be subject to an impact, have it checked by specialised personnel before using it again.
- In case of fire, never open the top lid of the air conditioner, but use a standard non water based fire extinguisher.
- Do not use water to put the fire out.

## 5.10 Some problems and how to solve them

Unsatisfactory performance of the air conditioner will usually be due to improper use rather than to malfunction check.

- The conditioner is not too small compared to the volume of air it has to condition.

- The walls of the vehicle are sufficiently insulated.
- The doors are not opened too frequently.
- There are not too many people inside the vehicle.
- The voltage is less than 230 V.

Here is a list of possible problems and how to solve them.



### INFORMATION

*Before anything else, check if: the power supply has dropped below 205 V; the ventilation grids are jammed; the air diffusion outlets are open.*

#### 1) The air conditioner will not start up:

- Check whether the ON/OFF switch is in its ON position [Fig. 15 ref. 4], the thermostat is in its all-cold position [Fig. 15 ref. 2], the fan speed selector switch is in position 1 [Fig. 15 ref. 1].
- Make sure then that the power source is live by using a domestic appliance or a voltmeter.

#### 2) The compressor does not work:

- For the compressor to work, the thermostat [Fig. 15 ref. 2] must be in its **cold** position, the hot/cold selector switch in cold position and at least the first fan speed on.

#### 3) The fans do not work:

- Make sure that the ON/OFF switch [Fig. 15 ref. 4] is in its ON position and that the fan speed selector switch [Fig. 15 ref. 1] is set on value 1.

#### 4) The condenser fan does not work:

- Make sure that the condenser fan is not hindered by foreign matter.

#### 5) The heating resistance does not work:

- Make sure that the hot/cold selector switch is in hot position [Fig. 15 ref. 3].

#### 6) The air conditioner performs poorly:

- If the air conditioner performs poorly, you must clean the air filter, the condenser and the evaporator using specific detergents. We suggest you clean these before using the air conditioner when it has not been used for a long time. If the air conditioner still does not return to its original performance after cleaning of the exchangers, you must have the coolant gas level checked by a specialist.



## 6. MAINTENANCE

Accurate inside cleaning of the air conditioner is important to keep it efficient.


**⚠ DANGER** *Before accessing the air conditioner, you must disconnect the 230V power supply and wait for all parts to cool off.*

- Take off the outside cover and spray the proper detergent on the heat exchangers (evaporator and condenser), and then rinse to remove all debris.
- Make sure that the drainage holes are free [fig. 13 ref. 5].
- Make sure that the sealing lining is in good condition and that no water is leaking into the vehicle.
- Any traces of rust must be removed, and metal parts protected by repainting.
- Make sure that the insulation of the electric cables are whole and remove any trace of humidity.
- Make sure that all the screws are firmly tightened.
- When putting away in the garage for the winter, you should protect the air conditioner from dust using a special cover (**accessory code 00639**).

## 7. DISPOSAL

If you have to dispose of the air conditioner, refer to a specialised workshop.

**I INFORMATION** *All the waste material must not be disposed of in the open, but in special containers and delivered to a Waste Collection and Disposal Centre.*

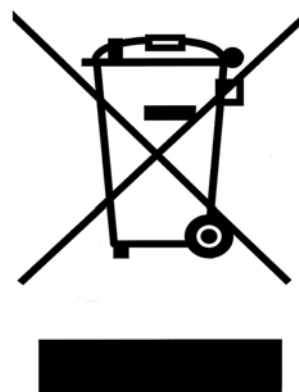

## 8. TROUBLESHOOTING (for technical staff only)

**INFORMATION** Before performing the checks listed below, make sure that the ON/OFF switch is in the ON position [Fig. 15 ref. 4], the thermostat is in the all-cold position [Fig. 15 ref. 2], and the fan speed selector switch is in position 1 [Fig. 15 ref. 1].

### 1) PROBLEM The air conditioner does not start up

- CHECK** Make sure that the infeed terminal of the air conditioner between the blue and the yellow wire is powered at 230 VAC [Fig. 16 ref. 4].
- OPERATION** Check the differential switch, the fuse protection on the power supply line, the wholeness of the power supply line.
- CHECK** Make sure that there is 230 VAC power between the blue and the brown wire of the voltage transformer [Fig. 16 ref. 15].
- OPERATION** Check the wholeness of the ON/OFF switch and its connections, and replace or reconnect if necessary [Fig. 15 ref. 1].
- CHECK** Make sure that there is 12 VAC power between the pink and the yellow wire of the transformer [Fig. 18 ref. 15].
- OPERATION** If there is no voltage, replace the transformer.
- CHECK** Make sure that there is 12 VAC power between the pink and the violet wire of the transformer.
- OPERATION** If there is no voltage, replace the transformer.
- CHECK** Disconnect both blue wires from the DC feeder board, and check whether there is continuity between both ends [Fig. 16 ref. 14].
- OPERATION** If there is no continuity, replace the inductor [Fig. 16 ref. 13].
- CHECK** Make sure that there is 12 VDC between the red and the black wire of the DC feeder board [Fig. 16 ref. 14].
- OPERATION** If there is no voltage, replace the feeder board.
- CHECK** Make sure that there is 12 VDC between the black wire of the relay [Fig. 16 ref. 2] and the red wire of the fan speed selector [Fig. 16 ref. 8].
- OPERATION** Check the harness and the multi-wire connector [Fig. 16 ref. 7].
- CHECK** Make sure that there is 12 VDC on the fan speed selector [Fig. 16 ref. 8] between the orange and the black wire of the relay.
- OPERATION** Replace fan speed selector.
- CHECK** Make sure there is 230 VAC between the white wire of the relay [Fig. 16 ref. 2] and the blue wire of the feeder input terminal [Fig. 16 ref. 4].
- OPERATION** Replace the relay.
- CHECK** Make sure that when the hot/cold selector switch [Fig. 16 ref. 3] is positioned on cold, there is 230 VAC between the pink and the blue wire of the infeed terminal [Fig. 16 ref. 4].
- OPERATION** Replace the hot/cold selector switch.
- CHECK** Make sure that when the hot/cold selector switch [Fig. 16 ref. 3] is positioned on hot, there is 230 VAC between the grey and the blue wire of the infeed terminal [Fig. 16 ref. 4].
- OPERATION** Replace the hot/cold selector switch.
- CHECK** Make sure that there is 230 VAC between the violet wire of the thermostat [Fig. 16 ref. 5] and the blue wire of the infeed terminal [Fig. 16 ref. 4] (when the ambient temperature is below 16°C, the thermostat will not close its contacts, so this test must be performed at an ambient temperature over 20°C).
- OPERATION** Replace the thermostat
- CHECK** Make sure that when the hot/cold selector [Fig. 16 ref. 3] is in cold position, and after the plastic side cover has been removed, the following are on the compressor [Fig. 16 ref. 11]: voltage at 230 VAC between the blue and the white wire; voltage at 230 VAC between the black and the white wire; voltage at about 250 VAC between the orange and the white wire.
- OPERATION** Check the connector and the harness. Replace the temperature switch on the compressor. Replace the condenser [Fig. 16 ref. 10].
- CHECK** Make sure that there are 12 VDC between the green speed selector switch wire [Fig. 16 ref. 8] and the black relay selector wire [Fig. 16 ref. 2].
- OPERATION** Check the harness and the multi-wire connector.



## 2) PROBLEM The compressor does not work

- CHECK** Make sure that there is 12 VDC between the black wire of the relay [Fig. 16 ref. 2] and the red wire of the fan speed selector [Fig. 16 ref. 8].
- OPERATION** Check the harness and the multi-wire connector [Fig. 16 ref. 7].
- CHECK** Make sure that there is 12 VDC on the fan speed selector [Fig. 16 ref. 8] between the orange and the black wire of the relay.
- OPERATION** Replace fan speed selector.
- CHECK** Make sure there is 230 VAC between the white wire of the relay [Fig. 16 ref. 2] and the blue wire of the feeder input terminal [Fig. 16 ref. 4].
- OPERATION** Replace the relay.
- CHECK** Make sure that when the hot/cold selector switch [Fig. 16 ref. 3] is positioned on cold, there is 230 VAC between the pink and the blue wire of the infeed terminal [Fig. 16 ref. 4].
- OPERATION** Replace the hot/cold selector switch.
- CHECK** Make sure that there is 230 VAC between the violet wire of the thermostat [Fig. 16 ref. 5] and the blue wire of the infeed terminal [Fig. 16 ref. 4] (when the ambient temperature is below 16°C, the thermostat will not close its contacts, so this test must be performed at an ambient temperature over 20°C).
- OPERATION** Replace the thermostat
- CHECK** Make sure that when the hot/cold selector [Fig. 16 ref. 3] is in cold position, and after the plastic side cover has been removed, the following are on the compressor [Fig. 16 ref. 11]: voltage at 230 VAC between the blue and the white wire; voltage at 230 VAC between the black and the white wire; voltage at about 250 VAC between the orange and the white wire.
- OPERATION** Check the connector and the harness.  
Replace the temperature switch on the compressor.  
Replace the condenser [Fig. 16 ref. 10].

## 3) PROBLEM The fans do not work

- CHECK** Make sure that there is 12 VDC between the black wire of the relay [Fig. 16 ref. 2] and the red wire of the fan speed selector [Fig. 16 ref. 8].
- OPERATION** Check the harness and the multi-wire connector [Fig. 16 ref. 7].
- CHECK** Make sure that there are 12 VDC between the green speed selector switch wire [Fig. 16 ref. 8] and the black relay selector wire [Fig. 16 ref. 2].
- OPERATION** Replace the fan speed selector switch.
- CHECK** Make sure that there is 12 VDC between the black and the green wire of the evaporator ventilator [Fig. 16 ref. 9].
- OPERATION** Check the harness and the multi-wire connector.
- CHECK** With the hot/cold selector [Fig. 16 ref. 3] on cold position, make sure there are 12 VDC between both brown wires and the red wire of the ventilation speed selector [Fig. 16 ref. 8].
- OPERATION** Make sure that the contacts 2 and 3 of the hot/cold selector switch are closed, and replace them if necessary.
- CHECK** Make sure that there are 12 VDC between the black and the red wire of the condenser [Fig. 16 ref. 12].
- OPERATION** Check the harness and the multi-wire connector.

## 4) PROBLEM The fan of the condenser does not work

- CHECK** With the hot/cold selector [Fig. 16 ref. 3] on cold position, make sure there is 12 VDC between both brown wires and the red wire of the ventilation speed selector [Fig. 16 ref. 8].
- OPERATION** Make sure that the contacts 2 and 3 of the hot/cold selector switch are closed, and replace them if necessary.
- CHECK** Make sure that there is 12 VDC between the black and the red wire of the condenser [Fig. 16 ref. 12].
- OPERATION** Check the harness and the multi-wire connector.

**5) PROBLEM The fan of the evaporator does not work**

**CHECK** Make sure that there is 12 VDC between the green ventilation speed selector switch wire **[Fig. 16 ref. 8]** and the black relay selector wire **[Fig. 16 ref. 2]**.

**OPERATION** Replace the fan speed selector switch.

**CHECK** Make sure that there is 12 VDC between the black and the green wire of the evaporator ventilator **[Fig. 16 ref. 9]**.

**OPERATION** Check the harness and the multi-wire connector.

**6) PROBLEM The heating resistance does not work**

**CHECK** Make sure that there is 12 VDC on the fan speed selector **[Fig. 16 ref. 8]** between the orange and the black wire of the relay.

**OPERATION** Replace fan speed selector.

**CHECK** Make sure there is 230 VAC between the white wire of the relay **[Fig. 16 ref. 2]** and the blue wire of the feeder input terminal **[Fig. 16 ref. 4]**.

**OPERATION** Replace the relay.

**7) The air conditioner is performing poorly**

**CHECK** Check the cleanliness of the air filter and exchangers.

**OPERATION** If the air conditioner is clean, then you must check the coolant gas to cover.

Proceed as follows: open the high pressure valve **[Fig. 17 ref. 17]**, unscrewing the safety cap. Use a sharp instrument to press on the inside of the high pressure valve, thus allowing all the coolant gas to come out.

Connect the vacuum pump to the high pressure valve and let it run for at least one hour.


Quickly disconnect the vacuum pump and connect the refill station to the high pressure valve immediately, and put in 370 g of R134C gas.


When you have finished filling, close the high pressure valve with its safety cap.


## ICEBERG 3500 WIRING DIAGRAM

9	Evaporator electric fan
10	Compressor
11	Condenser electric fan
12	Inductor
13	12VDC feeder
14	230/12 transformer
15	Armored resistor 1.5 omh/ 50W

1	ON/OFF switch
2	Relay
3	Cold/hot selector switch
4	Feeding connection terminal
5	Thermostat
6	Fan speed selector switch
7	Connector
8	Resistance

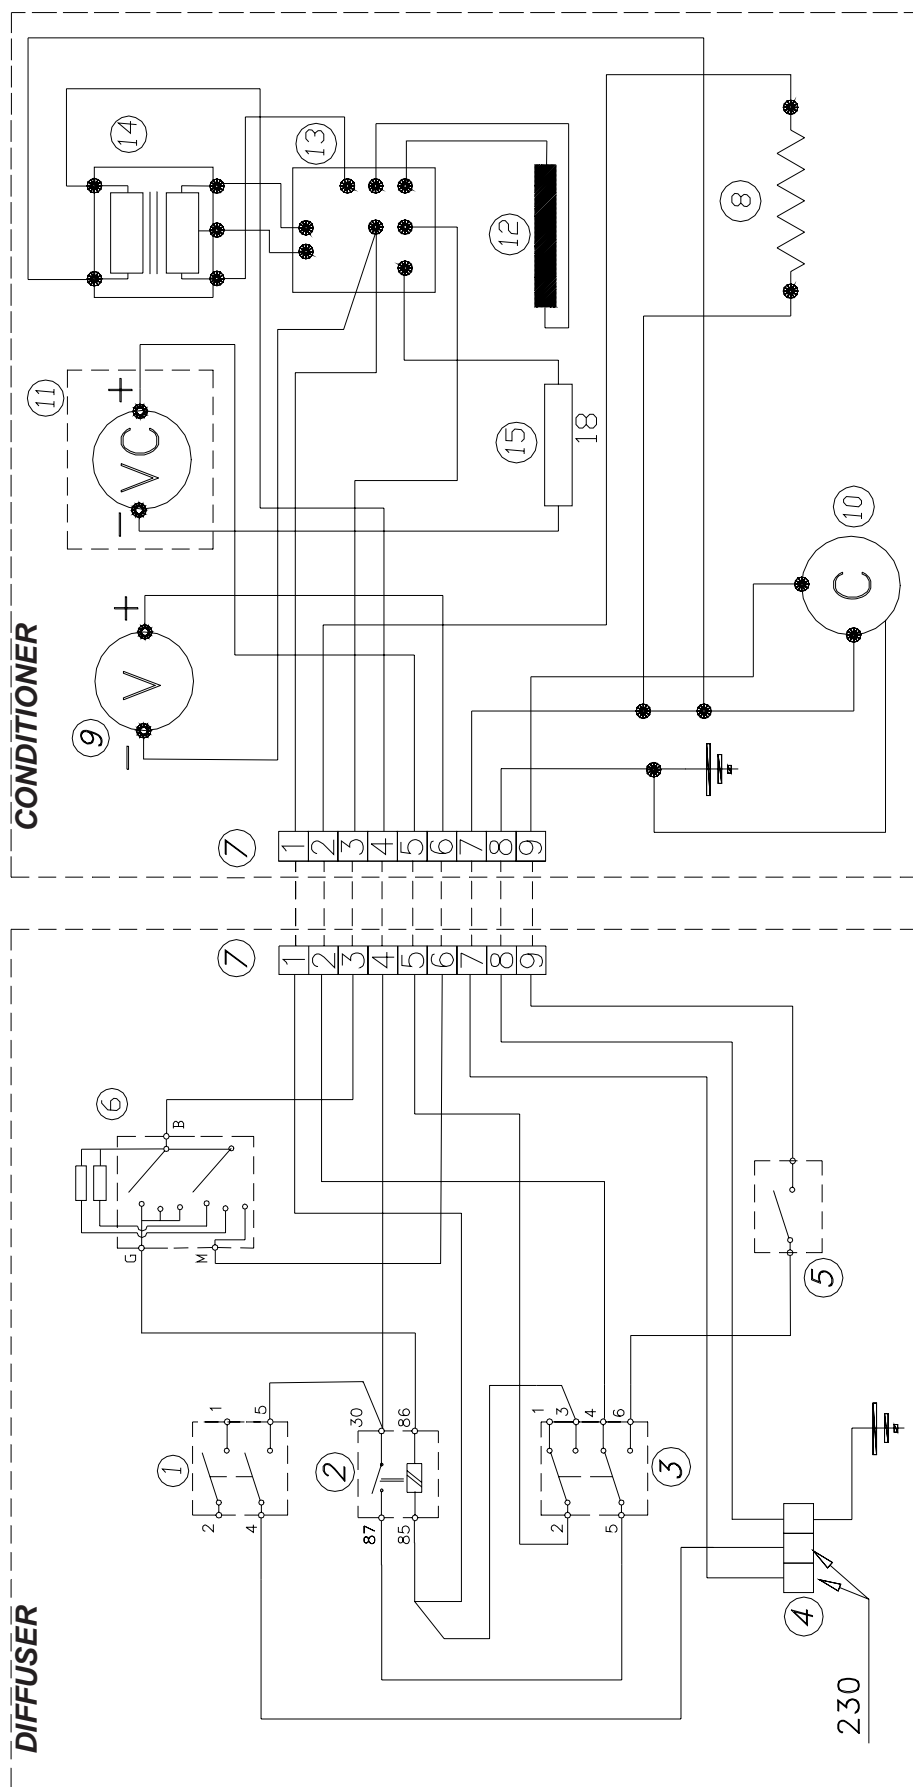

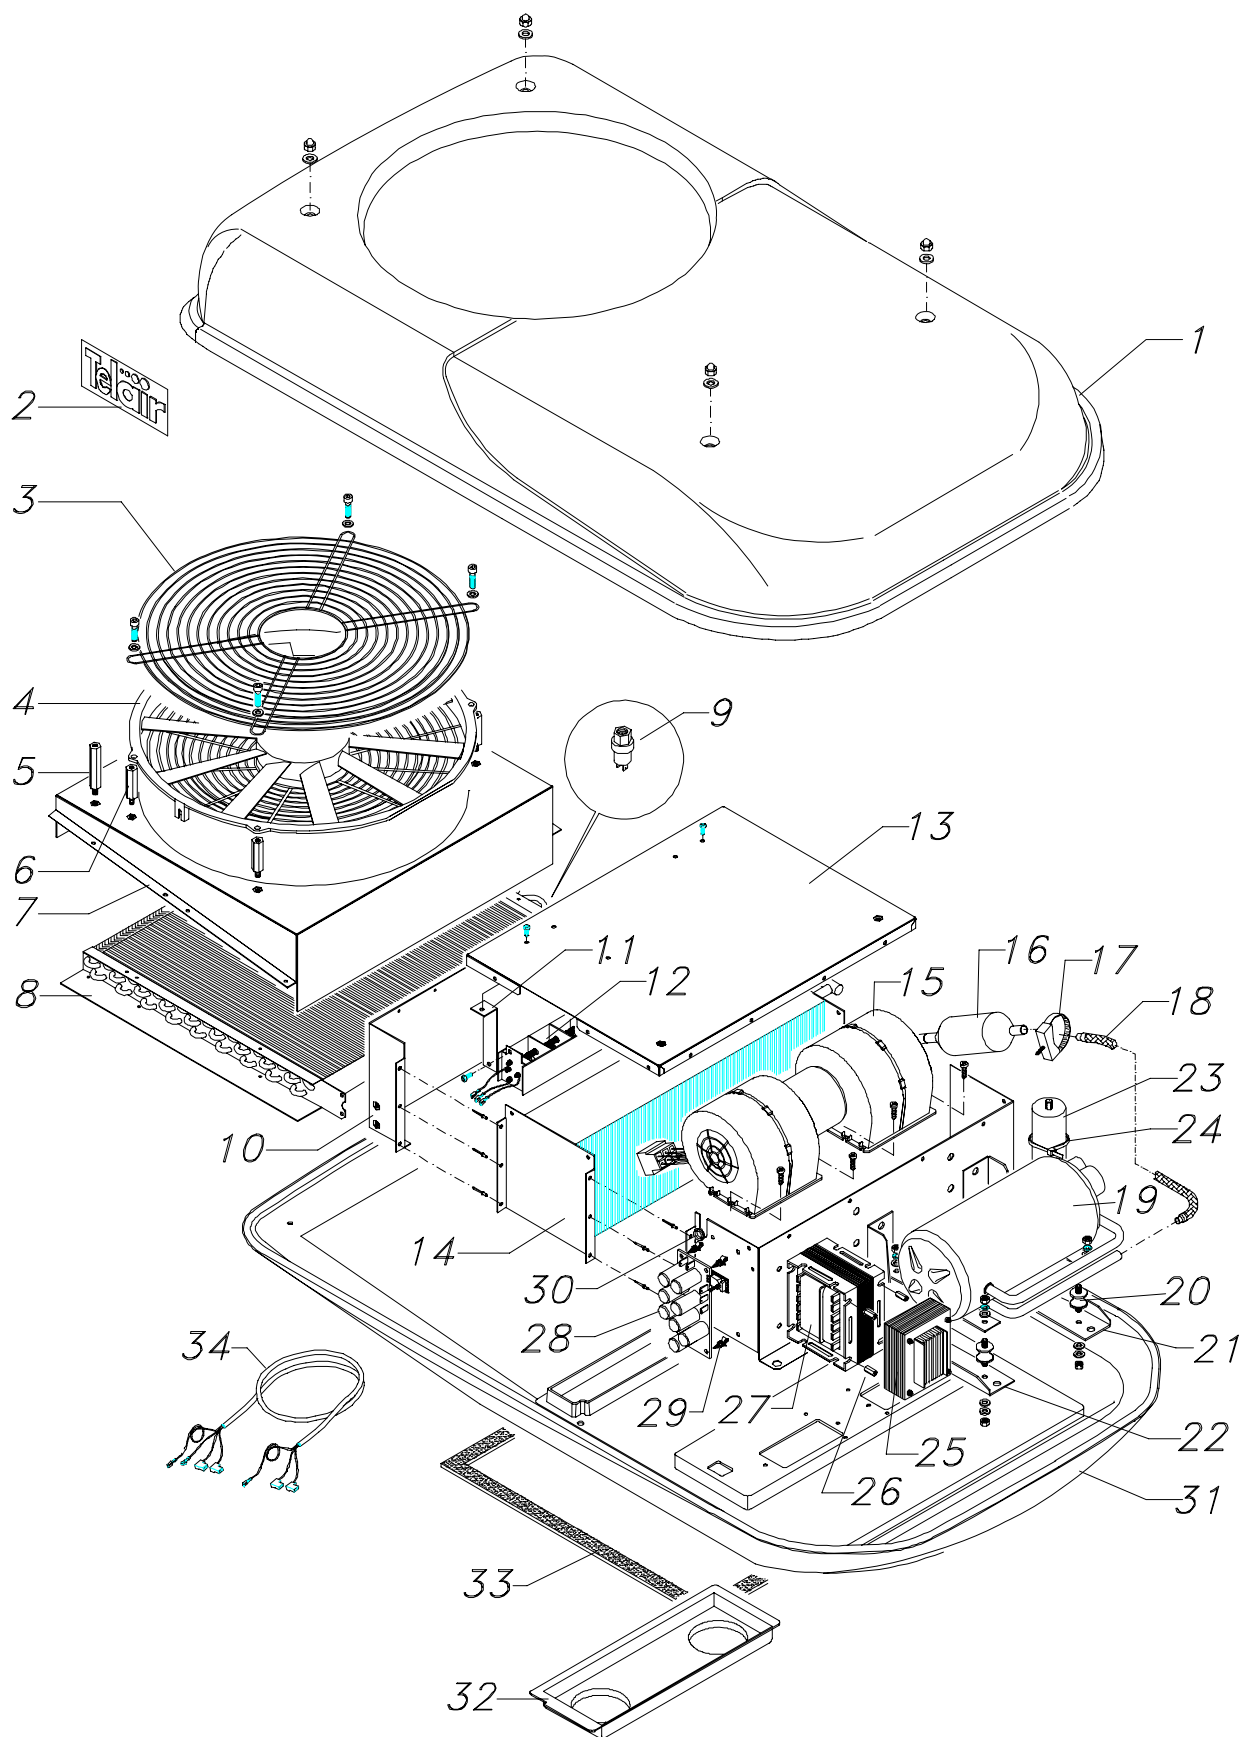

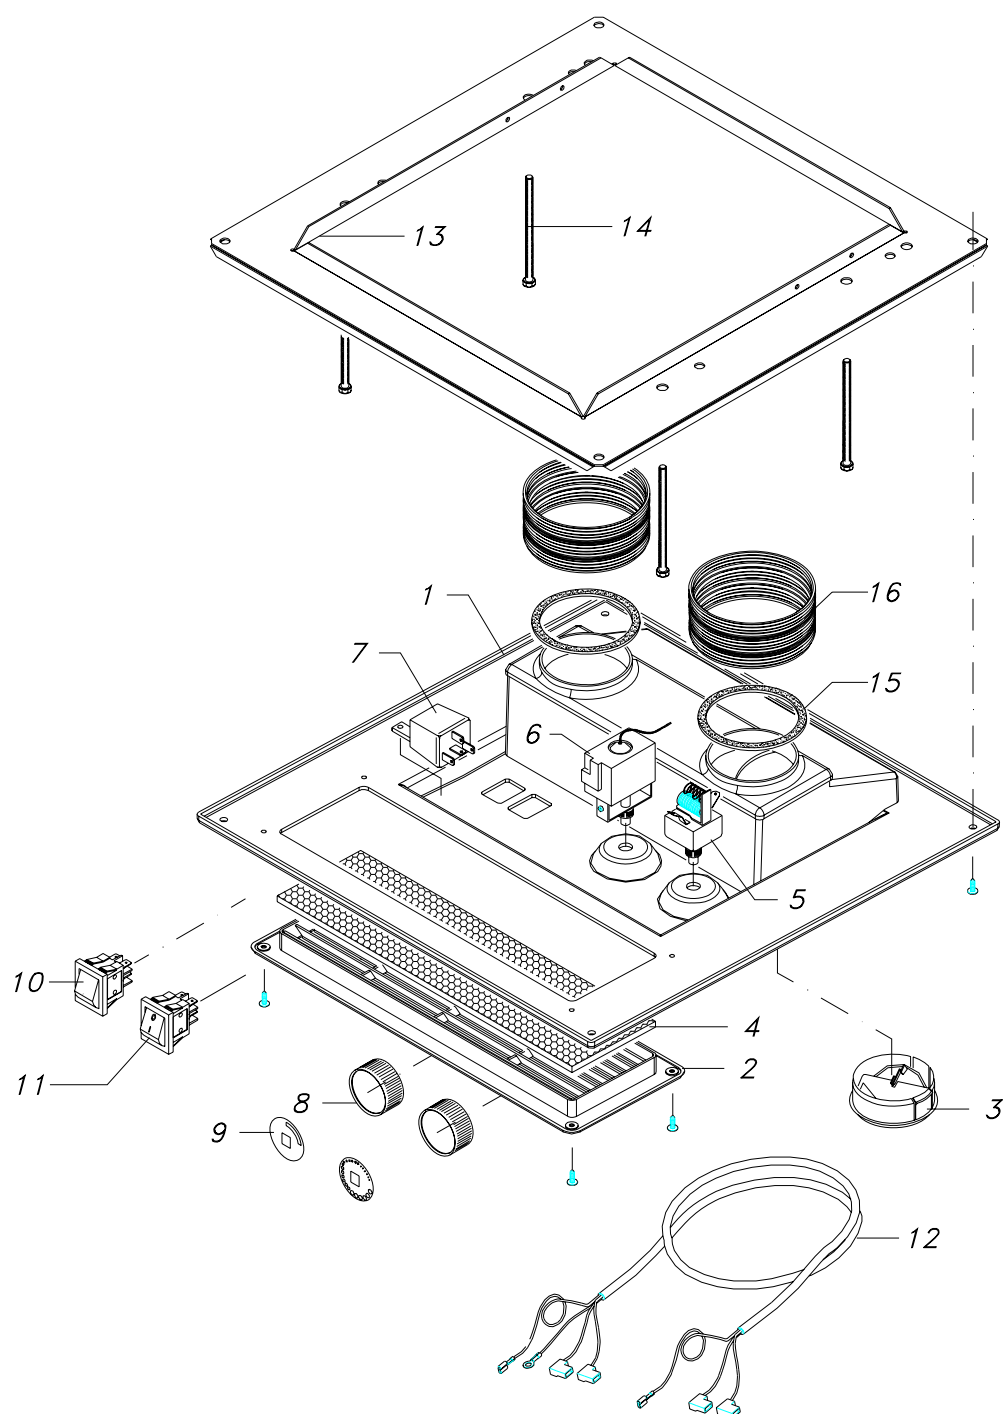



N°	Code	Q.ty	Denomination	N°	Code	Q.ty	Denomination
1		1	Shell top	1		1	ABS diffuser
2	00618	2	Shell label	2		1	Suction intake
3		1	Fan protector	3		5	Delivery outlet
4	00022	1	Fan	4		1	Suction inlet filter
5		2	Upper cowling fastening stud H.. mm	5	00437	1	Fan selector switch
6		4	Fan fastening stud H... mm	6	00439	1	HK thermostat
7		1	Sierra condenser plenum chamber	7	00513	1	12 V 40 A Relay
8		1	Sierra condenser unit	8		2	Controls knobs
9		1	Pressure switch	9		1	Control knobs label kit
10		1	Rear evaporator box	10	00301	1	Hot/cold selector switch
11		2	Resistance holding bracket	11	00302	1	Main switch
12	00148	1	Resistance	12		1	Harness
13		1	Cover	13		1	Diffuser metal sheet kit
14		1	Evaporator	14		4	Conditioner fastening screws
15	00021	1	Fan				
16		1	Fluid filter				
17	47960	1	Fastening grip				
18		1	Flexible hose				
19		1	Compressor				
20		4	Vibrations dampers				
21		1	L.H. compressor holding bracket				
22		1	R.H. compressor holding bracket				
23	00424	1	Condenser				
24		1	Clamp				
25	00226	1	Inductor				
26		4	Inductor fastening stud H....mm				
27	00225	1	Trasformer				
28	00061	1	Power supply board				
29		4	Nylon holding stud				
30		1	Fairlead				
31		1	Shell bottom				
32		1	Ice 9000-12000conditioner air conveyor				
33	00788	1	Coupling lining				
34		1	Harness				

# NOTES



## GENERAL TERMS OF WARRANTY

*Telair* guarantees that its products are without faults or defects in their material and/or construction.

The effects of the warranty are understood to be limited to the right to obtain replacement or repair free of cost of any part which should turn out to be defective, within 12 months from the date of purchase of the product and in *Telair's* opinion.

It is understood that the purchaser has no right whatsoever:

- to terminate the contract;
- to claim damages for people or things;
- to demand an extension of the warranty in case of any product defect or malfunction.

Any transport charges are on the account of the purchaser, as well as any expenses for on-site checks requested by the purchaser and accepted by *Telair*.

The warranty shall be valid only if the customer is able to show a document evidencing the date of purchase (invoice or receipt).

This document must be kept whole and must be submitted to the *Telair* after-sales centre when asking for operation under warranty.

Foto e disegni non contrattuali - Les photos et les dessins ne sont donnés qu'à titre indicatif.  
We reserve the right to make technical changes without prior notice - Fotos und Zeichnungen  
nicht vertraglich. Fotos y planos no indicados en contrato



# Telair

## AIR CONDITIONER

### ITALY

Via E. Majorana 49  
48022 LUGO( RA )  
Tel. + 39 0545 25037  
Fax.+ 39 0545 32064  
Tel. Servizio Assistenza  
**899 899 856**

E-mail: [telair@telecogroup.com](mailto:telair@telecogroup.com)  
[www.telecogroup.com](http://www.telecogroup.com)



### IN EUROPE:

**GREAT BRITAIN** - SCAN TERIEUR LTD  
30, The Metro Centre, Tolpits Lane - Watford,  
Herts - England - WD18 9XG  
Tel. 01923 800353 - Fax 01923 220358

**HOLLAND** - KARMAN AGENTUREN  
Emmastraat, 31  
1213 AJ Hilversum - Holland  
Tel. 035 6240156 - Fax 035 6242141  
e-mail: [karman.agenturen@worldonline.nl](mailto:karman.agenturen@worldonline.nl)

**FRANCE** - BLEYS ANTOINE - BLEYS JEAN-PHILIPPE  
19, Rue de la Parcheminerie  
18700 Aubigny sur Nere - France  
Tel. 02 48580367 - Fax. 02 48583585  
Mobil. 06 78262186 Mobil. 06 07012634  
e-mail: [bleysetd@club-internet.fr](mailto:bleysetd@club-internet.fr) - [jp.bleysetd@club-internet.fr](mailto:jp.bleysetd@club-internet.fr)

**ESPAÑA** - NAUCCA CARAVANING, S.A.  
Poligono Industrial CAN ROQUETA 2 - Calle Can Lletget,2  
08202 Sabadell (Barcelona) - España  
Tel. 0937 457 054 - Fax. 0937 254 484  
e-mail: [comercial@naucca.com](mailto:comercial@naucca.com)

**ÖSTERREICH** - TELECO GmbH  
82041 Deisenhofen -  
Tel. +49 08031 98939 - Fax. +49 08031 98949  
e-mail: [telecogmbh@telecogroup.com](mailto:telecogmbh@telecogroup.com)  
[www.telecogroup.com](http://www.telecogroup.com)

### IN DEUTSHLAND

**TELECO GmbH**  
82041 Deisenhofen -  
Tel. 08031 98939 - Fax. 08031 98949  
e-mail: [telecogmbh@telecogroup.com](mailto:telecogmbh@telecogroup.com)  
[www.telecogroup.com](http://www.telecogroup.com)



Händler und Info in Ihrer Nähe:

**01805 006857**

Service für Teleco Anlagen in Deutschland:

**09001000690**

KUNDENDIENST  
BEI  
AUSGEWÄHLTEN  
BOSCH SERVICE!

