

RAEPoint

User's Guide



RAEPoint User's Guide



© Copyright 2012 RAE Systems Inc.

RAEPoint User's Guide

Contents

| | | |
|----|---|----|
| 1 | General Information..... | 1 |
| 2 | Proper Product Disposal At End Of Life | 2 |
| 3 | FCC Part 15 Statement | 2 |
| 4 | Configurations | 3 |
| 5 | General Specifications | 5 |
| 6 | Operation | 6 |
| 7 | Physical Description | 7 |
| 8 | Physical Dimensions..... | 7 |
| 9 | Installation And Access Instructions | 8 |
| | 9.1 Mounting | 8 |
| | 9.2 Instrument Disassembly | 10 |
| | 9.3 Instrument Reassembly..... | 11 |
| 10 | Wiring..... | 12 |
| 11 | Wiring Procedure | 13 |
| | 11.1 RAEPoint Wireless Alarm Bar Wiring Note..... | 14 |
| 12 | Switch Settings | 15 |
| | 12.1 Pan ID (SW1) And Channel (SW2) | 15 |
| | 12.2 Mode Switch (SW3) | 16 |
| | 12.3 Jumper JP1..... | 17 |
| 13 | Earth Grounding Instructions | 18 |
| | 13.1 External Earth Grounding..... | 18 |
| | 13.2 Internal Earth Grounding..... | 18 |
| | 13.3 Finished Grounding Wires..... | 19 |
| 14 | Display/User Interface..... | 20 |
| 15 | Alarm Signal Summary | 20 |
| | 15.1 RAEPoint Host | 21 |
| | 15.2 RAEPoint Remote | 22 |
| | 15.3 RAEPoint Router..... | 23 |
| 16 | Appendix A: Controlled Section | 24 |
| 17 | Scope | 24 |
| 18 | Responsibility | 24 |
| 19 | Contents..... | 24 |
| 20 | Technical Support..... | 31 |
| 21 | RAE Systems Contacts..... | 31 |

RAEPoint User's Guide

1 General Information

RAEPoint is an explosion-proof wireless device that both extends the range and enables remote relay functionality across a wireless mesh network. As part of a wireless mesh network, the RAEPoint communicates with wireless detectors and controllers and can direct any of its five internal relays to trigger audible and visible alarms. Remote alarm notifications are critical for many applications where local device alarms are simply not visible enough or loud enough to alert a wide area. RAEPoint relay settings can be fully configured wirelessly via the system controller. RAEPoint can also be configured as a wireless host, and communicate directly with detectors, providing a localized alarm notification solution that does not require a controller. RAE Systems offers the RAEPoint as a standalone unit, or as part of an integrated wireless alarm bar. Both RAEPoint and the RAEPoint Wireless Alarm Bar carry Class 1, Division 1, and IECEx/ATEX Zone 1 hazardous area location certification.

Key Features



- Five internal SPDT relays
- Wireless transmission distance of 1000 ft (300m) point-to-point. Range can be extended by using wireless routers.
- Class 1, Division 1, and IECEx/ATEX Zone 1 hazardous area certification
- Available as standalone unit, or as a turn-key wireless alarm bar solution, mounted and pre-wired with two 5J xenon lights and a 110dB horn.
- Explosion-proof enclosure for hazardous environment applications
- LEDs indicate status

RAEPoint User's Guide

Applications

- Oil and gas exploration
- Refineries and petrochemical plants
- Fenceline monitoring

Hazardous Location Classification

| IECEX | ATEX | North America |
|-----------------------|--|---------------------------------|
| IECEX SIR 12.0027X | Sira 12ATEX 1085X | Cl.I Div 1, Group A,B,C,D T6 |
| Ex d ia IIC T6, Gb |  0575  II 2G, Ex d ia IIC T6 Gb | |

2 Proper Product Disposal At End Of Life



This symbol (crossed-out wheeled bin) indicates separate collection of waste electrical and electronic equipment in the EU countries.



3 FCC Part 15 Statement

This device complies with Part15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RAEPoint User's Guide

4 Configurations

The RAEPoint can be ordered as a stand-alone wireless unit, or as an integrated Wireless Alarm Bar complete with 2 strobes and horn. Each RAEPoint can be configured as a Router, Remote, or Host on a wireless mesh network.

RAEPoint Router


A stand-alone, DC-powered, explosion-proof unit that acts as a permanent wireless router for mesh network systems. Includes aluminum enclosure with LED status indicators and an integrated wireless mesh radio.

RAEPoint Remote & RAEPoint Host

Stand-alone relay units include aluminum enclosure with LED status indicators, an integrated wireless mesh radio, and five integrated relays.

RAEPoint Remote Wireless Alarm Bar & RAEPoint Host Wireless Alarm Bar

Wireless alarm bar units include the RAEPoint fully integrated and certified with 2 xenon strobes and a 110dB horn.

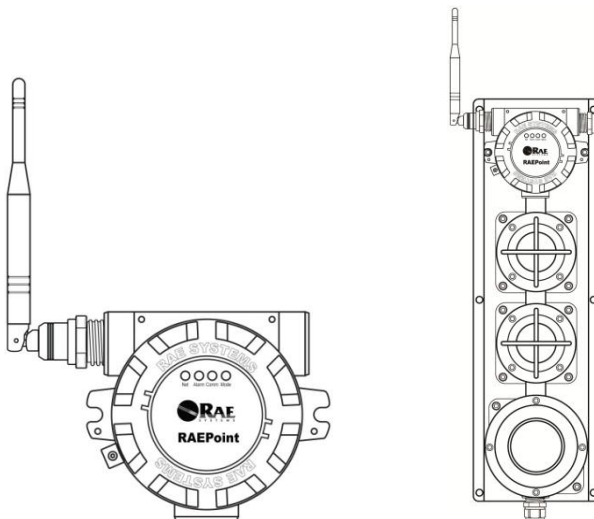


RAEPoint User's Guide


Flexible Configurations

RAEPoint, including the RAEPoint Wireless Alarm Bar, can be configured for large or small systems, and the network can be expanded or units removed, depending on the facility or facilities being monitored.

Simple configuration that uses MeshGuard sensors and a RAEPoint Wireless Alarm Bar host

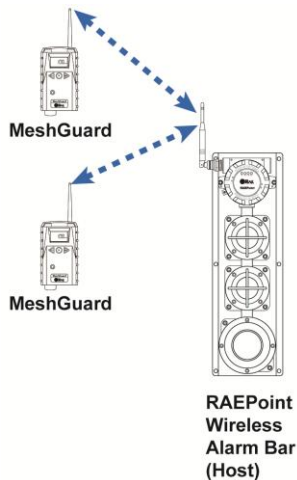

Full network, including externally controlled devices

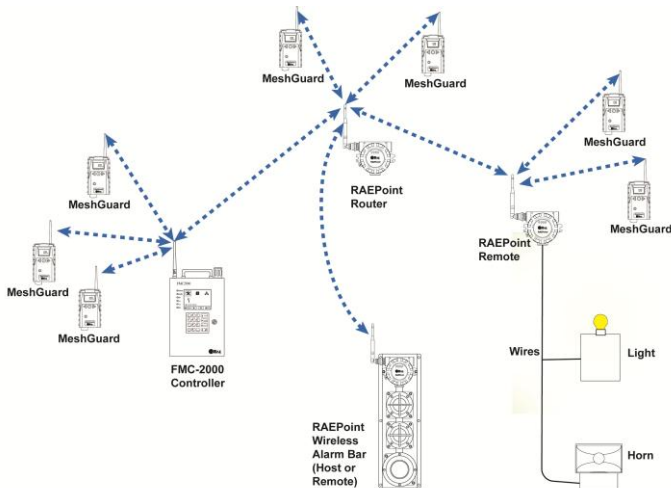

RAEPoint User's Guide

5 General Specifications

| | |
|---|---|
| Input Power | Input Power Limit: 2.4W V_{input} : 12-28VDC |
| Output | Five 3-level programmable alarm relays (30 VDC, 2A) Resistor load Max: 6A@24VDC or 6A@250VAC Inductive load Max: 2A@24VDC or 3A@250VAC |
| IP Rating | IP-65 |
| Mechanical Interface | 3/4" NPT Female |
| Installation | 2" pipe-holding or wall mounting |
| Operation Environment Parameters | |
| Temperature | -20° C to +55° C (-4° F to 131° F) |
| Humidity | 0 to 95% relative humidity, non-condensing |
| Pressure | 90 to 110kPa |
| Display | |
| Display | 4 LEDs (Network, Alarm, Communication, Mode) |
| Physical Parameters | |
| Dimensions, L x W x H | 257 x 201 x 107 mm (10.1" x 7.9" x 4.2") |
| Material | Alumina |
| Weight | 3.5 kg (7.7 lbs) |

RAEPoint User's Guide

6 Operation


Note: Prior to factory shipment, the RAEPoint is tested. However, the instrument should be tested after installation.

7 Physical Description

The RAEPoint can be easily installed and integrated with various control systems. It is designed with flexible pipe-holding/wall-mounting options and standard connection terminals.

8 Physical Dimensions


The physical dimensions are as follows:

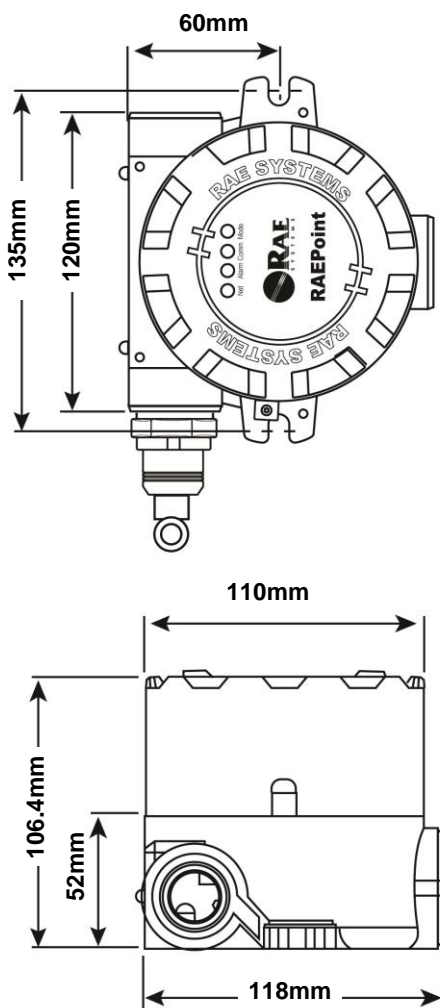

9 Installation And Access Instructions

9.1 Mounting


First, decide where the transmitter will be mounted. (Refer to installation drawing, below.) Drill two holes in mounting surface, with the center of the holes 5.25" (135 mm) apart.

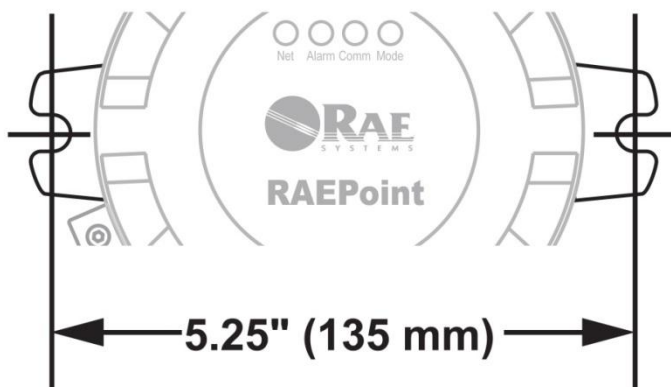

RAEPoint User's Guide

Besides being mounted to a wall, RAEPoint can be mounted on a pipe.

Note: When installing the RAEPoint, make sure the antenna is installed in the left or right inlet (not the one on the bottom).

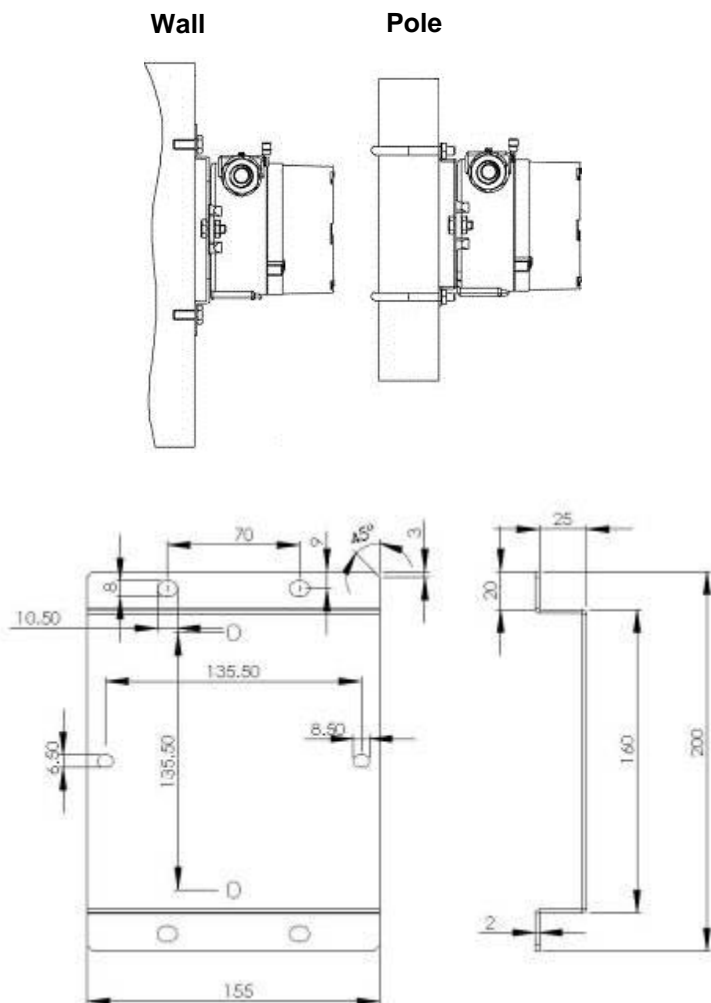

RAEPoint User's Guide

9.2 Instrument Disassembly




Prior to service: Make sure power is OFF. Observe all Hazardous Location Safety procedures.


1. Loosen the hex locking screw on the housing lid.



2. Unscrew the housing lid by rotating it counterclockwise.

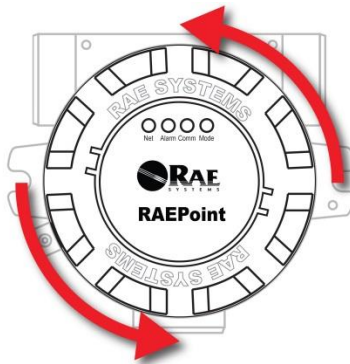


3. Press in on the clips on both sides of the display, and then lift out the circuit boards.

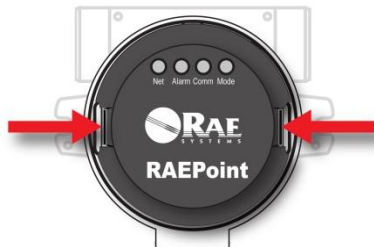

4. Turn the circuit boards over to access the switches and wiring points. Be careful not to damage the antenna wire between

RAEPoint User's Guide

the circuit boards and the antenna that passes through the housing.

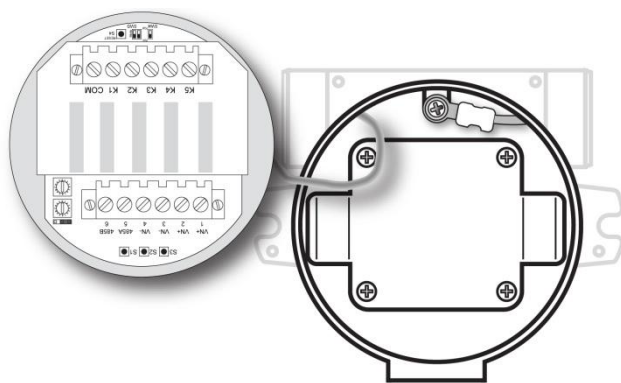


9.3 Instrument Reassembly

1. Make sure all wires are connected to the terminal blocks and that the terminal blocks are firmly seated in the circuit board.
2. Turn over the circuit board/front panel.
3. Align the two clips with the mating points in the housing.
4. Click the board into place.
5. Screw on the housing top.
6. Screw down the locking screw.

RAEPoint User's Guide

10 Wiring

The two terminal blocks in the RAEPoint accept 12AWG to 24AWG wire. One terminal block is for DC power, and the other is for relay connections.

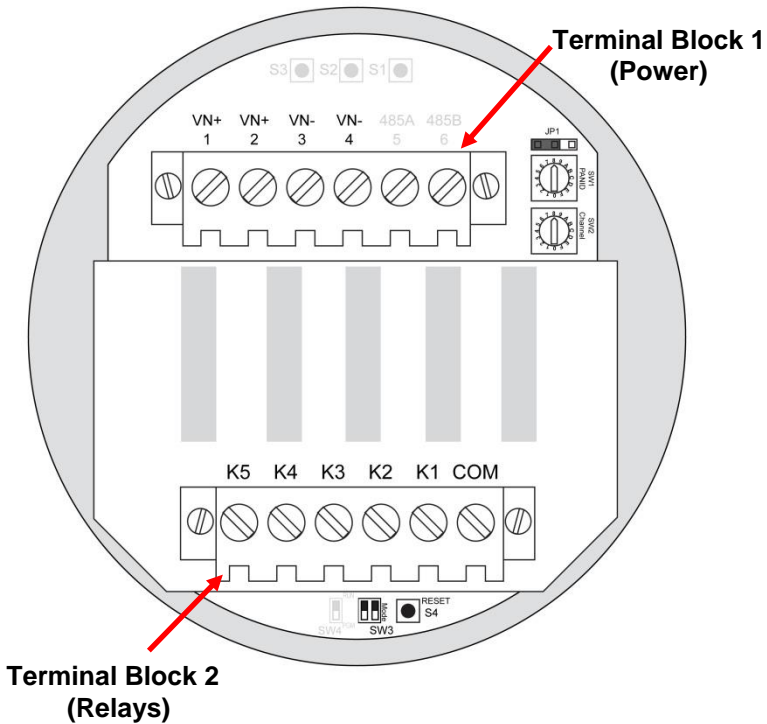

11 Wiring Procedure


1. Inside the housing bottom, two green terminal block plugs are inserted into the terminal blocks on the PC boards.

The terminal block plugs accept 12 AWG to 24 AWG wire.

Note: On the RAEPoint Wireless Alarm Bar, wiring from the Relay outputs and downline power are already complete. Only Power and Ground (earth) connections need to be made. See “Earth Grounding Instructions,” page 18, for information on proper grounding.

2. Lace the wires through the RAEPoint's wire hole(s) and connect wires to the corresponding pin numbers of the terminal blocks:


| Terminal | Terminal Definition | Terminal | No. |
|----------|---------------------------------------|----------|-----|
| Block 1 | Positive DC power supply for RAEPoint | VN+ | 1 |
| | Positive DC power for downline units | VN+ | 2 |
| | Negative DC power supply for RAEPoint | VN- | 3 |
| | Negative DC power for downline units | VN- | 4 |
| Block 2 | Relay Output 5 | K5 | K5 |
| | Relay Output 4 | K4 | K4 |
| | Relay Output 3 | K3 | K3 |
| | Relay Output 2 | K2 | K2 |
| | Relay Output 1 | K1 | K1 |
| | Relay Common | COM | COM |

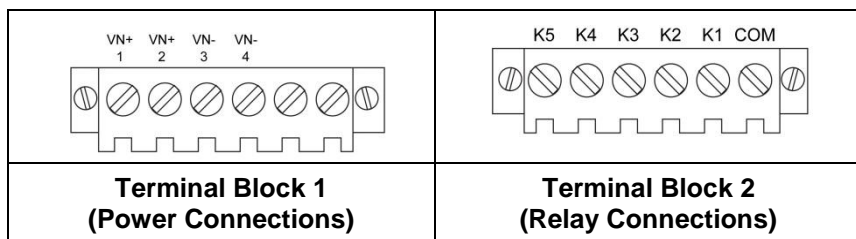


RAEPoint User's Guide

11.1 RAEPoint Wireless Alarm Bar Wiring Note

The RAEPoint Wireless Alarm Bar already has most wiring done at the factory. It is only necessary to connect the positive and negative DC power supply wires and grounding (according to local requirements). Power and internal grounding wires should be fed through a connector at the bottom of the unit.

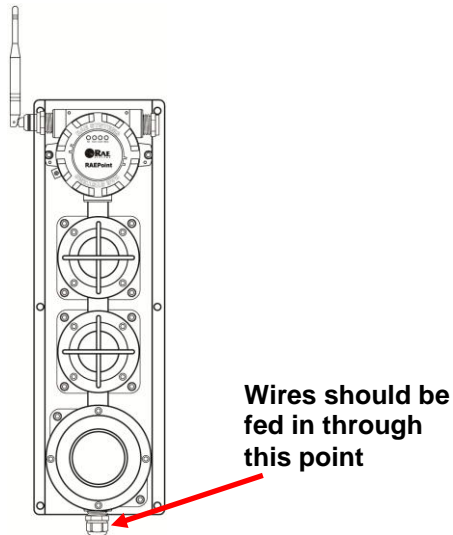

Internal wiring:

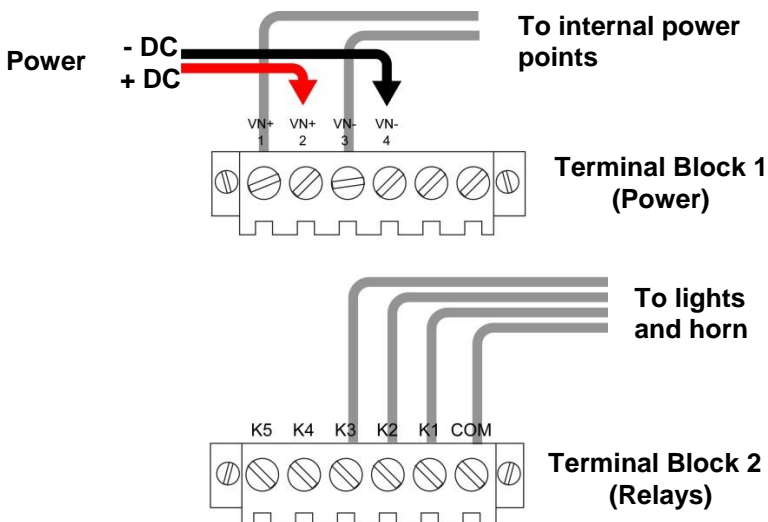


12 Switch Settings

Configuration requires setting the two hexadecimal rotary-encoder switches that govern Pan ID and Channel.

12.1 Pan ID (SW1) And Channel (SW2)

Make sure all units in the network, including an FMC2000 controller and any monitors, have the same Pan ID number and channel in order to communicate within the network. If you change the Pan ID number or Channel on the FMC2000, check the other units in the network, as well as the RAEPoint, to ensure they match.

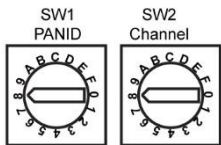

Use a small-blade screwdriver to turn each rotary encoder to the proper value.

The following chart shows settings for the two encoders:


| | | | | | | | | | | | | | | | | |
|---------------|---------|----------------|-----|-----|-----|-----|-----|-----|---------|------|------|------|------|------|------|------|
| SW1 | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | A | B | C | D | E | F |
| PAN ID | 999 | 998 | 997 | 996 | 995 | 994 | 993 | 992 | 991 | 990 | 989 | 988 | 987 | 986 | 985 | 984 |
| | | | | | | | | | | | | | | | | |
| SW2 | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | A | B | C | D | E | F |
| Channel (ISM) | Ch0 | Ch3 | Ch4 | Ch5 | Ch6 | Ch7 | Ch8 | Ch9 | Ch15 | Ch16 | Ch17 | Ch18 | Ch19 | Ch20 | Ch25 | Ch26 |
| | 868 MHz | 902 to 928 MHz | | | | | | | 2.4 GHz | | | | | | | |

IMPORTANT!

Available channels vary by the internal wireless modem's frequency.

The channel can only be set to one that is available for the wireless modem frequency of your RAEPoint. For example, a RAEPoint with a 2.4 GHz modem can only use channels shown (15, 16, 17, 18, 19, 20, 25, 26).


Note: After you change the settings on the rotary encoders, press the Reset button (labeled S4).

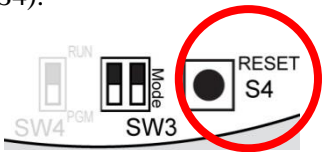

RAEPoint User's Guide

12.2 Mode Switch (SW3)

Two DIP switches, labeled SW3, can be used to change the RAEPoint's mode of operation (Host, Remote, or Router). The RAEPoint's mode was set at the factory, but if you need to reconfigure it, set the switches as follows:

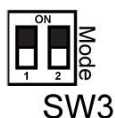


| Switch 1 | Switch 2 | Mode |
|----------|----------|------------------|
| On | On | RAEPoint Host |
| On | Off | RAEPoint Remote |
| Off | On | RAEPoint Router |
| Off | Off | Factory Setting* |

* Factory settings are indicated by the RAEPoint's serial number:

- F081 RAEPoint Remote
- F082 RAEPoint Router
- F083 RAEPoint Host


Note: After you change the settings on the two DIP switches, press the Reset button (labeled S4).

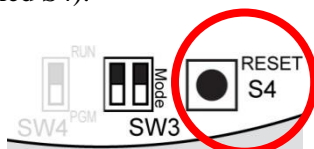

RAEPoint User's Guide

12.3 Jumper JP1

The jumper labeled JP1 has no effect on operation, so leave it in place, as shown:

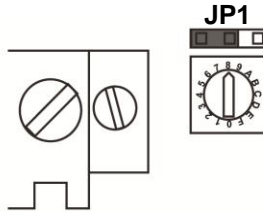


Important!

Once the system is operational, test the functionality of all connected relays.

13 Earth Grounding Instructions


13.1 External Earth Grounding

Fasten the crimped ground wire with hardware as illustrated below. The wire should have a minimum cross-section area of 4mm^2 for its conductor.

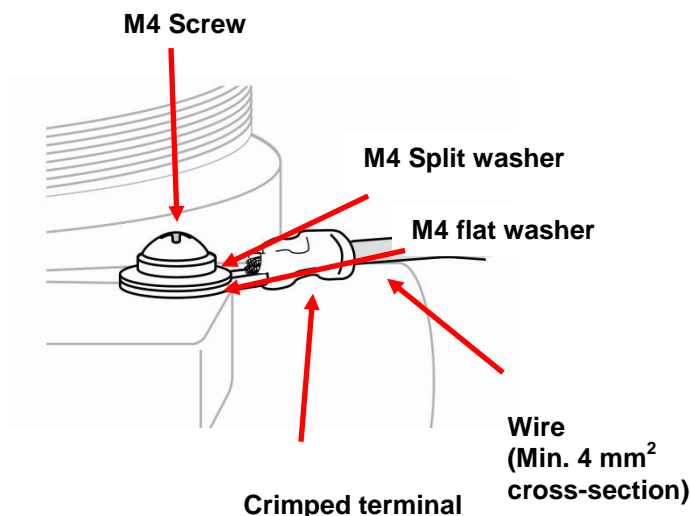


13.2 Internal Earth Grounding

Use the same hardware as shown in the illustration of external earth grounding. The wire should be no less than the size of the power lines. Signal grounding can connect to a cable's shielding layer if shielded cable is used. If a separate wire is used for grounding, its cross section should be greater than that of the power line.

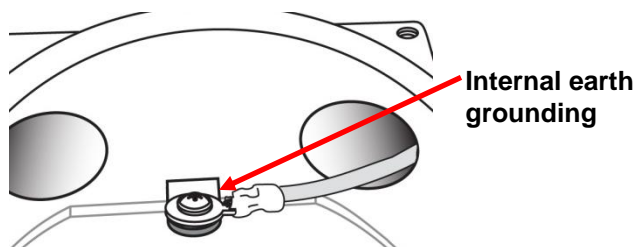

13.3 Finished Grounding Wires

Internal and external grounding are shown here, as well as an alternate external grounding point. Always follow local electrical guidelines.

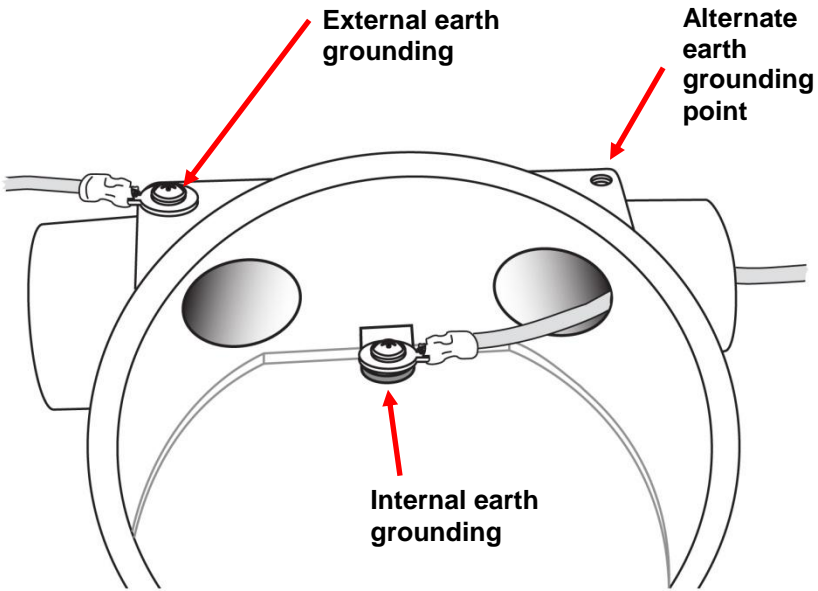

RAEPoint User's Guide

14 Display/User Interface

The RAEPoint's user interface consists of four status LEDs. There are no buttons or controls. All settings are made internally.

15 Alarm Signal Summary

The following are reading-related alarms.

| | Function | Host | Remote | Router |
|--------------|-----------------------------------|--|---|-------------------------|
| Net | Network Status Indicator | <ul style="list-style-type: none">• Blinks once per second if in network.• Off when there is no network | | |
| Alarm | Alarm Type Indicator | <ul style="list-style-type: none">• On during any relay action• Blinks for any fault | <ul style="list-style-type: none">• On during any relay action• Blinks for any fault | Blinks for any fault |
| Comm | Communications Activity Indicator | <ul style="list-style-type: none">• Blinks for all communication• Off at any other time | | |
| Mode | Device Type Indicator | On | Blinks once per second | Blinks twice per second |



RAEPoint User's Guide

15.1 RAEPoint Host

The LEDs on the RAEPoint Host indicate the following conditions:

| | |
|--------------|--|
| Net | <ul style="list-style-type: none">• Blinks when a network is established.• Off when a network is absent. |
| Alarm | <ul style="list-style-type: none">• Glows solid red when detectors are in alarm• Blinks red when detectors have a fault.• Blinks red when DC supply voltage is below 11 volts. |
| Comm | <ul style="list-style-type: none">• Flashes when there is RF (radio frequency) send/receive activity. |
| Mode | <ul style="list-style-type: none">• Glows solid green. |

Notes

| | | |
|---------------------------|---------|-----------------|
| Relay Definitions: | Relay 1 | Any alarms |
| | Relay 2 | Any low alarms |
| | Relay 3 | Any high alarms |
| | Relay 4 | High LEL alarms |
| | Relay 5 | High H2S alarms |

RAEPoint User's Guide

15.2 RAEPoint Remote

Note: RAEPoint Remote can only operate with an FMC2000 Controller.

The LEDs on the RAEPoint Remote indicate the following conditions:

| | |
|--------------|--|
| Net | <ul style="list-style-type: none">• Blinks when a network is established.• Off when a network is absent. |
| Alarm | <ul style="list-style-type: none">• Glows solid red when detectors are in alarm• Blinks red when DC supply voltage is below 11 volts. |
| Comm | <ul style="list-style-type: none">• Flashes when there is RF (radio frequency) send/receive activity. |
| Mode | <ul style="list-style-type: none">• Blinks one time per second (green). |

Notes

Relay Definitions: The RAEPoint Remote's relays operate identically to the FMC2000 Controller on this network.

RAEPoint User's Guide

15.3 RAEPoint Router

Note: A RAEPoint Router can operate as a router for any device using the same radio type.

The LEDs on the RAEPoint Router indicate the following conditions:

| | |
|--------------|---|
| Net | <ul style="list-style-type: none">• Blinks when a network is established.• Off when a network is absent. |
| Alarm | <ul style="list-style-type: none">• Blinks red when DC supply voltage is below 11 volts. |
| Comm | <ul style="list-style-type: none">• Flashes when there is RF (radio frequency) send/receive activity. |
| Mode | <ul style="list-style-type: none">• Blinks two times per second (green). |

16 Appendix A: Controlled Section

17 Scope

The scope of this document is to identify the section of the RAEPoint controlled part of the manual.

18 Responsibility

The included sections cannot be changed without prior approval from the Notified Body.

19 Contents

Below are the sections controlled by the Notified Body, including all safety-related information in the manual.

Controlled sections are:

1. Warnings and directive information
2. Marking of the RAEPoint
3. Hazardous Location Classifications
4. Instructions for Safe Use
5. Connections and Ratings
6. Maintenance
7. Physical dimensions

RAEPoint User's Guide

1. Warnings And Directive Information

- READ BEFORE OPERATING -

This manual must be carefully read by all individuals who have or will have the responsibility of using, maintaining, or servicing this product. The product will perform as designed only if it is used, maintained, and serviced in accordance with the manufacturer's instructions.

CAUTION!



To reduce the risk of electric shock, turn the power off before removing the instrument cover. Disconnect the power before removing the sensor module for service. Never operate the instrument when the cover is removed. Remove instrument cover and sensor module only in an area known to be non-hazardous.



Use of non-RAE Systems components will void the warranty and can compromise the safe performance of this product.

RAEPoint User's Guide


 
2. Marking Of RAEPoint

RAEPoint is certified according to ATEX and the IECEx scheme and CSA for US and Canada as protected by a flameproof enclosure, and the antenna barrier is used on intrinsically safe principles.

The product is marked with the following information:

RAE Systems Inc.
3775 N. 1st. St.
San Jose, CA95134 USA
Serial number: XXXXXXXXXXXX
Year of production

RAEPoint

| IECEX | ATEX | North America |
|-----------------------|--|---------------------------------|
| IECEX SIR 12.0027X | Sira 12ATEX 1085X | Cl.I Div 1, Group A,B,C,D T6 |
| Ex d ia IIC T6, Gb |  0575  II 2G, Ex d ia IIC T6 Gb | |

$-20^{\circ}\text{C} < T_{\text{amb}} < +55^{\circ}\text{C}$

WARNING: READ USER'S MANUAL FOR SAFETY PRECAUTIONS.

WARNING: DO NOT OPEN WHEN AN EXPLOSIVE ATMOSPHERE MAY BE PRESENT.

REFER TO USER MANUAL FOR ENTRY TYPE AND SIZE

RAEPoint User's Guide

3. Hazardous Location Classification

Hazardous Areas Classified By Zones

RAEPoint is intended to be used in hazardous areas classified for Zone 1 or Zone 2, within the temperature range of -20°C to $+55^{\circ}\text{C}$, where gases of explosion groups IIA, IIB or IIC and T6 may be present.

Hazardous Areas Classified By Divisions

RAEPoint is intended to be used in hazardous areas classified for Class I Div. 1 or 2, within the temperature range of -20°C to $+55^{\circ}\text{C}$, where gases of explosion groups A, B, C or D and temperature class T6 may be present.

4. Instructions For Safe Use

None.

5. Connections And Ratings

Input/Output

The rated RAEPoint input/output are as follows:

Input: 2.4W V_{input} : 12-28VDC

6. Maintenance


Installation and Access Instructions

- When used in North America, a minimum of 18" (457mm) of explosion-proof conduit must be used at cable entry in group B atmospheres. CSA requires seals in conduit exceeding 5' (1.524 m) in group C atmospheres.
- The appropriate regulations for installation, service and repair must be properly observed during such activities.
- To prevent ignition of hazardous atmospheres, area must be free of flammable vapors and supply circuit must be disconnected before removing cover.

Earth Grounding Instructions


External Earth Grounding

Fasten the crimped ground wire with hardware as illustrated here. The wire should have a minimum cross-section area of 4mm^2 for its conductor.

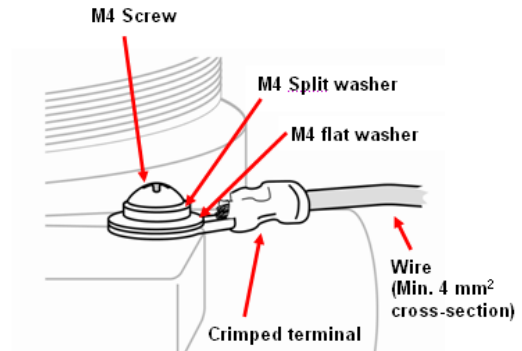


Internal Earth Grounding

Use the same hardware as shown in the illustration of external earth grounding. The wire should be no less than the size of the power lines.

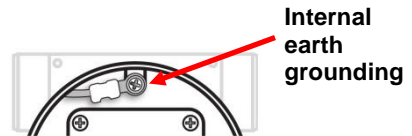

Finished Grounding Wires

Internal and external grounding are shown here, as well as an alternate external grounding point. Always follow local electrical guidelines.

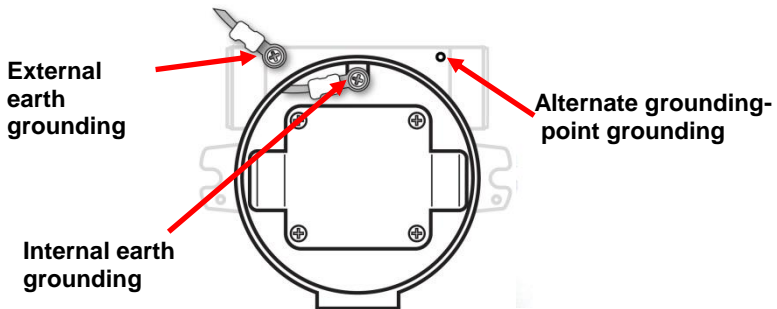


RAEPoint User's Guide

7. Physical Dimensions

RAEPoint can be easily installed and integrated with various control systems with its flexible pipe-holding/wall-mounting options and standard connection terminals.

Entries: RAEPoint is provided with three female 3/4" - 14 NPT cable entry holes tapped into its side walls; one 3/4" - 14 NPT containing the antenna coupler for mounting of the external antenna.

The physical dimensions are as follows:

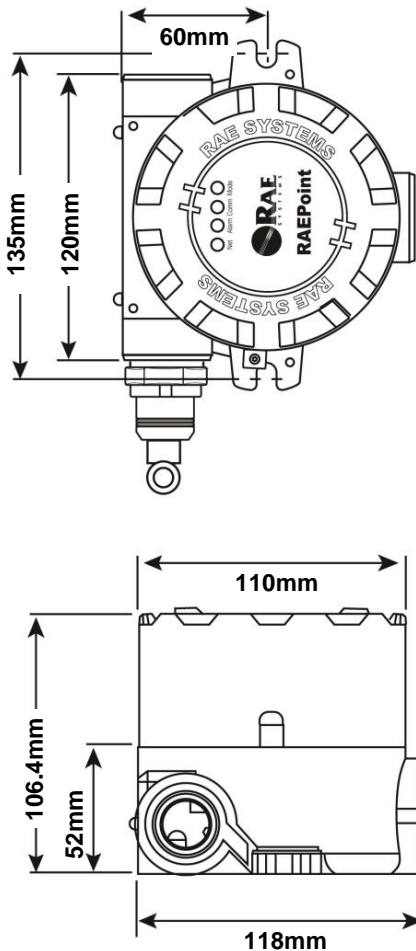

RAEPoint User's Guide

8. Models Of RAEPoint

| Model Number | Product Name |
|---------------------|---|
| RRA2000 | RAEPoint Wireless Switch Remote |
| RRA2000 | RAEPoint Wireless Router |
| RRA2000 | RAEPoint Wireless Switch Host / RAEPoint GateWay |

20 Technical Support

To contact RAE Systems Technical Support:

Monday through Friday, 7:00AM to 5:00PM Pacific (US) Time

Phone (toll-free): +1 888-723-4800

Phone: +1 408-952-8461

Email: tech@raesystems.com

Life-critical after-hours support is available:

+1 408-952-8200 select option 9

21 RAE Systems Contacts

RAE Systems

World Headquarters

3775 N. First St.

San Jose, CA 95134-1708 USA

Phone: +1 408.952.8200

Fax: +1 408.952.8480

E-mail: customerserv@raesystems.com

Web Site: www.raesystems.com

RAE Systems Technical Support

Monday through Friday, 7:00AM to 5:00PM Pacific Time

Phone: +1.408.952.8461

Email: tech@raesystems.com

Life-critical after-hours support is available

+1.408.952.8200 select option 9

RAEPoint User's Guide

RAE Systems Europe ApS

Kirstinehøj 23 A

DK-2770 Kastrup

Denmark

Phone: +45 86 52 51 55

Fax: +45 86 52 51 77

orders@raeeurope.com

sales@raeeurope.com

service@raeeurope.com

Web: www.raesystems.eu

RAE Systems UK Ltd

D5 Culham Innovation Centre

Culham Science Centre

Abingdon, Oxon OX14 3DB

United Kingdom

Phone: +44 1865408368

Fax: +44 1235531119

Mobile: +44 7841362693

Email: raeuk@raeeurope.com

RAE Systems France

336, rue de la fée des eaux

69390 Vernaison

France

Phone: +33 4 78 46 16 65

Fax: +33 4 78 46 25 98

Email: info-france@raeeurope.com

Web: www.raesystems.fr

RAEPoint User's Guide

RAE BeNeLux BV

Rijndal 20
2904 DC Capelle a/d IJssel
Phone: +31 10 4426149
Fax: +31 10 4426148
Email: info@rae.nl
Web: www.rae.nl

RAE Systems Spain, s.l.

Av. Remolar, 31
08820 El Prat de Llobregat
Spain
Phone: +34 933 788 352
Fax: +34 933 788 353
Mobile: +34 687 491 106
Email: mdelgado@raespain.com
Web: www.raespain.com

RAE Systems Middle East

LOB 7, Ground Floor, Office 19,
Jebel Ali Free Zone
Dubai, United Arab Emirates
Phone: +971.4.887.5562
Email: mesales@raesystems.com

RAE Systems (Hong Kong) Ltd.

Room 8, 6/F, Hong Leong Plaza
33 Lok Yip Road
Fanling, N.T, Hong Kong
Phone: +852.2669.0828
Fax: +852.2669.0803
Email: hksales@raesystems.com

RAEPoint User's Guide

RAE Systems Japan

Marunouchi Nakadori Bldg 6F-617-B,
2-3, Marunouchi 2-Chome, Chiyoda-ku,
Tokyo, 100-0005 Japan

Phone: +81-3-6269-9646

Fax: +81-3-6269-9647

Email: jpsales@raesystems.com

RAE Systems Korea

#1010, DaeMyungAnsVill First,
Sang-Dong 412-2, Wonmi-Gu, Bucheon,
Kyungki-Do, Korea

Phone: 82-32-328-7123

Fax: 82-32-328-7127

Email: krsales@raesystems.com

CORPORATE HEADQUARTERS

RAE Systems, Inc.

3775 North First Street

San Jose, CA 95134 USA

Phone: 408.952.8200

Fax: 408.952.8480

customerserv@raesystems.com

WORLDWIDE SALES OFFICES

USA/Canada 1.877.723.2878

Europe +45.86.52.51.55

Middle East +00971.4.440.5949

China +86.10.5885.8788-3000

Asia Pacific +852.2669.0828