



RC-1 Remote Control

User Manual

The RC-1 remote control


The Gato Audio RC-1 is an infrared remote control for Gato Audio products. The remote uses standard Philips RC-5 codes and can also operate other products that uses the same standard, e.g. GamuT Di150, Si100, D3, D3i, CD1, CD1 mkII, CD3 and C2R.


What's in the tube?







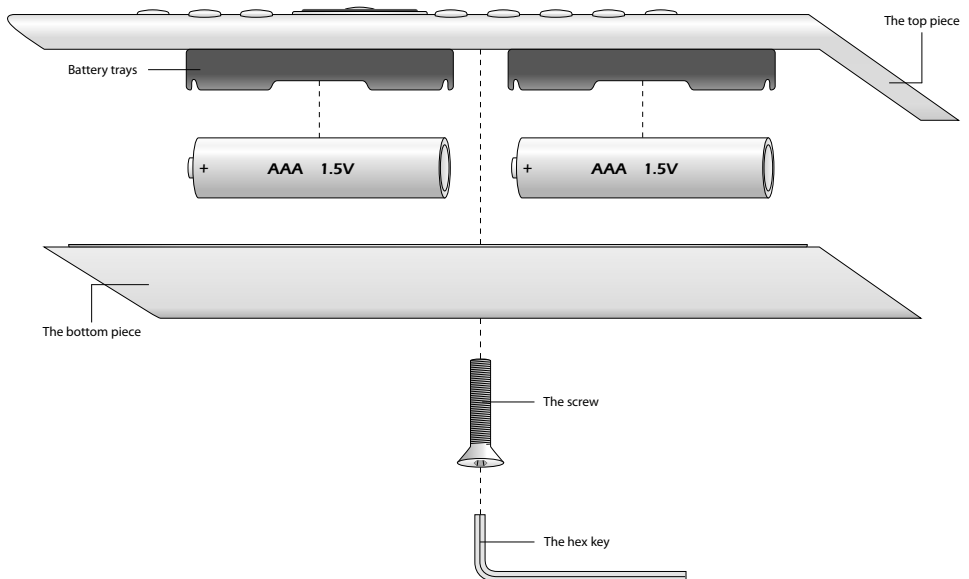

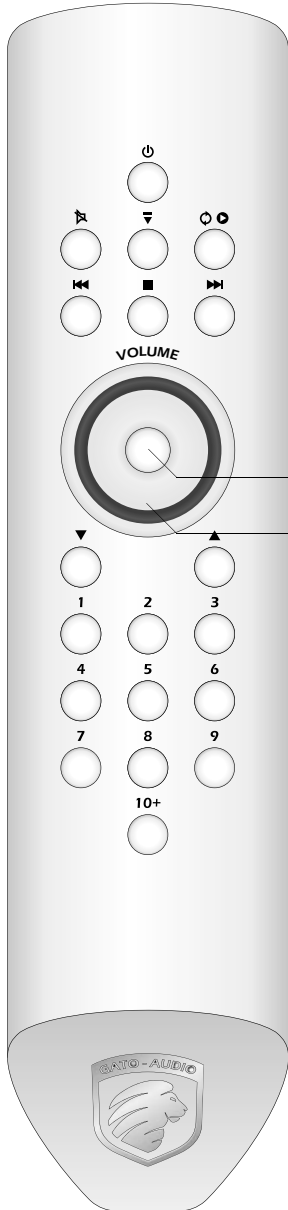


- 1 Gato Audio RC-1 remote control
- 2 AAA 1,5V batteries
- 1 hex key for opening the RC-1 remote control



How to insert/replace the batteries:

1. Remove the screw on the bottom of the remote control with the enclosed hex key
2. Remove the bottom part of the unit now facing upwards
3. Insert or replace the two AAA 1.5V batteries in the battery trays on the top part
4. Put the bottom and top parts back together again
5. Put the screw back in and tighten. Be careful not to over-tighten it!





-  **Standby** - press the button to put your product in standby mode. Press it again to turn it on.
-  **Mute** - press the button to mute. Press it again to unmute.
-  **Repeat / CD input select** - Press the button to toggle through repeat modes.
The Gato Audio CDD-1 also uses this button for digital input selection. Please see your CDD-1 user manual for details.
-  **Stop** - press the button to stop playing.
-  **Open / Close CD tray** - This will not open/close the CDD-1 top lid
-  **Play** - For CDD-1, this button also function as **Pause**.
-  **Volume** - Turn the wheel clockwise to increase volume. Turn the wheel counter clockwise to decrease volume
-  **Next track / Scan forward** - Press the button to select the next track. Press and hold to scan forward.
-  **Previous track / Scan backward** - Press the button to select the previous track. Press and hold to scan backward.
-  **Next input channel** - For the Gato Audio AMP-150 this is the clockwise input selection button.
-  **Previous input channel** - For the AMP-150 this is the counter-clockwise input selection button.
- 1-9/10+ Direct track selection** - use the **10+** select tracks above 9. Press it twice to select tracks above 19 etc.

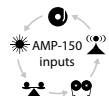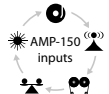

Maintenance:

Please use simple common sense to maintain the lifespan of your Gato Audio remote control. Here are a few guidelines:

- Regular care: wipe the surfaces carefully by using a soft dry cloth
- Cleaning: wipe the surfaces clean using a soft cloth dampened only with clean water.
- Grease stains or finger marks can be removed carefully with a clean soft cloth lightly dampened in a mix of clean lukewarm water and a single drop of household washing-up liquid. Then wipe the surfaces dry using a soft dry cloth
- Be careful never to use hot water or any type of concentrated detergent, solvent, thinner, or any other volatile substance on the surfaces, or you may cause permanent damage to the surface coating

The RC-1 runs on two standard AAA batteries and its standby power consumption is so low that it will operate perfectly even if it has not been used for a whole year.

Warning:

The RC-1 has a few sharp edges. Be careful not to cut yourself or anyone else.

Never disassemble the electronics or put anything else than the specified AAA 1.5 V batteries into the battery trays of the RC-1.

The RC-1 is not a toy! It contains small parts and the batteries contains chemicals. Keep away from children!

Warranty:

Every Gato Audio product comes with a minimum 2-year warranty. See our website for details.

This warranty does not cover damage or wear directly or indirectly caused by improper use, violence, tampering with or unauthorized access to or servicing of any part of the product.

If you are in need of service or repair, please do not hesitate to contact us at info@gato-audio.com or visit our website www.gato-audio.com for more information.



Hoerkaer 14
DK-2730 Herlev
Denmark

Phone: +45 4095 2205
www.gato-audio.com
info@gato-audio.com