 


User's Manual

LCD Color TV
DFT-2615

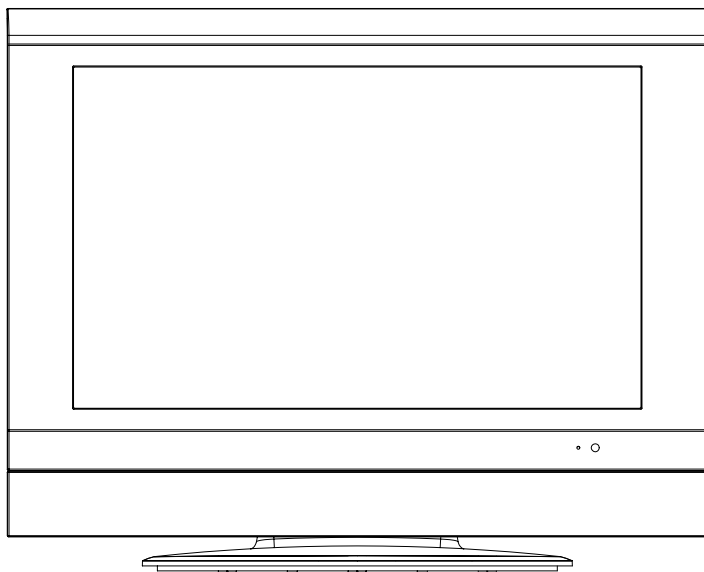

PROSONIC[®]

To enjoy your set to the full from the very beginning, read this manual carefully and keep it handy for future reference.

Thank you very much for your purchase of our LCD TV products. To enjoy your set to the full from the very beginning, read this manual carefully and keep it handy for future reference.

Contents

Safety Instructions.....	3	How to use "SET UP"	11
To place	3	TIMER.....	13
Power cord protection	3	How to enter "TIMER"	13
⚠ Precaution.....	3	How to use "TIMER"	13
Maintenance.....	4	FUNCTION	14
Maintenance.....	4	How to enter "FUNCTION"	14
Other items.....	4	How to use "FUNCTION"	14
Installation	5	How to use "Position" in YPbPr mode.....	15
To connect the antenna.....	5	How to use "Position" in VGA mode	15
To connect the power	5	How to use "HDMI Position" in HDMI mode.....	15
Remote control's batteries installation.....	5	Teletext Operation	16
Control Panel	6	Connection of External Equipment.....	17
Remote Control	7	Socket Location	17
Basic Operation.....	8	To Connect Speaker	17
Power On/Off	8	Basic Connection	18
To receive TV program.....	8	Trouble Shooting	19
To adjust volume	8	Specification and Accessory	20
Mute	8		
Return	8		
Receiving the TV program by using numeric keys	8		
Using Menus	9		
PICTURE	9		
How to enter "PICTURE"	9		
How to use "PICTURE"	9		
SOUND	10		
How to enter "SOUND"	10		
How to use "SOUND"	10		
SET UP	11		
How to enter "SET UP"	11		

Safety Instructions

To place

Place the TV on a horizontal, stable surface, do not block the ventilation holes, avoid placing the TV in direct sunshine, or in high temperature, damp, dusty or causticity environment, otherwise the internal components will be damaged.

When you install the base-stand, be sure to install it according to the installation instruction strictly. The wall should have enough loading strength to avoid falling and injury. In order to install safe and convenient, please connect the power, antenna, VGA terminal first, then fix the TV set on the installed base-stand.

Power cord protection

Connect the AC power correctly, and ensure to ground perfectly, be careful not to damage the power cord, not place it under a heavy object, not let it be spliced, worn out or knotted, not pull the power cord only when removing the power plug.



Precaution

- * **If and when anything abnormal occurs, turn off the power immediately, unplug the power cord from the outlet and call the shop for repairing. Do not remove the back cover by yourselves to avoid electrical shock. Let qualified technicians check and adjust your TV.**
- * **When away for a long time, unplug the power plug.**
- * **Do not plug or pull the power plug using wet hand.**
- * **When you plug or pull the power plug, hold the isolation part of the plug, do not pull the power cord.**
- * **Do not drop or splash water on the TV set, do not put the container that is full of liquid on the TV set in order to avoid electrical shock and so on.**
- * **Do not put any objects or container that is full of liquid on the TV set, otherwise the eyewinker or the liquid may leak into the TV set through the ventilation hole to cause electrical leakage.**
- * **Do not cover the cloth cover on the TV set in order to avoid the temperature rising too high to cause damage.**
- * **Do not press or touch the panel.**
- * **Do not touch the antenna cable in lightening weather.**
- * **Do not touch the terminal on the back cover when the TV is working.**
- * **Do not connect the unsafe accessories to the TV set.**
- * **Set up the antenna away from highways, power lines and neon signs.**

Maintenance

Maintenance

- * First, please confirm that the power is turned off and the plug is pulled out.
- * Do not use benzene, petrol or oil thinner, etc. to clean the TV.
- * Clean the cabinet with a soft and dry cloth. If the cabinet is very dirty, use a soft and wet cloth, then dry it.
- * Clean the LCD panel with soft and dry paper or cloth. Do not press it.
- * Please be careful because the cabinet and the panel are easy to be scratched.

Other items

- * **Please confirm that the power is turned off completely when it is loaded and transported; do not touch, especially do not press the panel when it is loaded and transported.**
- * **Do not turn on and turn off the set continuously, otherwise it will affect the set's life span.**
- * **Be careful for condensation at sudden temperature change. Condensation makes damage to panel or electrical contacted parts, at this time, wait for a while (still be electrified), the condensation will fade.**
- * **When fixed patterns are displayed for a long time, remnant image is likely to occur. We will not repair the TV set caused by this reason free from charge.**
- * **The antenna should be checked and replaced periodically.**

Installation

Confirm that the power switch is OFF before you plug the Signal Cables and Power Cords.



To connect the antenna

Connect the antenna or the CATV signal cable directly to the antenna input terminal located on the back cover, otherwise it will cause inferior image.

Note: 1. Please use 75 ohm coaxial cable.

2. Do not enlace the signal cable and the power cord.

Part of the TV set's back cover

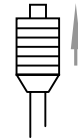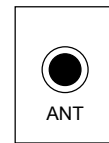

Signal cable plug

To connect the power




Insert one end of the power cord to the power input terminal located on the back cover and the other end of the power cord to the power outlet grounding perfectly.

The power adopted by this set: AC 220V-240V 50Hz

When away for a long time, turn off the power, then unplug the power plug.

Do not connect the set to DC power.

Part of the TV set's back cover

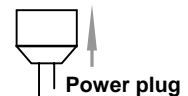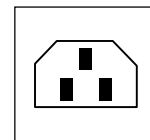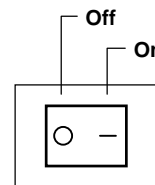

Power plug

Remote control's batteries installation

This remote control uses 2 x AAA batteries. Remove the back cover as shown, put the batteries in with the correct (+ and -).

The batteries should last for approximately 1 year. If the control idles, remove batteries, as they may leak.

Replace with new batteries:

Do not use rechargeable Ni-Cd battery.

If it is out of battery, change the two batteries at the same time.


Do not use different model (different material) battery.

Do not recharge the battery.

Part of the Remote Control's back cover



Control Panel

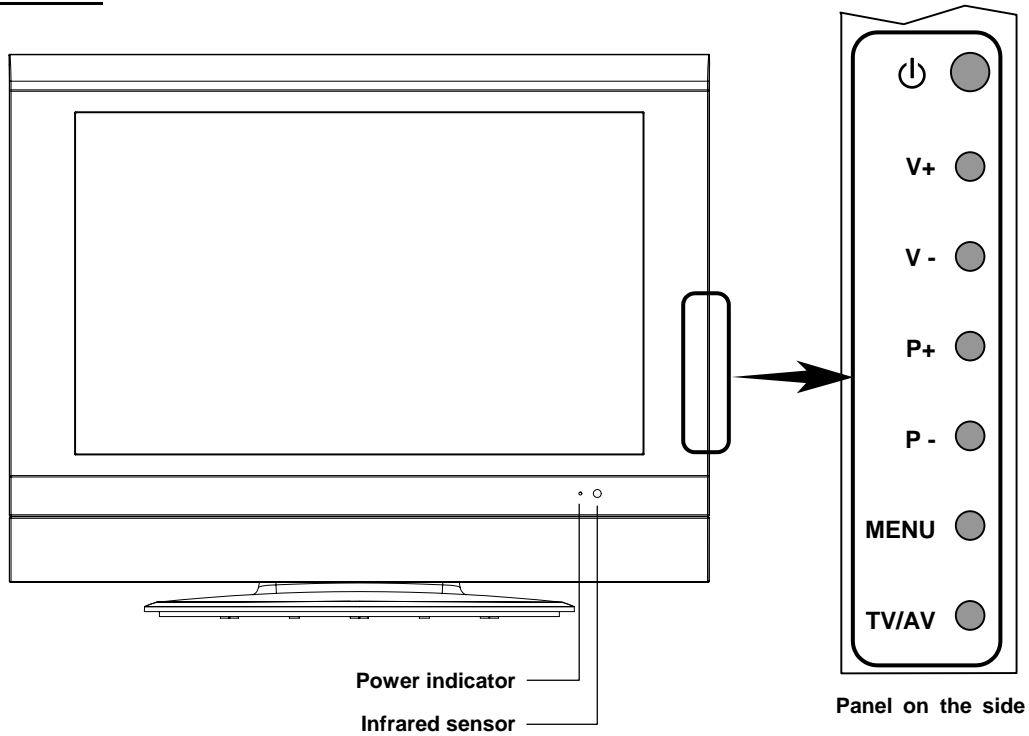


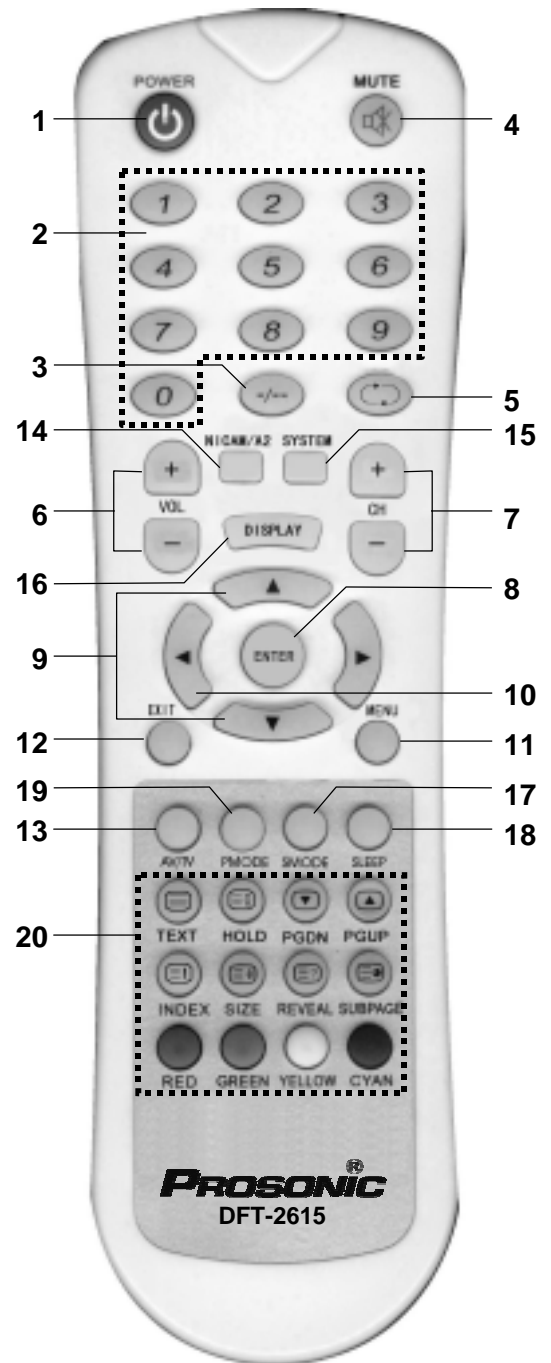
Button on the Control Panel	Function	Key on the Remote Control
⏻	ON/STANDBY	POWER
TV/AV	TV/AV	AV/TV
	EXIT	EXIT
MENU	Activate menu window	MENU
P- / P+	TV channel selection	CH- / CH+
V- / V+	Volume adjustment	VOL- / VOL+

Instruction of buttons on control panel:

- ⏻** Press this button, the TV switches between "ON" and "STANDBY";
- TV/AV** Press this button, the signal switches among TV, SCART-1, SCART-2, AV, S-Video, YPbPr, VGA, and HDMI; To exit the main menu
- MENU** Display the menu; Exit the menu
- P- / P+** TV channel selection; Enter the selected menu; Menu item selection
- V- / V+** Volume adjustment; Menu selection; Adjust the value of menu item

Remote Control


- 1. **POWER** Switch between "power on" and "standby"
- 2. **0-9** Numeric keys
- 3. **-/--** To select the channel which the channel number is more than 9
- 4. **MUTE** Mute on/off
- 5.  To return to the last program
- 6. **VOL-/VOL+** Decrease /Increase the volume
- 7. **CH+/CH-** Increase / Decrease the channel number
- 8. **ENTER** To enter into menu or menu item
- 9. **▲ / ▼** To select menu item
- 10. **◀ / ▶** To adjust menu item
- 11. **MENU** Activate or exit Menu window
- 12. **EXIT** To exit the main menu
- 13. **AV/TV** To change signal source: TV, SCART-1, SCART-2, AV, S-Video, YPbPr, VGA and HDMI
- 14. **NICAM/A2** When the TV is broadcasting the program with Nicam, press this key to select sound channel.
- 15. **SYSTEM** Switch among D/K , L, B/G, I (display at the top of right corner)
- 16. **DISPLAY** Current program status (display at the top of right corner)
- 17. **S.MODE** Sound effect selection. User, Standard, Cinema, Music, and News respectively.
- 18. **SLEEP** The TV turns to standby status at the setted sleep time. Press this key repeatedly; you can select the sleep time. "Off" indicates the sleep function is off.
- 19. **P.MODE** Picture effect selection. Select Dynamic, Standard, Mild, User respectively.
- 20. **TELETEXT** keys, for detail, see "TELETEXT Operation".



Basic Operation

All the functions can be conducted by pressing the keys on the remote control. For some functions you can also press the buttons on the control panel of the TV set. Please check the table on Page 6 for details.

Power On/Off

1. Turn on the POWER button on the back cover, the TV is at STANDBY status, press <POWER> on the remote control or <  > on the control panel to turn on the TV. The power indicator is red at STANDBY status, it is green when the TV is ON and has signal.

2. Press <POWER> on the remote control to switch between ON and STANDBY.

3. You can turn off the TV directly by pressing POWER button on the TV set.

To receive TV program

1. Press <MENU> to display the OSD main menu.


2. Press <◀ / ▶> to select "SET UP", press <ENTER>.

3. Press <▲ / ▼> to select "Country", press <◀ / ▶> to select a country where you are.

4. Press <▲ / ▼> to select "Auto Tuning", press <ENTER>.



5. Press <ENTER> to start auto tuning. A brand of tuning progress will be display on the bottom side of the screen.

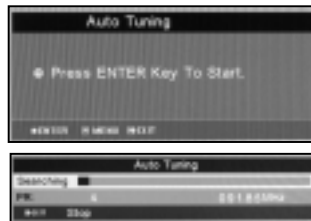

6. During searching, you can press the <EXIT> to stop searching at any moment, and return to the previous menu.

The TV set begins to store the TV program from channel 0 automatically. After auto tune, you can watch the TV programs one by one by pressing <CH->/<CH+>, or press <-/--> and numeric keys to select the channel you want to watch.


To adjust volume

Press <VOL->/<VOL+> to decrease or increase the volume.

Mute

Press <MUTE>, the mute mark appears on the bottom left corner of the screen, it indicates the MUTE function is on, the sound disappears; press <MUTE> again, the mark disappears, it indicates the MUTE function is off, the sound recovers.

Return

Press <  > to return to the last program.

Receiving the TV program by using numeric keys

When you select the program number which is less than 10, press <-/--> until the screen appears "--", then press the numeric keys.

When you select the program number which is more than 10 (including 10), press <-/--> until the screen appears "--", then press the numeric keys.

When you select the program number which is more than 100 (including 100), press <-/--> until the screen appears "---", then press the numeric keys (Max 199).



Using Menus

PICTURE

There are nine menu items in the "PICTURE": Picture Mode, Contrast, Brightness, Saturation, Tint, Sharpness, Color Temperature, DNR and Advanced.

The user can get the picture effect you needed by adjusting the above menu items.

How to enter "PICTURE"

1. Press <MENU> to display the OSD main menu.
2. Press <◀ / ▶> to select "PICTURE".
3. Press <ENTER>, when the menu item lights, it indicates you have entered the menu.

How to use "PICTURE"

When you enter "PICTURE" menu, please operate according to the following steps:

1. Press <▲ / ▼>, move the light bar to the item you want to adjust.
2. Press <◀ / ▶> to adjust the item.
3. When you satisfied with your adjustment, press <MENU> to return to the previous menu or press <EXIT> to exit the main menu.

Picture Mode

Select the type of picture which best corresponds to your viewing requirements by selecting Picture Mode in PICTURE menu. The following picture effects are available: Dynamic, Standard, Mild and User. You may select the picture mode directly by pressing <PMODE> on the remote control.

Contrast

Adjust the contrast of the picture.

Brightness

Adjust the brightness of the picture.

Saturation

Adjust the color saturation.

Tint

Adjust the tone of color when your system is in NTSC.

Sharpness

Adjust sharpness level of the picture.

Color Temperature

Select a optimum color temperature mode to suit your eyes for viewing among Normal(balance), Warm(reddish), Cool(bluish).



DNR

If the broadcast signal received is weak, you can select the DNR option to reduce the noise level between Auto, Low, Moderate, High and Off.

Advanced

This option allows you to adjust the fresh by selecting the level Flesh Tone, Green Tone Blue Tone or Film Mode.

Note: Tint control can be selected only if a NTSC signal is being received.

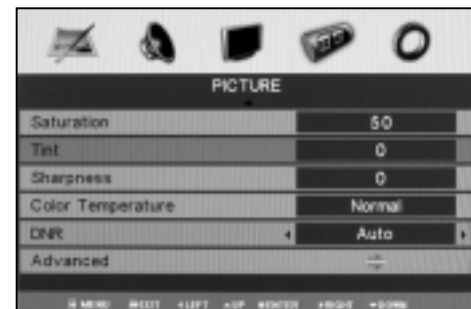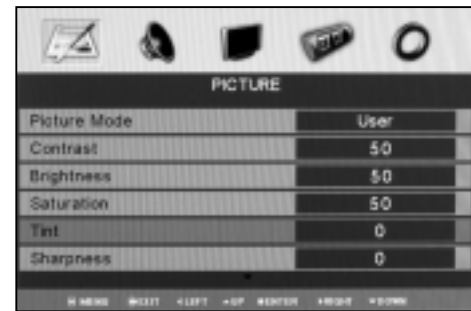

Using Menus

SOUND

There are five menu items in the "SOUND": Volume, Sound Mode, Bass, Treble and Balance Mode.

How to enter "SOUND"

1. Press <MENU> to display the OSD main menu.
2. Press <◀ / ▶> to select "SOUND".
3. Press <ENTER>, when the menu item lights, it indicates you have entered the menu.

How to use "SOUND"

When you enter "SOUND" menu, please operate according to the following steps:

1. Press <▲ / ▼>, move the light bar to the item you want to adjust.
2. Press <◀ / ▶> to adjust the item.
3. When you satisfied with your adjustment, press <MENU> to return to the previous menu or press <EXIT> to exit the main menu.

Volume

Adjust the sound level

Sound Mode

Select the type of sound which best corresponds to your listening requirements by selecting Sound Mode in SOUND menu. The following sound effects are available: User, Standard, Cinema, Music, News. You may select the sound mode directly by pressing <SMODE> on the remote control.

Bass

Increase or decrease the level of the lower-pitched sounds

Treble

Increase or decrease the level of the higher-pitched sounds

Balance

Adjust the audio output between left and right speakers



Using Menus

SET UP

There are six menu items in the "SET UP": Language, Country, Auto Tuning, Manual Tuning, Program Label and Program Edit.

How to enter "SET UP"

1. Press <MENU> to display the OSD main menu.
2. Press <◀ / ▶> to select "SET UP".
3. Press <ENTER>, when the menu item lights, it indicates you have entered the menu.

How to use "SET UP"

When you enter "SET UP" menu, please operate according to the following steps:

1. Press <▲ / ▼>, move the light bar to the item you want to adjust.
2. Press <◀ / ▶> to adjust the item.
3. When you satisfied with your adjustment, press <MENU> to return to the previous menu or press <EXIT> to exit the main menu.

Language

This option allows you to select the language of OSD(fig.1) .

Country

This option allows you to select a country where you are(fig.2).

Auto Tuning

This option allows you to tuning the stations that can be received automatically(fig.3, fig4).

Note: It is recommended to select a corresponding country where you are before start "Auto Tuning".

Manual Tuning

This option allows you manually tune for your broadcast stations or fine tune the channels received (fig.5).

Program

The current program number. Press <◀ / ▶> to select the upper or lower program.

Sound System

The sound system. Press <◀ / ▶> to select a corresponding sound system(fig.6).

Color System



 

The color system. Press <◀ / ▶> to select a corresponding color system.

Skip

Skip option allows you to skip the current channel. When set on, the program number will be skipped when you select the skipped channel with the <CH->/<CH+>. But you can select the skipped channel by pressing the numeric keys directly.

AFT

Due to weak signals or a wrong antenna configuration, some of the channels may not be turned to the best reception condition. AFT function allows you to fine tune the selected channel.

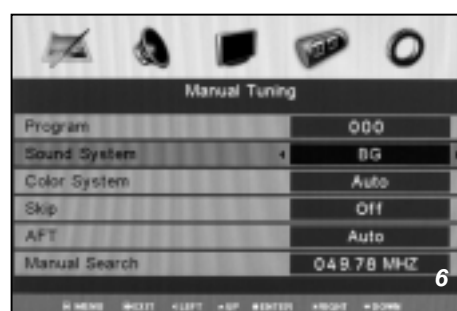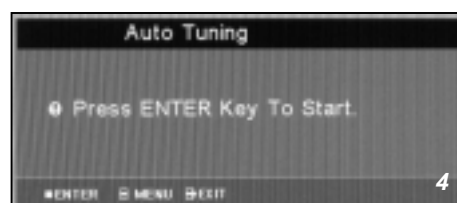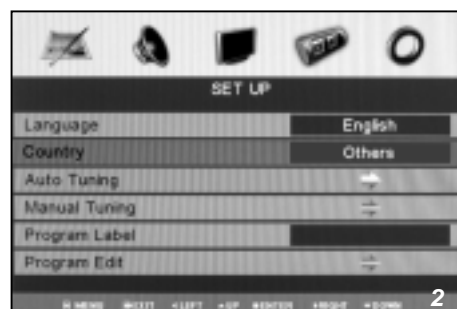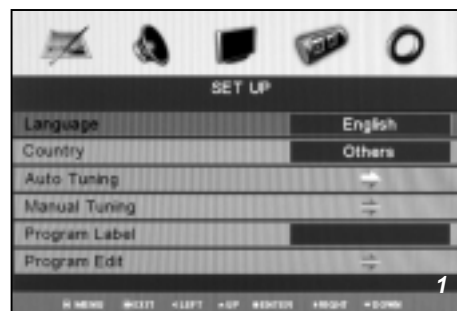

Using Menus

Manual Search

Manual search option allows you to preset channels one by one, in the order of your choice.

Program Label

This option allows you to name for a selected channel, you can also rename the program which you have named.

1. Select a channel which you would like to operate for it.
2. Press <▲ / ▼> to select Program Label in SET UP menu.
3. Press <◀ / ▶> to perform your selection, and the menu bar of program label will display on the bottom side of the screen.
4. Press the numeric keys to input the numbers directly or press <▲ / ▼> to select the letters.
5. Press <◀ / ▶> to move the cursor.
6. After completed, press <MENU> to return to the previous menu or press <EXIT> to exit the main menu.

Program Edit

This function allows you to reorganize the order of the TV programs according to your preferences.

1. Press <▲ / ▼> to select Program Edit in SET UP menu.
2. Press <◀ / ▶> to enter the sub menu, and a channel list will be appeared on the screen.
3. Press <▲ / ▼> to select a channel in the list which you would like to sort.
4. Press <▶> to perform your selection.
5. Press <▲ / ▼> to select a channel in the list which you would like to place at.
6. Press <◀> to perform your selection.
7. After completed, press <MENU> to return to the previous menu or press <EXIT> to exit the main menu.



Using Menus

TIMER

There are four menu items in the "TIMER": Sleep Timer, Off Timer, On Timer and On Time Program.

How to enter "TIMER"

1. Press <MENU> to display the OSD main menu.
2. Press <◀ / ▶> to select "TIMER".
3. Press <ENTER>, when the menu item lights, it indicates you have entered the menu.

How to use "TIMER"

When you enter "TIMER" menu, please operate according to the following steps:

1. Press <▲ / ▼>, move the light bar to the item you want to adjust.
2. Press <◀ / ▶> to adjust the item.
3. When you satisfied with your adjustment, press <MENU> to return to the previous menu or press <EXIT> to exit the main menu.

Sleep Timer

Select the sleep time automatically to standby. Sleep time is set from 0 to 120 minutes

Tips: You may select the sleep time directly by pressing <SLEEP> repeatedly on the remote control.

Off Timer

This LCD TV can be set to turn itself off after a certain time

On Timer

This LCD TV can be set to turn itself on after a certain time

On Time Program

This option allows you to set a channel number which you desire to play when the TV is tuned on.

Note: This option is activated when On time option has been set.



Using Menus

FUNCTION

There are three menu items in the "FUNCTION": Video Size, Blue Screen and Key Lock.

How to enter "FUNCTION"

Press <MENU> to display the OSD main menu.

Press <◀ / ▶> to select "FUNCTION".

Press <ENTER> to enter the menu.

How to use "FUNCTION"

When you enter into "FUNCTION" menu, please operate according to the following steps:

1. Press <▲ / ▼>, move the light bar to the item you want to adjust.
2. Press <◀ / ▶> to adjust the item.
3. When you satisfied with your adjustment, press <MENU> to return to the previous menu or press <EXIT> to exit the main menu

Video Size

This option allows you to select the screen display mode which best corresponds to your viewing requirement, 5 kinds aspect mode are available: Auto, 16:9, 16:9Zoom, 16:9Sub and 14:9.

Note: The available aspect mode may be different in different input signal.

Blue Screen

This option allows you to select the blue background on or off. If on, the screen background will turn blue at very weak or no signal condition.

Key Lock

This option allows you to lock the buttons on the front panel, so that a child may not accidentally change you viewing preferences.



Using Menus

How to use “YPbPr Position” in YPbPr mode

When you enter “SET UP” menu, please operate according to the following steps:

- 1.Press <▲ / ▼> to select “YPbPr Position”(fig.1).
- 2.Press <◀ / ▶> to enter the sub menu (fig.2).

This option allows you to adjust the position in YPbPr mode.

H Position

Adjust the screen horizontal position.

V Position

Adjust the screen vertical position.

Reset

Replace H position, V position with the factory default values.

How to use “PC Position” in VGA mode

When you enter into “SET UP” menu, please operate according to the following steps:

- 1.Press <▲ / ▼> to select “PC Position”(fig.3).
- 2.Press <◀ / ▶> to enter the sub menu (fig.4).

This option allows you to adjust the position in VGA mode.

Auto sync

Adjust screen settings automatically for optimized picture position.

Phase

Remove any horizontal interference.

Clock

Remove any vertical interference.

H Position

Adjust the screen horizontal position.

V Position

Adjust the screen vertical position.

Reset

Replace Phase, Clock, V position and H position with the factory default values.

How to use “HDMI Position” in HDMI mode

When you enter “SET UP” menu, please operate according to the following steps:

- 1.Press <▲ / ▼> to select “HDMI Position”(fig.5).
- 2.Press <◀ / ▶> to enter the sub menu (fig.6).

This option allows you to adjust the position in HDMI mode.

H Position

 
 
Adjust the screen horizontal position.

V Position

Adjust the screen vertical position.

Reset

Replace H position, V position with the factory default values.

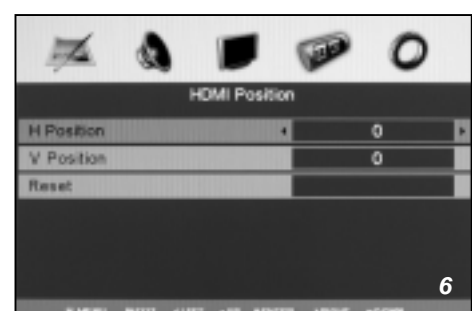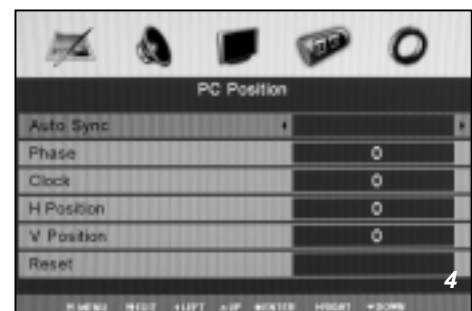

Teletext Operation

Select Teletext Mode

Press <CH+>/<CH-> to select the channel providing the Teletext service.

Press <TEXT> to enter TELETEXT mode.

By this key, mode will be changed as: Teletext Teletext+TV TV.

The overview station page or the last page viewed (in case you already watched TELETEXT at this channel previously) appears.

If you need to return to TV mode, press again the <TEXT> on the remote control.

INDEX

The contents page can be redisplayed at any time by pressing the <INDEX>.

Page Selection

You can enter directly desired page number with the remote control numeric keys 0...9. You can sequentially select page by pressing <PGUP> or <PGDN>.

HOLD

Some TELETEXT information is contained on more than one page, the pages automatically change after a given reading time.

Press <HOLD> to stop the page changing (the HOLD symbol will appear on the page heading).

Press <HOLD> again to allow the page changing (the HOLD symbol will disappear).

REVEAL

Some TELETEXT pages contain quiz or game questions with hidden answers.

Press <REVEAL> to see the answers.

Press <REVEAL> again to hide the answers.

SIZE

Press <SIZE> to display the top half of the page.

Press again to display the bottom half of the page.

Press again to return to a full page display.

FAST TEXT (For possible future reference)

The **RED**, **GREEN**, **YELLOW** and **CYAN** keys are used for quick access to color coded pages transmitted by FAST TEXT broadcast.

Example: **RED** selects CITY INFORMATION

GREEN selects WEATHER INFORMATION

YELLOW selects TV PROGRAMING

CYAN selects TRAVEL INFORMATION

SUBPAGE

Periodically revised NEWS FLASHES can be obtained from TELETEXT broadcasts.

Select the NEWS FLASH page in TELETEXT mode then press <SUBPAGE>. Every time the NEWS FLASH page is updated it will be automatically displayed.

 
Press <SUBPAGE> again to cause the news flash to disappear.

* Teletext: 10 pages



Connection of External Equipment

Socket Location

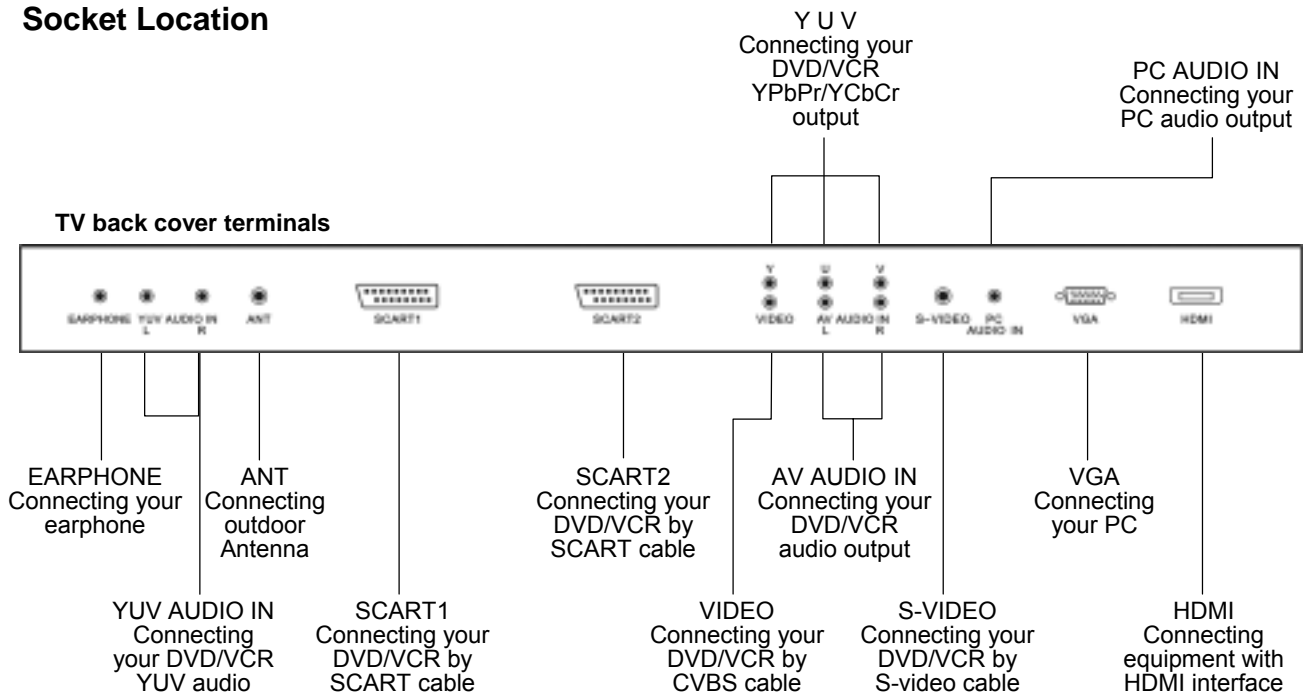


Note:

1. Same interface has same function, but different model has different interface position on the back cover.
2. Some TVs' power sockets and power buttons are on the back cover.
3. Earphone's volume is adjusted by <VOL+>/<VOL->.
4. SCART1 Input: (1) AV (2) RGB
AV output: TV Signal only
- SCART2 Input: (1) AV (2) S-Video
AV output: TV Signal, AV Signal or S-Video Signal (determined by signal source)

To Connect Speaker

Connect speaker's connecting clip to the same colored speaker's connecting clip on TV's back cover with the speaker connecting line attached to the "Accessories". See the picture.

Note: Different TV has different position of speaker connecting clip, please see the material object.

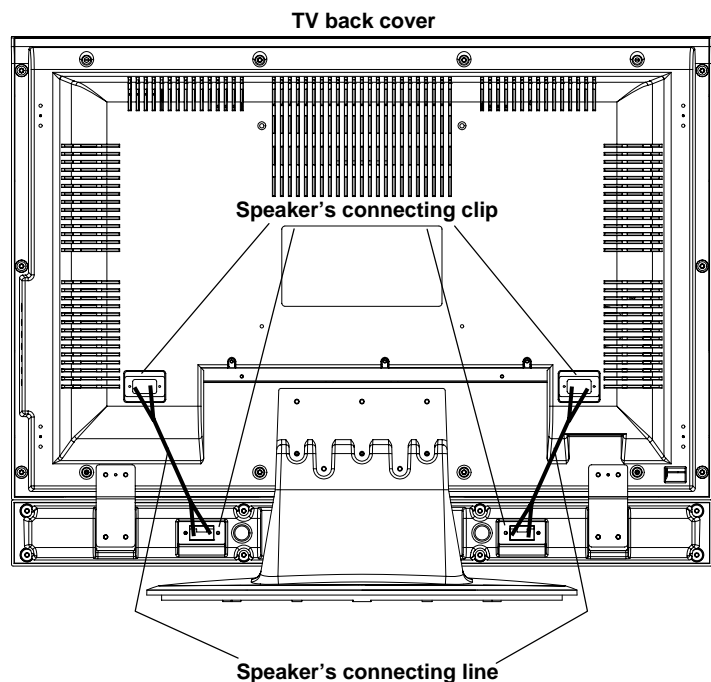

Connection of External Equipment

The power should be turned off when you plug the connecting line in.
Please read the instruction of the equipment, which you want to connect.



Basic Connection

Before you receive different source signal programs, please enter <AV/TV> button to choose the right source of signal.



Connecting to an antenna





Connecting DVD/VCR with SCART Cable

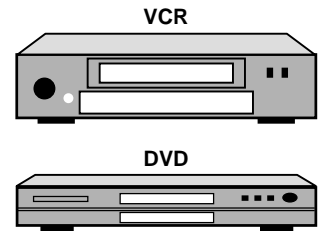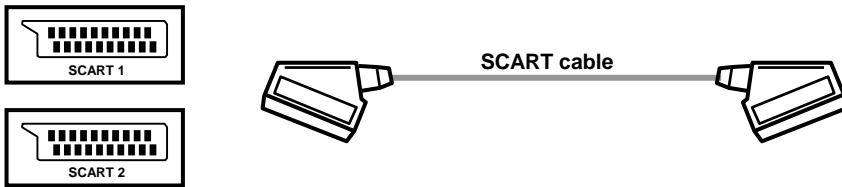

Connecting DVD/VCR with CVBS or S-Video Cable

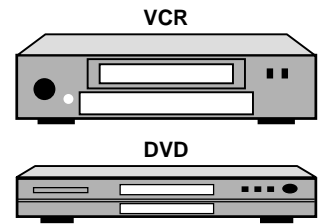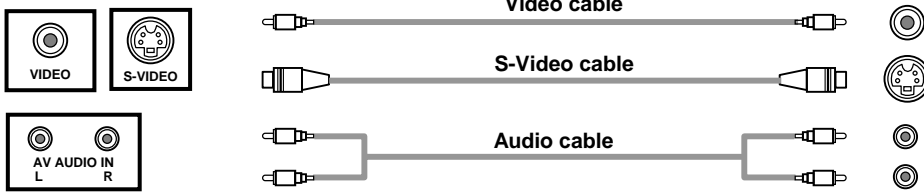


Connecting DVD/VCR with Component Cable

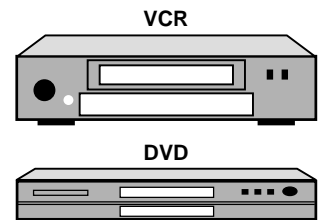
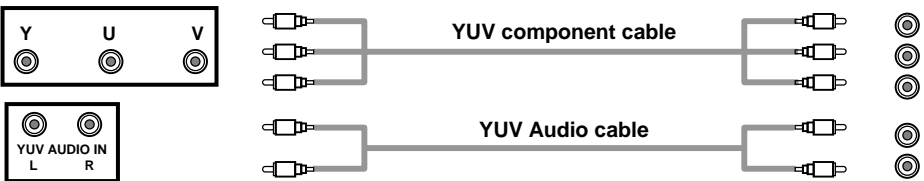


Note: YUV — Y, Pb,Pr/Y,Cb,Cr


Connecting the Earphone

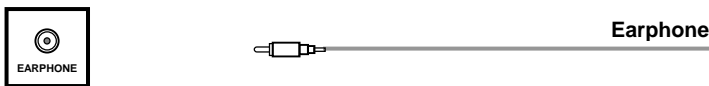

Connecting your PC

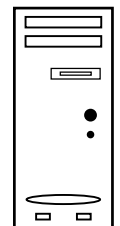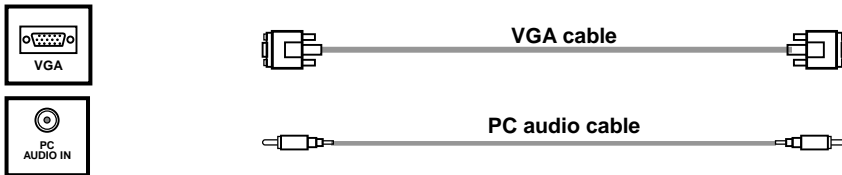

Connecting equipment with HDMI interface

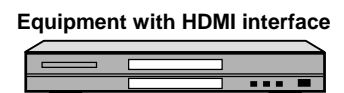

Trouble Shooting

When a problem occurs, you can check the table below and find some solutions before call for service.

Symptom	Problem Solving											
	1	2	3	4	5	6	7	8	9	10	11	12
No picture, no sound	•	•	•	•								
Poor sound, normal picture		•			•	•						
Poor picture, normal sound		•	•	•	•	•	•	•				
Weak, vague picture		•	•	•	•							
Ghost image		•		•	•							
Lines appear on the screen		•		•	•	•						
Picture distortion		•	•	•		•						
Oblique line appear on the screen						•	•					
Picture rotate vertically		•			•							
Poor color			•	•	•	•		•			•	
No color		•	•	•	•	•			•	•		
Remote control does not work											•	•

Check these things:

1. Check if the TV set is well connected.
2. Adjust different channel, it may be TV station's problem.
3. Check the TV antenna and the CATV cable.
4. Check if the antenna and the CATV cable are broken.
5. Adjust indoor antenna's direction.
6. May be jamming from nearby equipment.
7. Adjust brightness.
8. Adjust contrast.
9. Check if the TV station is broadcasting color program.
10. Adjust color control.
11. Direct remote control to TV's infrared sensor.
12. Check the batteries in the Remote Control.

The following are not failures:

1. When there is sound but no picture or there is no picture and no sound, it may be the storage circuit that is interfered by some external elements, so turn off the TV's power, then turn it on again, it may recover normal.

2. The clicking is a creaking sound produced when the cabinet expands or contracts due to the changes of the temperature. This will not affect the picture or sound.

If the Remote Control is slow witted, it may be caused by the interference of the electronic energy-save light and so on, please turn off the relative equipment, and contact the local service department.

Specification and Accessory

Specifications

1. Receiving system: PAL B/G
Video input: PAL NTSC
2. Number of Pixels: 1366x768 pixels
3. Active screen size: 16:9 TFT-LCD display panel
The min. diagonal size of the image: 66cm.
4. Power voltage: AC 220V-240V 50Hz
5. Power consumption: 120W
6. Sound power consumption: (admitted distortion rate 10%)
Left and right sound channel: 3W+3W
7. VGA interface input: 640x480/60Hz, 800x600/60Hz, 1024x768/60Hz
8. Dimensions: See the package box
9. Weight: See the package box

Note: Specifications is subject to change without notice.

Accessories

Accessories	Quantity	Remarks
User's Manual	1	
Remote control / Battery (AAA)	1/2	
Power cord	1	
Speaker's connecting line	2	

ENGLISH

Instructions on environment protection



Do not dispose of this product in the usual household garbage at the end of its lifecycle; hand it over at a collection point for the recycling of electrical and electronic appliances. The symbol on the product, the instructions for use or the packing will inform about the methods for disposal.

The materials are recyclable as mentioned in this marking. By recycling, material recycling or other forms of re-utilization of old appliances, you are making an important contribution to protect our environment.

Please inquire at the community administration for the authorized disposal location.

PROSONIC[®]

CE

Reference:

Purchase date: _____

Model No.: _____

Dealer: _____

S/N: _____
