

1. Please read the instructions carefully.

**Improper installation may cause permanent damages, which may not be covered by the warranty.**

2. Check all the parts in the package against the following parts list.


- One Digital Light Sensor (Part No. VT-DC1)
- One Dual Level Laser Pen (Part No. VT-LP1)
- One Tabletop Tripod (Part No. VT-TP1)
- One Installation CD (VT-CD1)
- One User's Manual (Part No. VT-UM1)
- Two AA Batteries
- One Warranty Card

**3. Minimum System Requirements:**

PIII 850MHz CPU , 128MB RAM, CD ROM, 1 Mb Hard Drive Space, USB port, Windows 98/2000/XP.

**4. Software Installation:**


Insert the installation CD into your computer's CD ROM.

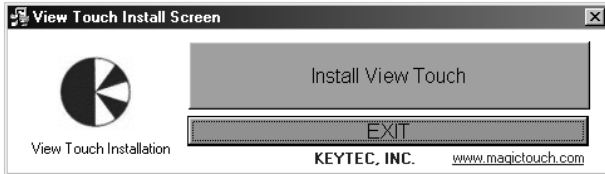


Click Install View Touch.




Installation starts.

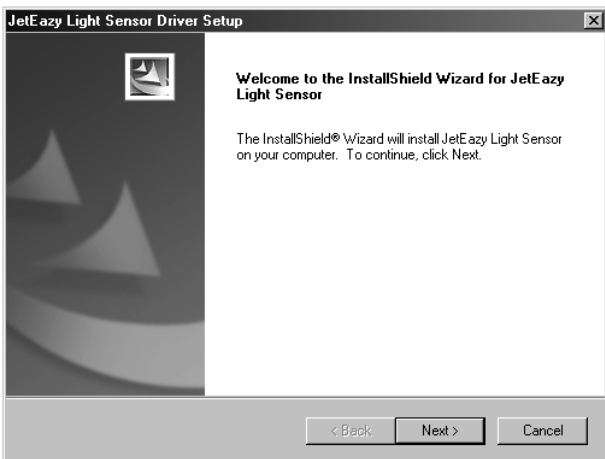


Click Next.

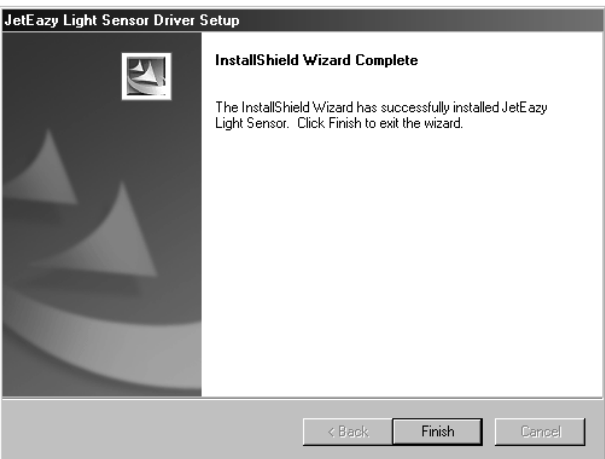


Click Finish.

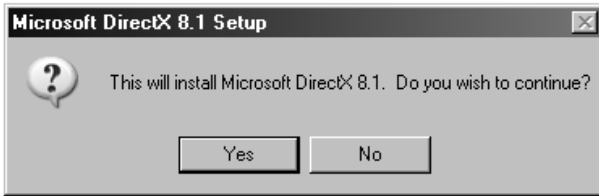

Click Yes.

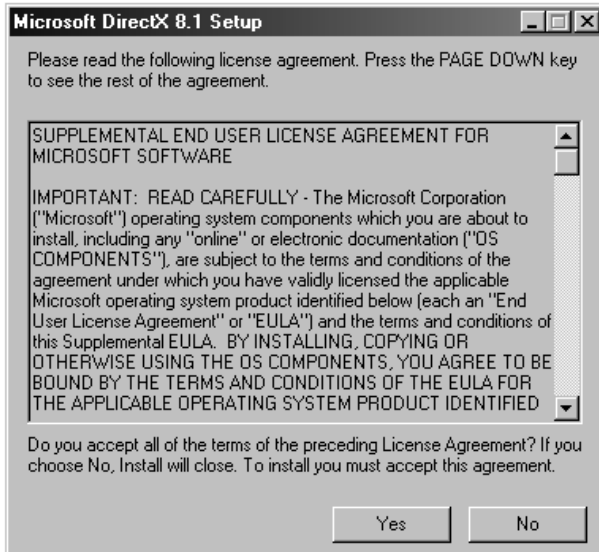

Click Yes. Note: Windows 98 may require to reboot computer after DirectX installation.

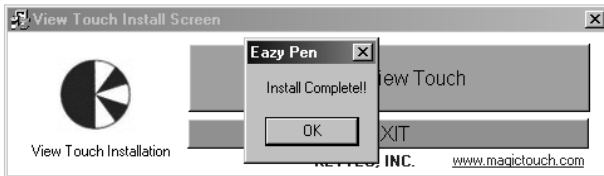

Click OK and EXIT.

View Touch" and "View Touch Pen" icons are added on the desktop.


**Now, plug the digital light sensor into USB port.**

**In Windows XP:**



Check either option, and then click Next.



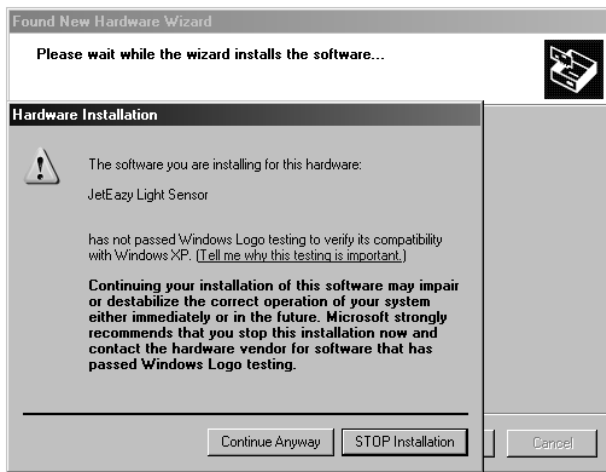


Click Continue Anyway.



Click Finish. **Continue to 5. Set Up and Calibration.**


**In Windows 2000:**

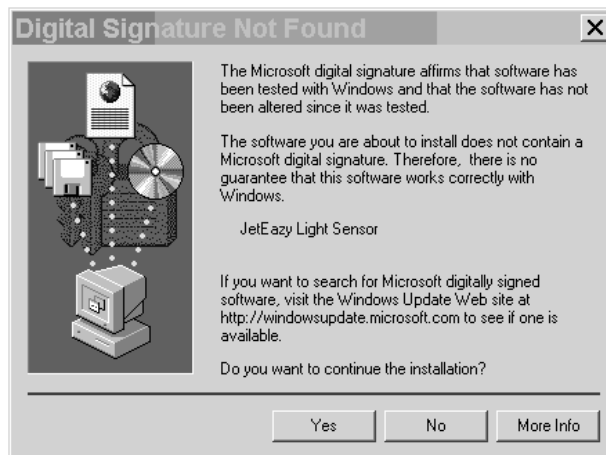

Click Yes. **Continue to 5. Set Up and Calibration.**

**In Windows 98:**

**Add New Hardware Wizard**

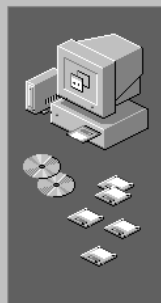

This wizard searches for new drivers for:


USB Device

A device driver is a software program that makes a hardware device work.

< Back   Next >   Cancel

Click Next.

**Add New Hardware Wizard**

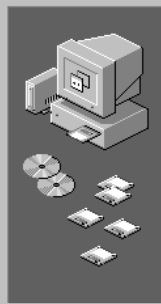


What do you want Windows to do?

- Search for the best driver for your device. (Recommended)
- Display a list of all the drivers in a specific location, so you can select the driver you want.

< Back   Next >   Cancel

Click Next.

**Add New Hardware Wizard**

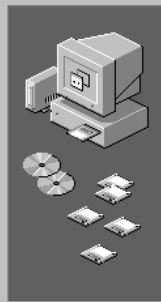

Windows driver file search for the device:

JetEazy Light Sensor

Windows is now ready to install the best driver for this device. Click Back to select a different driver, or click Next to continue.


Location of driver:


 E:\JCAM.INF

< Back   Next >   Cancel

Click Next.

**Add New Hardware Wizard**

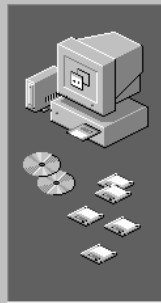

 JetEazy Light Sensor

Windows has finished installing the software that your new hardware device requires.

< Back   Finish   Cancel

Click Finish. Continue to 5. Set up and Calibration.

## 5. Setup and Calibration:

The digital light sensor can be mounted on the tabletop tripod (included) or any kind of camera tripod, or clip on a notebook computer or mounted on the ceiling.



on tripod



on notebook

If you use the tabletop tripod provided, loose the black knob and turn the mounting head to the side way. Mount the digital light sensor onto it as shown above.




Double click the View Touch icon to open the setup and calibration screen.

Position the digital light sensor by adjusting the distance and angle until the entire displayed image is within the center of picture-in-picture window.



The digital light sensor can be rotated horizontally to view left and right, and tilted vertically to view up and down, but the level needs to be adjusted from the tripod after loosening the black knob.

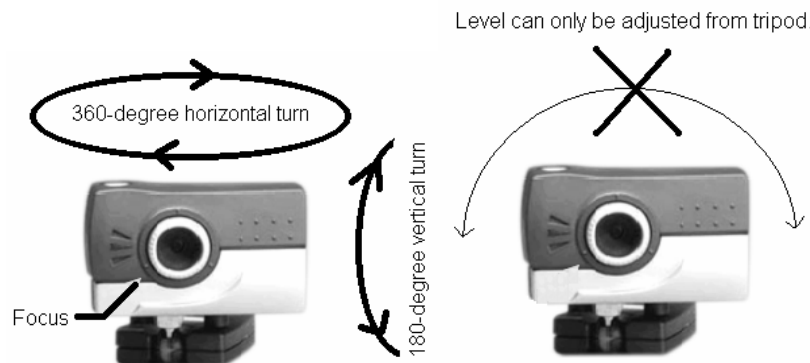

Although it is preferable to do the setup and calibration in a dimmer room, it is not strictly required. As long as there is no strong lighting interference in and around the area of the displayed image, the setup can be done successfully.


If the image keeps flashing, it is usually caused by the unstable light source, such as sunlight going through the window or glass door, or there is a ceiling fan near the screen. Even with this kind of interference, the setup can be accomplished unless the intensity of this light source is too strong.

Slight keystone effect does not affect the accuracy of View Touch calibration. The digital light sensor can be set at +/- 15 degree angle horizontally or vertically from the center point of the displayed image.



To make sure the entire image is viewed by the digital light sensor, it is recommended to use the laser pen to point at 4 extreme corners of the image and see if the bright spots can be seen within the picture-in-picture window, as shown in the following.



Make sure the sensitivity bar at right is set at minimum. Click Calibration. Wait until you see the following pattern in the window.

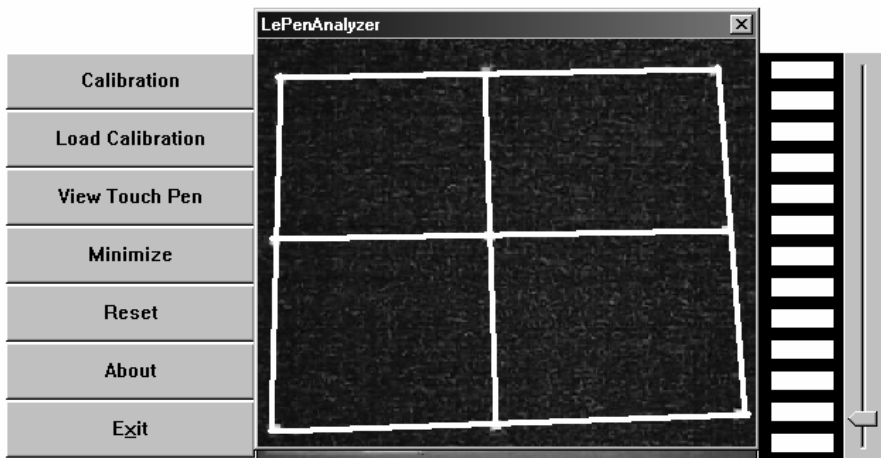

If you don't see all the complete pattern, it is either the digital light sensor cannot see the entire image or the light is too strong and "washes off" the image. Click Reset and do the necessary adjustments, then click Calibration again. To do the calibration, use mouse to move and place the cursor at the center of each cross point, then click the left mouse button. A cross will be placed over the cross point upon clicking. For front projection or display monitors, start from the left-upper corner and follow the sequence as shown. >>>

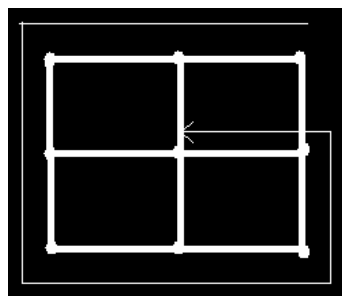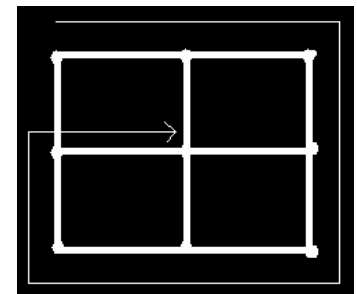

<<< For rear projection, start with the right-upper corner and follow the sequence as shown.


After all the 9 cross points have been clicked, you will be prompted for whether you accept this calibration. If you think you did not click each point very accurately, then click no and redo the calibration. Otherwise, click yes. Note: After the calibration, the image in window turns dark. If you need to adjust the digital light sensor position, click Reset to brighten the image.

If all the settings remain unchanged, next time when you start the View Touch, you may just click Load Calibration, and the last calibration data will be loaded.

After calibration, you will need to set the sensitivity level for the laser pointer. The brighter the room, the higher the sensitivity needs to be set. However, when

the sensitivity is set too high, the performance may become unstable. In general, start testing from the middle point setting is recommended. The sensitivity bar can be controlled by mouse and keyboard up/down arrow keys (useful for fine tuning). After the sensitivity level is set, point the laser pointer provided to the image and press on switch B to see if the mouse cursor follows the laser light spot. If it doesn't, then the sensitivity needs to be increased. If it does, move the laser pointer around the image screen and see if the cursor is following smoothly. If the cursor movement is jumpy, then the sensitivity needs to be increased. Also check the accuracy of cursor position versus laser spot. If it is not accurate enough, redo the calibration.

After the switch B is tested. Turn on switch A only, a smaller and weaker laser spot is emitted; which is a guiding light and not supposed

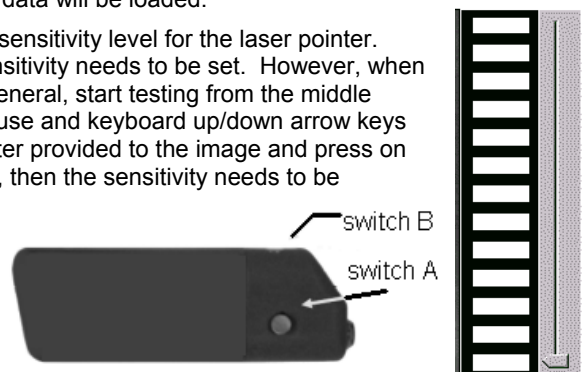

to activate the mouse cursor. Move the laser pointer around the image screen and see if the cursor reacts to it. If it does, the sensitivity needs to be decreased.

Once the switch A and switch B function correctly and the accuracy is satisfactory, the View Touch is ready for operation. Click Minimize to minimize the setup screen. If you need to bring up the setup screen again, double click the View Touch icon on the desktop , or right mouse click on the View Touch icon at the bottom task bar and select maximize.

## 6. How to use View Touch

Set the double click speed to the slowest in the mouse control panel for ease of activating the double click. Press switch A to turn on the guiding light. **Please remember to turn it off after use.** Aim the target with guiding light, then press switch B to activate the mouse movement and click. For dragging, hold down the switch B and move the laser pointer. You may practice from short distance first, and then gradually increase the distance. For rear projection user, you may point the laser directly onto the screen. If the surface of the screen tends to adsorb or diffuse the laser light, using a red LED may solve the problem, but you need to point the LED directly onto the screen.

After a little practice, you will learn to use the View Touch like a wireless remote mouse control.

The utility software, View Touch Pen, is designed as a presentation tool. Double click the View Touch Pen icon to open it. Click on the mouse button, it extends into 6 more buttons. The two arrow buttons are used for power point slide show to forward and backward the slides. The swap mouse button is used to swap the left mouse click to right-mouse click. Click the X to close the program. >>>

<<< Click on the pen button, it extends into more functional buttons for annotation purpose. There are 4 colors to choose from. You can use it to draw, mark and write on the screen. Click on the save button to save the entire screen as a snap shot in BMP format. Other buttons perform the undo, redo and delete functions. Please note when in the pen mode, the mouse click function is disabled. Click the arrow button at the bottom to return to mouse control functions.

The View Touch can be used in conjunction with other useful utility software such as on-screen keyboard and writing recognition programs. It can also be used concurrently with KEYTEC'S Magic Touch screens for writing/drawing enhancement. (more information available at [www.magictouch.com](http://www.magictouch.com))

## 7. Troubleshooting

### 7.1. Error message when opening View Touch: No video capture device was detected on your system.

- \* Check and make sure the digital light sensor is connected to your computer's USB port (the green light on the digital light sensor indicates a good connection).
- \* If your View Touch is already running, do not double click the icon on desktop to reopen it. Use the mouse right click to maximize the View Touch icon at the bottom of the task bar.
- \* If you use a USB extension cable, make sure it is specified for the length that you extend it to.

### 7.2. Can not see all the calibration dots:

- \* If one of more of the dots at the edge or corner is missing, you may need to adjust the digital light sensor angle or increase the distance between digital light sensor and the screen in order to view the entire screen.
- \* If some dots are covered by white color and cannot be seen, it is cause by the lighting problem. Try to dim the lights and reset.

### 7.3. The cursor is stuck to the edge of the screen:

- \* Check if there is any reflective material (such as metal frame) or some lights (such as the indicator LED). Cover them if any.

### 7.4. The cursor is stuck in the middle of the screen:

- \* Check if there is a bright spot caused by the projector. Adjust the angle or change the fabric of the screen to avoid this kind of problem.

### 7.5. Can not see the guiding light:

- \* The guiding light is weak. It takes a little while for your eyes to get used to it. It is more visible in dimmer room and on the screen color that has good contrast to the red.

### 7.6. The mouse control function is not sensitive enough:

- \* Check if the ambient lighting condition is changed.
- \* Check if the batteries need to be replaced.
- \* Adjust the sensitivity bar to optimize the performance.

### 7.7. The View Touch is not sensitive on part of the screen:

- \* Check if the digital light sensor has been set up at an angle greater than 15 degrees from the center point of the screen.

### 7.8. The View Touch stop responding after I change the display resolution, or the display resolution is changed by certain program:

- \* Maximize the View Touch from the bottom task bar, and test it with laser pointer. If mouse follows, minimize the View Touch. If mouse does not follow, exit the View Touch. Unplug the USB cable and plug it back in. Start the View Touch and click Load Calibration.

For assistance, please contact KEYTEC: Email: [tech@magictouch.com](mailto:tech@magictouch.com) Tel: 800-MAGIC-89 or 972-2348617 Fax: 972-2348542.

