

TORK GA 10 TYPE GAS ALARM DEVICE USER MANUAL



SMS SANAYİ MALZEMELERİ ÜRETİM VE SATIŞI A.Ş.





Read the instructions before use



## **GAS ALARM DEVICE USER MANUAL**

**GA 10 SERIES** 

## **INGREDIENTS**

OPERATING PRINCIPLE	4	
BASIC INFORMATION		
TECHNICAL SPECIFICATIONS		
MOUNTING	6	
Parallel (Multi) Mounting	8	
Single Electrical Connection	8	
Multi Electrical Connection	8	
Mounting Warnings	9	
WARNING	9	
MAINTENANCE		
TOUBLESHOOTING		
CARRYING		
HOW TO ORDER		
PERMISSION OF REPUBLIC TURKEY THE MINISTRY OF INDUSTRY		
WARRANTY CONDITIONS		
EXCLUSIONS OF WARRANTY (USAGE DEFECTS)		
WARRANTY CERTIFICATE		



## **GAS ALARM DEVICE USER MANUAL**



### **OPERATING PRINCIPLE**

Gas alarm device is a gadget detecting the explosive gasses in environment. Ingredients of the detected gasses can be one of these gasses; methane (CH4), propane (C3H8) and butane (C4H10) or mixture of these gasses.

Natural gas is methane gas. LPG is made of butane gas, propane gas or mixture of these two gasses. When the gas alarm device is supplied with 230V AC 50/60Hz voltage, green LED lights. After 1.5 minutes calibrating time (sensor's heating time), device gets active. Before calibrating time is up, don't use any testing gas. After calibrating time, if there is any gas leakage over the limits, the sensor detects the gas in 10 seconds at the latest and gives visual and audible alarm. As long as the gas leakage is upper levels, device goes on to giving alarm.

When the leakage level is lower than alarm level, device change to normal condition instinctively, gets ready to detect. If there is no electricity, device does not work. If closing the gas valve or aspirating the gas is wanted when the alarm condition, the output relay of the gas alarm device can be used for it. From the output 230V AC voltage and current lower form 7A can be supplied.

#### **BASIC INFORMATION**

Gas alarm device is designed for alerting if there is any leakage of LPG or natural gas on household and similar appliances. It's a continuous working and installed on constant place device. Because of its relay output other devices like solenoid valve, aspirator, siren etc. can be controlled.

The minimum concentration of a particular combustible gas or vapor necessary to support its combustion in air is defined as the Lower Explosive Limit (LEL) for that gas. LEL value of natural gas is %5 and LPG's LEL value is %2. Before LEL values not reaching these levels' one fifth, gas alarm device detects the leakage and gives alarm.

- Alarm level for natural gas is % 0.5 or 5000ppm (parts per million).
- Alarm level for LPG is %0.3 or 3000ppm (parts per million).



Head Office: Bostanci Yolu Cad. Kuru Sok. No:16 Y. Dudullu, 34776 Ümraniye - İstanbul -Turkey
Tel: +90 (216) 364 34 05 (pbx) Fax: +90 (216) 364 37 57 export@sms-tork.com www.sms-tork.com.tr | Factory: IMES O.S.B. 5. Cad. No: 6 Çerkeşli OSB Mah. Dilovası - Kocaeli - Turkey
Tel: +90 (216) 364 34 05 (pbx) Fax: +90 (216) 364 37 57 export@sms-tork.com www.sms-tork.com.tr | Tel: +90 (262) 290 20 20 Fax: +90 (262) 290 20 21



## **GAS ALARM DEVICE USER MANUAL**

**GA 10 SERIES** 

## TEKNİK ÖZELLİKLER

Detecting Gasses :	Natural Gas(methane), LPG(Liquefied Petroleum Gas)
Device Type:	A type(Visual alarm, audible alarm and output signal)
Visual Warning:	Green-System Active, Red-Alarm, Yellow-Fault
Sensor Type:	Semiconductor ( 5V±0,1)
Main Body Material:	ABS
Calibration Time:	1,5 minutes
Reaction Time:	<10 seconds
Audible Warning:	Piezoelectric Buzzer
Volume:	85dB
Operating Voltage:	230VAC +- %10, 50/60Hz
Output Signal(Relay Contact):	230V AC 7A NO
Power Consumption:	3W
Operating Area:	Household and similar electrical appliances
Operating Temperature:	-10°C+50°C
Relative Humidity:	0-95%
Main Body Dimensions:	60mm x 100mm x 45mm
Estimated Device Life:	5 years

Reference Standards: EN 50194-1, EN 60335-1, EN 60079-29-1, EN 50244

Table 1. Technical specifications.



# GAS ALARM DEVICE USER MANUAL

GA 10 SERIES

#### **MOUNTING**

Device must be mounted like in the Fig 1 and Fig 2



## **DEVICE MUST BE MOUNTED BY AN EXPERT!**

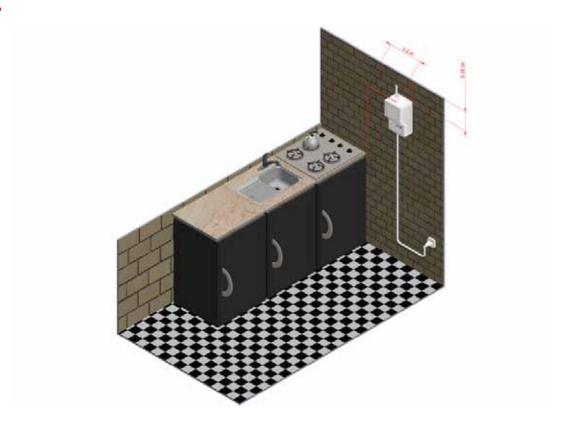


Fig 1: Fig 1. Installation of Gas Alarm Device for Natural Gas Appliences.



#### **Natural Gas**

Natural gas is lighter than air. During the leakage natural gas rises up to ceiling and gathers there. So gas alarm sensor must be mounted 5-15cm down from ceiling and projective 1-2m away from leakage supply. This place must be higher than the highest door or window opening.



# GAS ALARM DEVICE USER MANUAL

GA 10 SERIES

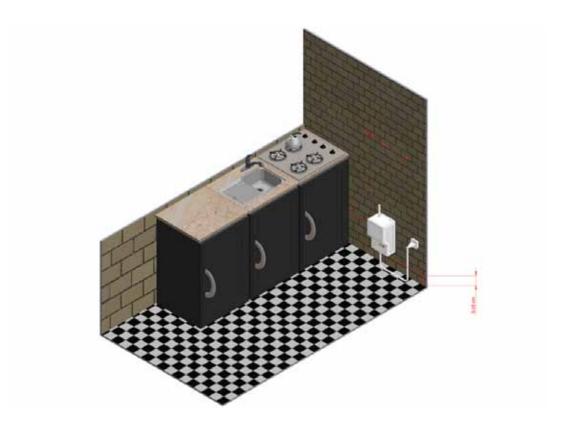


Fig 2: Installation of Gas Alarm Device for LPG Appliences.



#### LPG

LPG is heavier than air. During the leakage LPG goes down and spread to floor. So gas alarm sensor must be mounted 15-25cm higher from the floor and projective 1-2m away from leakage supply. This place must be away from doors or windows.



## GAS ALARM DEVICE USER MANUAL

GA 10 SERIES

### **Parallel (Multi) Mounting**

Collecting more than one gas alarm device's output signals and connect to devices wanted to control automatically, is parallel mounting. You can use the Fig 4 for parallel mounting.

#### **Single Electrical Connection**

This installation is done when only one device will be mounted.

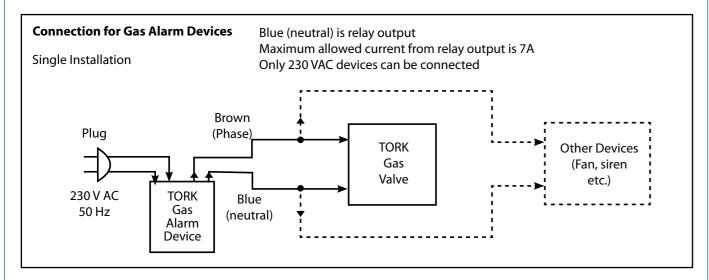


Fig 3. Single Electrical Connection of Gas Alarm Device

#### **Multi Electrical Connection**

This installation is done when more than one device will be mounted.

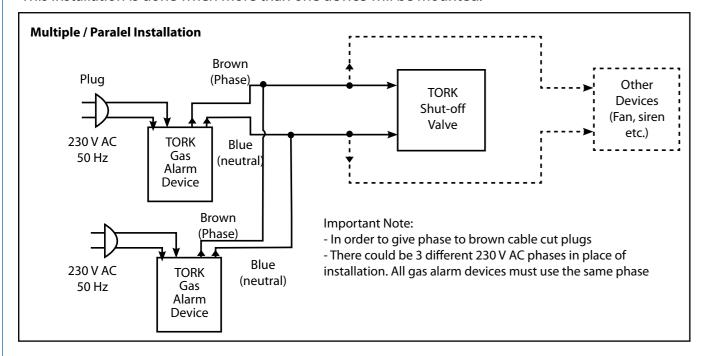


Fig 4. Multi Electrical Connection of Gas Alarm Devices

SMS SANAYİ MALZEMELERİ ÜRETİM VE SATIŞI A.Ş.

Head Office: Bostancı Yolu Cad. Kuru Sok. No:16 Y. Dudullu, 34776 Ümraniye - İstanbul -Turkey
Tel: +90 (216) 364 34 05 (pbx) Fax: +90 (216) 364 37 57 export@sms-tork.com www.sms-tork.com.tr | Factory: İME5 O.S.B. 5. Cad. No: 6 Çerkeşli OSB Mah. Dilovası - Kocaeli - Turkey
Tel: +90 (216) 364 34 05 (pbx) Fax: +90 (216) 364 37 57 export@sms-tork.com www.sms-tork.com.tr

8



## GAS ALARM DEVICE USER MANUAL

GA 10 SERIES

## **Mounting Warnings**



## Device must not be mounted to these places below!

- · Over to the stoves.
- Over to the cowls.
- Near to the aspirators.
- · Closed places like cabins.
- Steamy places.
- Too hot places. The sensor works up to 50 °C ambient temperature. Don't mount the sensor hotter places than this ambient temperature.

Don't put any stuff in front of the sensor, prevent from blocking the sensor.

One gas alarm sensor can protect 50m2 area. For separated areas, even if a small wall, must be used different gas alarm sensors.

#### WARNINGS

During the alarm condition actions be taken are below.

- Calm down.
- Don't use any electric device. Don't on or off any of them.
- Don't plug, unplug any electric device.
- By opening doors and windows, ventilate the area.
- Don't use any matches and lighter.
- Don't use the door bell. Never let anybody use it.
- Close the gas valve starting with the nearest one.
- According to flame risk don't use any mobile phone or walky talky.
- Get contact with the expert gas distribution company in proper place.
- If there is any fire deflate it.

If there is a flaming on natural gas, it is useless, also dangerous that trying to deflate the flame without closing the valve. If you smell the gas without alarm, follow the warnings up without waiting the alarm. Despite to preventions, if gas alarm goes on and the alarm reason can't be found, empty out the area. To check the fittings, to make them safe and to required repair get in contact with the gas distributor company or get in contact with 7/24 accessible natural gas emergency.



## **GAS ALARM DEVICE USER MANUAL**



If the gas concentration decrease the under the alarm level, alarm sound will be cut off instinctively.

- Alcohol and such as stuff steams, sprays, high density smoke, lighter gas, pungent cleaning materials can confuse the gas alarm sensor and reason wrong alarm.
- Device's main body must not be opened. Otherwise there can be a shock and device can work irregular.
- If relay output cable will not be used, don't open the isolation on its ending.
- During operation the operating conditions must be exactly followed, like technical specifications, operating temperature and pressure.
- Before the installation, control the device whether any damage on it. Before the giving energy to the device control all the installation.

#### **MAINTENANCE**

The device must be controlled once in a year at least. For testing, don't release the gas to all of the area. Otherwise it can be dangerous. The main body and gas sensor must be cleaned with a soft cloth or brush and non alcoholic cleaning materials.

#### **TROUBLESHOOTING**

If too many current pass from the output more than the limits, the output of the device can be damaged. In these conditions device must be send to the authorized service. This condition is not under warranty cover.

If YELLOW LED lights the sensor is faulted and the device must be send to the authorized service.

#### **CARRYING**


Device must be carried with its own carton box. During the carrying too many weight as damaging the device, must not be put on the device's box.



## **GAS ALARM DEVICE USER MANUAL**

**GA 10 SERIES** 

#### **HOW TO ORDER**

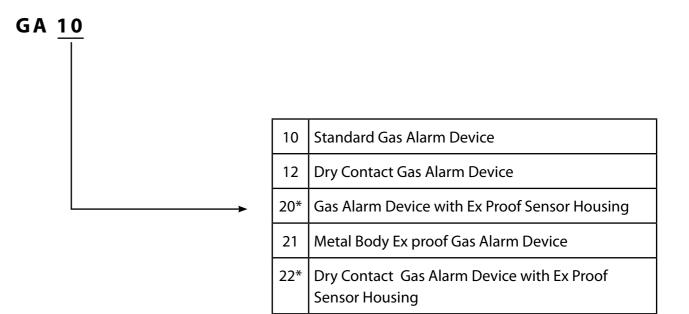

<sup>\*</sup> GA 20 and GA22 series Gas Alarm Devices are used with only GL.01 Ex Proof Sensor Housing.

#### **FIRM INFORMATIONS**

SMS SANAYİ MALZEMELERİ ÜRETİM VE SATIŞI A.Ş.

Y. Dudullu, Bostancı Yolu Kuru Sk. No:16 Ümraniye 34776 İstanbul Turkey Tel:+90-216 364 34 05 Faks:+90-216 364 37 57 e-posta: tork@sms-tork.com.tr www.sms-tork.com.tr / www.sms-tork.com

#### **PRODUCER FIRM**

Tasarım Elektronik ve LED Aydınlatma

Ethembey Cad. No:117/A Darıca Kocaeli Turkey

Tel: +90-262 655 90 94 Fax: +90-262 655 84 02 info@tasarim-elektronik.com



## **GAS ALARM DEVICE USER MANUAL**

**GA 10 SERIES** 

## T.R. MINISTRY OF INDUSTRY AND COMMERCE CONSUMER AND COMPETITION PROTECTION GENERAL DIRECTORATE

**Issue Date and Number: 28.11.2013-41513** 

**Date of Validity:** 28.11.2015

In the usage of this document it permitted, according to the law about Protection of Consumer with number 4077; and as regards implemented regulations, Regulations of Guarantee Certificate Application Principles, according to this law, by T.R. Ministry of Industry and Commerce Consumer and Competition Protection General Directorate.

#### **Producer and Importer Firm's**

: SMS SANAYI MALZEMELERI URETIM VE SATISI A.S. Name

Central Address : Y. Dudullu, Bostancı Yolu Kuru Sk. No: 16, 34776 Umraniye İstanbul-TÜRKEY

Tel : 0216 364 34 05 : 0216 364 37 57 Fax

Type of Product : Gas Alarm Device

:TORK **Brand Name** 

Cost

Banderol and Serial No: Delivery Date and Place:

Warranty Period : 2 Years

Minimum Repair Period: 20 Workdays

Name of Seller Firm Address Tel Fax Date and Number of Bill:

> PETEK ECE TİRYAKİOĞLU In the Name of Ministry. VICE GEN. DIRECT

This document can be justified from www.tuketici.gov.tr internet address.

#### WARRANTY CONDITIONS

- 1. If there is a fault caused by the production, the manufacturer will repair or replace the defective product in its sole discretion.
- 2. The warranty period is two (2) years and starts from the date of delivery of the product to consumers.
- 3. All products, including all sub-parts, covered by our warranty.
- 4. The maximum repair time is one (1) month and starts from the products' arrival date to SMS factory.
- 5. Within the warranty period, both in material and workmanship, as well as in case of manufacturing defects, products will be repaired without any charge under any name (labor costs, or the cost of replaced parts).
- 6. During the warranty period, provided that the products will be exchanged free of charge if the fault is sourced by production.
- 7. Damages caused by the using of the product contrary to the points listed in the operating instructions are excluded from warranty coverage.
- 8. If there are complaints about the product please contact customer relations manager firstly.
- 9. For return or repair-maintenance of products send them to the factory to the customer relations department.
- 10. If products come to the factory, it doesn't mean acceptance of return and received by officers. Returns accepted, with the approval of the examination will be only after the relevant department managers.
- 11. Consult to General Directorate of Consumer and Competition Protection of the Ministry Industry and Commerce of Turkey about the issues may arise with warranty certificate.

### **EXCLUSIONS OF WARRANTY (USAGE DEFECTS)**

- 1. Malfunctions occurring after the expiration of the statutory warranty,
- 2. The faults caused by improper use of the product by the user, (improper using to the instruction manual),
- 3. Any relevant malfunctions caused by other equipment in use,
- 4. Changes and damages not caused by the product manufacturer; for example, the case of the opening of the product by not authorized workshops,
- 5. All failures depend on the system (electricity, air, etc),
- 6. Failures depend on the intervention of unauthorized service,
- 7. Products with damaged or destroyed warranty label,
- 8. In case of damage to outer surface of the product,
- 9. The faults in the caused by falling, hit, etc,
- 10. Faults occurred on dusty, damp, extreme heat or cold environments,
- 11. Faults caused by natural disasters such as flood, fire, earthquake, lightning, etc.
- 12. Faults caused by electrostatic discharge (ESD) damage.





## **WARRANTY CERTIFICATE**

Manufacturer :	SMS SANAYİ MALZEMELERİ ÜRETİM VE SATIŞI A.Ş.
Adres onk tonk tonk: Adres onk tonk tonk: Ak tonk tonk tonk tonk Tonk tonk tonk tonk RK TONK	Head Office: Bostancı Yolu Kuru Sokak No:16 Yukarı Dudullu 34776 Ümraniye İstanbul TURKEY Tel: +90 216 364 34 05 Fax: +90 216 364 37 57 Plant: İMES OSB. 5. Cadde No: 6 Çerkeşli OSB Mah. Dilovası Kocaeli TURKEY Tel: +90 262 290 20 20 Fax: +90 262 290 20 21
Product Tonk Tonk	: GAS ALARM DEVICE
Trade Mark	TORK TORK TORK TORK TORK TORK TORK TORK
Model	K TORK TORK TORK TORK TORK TORK TORK TOR
Serial Number	TORK TORK TORK TORK TORK TORK TORK TORK
Delivery Place & Da	te:
Warranty Period	: 2 Years
Max. Repair Time	: 20 working days
Seller / Distributor	TORK TORK TORK TORK TORK TORK TORK TORK
Address	TORK TORK TORK TORK TORK TORK TORK TORK
TORK TORK TORK TORK	TORK TORK TORK TORK TORK TORK TORK TORK
TORK TORK TORK TORK	TORK TORK TORK TORK TORK TORK TORK TORK
RK TORK TORK TORK TORK	IK TORK TORK TORK TORK TORK TORK TORK TOR
RK TORK TORK TORK TOR	K TORK TORK TORK TORK TORK TORK TORK TOR

## **Manufacturer Representative**

Name / Surname: Emre UZUN Title: Quality Manager

Date: 23.12.2013 Signature:

## **Seller / Distrubutor Representative**

Name / Surname:

Title:

Date:

Signature:





## **GAS ALARM DEVICE USER MANUAL**

**GA 10 SERIES** 







CEZAYIR **ETIYOPYA** FAS FILDISI SAHILLERI **GÜNEY AFRIKA** KENYA MISIR **NIJERYA** 

AMERIKA BİRLEŞİK DEV. **ARJANTIN** DOMINIK CUMHURIYETI KANADA KOLOMBİYA PERU ŞİLİ

BİRLEŞİK ARAP EMİRLİKLERİ **ENDONEZYA GÜNEY KORE** HINDISTAN IRAK IRAN ISRAIL

MALEZYA PAKISTAN SUUDI ARABISTAN SURIYE ÖZBEKİSTAN TAYLAND **UMMAN** VIETNAM

**ALMANYA ARNAVUTLUK AVUSTURYA** BELÇİKA BULGARISTAN ÇEK CUMHURİYETİ DANIMARKA **ESTONYA** FRANSA HIRVATISTAN HOLLANDA INGILTERE IRLANDA

YENI ZELLANDA

imit Switch Kutusu

Pnömatik Aktüatörlü Vana

Seviye Ölçü Kontrol

SVEC

KOSOVA

LETONYA

LITVANYA

MALTA

NORVEÇ

RUSYA SIRBISTAN

ROMANYA

**UKRAYNA** 

YUNANISTAN























SMS SANAYİ MALZEMELERİ ÜRETİM VE SATIŞI A.Ş.