



Music Rider



Quick user guide

Table of Contents

<i>Table of Contents</i>	<i>1</i>
<i>1. Safety Precautions</i>	<i>2</i>
<i>2. Package Contents</i>	<i>2</i>
<i>3. Introduction</i>	<i>2</i>
<i>4. Technical Specifications</i>	<i>5</i>

1. Safety Precautions

 
1. To prevent any damage caused by battery seepage or erosion, please remove batteries when not using this device for a long time
2. Do not use this device in extremely thermal, cold, dusty or watery circumstances
3. To prevent surface abrade, batteries peeling off, or any other damage, do not collide this device with any hard objects.
6. To prevent damage caused by static electricity, do not use this device in extremely dry circumstances
7. To prevent system errors or malfunction, do not disconnect the device abruptly, when formatting this device, or uploading and downloading data/music.
8. The manufacturer is not responsible for any loss or damage caused by missing documents etc

2. Package Contents

- Bicycle clip
- Usb cable
- User's Manual / warranty card


3. Introduction

Function Keys:

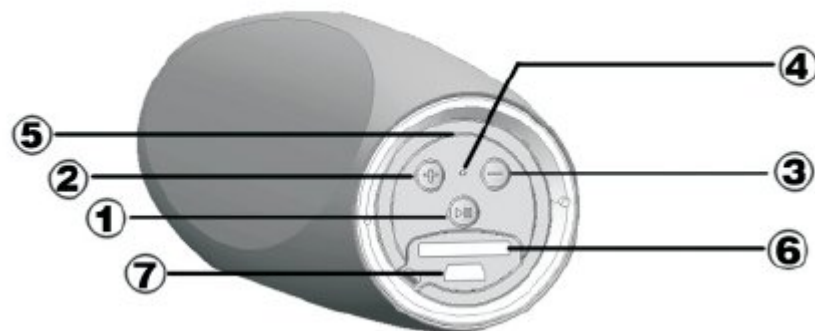


1. Long press for Power ON/OFF, short press for PLAY/ PAUSE functions.
2. Short press for going to Next song, long press for increasing Volume level.
3. Short press for going to Previous song, long press for decreasing the Volume level.
4. Reset
5. LED indicator
6. Micro SD slot to connect a Micro SD memory card
7. USB slot to connect the USB cable included.

 Using Line-In function

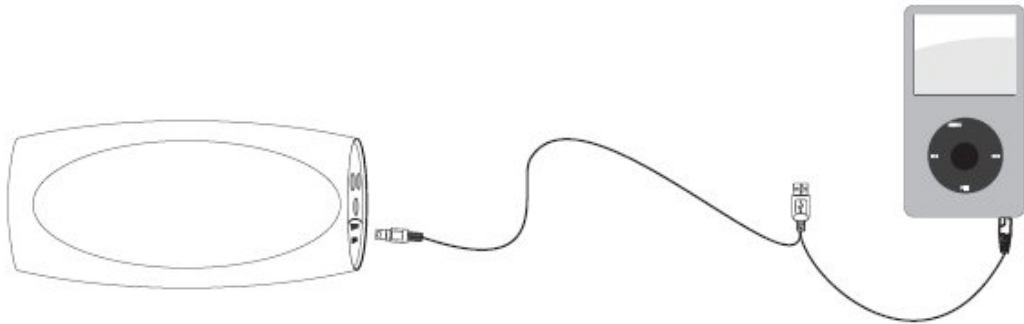

- Remove the Micro SD card from the device.
- Insert the mini USB connector of the cable in the mini-USB slot and the Jack connector of the cable to the audio output of your mp3/mp4 device.
- You can adjust the Volume level from the playable device.

 
Connect Micro SD card

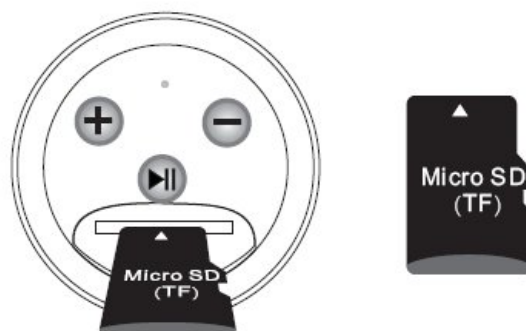

Attache on a bicycle with the bicycle clip



 •

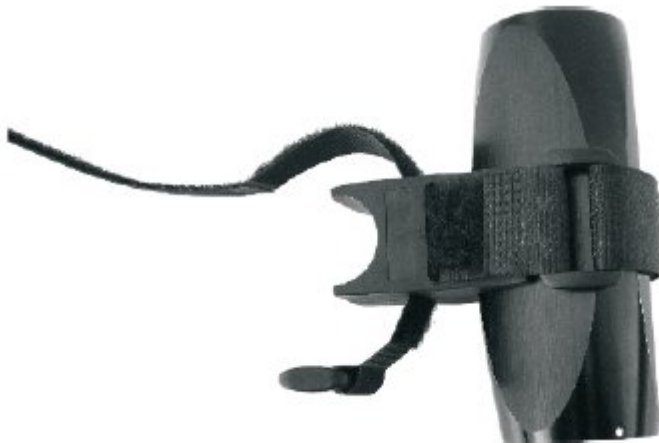

••



•••

4. Technical Specifications

<p>Audio</p> <ul style="list-style-type: none">• MP3 <p>Speaker</p> <ul style="list-style-type: none">• 2W, 4Ω• Sensitivity 60db <p>Memory</p> <ul style="list-style-type: none">• Supports micro SD card up to 8GB <p>PC connection</p> <ul style="list-style-type: none">• High Speed USB2.0 Interface	<p>Power Supply</p> <ul style="list-style-type: none">• 5V DC through mini- USB• Lithium Rechargeable Battery• Continuous play 6-12 hours• Charge 6 hours <p>OS compatibility</p> <ul style="list-style-type: none">• Windows XP/Vista/7 <p>Dimensions</p> <ul style="list-style-type: none">• Dimensions: 85 x 35 mm• Weight: 138gr
---	---

Technical Specifications are subject to change without prior notice.