

Different Modes Instruction

- Heading Following Mode: Pitch and roll are locked. Heading rotates smoothly follow the direction of the handheld.
- Locking Mode: Heading, pitch and roll are locked.
- Heading and Pitch Following Mode: Roll is locked. Heading and pitch rotate smoothly follow the direction of the handheld.

Buttons and Modes Instruction					
Working Mode	Mode Indicator Down/Up Buttor				
Heading Following Mode	Blink slowly	Pitch adjustment			
Locking Mode	Light up	Pitch adjustment			
Heading and Pitch Following Mode	Blink quickly	Roll adjustment			

Battery Indicator Instruction				
Battery Indicator Status	Description			
Blink 4 times	100% Power			
Blink 3 times	75% Power			
Blink 2 times	50% Power			
Blink 1 times	25% Power			

Note: If the battery indicator blinks continuingly, the battery is out of power. Please charge the battery as soon as possible.

Operation:

 Power Switch 	Install the battery and press the power button, the stabilizer will in standby mode after five seconds. Press the power button again to cut off power.
 On/Off 	: After connecting to power, long press "MODE" for 1 second to switch standby mode/ working mode.
Mode Switch	: In working mode, press "MODE" to switch Heading Following Mode / Locking Mode. Press "MODE" 2 times to turn on Heading and Pitch Following Mode; press "MODE" again to turn on previous mode.
 Angle Adjusting 	: User can adjust the pitch/roll angle through UP/ DOWN buttons.


Specification:

	minimum	standard	maximum	Note
Working Voltage	6.8V	8.4V	17V	
Working Current	50mA	120mA	2A	
Follow Accuracy(Motionless)	±0.01°		±0.04°	
Follow Accuracy(Motion)	±0.1°	±0.2°	±0.5°	
Tilt Working Angle	-180°	0°	+180°	Vertical handheld
Roll Working Angle	-45°	0°	+35°	
Heading Working Angle	-150°	0°	+150°	Vertical handheld
Heading Working Angle	-50°	0°	+50°	Leveled handheld
Tilt Speed	1°/S		50°/S	
Heading Speed	1°/S		80°/S	
Battery Operation Time(25°C)	3h	4h	5h	900mAh×2
Operation Temperature	-20°C	25°C	45°C	
Weight		285g		without battery and camera

Note:

Please don't operate the handheld gimbal over working range; the handheld gimbal would be in self-protection mode, and the operation would be effected.



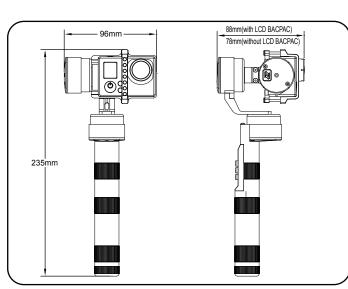

18350 battery charger

Input: DC 5V/800mA Output: DC 4.2V/400mA x2

Rechargeable Battery

Battery type: 18350 Lithium-ion battery Capacity: 900mAh Charge Time: 3 hours

For connecting power to 18350 battery charger, please prepare portable charger, or connect to a USB port of PC.

Charger indicator

Note:

(The signal will show green once finish charging)

power input port

Micro USB 5V

This device has been calibrated by the manufacturer. Warranty void if disassemble any components.

We reserve the right of final explanation and revision of the instruction manual. For the latest version, please refer to official website.

For user instruction, firmware upgrade, and more information:



