

HK654070XB

NL KOOKPLAAT
EN HOB
FR TABLE DE CUISSON
DE KOCHFELD
ES PLACA DE COCCIÓN

GEBRUIKSAANWIJZING
USER MANUAL
NOTICE D'UTILISATION
BENUTZERINFORMATION
MANUAL DE INSTRUCCIONES

2
17
31
46
61

CONTENTS

- 19 Safety information
- 20 Installation instructions
- 22 Product description
- 23 Operating instructions
- 27 Helpful hints and tips
- 28 Care and cleaning
- 29 What to do if...
- 30 Environment concerns

The following symbols are used in this user manual:



Important information concerning your personal safety and information on how to avoid damaging the appliance.



General information and tips



Environmental information

Subject to change without notice



SAFETY INFORMATION



For your safety and correct operation of the appliance, read this manual carefully before the installation and use. Always keep these instructions with the appliance also if you move or sell it. The users must fully know the operation and safety functions of the appliance.

Children and vulnerable people safety



WARNING!

Do not let persons, children included, with reduced physical sensory, reduced mental functions or lack of experience and knowledge to use the appliance. They must have supervision or instruction for the operation of the appliance by a person who is responsible for their safety.

- Keep all packaging away from children. There is the risk of suffocation or injury.
- Keep the children away from the appliance during and after the operation, until the appliance is cold.



WARNING!

Activate the child safety device to prevent small children and pets from an accidental activation of the appliance.

Safety during operation

- Remove all packaging, stickers and layers from the appliance before the first use.
- Set the cooking zones to "off" after each use.
- The Risk of burns! Do not put cutlery or saucepan lids on the surface that you cook, as they can become hot.



WARNING!

Fire risk! Too hot fats and oils can occur with ignition very quickly.

Correct operation

- Always monitor the appliance during operation.
- The appliance is only for domestic use!
- Do not use the appliance as a work or a storage surface.
- Do not put or keep very flammable liquids and materials, easy fusible objects (made of plastic or aluminium) on or near the appliance.
- Be careful when you connect the appliance to the near sockets. Do not let the electricity bonds touch the appliance or hot cookware. Do not let the electricity bonds to tangle.

How to prevent a damage to the appliance

- If the objects or cookware fall on the glass ceramic, the surface can be damaged.
- Cookware made of cast iron, cast aluminium or with damaged bottoms can cause scratch of the glass ceramic. Do not move them on the surface.
- Do not let cookware boil dry to prevent the damage to cookware and glass.
- Do not use the cooking zones with empty cookware or without cookware.

- Do not put the aluminium foil on the appliance.



**WARNING!**

If there is a crack on the surface, disconnect power supply to prevent the electrical shock.

INSTALLATION INSTRUCTIONS



Before the installation, note down the serial number (Ser. Nr.) from the rating plate. The rating plate of the appliance is on its lower casing.

Modell HK654070XB	Prod.Nr. 949 595 011 00
Typ 58 HAD 56 AO	220-240 V 50-60-Hz
Made in Germany	Ser.Nr. 17,1 kW
AEG	CE  

The Safety Instructions

**WARNING!**

You must read these!

- Make sure that the appliance is not damaged because of transportation. Do not connect a damaged appliance. If it is necessary, speak to the supplier.
- Only an authorized servicing technician can install, connect or repair this appliance. Use only original spare parts.
- Only use the built-in appliances after you assemble the appliance into correct built-in units and work surfaces that align to the standards.
- Do not change the specifications or change this product. Risk of injury and damage to the appliance.
- Fully obey the laws, ordinances, directives and standards in force in the country where you use the appliance (safety regulations, recycling regulations, electrical safety rules etc.)!
- Keep the minimum distances to other appliances and units!
- Install shock protection, for example install the drawers only with a protective floor directly below the appliance!
- Keep safe the cut surfaces of the worktop from moisture with a correct sealant!
- Seal the appliance to the work top with no space between with a correct sealant!
- Keep safe the bottom of the appliance from steam and moisture, e.g. from a dishwasher or oven!
- Do not install the appliance adjacent to doors and below windows! If not, when you open the doors or windows they can push off hot cookware from the appliance.

**WARNING!**

Risk of injury from electrical current. Carefully obey the instructions for electrical connections.






- The electrical mains terminal is live.
- Make electrical mains terminal free of voltage.

- Install correctly to give shock protection.
- Loose and incorrect plug and socket connections can make the terminal become too hot.
- A qualified electrician must install the connections in the clamps correctly.
- Use a strain relief clamp on cable.
- Use the correct mains cable of type H05BB-F Tmax 90°C (or higher) for a single phase or two phase connection.
- Replace the damaged mains cable with a special cable (type H05BB-F Tmax 90°C; or higher). Speak to your local Service Centre.


The appliance must have the electrical installation which lets you disconnect the appliance from the mains at all poles with a contact opening width of minimum 3 mm.

You must have correct devices to isolate: line protecting cut-outs, fuses (screw type fuses removed from the holder), earth leakage trips and contactors.

Assembly

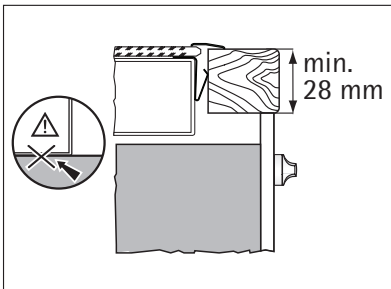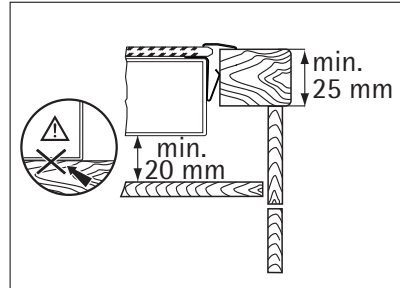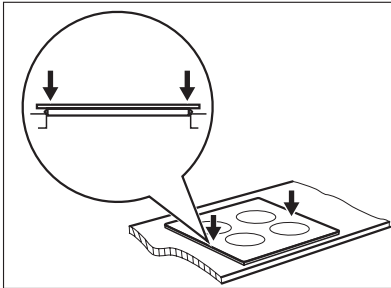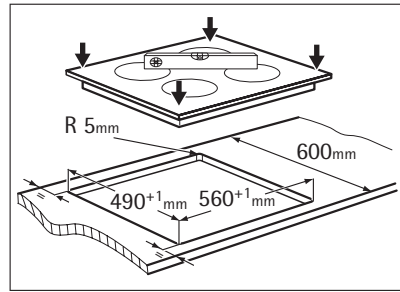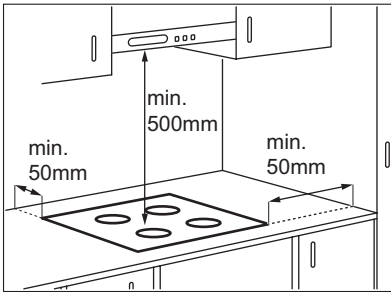


i If you use a protection box (the additional accessory²⁾), the protective floor directly below the appliance is not necessary. You can not use the protection box if you install the appliance above an oven.

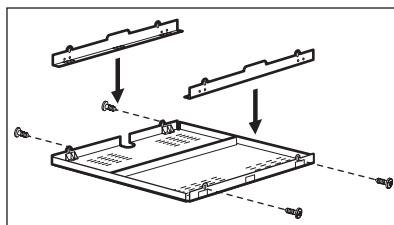


PRODUCT DESCRIPTION

General overview

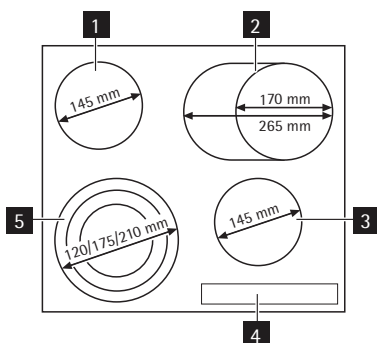

- 1** Single cooking zone 1200 W
- 2** Oval zone 1500/2400 W
- 3** Single cooking zone 1200 W
- 4** Control panel
- 5** Triple cooking zone 800/1600/2300 W



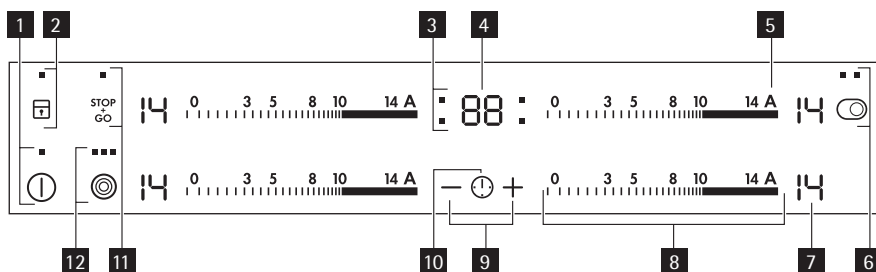

Control panel layout







 



Use the sensor fields to operate the appliance. The displays, indicators and sounds tell which functions operate.

	sensor field	function
1	①	It activates and deactivates the appliance.
2	🔒	It locks/unlocks the control panel.
3	Cooking zones' indicators of timer	It shows for which zone you set the time.
4	The timer display	It shows the time in minutes.

2) The protection box accessory may not be available in some countries. Please contact your local supplier.

	sensor field	function
5	A	It activates Automatic Heat Up function.
6		It activates and deactivates the outer ring.
7	A heat setting display	It shows the heat setting.
8	A control bar	To set the heat setting.
9	+ / -	It increases or decreases the time.
10		It sets the cooking zone.
11		It activates and deactivates the STOP+GO function.
12		It activates and deactivates the outer ring .




Heat setting displays

Display	Description
	The cooking zone is deactivated.
	The cooking zone operates.
	The ^{STOP} / _{GO} function operates.
	The Automatic Heat Up function operates
	There is a malfunction.
	OptiHeat Control (3 step Residual heat indicator) : continue cook / stay warm / residual heat.
	Lock/The Child Safety function operates.
	The Automatic Switch Of function operates.

OptiHeat Control (3 step Residual heat indicator)



WARNING!

   The risk of burns from residual heat!

OptiHeat Control shows the level of the residual heat.


OPERATING INSTRUCTIONS


Activation and deactivation

Touch  for 1 second to activate or deactivate the appliance.









 
Automatic Switch Off

The function deactivates the appliance automatically if:

- All cooking zones are deactivated (.
- You do not set the heat setting after you activate the appliance.


- You spill something or put something on the control panel for more than 10 seconds, (a pan, a cloth, etc.). The sound operates some time and the appliance deactivates. Remove the object or clean the control panel.
- You do not deactivate a cooking zone or change the heat setting. After some time,  comes on and the appliance deactivates. See the table.

The times of Automatic Switch Off

The heat setting	 ,  - 	 - 	 - 	 - 
The cooking zone deactivates after	6 hours	5 hours	4 hours	1.5 hours

 

The heat setting

Touch the control bar at the heat setting. Change to the left or the right, if it is necessary. Do not release before you have a correct heat setting. The display shows the heat setting.

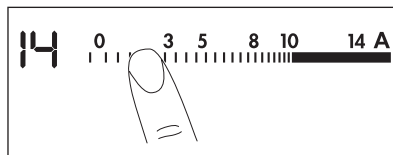


Activation and deactivation of the outer rings

You can adjust the surface you cook to the dimension of the cookware.

To activate the outer ring touch the sensor field  / . The indicator comes on. For more outer rings touch the same sensor field again. The subsequent indicator comes on. Do the procedure again to deactivate the outer ring. The indicator goes out.

Automatic Heat Up

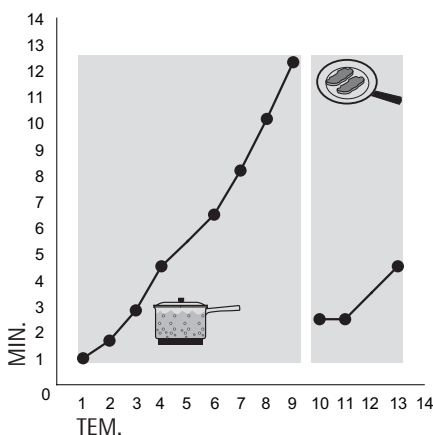

You can get a necessary heat setting in a shorter time if you activate the Automatic Heat Up function. This function sets the highest heat setting for some time (see the illustration), and then decreases to the necessary heat setting.

To start the Automatic Heat Up function for a cooking zone:

- Touch **A** ( comes on in the display).

2. Immediately touch the necessary heat setting. After 3 seconds (H) comes on in the display.
To stop the function change the heat setting.

Timer

Count Down Timer

Use the Count Down Timer to set how long the cooking zone operates for only this one time.

Set the Count Down Timer after the selection of the cooking zone.

You can set the heat setting before or after you set the timer.

- To set the cooking zone: touch (ⓘ) again and again until the indicator of a necessary cooking zone comes on.
- To activate the Count Down Timer: touch + of the timer to set the time (00 - 99 minutes). When the indicator of the cooking zone start to flash slow, the time counts down.
- To see the remaining time: set the cooking zone with (ⓘ). The indicator of the cooking zone starts to flash quickly. The display shows the remaining time.
- To change the Count Down Timer: set the cooking zone with (ⓘ). Touch + or - .
- To deactivate the timer: set the cooking zone with (ⓘ). Touch - . The remaining time counts back to 00 . The indicator of the cooking zone goes out. To deactivate you can also touch + and - at the same time.

When the countdown comes to an end, the sound operates and 00 flashes. The cooking zone deactivates.

- To stop the sound: touch (ⓘ)

CountUp Timer (The count up timer)

Use the CountUp Timer to monitor how long the cooking zone operates.


- To set the cooking zone (if more than 1 cooking zone operate) : touch (ⓘ) again and again until the indicator of a necessary cooking zone comes on.
- To activate the CountUp Timer: touch - of the timer UP comes on. When the indicator of the cooking zone starts to flash slow, the time counts up. The display switches between UP and counted time (minutes).
- To see how long the cooking zone operates: set the cooking zone with (ⓘ). The indicator of the cooking zone starts to flash quickly. The display shows the time that the cooking zone operates.
- To deactivate the CountUp Timer: set the cooking zone with (ⓘ) and touch + or - to deactivate the timer. The indicator of the cooking zone goes out.


Minute Minder

 
You can use the timer as a Minute Minder while the cooking zones do not operate. Touch (ⓘ). Touch + or - of the timer to set the time. When the time comes to an end, the sound operates and 00 flashes.

 


- To stop the sound: touch (ⓘ)

STOP+GO


The  function sets all cooking zones that operate to the lowest heat setting ().

When  operates, you cannot change the heat setting.

 

The  function does not stop the timer function.

- To activate this function touch . The symbol  comes on.
- To deactivate this function touch . The heat setting that you set before comes on.

Lock

When the cooking zones operate, you can lock the control panel, but not . It prevents an accidental change of the heat setting.

First set the heat setting.

To start this function touch . The symbol  comes on for 4 seconds.

The Timer stays on.

 
 
 

To stop this function touch . The heat setting that you set before comes on.

When you stop the appliance, you also stop this function.


 

 
The child safety device

This function prevents an accidental operation of the appliance.

 
 


To activate the child safety device

- Activate the appliance with . Do not set the heat settings.
- Touch  for 4 seconds. The symbol  comes on.
- Deactivate the appliance with .

To deactivate the child safety device

- Activate the appliance with . Do not set the heat settings. Touch  for 4 seconds. The symbol  comes on.
- Deactivate the appliance with .


 

 
 
To override the child safety device for only one cooking time

- Activate the appliance with . The symbol  comes on.
- Touch  for 4 seconds. Set the heat setting in 10 seconds. You can operate the appliance.
- When you deactivate the appliance with , the child safety device operates again.


OffSound Control (Deactivation and activation of the sounds)

Deactivation of the sounds

Deactivate the appliance.






Touch  for 3 seconds. The displays come on and go out. Touch  for 3 seconds.  comes on, the sound is on. Touch ,  comes on, the sound is off.

When this function operates, you can hear the sounds only when:

- you touch 
- the Minute Minder comes down
- the Count Down Timer comes down
- you put something on the control panel.

Activation of the sounds

Deactivate the appliance.

Touch  for 3 seconds. The displays come on and go out. Touch  for 3 seconds.  comes on, because the sound is off. Touch  ,  comes on. The sound is on.

HELPFUL HINTS AND TIPS

Cookware



- The bottom of the cookware must be as thick and flat as possible.
- Cookware made of enamelled steel and with aluminium or copper bottoms can cause the color change on the glass-ceramic surface.

Energy saving



- If it is possible, always put the lids on the cookware.
- Put cookware on a cooking zone before you start it.
- Stop the cooking zones before the end of the cooking time to use residual heat.
- The bottom of pans and cooking zones must have the same dimension.


Öko Timer (Eco Timer)



To save the energy, the heater of the cooking zone deactivates before the count down timer signal. The difference in the operation time is depends of the heat setting level and the time you cook.

The examples of cooking applications

The data in the table is for guidance only.

Heat setting	Use to:	Time	Hints
 1	Keep cooked foods warm	as necessary	Put a lid on a cookware.
1-3	Hollandaise sauce, melt: butter, chocolate, gelatine	5-25 min	Mix from time to time.
1-3	Solidify: fluffy omelettes, baked eggs	10-40 min	Cook with a lid on.
3-5	Simmer rice and milkbased dishes, heating up ready-cooked meals	25-50 min	Add the minimum two times as much liquid as rice, mix milk dishes at some point of the procedure through.
5-7	Steam vegetables, fish, meat	20-45 min	Add some tablespoons of liquid.
7-9	Steam potatoes	20-60 min	Use max. ¼ l water for 750 g of potatoes.

Heat setting	Use to:	Time	Hints
7-9	Cook larger quantities of food, stews and soups	60-150 min	Up to 3 l liquid plus ingredients.
9-12	Gentle fry: escalope, veal cordon bleu, cutlets, rissoles, sausages, liver, roux, eggs, pancakes, doughnuts	as necessary	Turn halfway through.
12-13	Heavy fry, hash browns, loin steaks, steaks	5-15 min	Turn halfway through.
14	Boil large quantities of water, cook pasta, sear meat (goulash, pot roast), deep fry chips.		

Information on acrylamides

Important! According to the newest scientific knowledge, if you brown food (specially the one which contains starch), acrylamides can pose a health risk. Thus, we recommend that you cook at the lowest temperatures and do not brown food too much.

CARE AND CLEANING

Clean the appliance after each use.
Always use cookware with clean bottom.



WARNING!

The sharp objects and abrasive cleaning agents can cause damage to the appliance. For your safety, do not clean the appliance with steam cleaners or high-pressure cleaners.



 



Scratches or dark stains on the glass-ceramic cause no effect on how the appliance operates.

To remove the dirt:


- **Remove immediately:** melted plastic, plastic foil, and food with sugar. If not, the dirt can cause damage to the appliance. Use a special scraper for the glass. Put the scraper on the glass surface at an acute angle and move the blade on the surface.
 - **Remove after the appliance is sufficiently cool:** limescale rings, water rings, fat stains, shiny metallic discolorations. Use a special cleaning agent for glass ceramic or stainless steel.
- Clean the appliance with a moist cloth and some detergent.
- At the end **rub the appliance dry with a clean cloth.**

WHAT TO DO IF...

Problem	Possible cause and remedy
You cannot activate the appliance or operate it.	<ul style="list-style-type: none"> • Activate the appliance again and set the heat setting in 10 seconds. • You touched 2 or more sensor fields at the same time. Only touch one sensor field. • The Child Safety Device or the Lock or Stop+Go operates. See the chapter Operating instructions. • There is water or fat stains on the control panel. Clean the control panel.
A Sound operates and the appliance deactivates. A sound operates when the appliance is deactivated.	You put something on one or more sensor fields. Remove the object from the sensor fields.
The appliance deactivates.	You put something on the  . Remove the object from the sensor field.
The residual heat indicator does not come on.	The cooking zone is not hot because it operated only for a short time. If the cooking zone should be hot, speak to the service centre.
The Automatic Heat Up function does not operate.	<ul style="list-style-type: none"> • There is still residual heat on the cooking zone. Let the cooking zone become sufficiently cool. • The highest heat setting is set. The highest heat setting has the same power as the Automatic Heat Up function.
You cannot activate the outer ring.	Activate the inner ring first.
The sensor fields become hot.	The cookware is too large or you put it too near to the controls. Put large cookware on the rear cooking zones if it is necessary.
There is no signal when you touch the panel sensor fields.	The signals are deactivated. Activate the signals (see OffSound Control).
 comes on	The Automatic Switch Off operates. Deactivate the appliance and activate it again.
 and number comes on.	There is an error in the appliance. Disconnect the appliance from the electrical supply for some time. Disconnect the fuse from the electrical system of the house. Connect again. If  comes on again, speak to the service centre.

If you tried the above solutions and cannot repair the problem, speak to your dealer or the customer service. Give the data from the rating plate, three digit letter code for the glass ceramic (it is in the corner of the glass surface) and an error message that comes on. Make sure, you operated the appliance correctly. If not the servicing by a customer service technician or dealer will not be free of charge, also during the warranty period. The instructions about the customer service and conditions of guarantee are in the guarantee booklet.

ENVIRONMENT CONCERNS

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

Packaging material



The packaging materials are friendly to the environment and can be recycled. The plastic components are identified by marking: >PE<,>PS<, etc. Discard the packaging materials as household waste at the waste disposal facilities in your municipality.

Guarantee/ Customer Service Centres

EURO-LINE APPLIANCES

LENGTH OF WARRANTY	EURO-LINE WILL PAY FOR:
TWO YEAR FULL WARRANTY from original date of purchase, including parts and labour, to the first purchaser of this appliance	Replacement parts and/or labour to repair defects in materials or workmanship. Service must be provided by an authorized Euro-Line company (unless advised otherwise).

THIS GUARANTEE DOES NOT COVER COMMERCIAL USE.

The name Euro-Line Appliances, for service matters, incorporates work performed by authorized service agents or service companies.

EXCEPTIONS:

EURO-LINE APPLIANCES WILL NOT PAY FOR THE FOLLOWING SERVICE CALLS:

1. To install or correct the installation of an appliance
2. To instruct the use of an appliance.
3. To replace house fuses, re-set circuit breakers or correct house wiring.
4. To correct house plumbing.
5. To clean drains, filters or garbage disposers.
6. To repair an appliance if it fails due to misuse or abuse.

EURO-LINE APPLIANCES WILL NOT PAY WHEN THE FOLLOWING OCCURS:

1. Damage resulting from fires, acts of God, alteration, improper installation, or installation not in accordance with local building codes.
2. Pickup or delivery of major appliances requiring service. The appliances are designed to be repaired in the home. However, Euro-Line will not be responsible for travelling and labour costs if the customer lives in excess of 50 km/30 miles, or if the travel time is in excess of 30 minutes from the nearest service center. Any excess to this will not be covered by the warranty.

In no event, will Euro-Line be responsible for incidental or consequential damages. For warranty service and parts, contact **EURO-PARTS**. Service will be provided during normal business hours. Should you have a service problem that is not resolved locally, contact:

For Service and Parts Contact:

EURO-PARTS, USA	EURO-PARTS, CANADA	EURO-LINE APPLIANCES
Tel: 1-800-561-4614	Tel: 1-800-678-8352	1-800-421-6332
Fax: 1-519-528-5001	Fax: 1-519-528 5001	Tel. Direct: 1-905-829-3980
		Fax: 1-905-829-3985

User Instructions & Installation Manual

Service & Repair

To save you time and money please have the following information ready in case you have to call for service:

- Name of the dealer from whom you purchased the appliance.
- Model number (shown on the rating plate)
- Serial number (shown on the rating plate)
- Date of purchase.

You should also retain the original purchase receipt to support any claim made under the warranty. (We suggest you staple the receipt to this page).

If service is required, contact the Service Center:

EURO-PARTS, CANADA	EURO-PARTS, USA
Tel: 1 800 678 8352	Tel: 1-800-561-4614
Fax: 1-519-528-500	Fax: 1-519-528-5001

DISTRIBUTED BY: EURO-LINE APPLIANCES 2278 SPEERS ROAD OAKVILLE, ONTARIO CANADA L6L 2X8 1-800-421-6332 Tel: 905-829-3980 Fax: 905-829-3985 www.euro-line-appliances.com