



TPDIN-Monitor-WEB *Web Based Monitor and Control*

- Remote Power Stations
- Backup Power Systems
- Solar Systems
- Wind Powered Systems
- Industrial Sense & Control
- Process Automation



Congratulations! on your purchase of the TPDIN-Monitor-WEB PowerSens™ System Monitor. Please take a moment to review this Qwik Install Guide before installation.



Recommended Tools and Supplies: Small Flat Blade Screw-driver, 35mm x 7.5mm DIN Rail

Qwik Install

STEP 0: The TPDIN-Monitor-WEB can be used to monitor Qty 4 1V-80V Voltages, 4 Currents (Qty 2 +/- 10A and Qty 2 +20A) and two temperatures (1 internal and 1 external). There are 4 10A relays that can be used to control power to 4 devices. Two of those relays can be automatically set based on a temperature or voltage value. Two can be operated automatically based on a ping watchdog or time control.

STEP 1: Install the TPDIN-Monitor-WEB to a suitable DIN rail mount.

STEP 2: Connect the voltages to be monitored to the V1—V4 voltage ports. The green connector needs to be removed to be able to access the wire terminal screws. The green connectors are numbered 1-7 and should be re-installed back in their proper position. Voltages between 1 and 80volts DC can be monitored.

STEP 3: Connect the currents to be monitored to the I1-I4 current ports. I1 and I2 can read currents from 0.1 to 20A. I3 and I4 can read positive or negative currents to +/-10A. These can be used to measure current flowing into and out of a battery to see if the battery is charging or discharging. The green connectors may need to be removed to be able to access the wire terminal screws. The green connectors are numbered 1-7 and should be re-installed back in their proper position.

STEP 4: Connect any power to devices you want to be under relay control to the CHI—CH4 relays. The relays are normally closed relays so activating the relay will open the relay.

STEP 5: Connect the External Temperature sensor to the included green wire terminal connector. Connect the wires to IN– and IN+ terminals. Plug the wire terminal connector to the “Temp.” connector location. Locate the external temperature sensor where you want to measure external temperatures. You can extend the wire lengths if desired by soldering additional wires to the existing wires. You can measure temperatures from –40C to +125C

STEP 6: The TPDIN-Monitor-WEB can be powered with 10-58VDC thru wire terminal connector #7 or via 802.3af or Passive 48V POE thru the RJ45 POE/DATA port.

STEP 7: Download the Discovery Tool from http://tyconpower.com/Support/support_TPDIN-Monitor-WEB.htm . The TPDIN-Monitor-WEB ships with IP addressing by DHCP enabled. The discovery tool will find the IP address of the device so you can access the web control panel. If not connected to a DHCP server the default IP address is 192.168.1.2

STEP 8: Open the Web control panel of the unit by using the discovery tool or typing the units known IP address into a browser. The unit will serve up the Monitor web page. The monitor page is where all the voltage, current, temperature and relay status can be seen. Relays can also be controlled manually from this page. There is a cycle button by the relays if you want to automatically cycle a relay from on to off and back. The cycle delay is specified on the SYSTEM page.

STEP 9: Open the Network Page. Here you can set a static IP Address. You can also set access security by entering a user name and password (10 characters max). You can also set a unique Host Name to identify the Monitor.

Monitor Graphs Log Network System Control SNMP Support

Board Configuration

This page allows the configuration of the board's network settings.

CAUTION: Incorrect settings may cause the board to lose network connectivity. Recovery options will be provided on the next page.

Enter the new settings for the board below:

Username:	<input type="text"/>	
Password:	<input type="text"/>	Retype: <input type="text"/>
MAC Address:	<input type="text" value="00:04:A3:8D:6C:5B"/>	
Host Name:	<input type="text" value="TYCONVOLTMEETER"/>	
<input checked="" type="checkbox"/> Enable DHCP		
IP Address:	<input type="text" value="192.168.1.51"/>	
Gateway:	<input type="text" value="192.168.1.254"/>	
Subnet Mask:	<input type="text" value="255.255.255.0"/>	
Primary DNS:	<input type="text" value="192.168.1.254"/>	
Second DNS:	<input type="text" value="0.0.0.0"/>	
<input type="button" value="Save Config"/>		
<input type="button" value="Reboot"/>		

STEP 10: Open the System Page. You should add meaningful labels to all the Voltages, Currents, Relays and Temperatures that you are using. You can also change various settings on this page.

Relays: Relays are normally closed to save power when “on”. If you want them to be initially open at power-up, check the box that says “Initial Off”.

Cycle Delay: This controls how long the relay stays in the opposite state when cycle is clicked on the Monitor Screen.

Voltage, Current and Temp Offsets: You can enter + or –offset values if you want to calibrate the TPDIN-Monitor-WEB to match another piece of measurement equipment or compensate for cable losses.

Log Interval: This sets the number of seconds between log readings. The log can store 1300 data sets. If this is exceeded the oldest records will be discarded as new records are entered. **Note:** If set to 0 the logging of data is disabled and the graphs and some other functions won’t work.

Time: There is no real time clock so if the device loses power the clock will reset. Enable NTP to get the time automatically from the internet. Set GMT for your time zone. Or you can sync the clock manually to your PC Time by disabling NTP.

System Configuration

Relay 1:	<input type="text" value="Relay 1"/>	<input type="checkbox"/> Initial Off
Relay 2:	<input type="text" value="Relay 2"/>	<input type="checkbox"/> Initial Off
Relay 3:	<input type="text" value="Relay 3"/>	<input type="checkbox"/> Initial Off
Relay 4:	<input type="text" value="Relay 4"/>	<input type="checkbox"/> Initial Off
Cycle delay:	<input type="text" value="5"/> secs	
Voltage 1:	<input type="text" value="Channel 1"/>	Volt offset <input type="text" value="0.0"/> Amp offset <input type="text" value="0.0"/>
Voltage 2:	<input type="text" value="Channel 2"/>	Volt offset <input type="text" value="0.0"/> Amp offset <input type="text" value="0.0"/>
Voltage 3:	<input type="text" value="Channel 3"/>	Volt offset <input type="text" value="0.0"/> Amp offset <input type="text" value="0.0"/>
Voltage 4:	<input type="text" value="Channel 4"/>	Volt offset <input type="text" value="0.0"/> Amp offset <input type="text" value="0.0"/>
Temperature 1:	<input type="text" value="IN"/>	Temp offset <input type="text" value="0.0"/>
Temperature 2:	<input type="text" value="EXT"/>	Temp offset <input type="text" value="0.0"/>
Log Interval:	<input type="text" value="0"/> secs (0 to disable)	
<input checked="" type="checkbox"/> Enable NTP		
Time:	<input type="text" value="04/04/2013 20:44:18"/>	(mm/dd/yy HH:MM:SS)
PC Time:	<input type="text" value="04/04/2013 14:44:18"/>	<input type="button" value="Sync"/>
NTP Server:	<input type="text" value="pool.ntp.org"/>	GMT: <input type="text" value="0"/>
<input type="button" value="Save Config"/>		

Control Configuration

Relay 1:	Ping Control	<input type="text" value="0.0.0.0"/>	<input type="text" value="0"/>	Every (secs)	<input type="text" value="0"/>	Fails	<input type="text" value="0"/>	Wait(secs) (Every:0 to disable)
	Time Control	<input type="text" value="Disabled"/>	<input type="text" value="00:00:00"/>	On	<input type="text" value="00:00:00"/>	Off		
Relay 2:	Ping Control	<input type="text" value="0.0.0.0"/>	<input type="text" value="0"/>	Every (secs)	<input type="text" value="0"/>	Fails	<input type="text" value="0"/>	Wait(secs) (Every:0 to disable)
	Time Control	<input type="text" value="Disabled"/>	<input type="text" value="00:00:00"/>	On	<input type="text" value="00:00:00"/>	Off		
Relay 3:	Temp1 Control	<input type="text" value="0.0"/>	<input type="text" value="On"/>		<input type="text" value="0.0"/>	<input type="text" value="Off"/>	<input type="text" value="Celsius"/>	
	Volt3 Control	<input type="text" value="0.0"/>	<input type="text" value="On"/>		<input type="text" value="0.0"/>	<input type="text" value="Off"/>	<input type="text" value="Volts"/>	
Relay 4:	Temp2 Control	<input type="text" value="0.0"/>	<input type="text" value="On"/>		<input type="text" value="0.0"/>	<input type="text" value="Off"/>	<input type="text" value="Celsius"/>	
	Volt4 Control	<input type="text" value="0.0"/>	<input type="text" value="On"/>		<input type="text" value="0.0"/>	<input type="text" value="Off"/>	<input type="text" value="Volts"/>	

MAIL Server:	<input type="text"/>	Port:	<input type="text" value="25"/>
Username:	<input type="text"/>	Password:	<input type="text"/>
<input type="checkbox"/>	Use Username as From field	Analog values mail delay:	<input type="text" value="60"/> minutes
<input type="text" value="Disabled"/>	<input type="text" value="0"/> Lower/minutes	<input type="text" value="0"/> Upper	MAIL To: <input type="text"/> <input type="button" value="Test"/> (On saved values)
<input type="text" value="Disabled"/>	<input type="text" value="0"/> Lower/minutes	<input type="text" value="0"/> Upper	
<input type="text" value="Disabled"/>	<input type="text" value="0"/> Lower/minutes	<input type="text" value="0"/> Upper	MAIL To: <input type="text"/> <input type="button" value="Test"/> (On saved values)
<input type="text" value="Disabled"/>	<input type="text" value="0"/> Lower/minutes	<input type="text" value="0"/> Upper	
<input type="button" value="Save Config"/>			

STEP 11: Open the Control Page. This is where you can set the relay Ping Control or Time and Temperature or voltage controls. You can set up the EMAIL server and set various email triggers.

Relays 1 and 2:

Time Control: Set the On time and Off time in 24hr format. Note: Time control overrides Ping Control and Manual control.

Ping Control: Set the IP Address to ping. Set the ping frequency (Every). Setting the frequency to zero disables the ping. Set the number of consecutive Fails before the relay will cycle. Set the Wait so that the system will wait before pinging again. This is useful to allow the unit that you are pinging to fully reboot after a power cycle. *Example: if you set the unit to ping every 60 seconds and you have fail set to 2, it will take approx. 2 minutes before it would see two consecutive failures and then cycle the relay.*

Relays 3 and 4:

Temperature Control: Relay 3 can be controlled by the Internal Temperature and Relay 4 can be controlled by the External temperature probe. Make sure ON temperature is lower than OFF temperature setting.

Typical Application:

Fan Control: Set ON to 50; Set OFF to 100

Heater Control: Set ON to -40; Set OFF to 20

Voltage Control: Set the relay turn on and turn off voltages. Relay

will change state when voltage goes outside the range. Temperature set takes priority.

Email Alerts:

Set the Email server: ie; smtp.1and1.com Note: GMAIL accounts won't work because they require SSL security when sending emails.

Set the email account user name and password. Leave user name blank to force no authentication. Password field is 10 characters max.

Check the **"Use Username as From Field"** checkbox (recommended) to have the emails sent from the username which is usually an email address. If not checked, the emails will be sent from the email address entered in the first MAIL To: field.

Enter the destination email addresses in the Mail To: fields. They can be the same or different depending on your needs.

Select the parameter trigger from the dropdown box on the left.

Periodical: This will send an email of the present readings periodically based on the number of minutes entered into the Lower/minutes box. Caution: if you leave set at 0 it will send an email every two seconds

Relay 1-4: These will send an email any time the state of the relay changes due to some automatic relay control like Ping, Time or Temperature. It won't send an email when the relay is manually operated. Relay 1-4 doesn't require any lower or upper settings. Leave at 0.

Volt Amp and Temp: Just set Lower and Upper values and the system will send an email anytime the reading is outside the set range. The frequency of emails is set by the **Analog Values Mail Delay** time. If the delay time is set too low you will receive a flood of emails whenever one of your set parameters fall outside the set range.

TECH CORNER

Additional Information you may find useful

1. **FUSE:** The TPDIN-Monitor-WEB has an internal 2A fuse. If the TPDIN-Monitor-WEB doesn't power up, check the fuse.
2. **LIMITS:** Don't exceed 80V on the voltage inputs or 20A on the current inputs or 10A on the relays or the unit could be damaged. This kind of damage isn't covered under warranty.
3. **MOISTURE:** The TPDIN-Monitor-WEB is designed to be used indoors or outdoors in a weatherproof enclosure. Avoid getting the TPDIN-Monitor-WEB wet. This kind of damage isn't covered under warranty.
4. **BATTERY STATUS:** If measuring voltage of battery systems

typical state of charge readings are as follows. These readings are without any load on the battery. For max battery life don't discharge under 50%:

State Of Charge	Sealed or Flooded Lead Acid	GEL Battery	AGM Battery
100%	12.7+Volts	12.9+Volts	12.8+Volts
75%	12.4 Volts	12.7 Volts	12.6 Volts
50%	12.2 Volts	12.4 Volts	12.3 Volts
25%	12.0 Volts	12.0 Volts	12.0 Volts
10%	11.8 Volts	11.8 Volts	11.8 Volts

5. Operating Power: The TPDIN-Monitor-WEB has extremely low operating power, typically less than 3W. The relays are normally closed type so in typical operation they don't take any power until they are energized. If the relays are turned on to hold them open, the power usage will increase.

Specifications

Voltage Meas (DC)	V1, V2, V3, V4 = 1-80VDC
Voltage Meas Accuracy	+/- 0.1V
Current Meas (DC)	I1, I2 = 0.1A to 20A I3, I4 = +/-10A
Current Meas Accuracy	+/- 0.1A
Temperature Meas	T1,T2 = -40C to 125C
Temp Meas Type	T1 = Embedded, T2 = External Sensor (included)
Temp Meas Accuracy	+/- 1 degC
Relays (Normally Closed Type)	R1, R2, R3, R4 = 10A DC
Relay Control	R1, R2 = Manual or Ping or Time Control R3, R4 = Manual or Temperature Control
Power Requirements	10-58VDC Wire Terminal or 802.3af Class 0 POE, 3W Typ
Accessibility	Via Web Browser and SNMP
Data-Logger	FIFO, Max 1300 data sets, Program log interval
Connections	Removable Wire Terminal
Wire Size	12AWG Max
Mounting	DIN Rail
Operating Temperature	-40C to +75C (-40F to 167F)
Humidity (RH)	0% - 90%
Dimensions (LxWxH)	125 x 102 x 46mm (4.9" x 4" x 1.8")
Weight	410g (14.5 oz)

Limited Warranty

The TPDIN-Monitor-WEB products are supplied with a limited 24 month warranty which covers material and workmanship defects. This warranty does not cover the following:

- Parts requiring replacement due to improper installation, misuse, poor site conditions, faulty power, etc.
- Lightning or weather damage.
- Physical damage to the external & internal parts.
- Products that have been altered, or defaced.
- Products that have been subjected to voltages or currents greater than the published ratings.
- Water damage for units that were not mounted according to user manual.
- Usage other than in accordance with instructions and the normal intended use.

Typical Application

