



INDOOR UNIT TOUCH SCREEN DIAMOND DGD07DAD USER MANUAL



Please read carefully security instructions before starting to use the device.

SECURITY INSTRUCTIONS

- * Do not open the device.
- * Keep the device free from impacts.
- * Avoid any contact with water.
- * Do not use the device in dense moisture, dusty and dirty places.
- * Use dry clean fabric for cleaning, do never clean with alcohol, thinner or corrosive liquids.
- * Do not dismount the device unless it is necessary



1. TWO COLOR WARNING LEDS (Green and Red)

When you make a call or when the screen is ON, the green LED is ON. If you do not answer incoming call, the red LED is ON.

2. TURN THE SCREEN ON

You can turn the screen ON with the ON/OFF button at top of the product.

3. ANSWER INCOMING CALL



The screen is automatically ON at an incoming call. You can see the origin of the call at top left corner of the screen. If it comes from the Security,  appears on the screen, you can answer by touching .

If it comes from the Outdoor,  appears on the screen, you can answer by touching .

In case of an incoming call, no button is active before you answer the call, except light adjustment and door open buttons.

4. TERMINATE A CALL

As soon as a call is confirmed, Call Terminate  appears at top left corner of the screen.


You can terminate the call by touching  or .

5. SELECT A CAMERA


The screen is turned ON with ON/OFF button, then by touching Camera icon on the screen you can switch to other cameras connected to the system.

NOTE : In order to use Camera Selection function, an extra camera or a Camera Selection Module should be connected to the outdoor panel.


6. OPEN DOORLOCK

The screen is automatically ON at an incoming call from Outdoor Panel. You can open the doorlock while talking to outdoor panel or by touching  icon.


7. CONNECT TO OUTDOOR PANEL

The screen is turned ON with ON/OFF button. You can talk to Outdoor Panel by touching Talk to Panel  icon.

8. CALL SECURITY

The screen is turned ON with ON/OFF button. You can talk to Security Guard by touching Speed Dial – A  icon.

9. CALL DOORKEEPER

The screen is turned ON with ON/OFF button. You can talk to Doorkeeper by touching Speed Dial – B  icon.

10. SCREEN LIGHT, CONTRAST AND COLOR ADJUSTMENTS

The screen is turned ON with ON/OFF button. By




touching Settings  icon, you can have the menu (Fig.1) where you can adjust light, contrast and color of the screen then make adjustments with arrow icons at right and left sides. You can realize the same operation after confirming a call from the



Figure 1

Outdoor Panel by touching Settings  icon.

After having completed your adjustments, you can manually save changes by touching

Settings  icon or they are automatically saved at the end of 30 sec. if you do not touch any icon.

11. SELECT DOORBELL

MELODY and VOLUME

The screen is turned ON with ON/OFF button. By touching Doorbell Settings


 icon, you can have the menu (Fig. 2) where you can adjust doorbell melody and volume then make adjustments with arrow icons at right and left sides.



Figure 2

Outdoor bell : Adjusts the melody of a call coming from Outdoor Panel at the entrance of the building.


Apartment doorbell : Adjusts the melody of a call coming from Apartment Doorbell at the entrance of your apartment.

Security doorbell : Adjusts the melody of a call coming from Security.

Volume : Adjusts the common volume of above 3 different doorbells.

NOTE : Every time the melody is changed, outdoor bell rings as an example.

After you finish your adjustments, you can manually save changes by touching Doorbell

Settings  icon or they are automatically saved at the end of 30 sec. if you do not touch any icon.

12. BUSY STATE

The screen is turned ON with ON/OFF button. If BUSY LINE appears on the screen, this means that the line is being used by another apartment. Until the busy state comes to an end, no other apartment can be called, nor any other icon becomes active.

13. CALL TARGET

The screen is turned ON with ON/OFF button. By touching Functions  icon, you can perform an action like turning the stairlights ON, call the Elevator, etc...

NOTE : In order to perform such actions, necessary connections have to be made by Technical Service Staff.

14. INSTALLATION

1. Take out the rail by sliding (Fig-1)
2. Mark, drill holes and place dowels then fix with screws (Fig-2)
3. Place the monitor inside the rail (Fig-3).

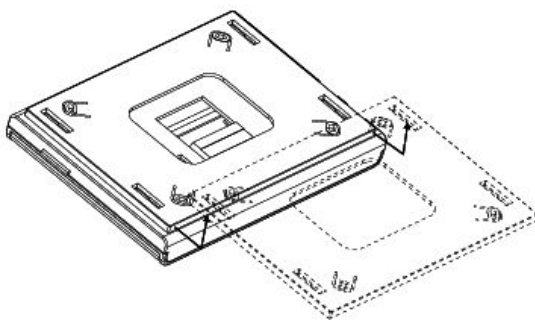


Figure 1

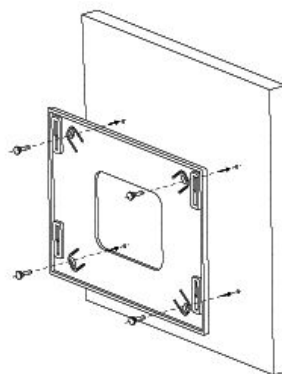


Figure 2

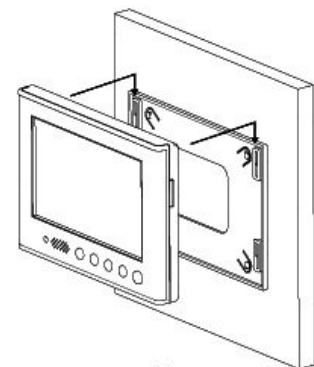


Figure 3

15. CONNECTION DIAGRAM WITH A DIGITAL PANEL (only up to 16 DIAMOND monitors).



TOUCH SCREEN DIAMOND DGD07DAD CONNECTION DIAGRAM

