

# Augreener

## Battery-free Wireless Doorbell User Manual

Model Number: AG 101N



- Do not get the Chime wet.
- Do not disassemble, repair, or modify.
- Screw in securely.
- Do not exceed electrical ratings.

### Attention

Avoid locating the Button/Chime on or directly near **metallic** surfaces as this may reduce the operation range. When locating the Button onto a **UPVC** door, always check the operating performance before final installation, internal metal frame may affect performance.

### To find ideal locations for the chime kit:

Try adjusting the location of the Button to the Left/Right or place on external wall.

Try adjusting the location of the Chime according to the "Range Guide".


### Pack Contents

Button x 1, Chime x 1, Adhesive Pad x 1, User Manual x 1  
Button mounting base x 1


### Installation Instructions

#### Chime

Plug the Chime into the outlet. The Chime will perform better if keeping it away from electric equipment.

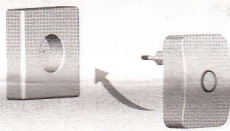

#### Range guide

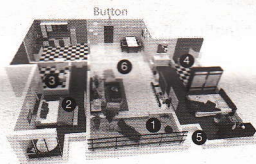

#### Button

- Clean the surface where you intend to mount the Button and the back of Button.
- Before mounting the Button, please run a test. Put the Chime and the Button where you want to mount. Close all the doors when you test. If the Chime does not sound, please see—**Trouble Shooting**.



#### Mount the Button with screws




Place the Button mounting base on the required place of the wall. Drilling holes on the wall (the arrow on the mounting base points up).

Screw the two screws into mounting base. Push the Button into the position shown in the figure.



Installation complete.

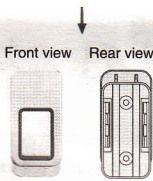

Carefully push the Button down to the stop.

#### Or mount the Button with adhesive pad

Peel back one side of adhesive pad. Attach adhesive pad on the back of the Button.

Peel back the non-adhesive paper

Press the Button onto the desired position for about 30 seconds



### Operating Instructions

#### Work Mode

The Chime has been paired to the Button before the left factory. After installation, it's ready to work. When you press the Button, the Chime will sound with indicator light flashing.

#### Melody Selection

- Short press the round button, the tune will change.



- Re-plug the Chime, the tune will become "Ding Dong Ding Dong".

Qingdao Augreener Electronic Technology Co.,Ltd

Add: NO. 13, Hancheng Road, Qingdao Free Trade Zone, 266555, Shandong Province, China

Tel: 86-532-86769488


Fax: 86-532-86881057

E-mail: augreener@gmail.com


Web: www.topdoorbell.com

## Learn Mode

The Button has been paired to the Chime at factory. Unless you need to add additional Button or additional Chime, you don't need to re-pair it.

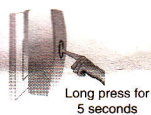

1. Long press the round button on the Chime for five seconds until the indicator light off to enter the Learn Mode.

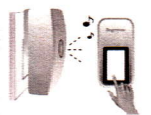

2. Press the Button twice in one minute, the Chime will ring with the indicator light flashing to confirm that the Button has been paired to the Chime. If not, press the Button twice again.




3. Complete and exit the Learn mode automatically.

Note: No operation in 1 minute or short press Button once, the door chime kit will exit Learn Mode.

### Additional Button

Following the instructions in Learn Mode, pair each additional Button to the Chime.


Note: Maximum of 3 Buttons can be learnt to a single Chime.

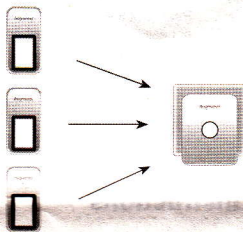

### Additional Chime

Following the instructions in Learn Mode, pair each additional Chime to the Button.

Note: No limit to the number of Chimes.

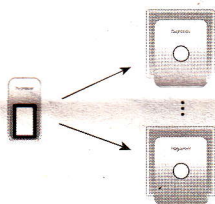

## Trouble Shooting

The Chime does not sound	1. Make sure the Chime is plugged in. 2. Make sure the Button has been paired to the Chime.
Indicator light off	1. Make sure the Chime is plugged in. 2. Check if the Chime is in learn mode.
Reduced range	1. Metal structures, including door frames, can result in reduced transmission range. Avoid mounting the Button or Chime on or near metal structures. 2. Other electric equipments can cause radio interference that affects your Chime. 3. Walls, doors and ceilings will reduce the range.

Attentions: If the issue is still not resolved by the above methods, please unplug the Chime and wait for about 3 seconds till the indicator light off, then re-plug it in. If that does not solve the problem, please contact customer service.

## Specifications

Specification	Chime	Button
Power Supply	100V-240V - 50-60Hz 0.03A	Self-powered
Operating Temperature	-10°C to +40°C	-40°C to +60°C
Range	25m	
RF Frequency	433MHz	
Sound Level	85dBA@3ft(1m)	-
Power Consumption	<200mW	-
Water Proof	-	yes
Operating Forces	-	10N
Dimension	68x86x71mm	46x88x31mm
Weight	85g	62g
Ring Tone	25 polyphony ring tones	-

## Declaration

Augreener hereby declares that this product complies with the CE and RoHS standard.

The device operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

## Guarantee

1. If the product malfunctions in a period of one year from the date of purchase, it can be replaced for free.
2. To obtain a refund or replacement, return the product to the place of purchase. Proof of purchase is required.
3. Repair service, adjustment and calibration due to misuse, abuse or negligence are not covered by this warranty.

Qingdao Augreener Electronic Technology Co.,Ltd

Add: NO. 13, Hancheng Road, Qingdao Free Trade Zone, 266555, Shandong Province, China

Tel: 86-532-86769488

Fax: 86-532-86881057

E-mail: augreener@gmail.com

Web: www.topdoorbell.com