

Wine Cellar

Rafrâichisseur à Vin

Enfriador de Vino

**User Manual-**

*(Features and size may vary per model)*

Model #'s

**Guide de l'Utilisateur-**

*(Les fonctions et la taille peuvent varier selon le modèle)*

Modèle #'s

**Manual del Usuario-**

*(El tamaño y sus características varían con el modelo)*

Para Modelos de #'s

**HVFM102A**

**HVFM122A**

# SAFETY PRECAUTIONS

***Read all of the instructions before using this appliance.***

***When using this appliance, always exercise basic safety precautions, including the following:***

- 1) Use this appliance only for its intended purpose as described in this use and care guide.
- 2) This wine cellar must be properly installed in accordance with the installation instructions before it is used. See grounding instructions in the installation section.
- 3) Never unplug your wine cellar by pulling on the power cord. Always grasp the plug firmly and pull straight out from the outlet.
- 4) Repair or replace immediately, all electric service cords that have become frayed or otherwise damaged. Do not use a cord that shows cracks or abrasion damage along its length, the plug or the connector end.
- 5) Unplug your wine cellar before cleaning or before making any repairs.  
**Note:** *If for any reason this product requires service, we strongly recommend that a certified technician performs the service.*
- 6) If your old wine cellar is not being used, we recommend that you remove the door and leave the shelves in place. This will reduce the possibility of danger to children.
- 7) This wine cellar should not be recessed or built-in an enclosed cabinet. It is designed for freestanding installation only.
- 8) Do not operate your wine cellar in the presence of explosive fumes.
- 9) Do not store foods in wine cellar as interior temperature may not be cool enough to prevent spoilage.

# SAVE THESE INSTRUCTIONS

# DANGER

**Risk of child entrapment. Before you throw away your old wine cellar, take off the doors. Leave the shelves in place so that children may not easily climb inside.**

Thank you for using our Haier product. This easy-to-use manual will guide you in getting the best use of your wine cellar.

\_\_\_\_\_

*Model number*

\_\_\_\_\_

*Serial number*

Remember to record the model and serial number. They are on a label in back of the wine cellar.

\_\_\_\_\_

*Date of purchase*

 
Staple your receipt to your manual. **You will need it to obtain warranty service.**

# Table Of Contents

	PAGE
<b>Safety Precautions</b> .....	<b>1</b>
<b>Parts And Features</b> .....	<b>4-5</b>
<b>Installing Your Wine Cellar</b> .....	<b>6</b>
Unpacking Your Wine Cellar .....	6
Leveling Your Wine Cellar .....	6
Proper Air Circulation .....	6
Door Handle Installation.....	6
Electrical Requirements.....	7
Install Limitations .....	7
Use of Extension Cords .....	7
<b>Wine Cellar Features And Use</b> .....	<b>8</b>
Initial Set Up .....	8
Temperature Adjustment.....	8
Wine Storage .....	9
Shelving .....	10
Interior Light .....	10
Door Lock.....	10
Normal Operating Sounds.....	10
<b>Proper Wine Cellar Care and Cleaning</b> .....	<b>11</b>
Cleaning and Maintenance .....	11
Power Interruptions .....	12
Vacation and Moving Care .....	12
<b>Troubleshooting</b> .....	<b>13</b>
<b>Warranty Information</b> .....	<b>14</b>

## Parts And Features

**HVFM102ABB**  
**HVFM122ABB**

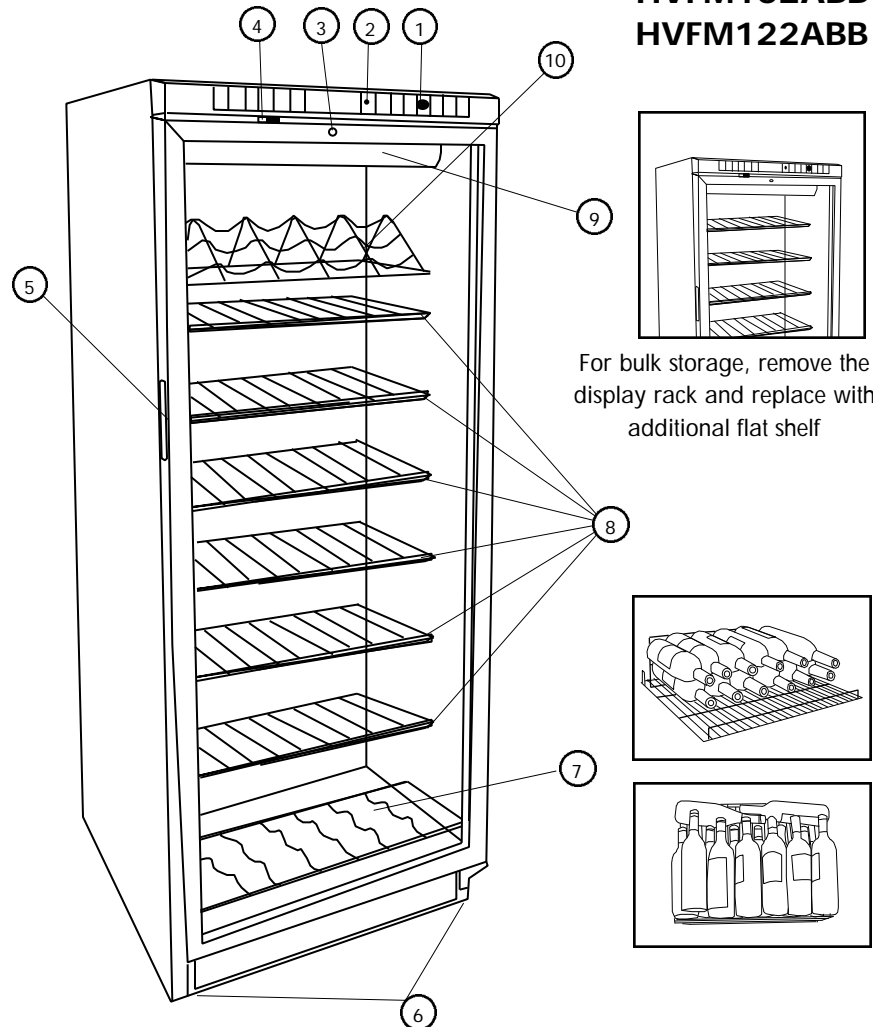


For bulk storage, remove the display rack and replace with additional flat shelf

- |   |  |
|---|--|
| 1. Temperature Control Dial             | 8. Flat Wire Shelves (number of shelves will vary per model) |
| 2. Power On Light                       | (HVFM102A;   |
| 3. Door Lock and Key                    | 6 + 1 additional flat shelf)                                 |
| 4. Light On/Off Switch                  | (HVFM122A;   |
| 5. Recessed Handle                      | 7 + 1 additional flat shelf)                                 |
| 6. Adjustable Leveling Legs (not shown) | 9. Interior Light  |
| 7. Bottom Wire Shelf (1 piece included) | 10. Display Wire Rack (1 piece included)                     |

## Parts And Features

 **HVFM102ABL**  
**HVFM122ABL**

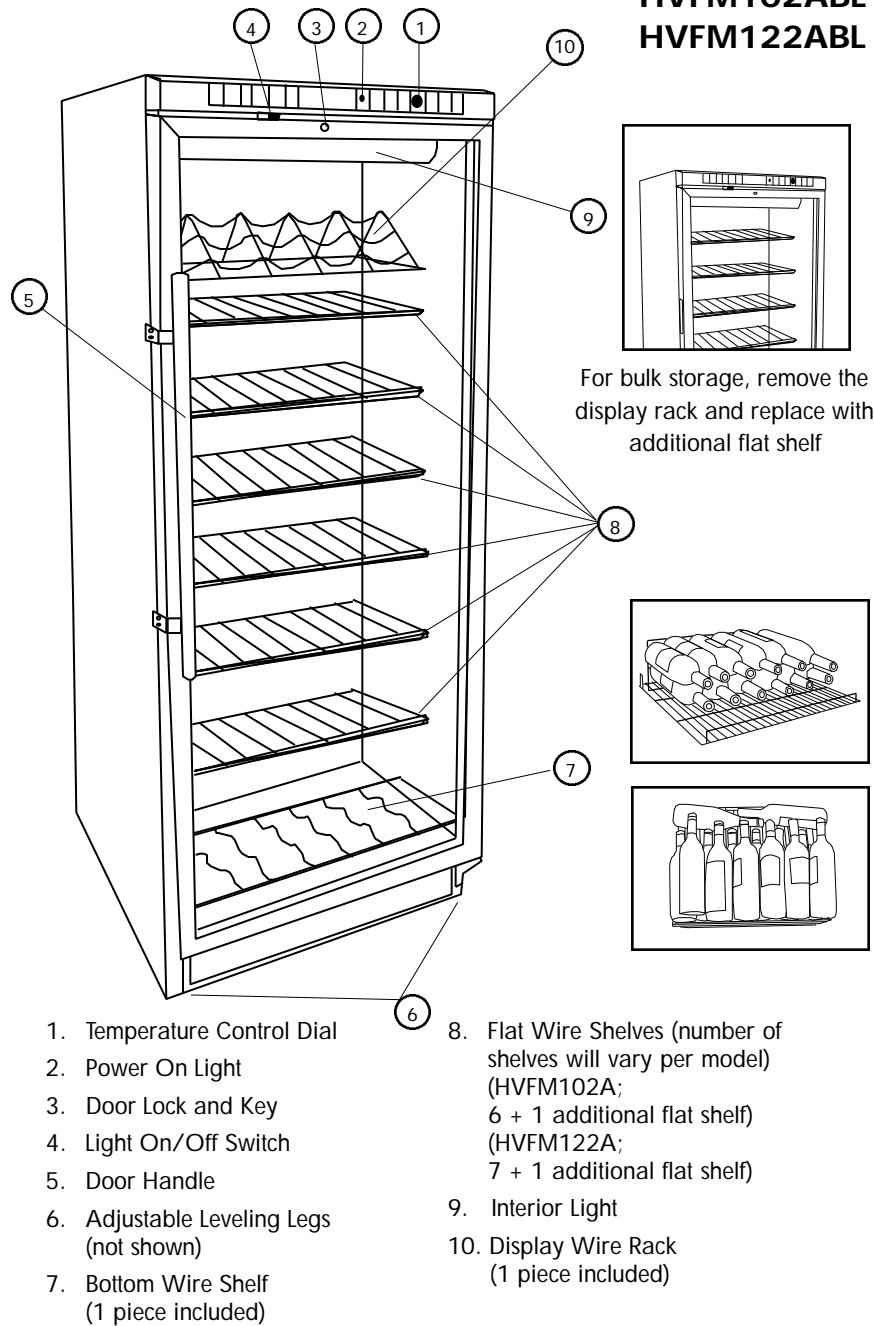

# Installing Your Wine Cellar

## Unpacking Your Wine Cellar

1. Remove all packaging material. This includes the foam base and all adhesive tape holding the wine cellar accessories inside and outside.
2. Inspect and remove any remaining packaging, tape or printed materials before powering on the wine cellar.

## Leveling Your Wine Cellar

- Your wine cellar has four leveling legs which are located in the front and rear corners of your wine cellar. After properly placing your wine cellar in its final position, you can level your wine cellar.
- Leveling legs can be adjusted by turning them clockwise to raise your wine cellar or by turning them counterclockwise to lower your wine cellar. The wine cellar door will close easier when the leveling legs are extended.

## Proper Air Circulation

- To assure your wine cellar works at the maximum efficiency it was designed for, you should install it in a location where there is proper air circulation, plumbing and electrical connections.
- The following are recommended clearances around the wine cellar:  
Sides.....2" (50mm)  
Top.....2" (50mm)  
Back.....2" (50mm)

## Door Handle Installation (Models: HVFM102ABL & HVFM122ABL)

- Unpack handle from its original packing. Holding the handle towards you, align handle bracket holes with holes on the left hand side of the door frame. Secure the handle to the door with the 4 supplied screws.

## **Electrical Requirement**

- Make sure there is a suitable power Outlet (115 volts, 15 amps outlet) with proper grounding to power the wine cellar.
- Avoid the use of three plug adapters or cutting off the third grounding in order to accommodate a two plug outlet. This is a dangerous practice since it provides no effective grounding for the wine cellar and may result in shock hazard.

## **Install Limitations**

- Do not install your wine cellar in any location not properly insulated or heated e.g. garage etc. Your wine cellar was not designed to operate in temperature settings below 55° Fahrenheit.
- Select a suitable location for the wine cellar on a hard even surface away from direct sunlight or heat source e.g. radiators, baseboard heaters, cooking appliances etc. Any floor unevenness should be corrected with the leveling legs located on the front and rear bottom corners of the wine cellar.
- Your wine cellar is designed for free-standing installation only. It is not designed for built-in application.

## **Use of Extension Cords**

- Avoid the use of an extension cord because of potential safety hazards under certain conditions. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade grounding plug and a 3-slot outlet that will accept the plug. The marked rating of the extension cord must be equal to or greater than the electrical rating of the appliance.



# Wine Cellar Features And Use

## Initial Setup

The temperature control is located in the upper left side above the door. There are 7 settings. Initially set the temperature setting to 3. Let the unit run for at least 30 minutes to acclimate itself before making any adjustments.

## Temperature Adjustments:

**Mechanical Dial Control:** See fig. # 1

- To adjust the temperature locate the temperature control dial. There are 7 settings: 1 being the warmest and 7 being the coolest. You can set the temperature of your wine cellar at any setting you desire. Your wine cellar will maintain a temperature between 39°F - 65°F depending on the level of your setting.


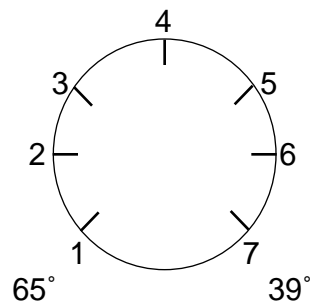 


fig. # 1

## Wine Storage:

 - Haier's 102 and 122 bottle wine cellars incorporate racks, which hold 14 bottles each. The racks are designed to hold 12 bottles stacked and two bottles facing each other. (See Illustration. A & B)
- Haier's elegant wine cellars provide the option of storing both your white and red wines in a single unit. Simply position your red wines at the top and white wines at the bottom. The wine cellar has a variance of 10 degrees from top to bottom, which provides a wonderful environment for your entire wine collection.

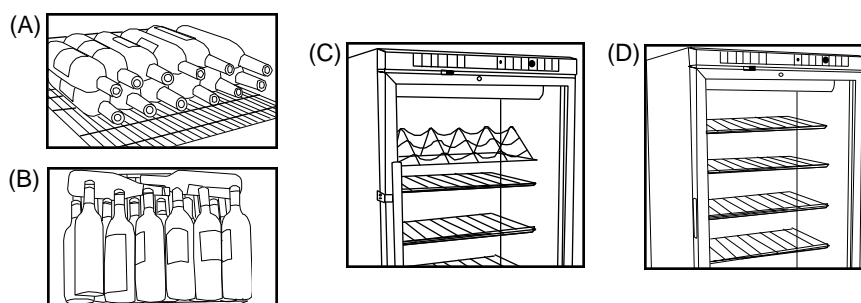

Haier's wine cellars offer versatility when it comes to displaying and storing your wine. You can choose from our maximum capacity storage configuration or our display configuration.

### **HVFM102 Display Configuration:** *Holds up to 102 standard 750ml bottles*

If you select the display option for your wine cellar you will need to use the display wine rack as your top shelf. This will allow you to prominently display 5 of your choice wines. (See illustration c)

### **Storage Configuration:** *Holds up to 102 standard 750ml bottles*

If you select the storage option for your wine cellar you will need to insert the top storage rack. (See illustration d)

### **HVFM122 Display Configuration:** *Holds up to 113 standard 750ml bottles*

If you select the display option for your wine cellar you will need to use the display wine rack as your top shelf. This will allow you to prominently display 5 of your choice wines. (See illustration c)

### **Storage Configuration:** *Holds up to 122 standard 750ml bottles*

If you select the storage option for your wine cellar you will need to insert the top storage rack. This top rack can hold up to 20 bottles (three rows of 6 plus 2 facing each other). (See illustration d)

## Shelving (quantity will vary per model)

 
- The shelves are designed for flexibility and easy cleaning. To increase bottle storage capacity, use provided extra flat rack instead of the Display Rack.

## Interior Light

- To complement the look of your wine collection, a soft light has been built into the wine cellar. The light switch is on the front for your convenience. For maximum energy efficiency, leave light off when not viewing your collection.
- To replace bulb use medium bi-pin base 15 watts, fluorescent, 1" diameter x 18" long bulb

### Bulb Replacement

1. Unplug appliance
2. Move socket frame and pull bulb down
3. Remove bulb
4. Install new bulb and lower shade cover

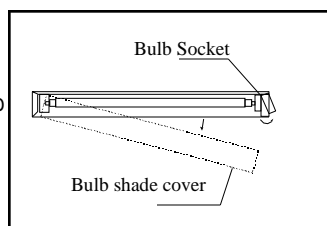

## Door Lock

- For safety and security, your wine cellar is equipped with a door lock and key.

## Normal Operating Sounds You May Hear

- Gurgling sounds or slight vibrations that are the result of the refrigerant circulating through the cooling coils.
- The thermostat control will click when it cycles on and off.

# Proper Wine Cellar Care and Cleaning

## Cleaning and Maintenance

**Warning:** To avoid electric shock always unplug your wine cellar before cleaning. Ignoring this warning may result in death or injury.

**Caution:** Before using cleaning products, always read and follow manufacturer's instructions and warnings to avoid personal injury or product damage.

**General:**

- Prepare a cleaning solution of 3-4 tablespoons of baking soda mixed with warm water. Use sponge or soft cloth, dampened with the cleaning solution, to wipe down your wine cellar.
- Rinse with clean warm water and dry with a soft cloth.
- Do not use harsh chemicals, abrasives, ammonia, chlorine bleach, concentrated detergents, solvents or metal scouring pads. SOME of these chemicals may dissolve, damage and/or discolor your wine cellar.

**Door Gaskets:**

- Clean door gaskets every three months according to general instructions. Gaskets must be kept clean and pliable to assure a proper seal.
- Petroleum jelly applied lightly on the hinge side of gaskets will keep the gasket pliable and assure a good seal.

## **Power Interruptions**

- Occasionally there may be power interruptions due to thunderstorms or other causes. Remove the power cord from AC outlet when a power outage occurs. When power has been restored, replugin power cord to AC outlet.

## **Vacation and Moving Care**

- For long vacations or absences, unplug the wine cellar and clean the wine cellar and door gaskets according to "General cleaning" section. Prop doors open, so air can circulate inside. When moving always move the wine cellar vertically. Do not move with the unit lying down. Possible damage to the sealed system could occur.

## Troubleshooting

### **Wine Cellar Does Not Operate:**

- Check if wine cellar is plugged in.
- Check if there is power at the ac outlet, by checking the circuit breaker.

### **Wine appears too warm:**

- Frequent door openings.
- Allow time for recently added wine to reach desired temperature.
- Check gaskets for proper seal.
- Clean condenser coils.
- Adjust temperature control to colder setting.

### **Wine temperature is too cold:**

- If temperature control setting is too cold, adjust to a warmer setting.

### **Wine cellar runs too frequently:**

- This may be normal to maintain constant temperature during high temperature and humid days.
- Doors may have been opened frequently or for an extended period of time.
- Clean condenser coils.
- Check gasket for proper seal.
- Check to see if doors are completely closed.

### **Moisture build up on interior or exterior of the wine cellar:**

- This is normal during high humidity periods.
- Prolonged or frequent door openings.
- Check door gaskets for proper seal.

### **Wine Cellar door does not shut properly:**

- Level the wine cellar.
- Check for blockages e.g. wine bottles, shelves.

# Limited Warranty

## In Home Service

### What is covered and for how long?

This warranty covers all defects in workmanship or materials for a period of:

**12 months labor**

**12 months parts**

**5 years sealed system**

The warranty commences on the date the item was purchased and the original purchase receipt must be presented to the authorized service center before warranty repairs are rendered.

### EXCEPTIONS: Commercial or Rental Use warranty

**90 days labor (carry-in only)**

**90 days parts**

**No other warranty applies**

### What is covered.

1. The mechanical and electrical parts, which serve as a functional, purpose of this appliance for a period of 12 months. This includes all parts except finish, and trim.
2. The components of the sealed system e.g. hermetic compressor, condenser and evaporator from manufacturing defects for a period of 5 years from the date of purchase. Any damages to such components caused by mechanical abuse or improper handling or shipping will not be covered.

### What will be done?

1. We will repair or replace, at our discretion any mechanical or electrical part which proves to be defective in normal usage during the warranty period so specified.
2. There will be no charge to the purchaser for parts and labor on any covered items during the initial 12 month period. Beyond this period

only parts are covered in the remaining warranty. Labor is not provided and must be paid by the customer.

3. Contact your nearest authorized service center. For the name of the nearest service center please call 1-877-337-3639

### THIS WARRANTY COVERS APPLIANCES WITHIN THE CONTINENTAL UNITED STATES, PUERTO RICO AND CANADA.

### IT DOES NOT COVER THE FOLLOWING:

Damages from improper installation.

Damages in shipping.

Defects other than manufacturing.

Damage from misuse, abuse, accident, alteration, lack of proper care and maintenance or incorrect current or voltage.

Damage from other than household use.

Damage from service by other than an authorized dealer or service center.

Decorative trims or replaceable light bulbs.

Transportation and shipping.

Labor (after the initial 12 months).

THIS LIMITED WARRANTY IS GIVEN IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE

The remedy provided in this warranty is exclusive and is granted in lieu of all other remedies.

This warranty does not cover incidental or consequential damages, so the above limitations may not apply to you. Some States do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

This warranty gives you specific legal rights, and you may have other rights, which vary, from state to state.

Haier America  
New York, NY 10018

# IMPORTANT

## Do Not Return This Product To The Store

If you have a problem with this product, please contact the "Haier Customer Satisfaction Center" at 1-877-337-3639.

DATED PROOF OF PURCHASE REQUIRED FOR WARRANTY SERVICE

# IMPORTANT

## Ne pas Réexpédier ce Produit au Magasin

Pour tout problème concernant ce produit, veuillez contacter le service des consommateurs 'Haier Customer Satisfaction Center' au 1-877-337-3639.  
UNE PREUVE D'ACHAT DATEE EST REQUISE POUR BENEFICIER DE LA GARANTIE.

# IMPORTANTE

## No regrese este producto a la tienda

Si tiene algún problema con este producto, por favor contacte el "Centro de Servicio al Consumidor de Haier" al 1-877-337-3639 (Válido solo en E.U.A).  
NECESITA UNA PRUEBA DE COMPRA FECHADA PARA EL SERVICIO DE LA GARANTIA

Made in China  
Fabriqué en Chine  
Hecho en China



Haier America  
New York, NY 10018

HVFM102A-HVFM122A-2  
Issued: May-02

Printed in China

Part # RF-9999-116