

164 320 12 - UP12 OIL 12 V 164 320 13 - UP12 OIL 24 V

ELETTROPOMPA AUTOADESCANTE PER TRAVASO DI OLII LUBRIFICANTI O DI LIQUIDI VISCOSI

SELF PRIMING ELECTRIC PUMP FOR TRANSFERRING LUBRICATING OILS OR VISCOUS FLUIDS

AVVERTENZE D'USO INSTRUCTIONS FOR USE





PRODUCT DESCRIPTION



Self-priming electric particularly designed for the transfer of lubricating oils or viscous liquids (see chapter of exclusions), for discontinuous use.

The pumping elements are made up of bronze gear drives which can possibly even run dry for brief periods.

TECHNICAL DETAILS

В

| CODICE | | TIPO | VOLT | FUSIBILE | PORTATA F | LOW RATE | PESO | P.ZI x CART. |
|--------|--------|----------|------|-----------------|-----------|----------|--------|--------------|
| CODE | | TYPE | VOLT | FUSE | ø 12 mm | ø 16 mm | WEIGHT | PCS x CART. |
| 164 | 320 12 | UP12/OIL | 12 | 15 A | 360 l/h | 900 l/h | 4,1 kg | 6 |
| 164 | 320 13 | UP12/OIL | 24 | 7,5 A | 360 l/h | 900 l/h | 4,1 kg | 6 |

AMBIENT CONDITIONS



Ambient operating conditions:

Temperature: min. -10 °C / max. +60 °C Relative humidity: max. 90 %

Warning: the above indicated temperature ranges are applicable to all components of the pump and these limits must be respected in order to avoid any possible damage or malfunctioning.

ELECTRICAL CONNECTIONS



The electric pump must be connected to a source of direct current (either battery or transformer) with an amp rating of over 15A and 7,5A at nominal voltage of 12V and 24V respectively. The pump must be protected by a suitable rated fuse.

OPERATING CYCLE



The pump has been designed for discontinuous use. Under conditions of high operating pressures (eg. with closed or blocked outlet, excessive length of the delivery circuit and/or excessive pressure due to accessories), the pump can be subjected to elevated stresses and overheating and therefore should not be used for prolonged periods under such conditions.

APPLICATIONS



There are numerous fields of applications for the pump, however only exclusively with the allowed liquids mentioned:

- transfer of lubricating oil
- transfer of viscous liquids
- transfer of oils, antifreezing
- circulation of viscous liquids
- draining of engine sumps

G

FLUIDS ALLOWED / NOT ALLOWED

ALLOWED:

FRESH WATER

ENGINE OIL AND NON-CORROSIVE VISCOUS LIQUIDS, max viscousity 85 cst DIESEL FUEL, max temperature 80°C

NOT ALLOWED:

PETROL (GASOLINE)
FLAMMABLE LIQUIDS with PM < 55°C
FOODSTUFF LIQUIDS
CORROSIVE CHEMICAL PRODUCTS

SOLVENTS

RELATED DANGERS

FIRE EXPLOSION
FIRE EXPLOSION
FOODSTUFF LIQUID CONTAMINATION
PUMP CORROSION INJURY TO PERSONNEL
FIRE EXPLOSION
DAMAGE TO SEALS

Н

TRANSPORTATION AND HANDLING

Due to limited weight and dimensions the pump does not require the use of any special handling or lifting equipment. When handling manually, normal personal protective gear should be worn (safety shoes with toe piece, etc.)

The pump is carefully packed prior to shipment. Upon receiving, the pump packaging should be inspected for damages and the pump stored in a dry area.

I

INSTALLATION

It is recommended that the use of the pump be according to normative safety standards and also as per the precautions listed below.

I-1

PACKAGING ENVIRONMENTAL DISPOSAL

The packing material does not require special disposal precautions, as it is not polluting or dangerous. The user is anyway invited to effect a proper waste separation, in order to facilitate the recycling of the materials of which the packing is composed.

I-2

PRELIMINARY CHECKS

Check that there has been no damage to the pump during transportation or storage. Both inlet and outlet ports should be carefully cleaned removing possible dust or residual packaging material. Verify that the available electrical power supply corresponds to the pump specification requirements.

I-3

POSITIONING OF THE PUMP

The pump can be mounted in any position. Fix the pump utilizing suitable screws corresponding to the antivibration mounts supplied with the pump.



WARNING: THE PUMP MOTOR IS NOT EXPLOSION PROOF. Do not install the pump where flammable vapours or gases may be present. Install the pump in an accessible place for inspection.

The pump is IP55 protection rated. It is good practice to avoid any pump contact with water splashes possibly causing water seepage into the motor with high risk of internal oxidation and/or short circuit.

TUBING CONNECTIONS

I-4

- Prior to making any tube/hose connections, check that the inlet ports have no end caps.
- Do not position the pump at a height greater than 2 m with respect to the minimum level of the fluid to be transferred. Pump damage may occur if this height is exceeded as the pump may not draw fluid. Make sure that the outlet tube is empty and without chokes.
- Avoid choking the inlet or outlet tubes so that pump efficiency is optimized. The use of an inlet filter is mandatory especially with fluids containing impurities (filter grid gauge 0,5mm). In this case frequent cleaning and maintenance of the filter is advisable. Utilize tubes and connection pieces that are resistant to the fluid types handled and avoid any possible environmental dispersion.

PUMP INSTALLATION

I-5

The electrical installation of the pump must include a protection fuse which is suitably rated as indicated on the motor label and sized with reference to the chosen point of application.

WARRANTY EXPIRES IF NO FUSE IS UTILIZED

Always mount the anti vibration rubber fittings supplied with the pump kit. Their usage ensures a consistent reduction in noise and vibration levels.

Electrical cabling size should depend on the distance between pump and battery power supply.

Up to 5 m length: 4 mmq Over 5 m length: 6 mmq

The use of undersized cabling can cause overheating of the electrical wiring and subsequent fire hazard. There will also be a voltage drop at the motor terminals with a consequent reduction in efficiency.

The flow rate value indicated on the motor label is obtained with a 16 mm internal tube diameter. Tubes with inferior diameters will cause an increase in current with potential risk of motor overheating.

To ensure the correct directional flow of the fluid as indicated by the arrow on the top of the pump, it is necessary to connect the positive pole of the battery supply to the red wire (+) on the motor end-cap and the negative pole to the black wire (-). Electrical connections must be made using adequate terminal blocks and connectors ensuring a tight fitment of the electrical cables. Bad wiring can cause power losses and/or overheating of the cabling itself.

WARNING: it is the responsibility of the installation technician to ensure a correctly designed circuit installation fitted according to regulations. Environmental risks must be taken into account with the installation.

L

TROUBLESHOOTING

L-1

CHECK POINTS IF THE PUMP HAS STOPPED OR WILL NOT START

- Check the effectiveness of the battery power supply (voltage activity)
- Check if the fuse has blown
- Check for any foreign matter present in-between the pump gear drives. To do this, disconnect the power supply and unscrew the four fixing screws, remove the pump front cover plate and inspect the pump chamber. Replace the cover plate in the same initial position after inspection.
- Avoid running the pump dry for more than a few minutes. Pumps found defective that have run dry in the absence of fluid are not covered by warranty.
- The average life span of the motor commutator brushes is approximately 800/1000 hours under normal operating conditions. Stoppages are possible due to brush wear and tear after such a time period.

L-2

WHY THE PUMP WILL NOT PRIME ITSELF?

- The pump is fitted at a height greater than 2 m above the fluid level.
- The pump has run dry for too long a period
- Long periods of inactivity. In this case it is advisable to add liquid directly into the pump chamber before start-up. It is also advisable to add, before running the pump, a drop of lubricating oil inside the pump only.
- Air leak at the suction pipe due to the following reasons:
- Possible cuts in the pipe, inadequate hose clamps, malfunctioning of the filter due to defective/worn seals or filter clogged.
- Air leak at the pump front plate cover due to the following reasons:
- Loose fixing screws, poor effectiveness of the seal.
- Faulty electrical cable connections
- Presence of obstructions or restrictions in the suction or delivery pipes or the use of special devices(eg. automatic spray pistol or aqua-stop).
- Presence of liquid loops in the outlet tube.

L-3

GOOD PRACTICES ENSURING A WELL FUNCTIONING PUMP

No particular maintenance is required if the pump is utilized for the transfer of diesel fluids. If it is expected that the pump will not be used for a period of at least 30 days, especially in the case of usage with fresh or salty water, it is advisable to run fresh water through the pump and to then loosen the pump front plate screws.



Upon re-use, run the pump briefly (a few seconds) and then tighten the screws again. Check under conditions of maximum operating pressure that the motor current value is within the motor label specifications.

NORMAL MAINTENANCE

_-4

Check every month the pump chamber and keep clean from any foreign matter.

Check every month that electrical wiring is in good condition.

Every 800 hours of pump operation substitute the motor brushes.

INDICATORS THAT THE PUMP IS FUNCTIONING CORRECTLY

L-5

- Temperature of pump body and motor frame is within 60°C 70°C
- Regular flow and constant pump noise levels
- -Amp-draw within the limits indicated in the technical details.

TO OPEN THE PUMP

L-6

- It is recommended that a specialized service technician be consulted for any pump repair work or the replacement of worn out internal components, exclusively with original spare parts.
- During the warranty period, only by authorized Marco S.p.A. personnel, failing which the warranty will expire.

ENVIRONMENTAL DISPOSAL

M


For a correct disposal of the pump at the end of its life, contact the local waste disposal service. The proper waste separate collection helps avoiding possible negative effects on the environment and on everybody's health. It also facilitates the recycling of the materials of which the product is composed.

WARRANTY


Ν

- 1) The Warranty period is 2 years from date of purchase on production of the appropriate sales invoice.
- 2) Should the original sales invoice not be available, then the 2 year warranty period will be valid from date of production.
- 3) The Warranty becomes null and void in the case of incorrect utilization or disregard of the instructions contained herein.
- 4) The Warranty only covers original production defects.
- 5) The Warranty does not cover any related installation costs involved.
- 6) Transport costs are refundable only in the case where warranty has been duly recognized and accepted by Marco Spa. These costs will be limited to the actual shipment costs between Marco Spa warehouse and the client's delivery address.
- 7) No credit notes or replacement items will be issued prior to the receipt and proper testing of any Marco goods that are deemed faulty.

EXPLODED VIEW

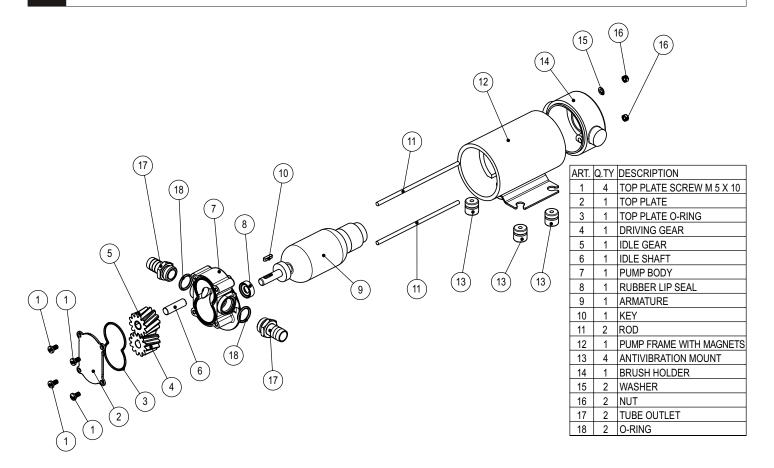


DIMENSIONS

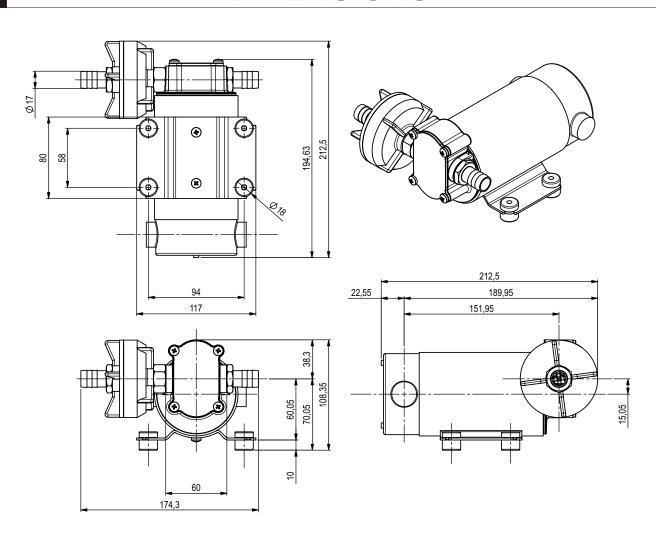




FLOW RATE DIAGRAM

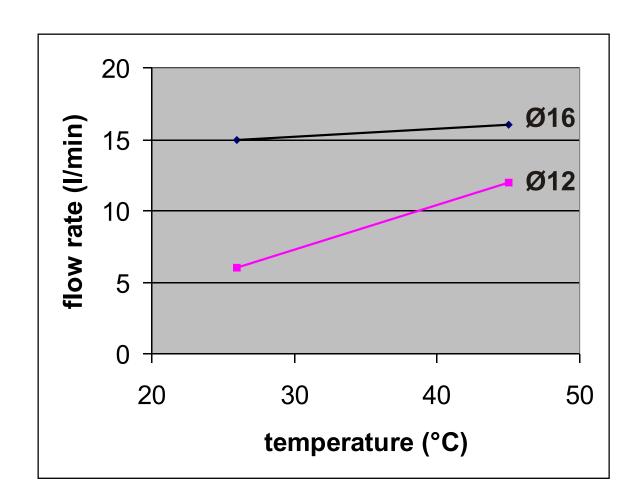

AMPERE-DRAW DIAGRAM

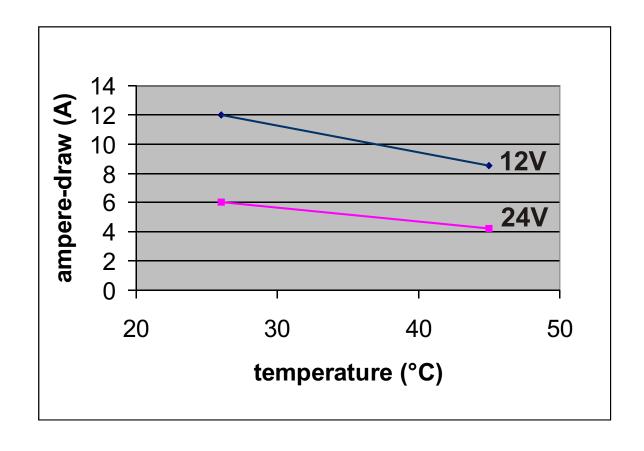

MARCO PUMPS LIST

| ITEM | DESCRIPTION | | | |
|----------------------|---|--|--|--|
| 1620011C | UP1 220V a.c. rubber impeller pump 30 I | | | |
| 16200012 | UP1 12V rubber impeller pump 35 l | | | |
| 16200013 | UP1 24V rubber impeller pump 35 l | | | |
| 16200212 | UP1-N 12V rubber impeller pump 35l | | | |
| 16200213 | UP1-N 24V rubber impeller pump 35l | | | |
| 16420012 | UP2 12V gear pump 8 I | | | |
| 16420013 | UP2 24V gear pump 8 I | | | |
| | UP2/A 12/24V automatic pump with electronic pressure switch 8 I | | | |
| | UP2/OIL 12V gear pump for lubricating oil | | | |
| | UP2/OIL 24V gear pump for lubricating oil | | | |
| | UP2/P 12V PTFE gear pump 8 I | | | |
| | UP2/P 24V PTFE gear pump 8 I | | | |
| | UP2-PV 12V PTFE gear pump 8 I + non-return valve | | | |
| | UP2-PV 24V PTFE gear pump 8 I + non-return valve | | | |
| | UP3/AC 220V 50Hz oil / diesel gear pump 10 l | | | |
| | UP3/AC 220V a.c. gear pump 10 I | | | |
| | UP3 12V gear pump 14 I | | | |
| | UP3/E 12/24V automatic pump with electronic pressure switch 14 I | | | |
| | UP4 24V gear pump 14 I | | | |
| | UP3/P 12V PTFE gear pump 14 I | | | |
| | UP4/P 24V PTFE gear pump 14 I | | | |
| | UP3/OIL 12V gear pump for oil | | | |
| | UP4/OIL 24V gear pump for oil | | | |
| | | | | |
| | UP3/A 12V automatic pump group with accumulator | | | |
| | UP4/A 24V automatic pump group with accumulator | | | |
| | UP6/AC 220V a.c. gear pump 28 I UP6 220V a.c. gear pump 28 I | | | |
| | | | | |
| | UP6 12V gear pump 26 I | | | |
| | UP6 24V gear pump 26 l UP6/OIL 12V gear pump for oil | | | |
| | <u> </u> | | | |
| | UP6/OIL 24V gear pump for oil | | | |
| | UP6/A 12V automatic pump group with accumulator | | | |
| 16462013 | UP6/A 24V automatic pump group with accumulator | | | |
| | UP9-PN 12V internal brushes PTFE gear pump UP9-PN 24V internal brushes PTFE gear pump | | | |
| | | | | |
| 16410012 16410013 | UP9 12V heavy duty gear pump UP9 24V heavy duty gear pump | | | |
| | UP9/A 12V heavy duty automatic pump group with accumulator | | | |
| | UP9/A 24V heavy duty automatic pump group with accumulator UP9/A 24V heavy duty automatic pump group with accumulator | | | |
| | , | | | |
| 16440012 | UP10 12V bronze gear pump 18 I | | | |
| 16440013 | UP10 24V bronze gear pump 18 I | | | |
| | UP10/P 12V PTFE gear pump 18 I | | | |
| 16440213 | UP10/P 24V PTFE gear pump 18 I | | | |
| 16468012 | UP12/A 12V water pressure pump system | | | |
| 16468013 | UP12/A 24V water pressure pump system | | | |
| | UP12/OIL 12V bronze gear pump 15 I | | | |
| 16432013 | UP12/OIL 24V bronze gear pump 15 I | | | |
| _ | UP12 12V gear pump 40 I | | | |
| 16430013 | UP12 24V gear pump 40 I | | | |

| ITEM | DESCRIPTION | | | |
|----------|--|--|--|--|
| 16430212 | UP12/P 12V PTFE gear pump 40 I | | | |
| 16430213 | UP12/P 24V PTFE gear pump 40 I | | | |
| 1640421C | UPX 220V a.c. gear pump 10 I stainless-steel version | | | |
| 16404012 | UPX 12V gear pump 14 l stainless-steel AISI 316 | | | |
| 16404013 | UPX 24V gear pump 14 I stainless-steel AISI 316 | | | |
| 1640431C | UPX-C 220V a.c. stainless-steel gear pump for chemicals 10 I | | | |
| 16404112 | UPX-C 12V stainless-steel gear pump for chemicals 14 I | | | |
| 16404113 | UPX-C 24V stainless-steel gear pump for chemicals 14 l | | | |
| 16410112 | UP9-XC 12V heavy duty gear pump - s.s. AISI 316 | | | |
| 16410113 | UP9-XC 24V heavy duty gear pump - s.s. AISI 316 | | | |
| 16440112 | UP10-XC 12V heavy duty gear pump - s.s. AISI 316 - 18 I | | | |
| 16440113 | UP10-XC 24V heavy duty gear pump - s.s. AISI 316 - 18 I | | | |
| 16490015 | SP2 12/24V shower pump | | | |
| 16480012 | DP3 12V deck washing pump | | | |
| 16480013 | DP3 24V deck washing pump | | | |
| 16482012 | DP9 12V deck washing pump | | | |
| 16482013 | DP9 24V deck washing pump | | | |
| 16484012 | DP12 12V deck washing pump | | | |
| 16484013 | DP12 24V deck washing pump | | | |
| 16010012 | UP500 12V bilge pump | | | |
| 16010013 | UP500 24V bilge pump | | | |
| 16012012 | UP1000 12V bilge pump | | | |
| 16012013 | UP1000 24V bilge pump | | | |
| 16014012 | UP1500 12V bilge pump | | | |
| 16014013 | UP1500 24V bilge pump | | | |
| 16016012 | UP2000 12V bilge pump | | | |
| 16016013 | UP2000 24V bilge pump | | | |







DICHIARAZIONE DI CONFORMITA' C.E. E.C. DECLARATION OF CONFORMITY

Confermiamo che il prodotto: We confirm that the product:

164 320 12 - UP12/OIL 12V. pompa a ingranaggi / *gear pump* 164 320 13 - UP12/OIL 24V. pompa a ingranaggi / *gear pump*

E' conforme alla Direttiva 2004/108/CE (ex.89/336/CE) relativa alla compatibilità elettromagnetica. is in conformity with the Directive 2004/108/EC (ex.89/336/EC) relating to electromagnetic compatibility.

Questa dichiarazione è valida per tutti gli articoli prodotti secondo la documentazione tecnica che è parte di questa dichiarazione. In caso di eventuali verifiche pertinenti alla Compatibilità Elettromagnetica sono state applicate le seguenti normative:

This declaration is valid for all products which are produced in accordance with the technical documentation which is a part of this declaration. For verification of conformity with regard to Electromagnetic Compatibility the following standards are applied:

EN 55014-1

Compatibilità elettromagnetica. Requisiti per gli elettrodomestici, gli utensili elettrici e apparecchi similari. Parte 1: Emissione.

Electromagnetic compatibility. Requirements for household appliances, electric tools, and similar apparatus. Part 1: Emission.

Questa dichiarazione è rilasciata sotto la responsabilità esclusiva di: *This declaration is given under the sole responsibility of:*

MARCO S.P.A.
Via Mameli 10 - 25014 Castenedolo - Brescia - Italy
Tel. 030/2134.1 Fax 030/2134.300

Per ulteriori informazioni vedere sito internet - www.marco.it Marco S.p.A Via Mameli 10 - 25014 Castenedolo - Brescia - Italy tel. +39 030 2134.1 / Fax +39 030 2134.300

For further information visit the web site - www.marco.it Marco S.p.A Via Mameli 10 - 25014 Castenedolo - Brescia - Italy tel. +39 030 2134.1 / Fax +39 030 2134.300