

Destinator
Destinator User Manual

Copyright Information

1. Limited Product Warranty Destinator Technologies, warrants to the Client that the Products shall substantially conform to Destinator Technologies' specification for a period of one (1) year from the date of the original purchase by the end user (the "Warranty Period"). As Destinator Technologies' sole obligation and Client's exclusive remedy for any breach of warranty, Destinator Technologies agrees, at its sole option, to (i) use reasonable efforts to repair the Product with new or refurbished replacement parts; (ii) replace the Product with a new or refurbished unit; or (iii) refund the purchase price, provided Client returns the defective Products to Destinator Technologies with proof of purchase and Destinator Technologies' authorization.

Destinator Technologies' warranty hereunder does not apply in case of any damage caused by accident, abuse, misuse, misapplication, or alteration of any kind performed by anyone other than Destinator Technologies. The Products are not designed or licensed for use in mission-critical applications, or in hazardous environments, requiring fail-safe controls, including without limitation operation of nuclear facilities, aircraft navigation or communication systems, air traffic control, or life support or weapons systems. Without limiting the generality of the foregoing, Destinator Technologies specifically disclaims any express or implied warranty or condition of fitness for such purposes. Destinator Technologies' warranty does not, in any event, apply to physical damage to the surface of the Product or replacement. Destinator Technologies shall have no obligation with respect to any data stored in the Product.

Except as expressly stated in this section, Destinator Technologies makes no warranties or includes any conditions with respect to the products, express or implied, including, but not limited to, the implied warranties or conditions of merchantability, fitness for a particular purpose and no infringement.

2. Liability Limitation. In no event shall Destinator Technologies, be liable to Client, (and Client hereby waives any indirect, special, incidental, or consequential damages in connection with) the transactions contemplated by this agreement, whether or not such damages were foreseen, or their likelihood disclosed. Destinator Technologies shall not be liable to Client or any third party claiming through Client, for any damages of any kind in excess of the amounts paid by Client under the terms of this agreement with respect to the products giving rise to such damages. Some jurisdictions do not allow the exclusion of or limitation on implied conditions, warranties or damages, thus some of the foregoing may not apply to Client.

3. Intellectual Property Rights. Hardware and Software are proprietary to Destinator Technologies or its suppliers and are subject to copyright and other intellectual property laws. Client's only rights with respect to any Destinator Technologies software included with the Products shall be provided, under the terms of Destinator Technologies' software license. The title to all Destinator Technologies Software remains with Destinator Technologies. Client agrees that Destinator Technologies retains ownership of all rights, title and interest in all intellectual property, works of authorship, trade secrets and like's in all aspects of the Product(s). Client and its affiliates and subcontractors agree not to reverse engineer any aspect of the Software and/or Products supplied under this agreement and further agree to pay assessed damages should such action take place.

Destinator

4. Copyright and Copies. The Software (including any copy thereof) is owned by Destinator Technologies or its suppliers and is protected by United States, Canada, European, Brazilian and Australian copyright and patent laws and international treaty provisions. The Software copy is licensed to you the client, not sold to you, and you (the client) are not an owner of any copy thereof. You may make one copy of the software for backup or archival purposes. You may not otherwise copy the software, except as authorized by applicable law, nor the written materials accompanying the Software. Destinator Technologies hereby reserves all rights not explicitly granted in this license agreement.

Copyright © 2007, Destinator Technologies

11_SHC_70_US



Contents

1 – Getting Started	2
Driver Warning	2
Main Map	3
Map Views	4
Route Summary	4
Cancel Route	5
2 – Select Location and Generate Route	6
Go to an Address	6
Point of Interest (POI)	9
QuickNav	11
Recent Place	12
Address Book	13
3 – Additional Destinator Features	16
Driving Directions	16
Avoid Roads	17
Detour	19
Map Browsing	20
Walking Mode	20
Map Selection	21
4 – Destinator Configurations	22
Settings Menus	22
Prompts	22
Language Settings	23
Look & Feel Settings	23
GPS Settings	23
Units of Measure	25
Time Settings	25
Map Settings	25
About	26
Help	26
Index	27

Destinator



1 –Getting Started

Welcome to the world of mobile navigation! Simple operation, clear maps in 2D or 3D mode as well as numerous innovative features and functions have made **Destinator** the essential guide for every traveler – whether in the car, on foot or by bike.

Driver Warning

When you start **Destinator**, the **Driver Warning** screen appears. Please take a moment to review the information provided before tapping the **OK** button. Select the "Do not display this warning again" checkbox to skip this message in the future.

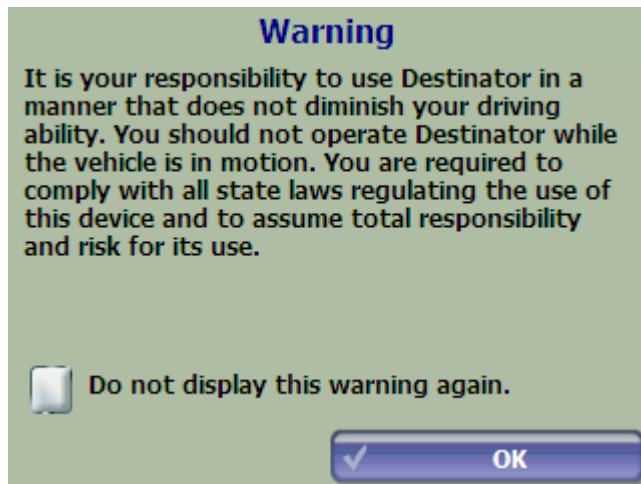 


Figure 1 – Map Warning Screen



Main Map

You can use the icons displayed on this screen to plan and view your route.

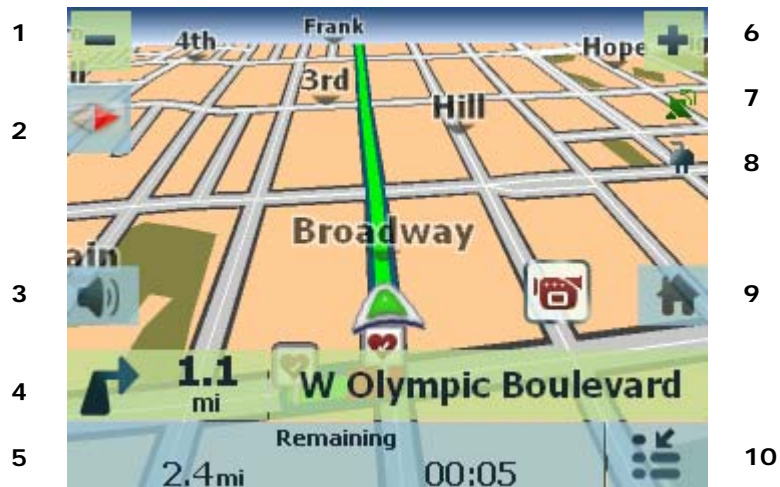 


Figure 2 – Map Screen

Main Map Icons

1, 6		Zoom in or out of the map to view a larger less detailed area or a smaller area in greater detail
2		Tap the compass to change the map view display as follows: 2D map view with the forward direction at the top. 3D map view with the forward direction at the top. 2d map view with North at the top.
3		Tap this icon to adjust or mute the volume.
4		When you have calculated a route, the Directions bar displays information about your next turn. Tap this bar for a complete list of turn-by-turn directions.
5		The GPS bar is a toggle button that displays the remaining travel distance and travel time, estimated time of arrival, street name and address number, speed and altitude.
7		The red GPS receiver means that a reliable GPS signal is not yet located. The green GPS receiver means that a reliable GPS signal is located and that you are ready to navigate.
8		These icons display your power source. The battery appears as green, yellow, or red depending on the strength of the battery charge.
9		Tap this icon to set your QuickNav location. When set, you can tap this button to automatically calculate a route to this location.
10		Tap this icon to display the Go To menu.



Location Icons

	Current location in Vehicle Mode or Walking Mode.
	Last known location when GPS signal is unreliable.
	Generated route

Location Point on Main Map

You can drag the map to a specific point and tap the desired location directly on the **Main Map** screen in both 2D and 3D map view. This feature is useful when you want to navigate to a specific point on the map, rather than by the street address. When you tap on the map, the pop-up menu appears with the following options:



- Go There** – Navigate to the selected point on the map.
- Add to my Favorites**– Save a point on the map as a favorite destination for future use.
- Set as Starting Point** – Designate the selected point as the starting point instead of your current location.

Destinator


Figure 3 – Point on the Map Options

Map Views

You can choose to see a two-dimensional or three-dimensional map adjusted specifically for daylight or nighttime conditions.

From the **Options & Setting** menu, tap the **Day/Night View** toggle button to view the map for day or nighttime driving and the **2D/3D View** toggle button to display the map view in 2-dimensional or 3-dimensional views for day or night driving.

 Route Summary

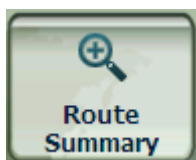


- From the **Manage Route** menu, tap the **Route Summary** button.

An overview of your complete route, the total driving distance to your destination, the estimated travel time, and the complete destination address, are displayed on the screen.



 Cancel Route

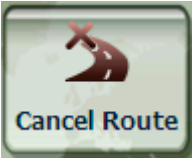

- From the **Manage Route** menu, tap the **Cancel Route** button.

The current navigation stops and **Destinator** clears the route. You can only cancel a route after a destination has been set.

Destinator



2 –Select Location and Generate Route

Go to an Address



From the **Navigation** menu, tap the **New Address** button. The **Address Search Mode** screen appears, allowing you to choose how you want to enter address information. For example, if you select **City first**, the first address screen is lets you select from a list of cities, the second screen a list of streets, and the third screen lets you enter an address number.

Select from the following address entry options:

- City first – *City > Street > Address Number*
- Street first – *Street > City > Address Number* – You enter a street name without having to first select a city. This is useful when searching for an address in a metropolitan area where there are many cities and towns.
- Intersection – *City > Street > Street 2*
- Zip Code – *Zip Code, Street, Address Number* – You can locate a street address by entering the zip code, without entering a town name, which is useful when you have no information about the town.

Note: When a United States map is selected, the first address screen is always **Select State**.

Tap from one of the **Address Search Mode** options to display the first address screen.



Destinator

Figure 4 – Selecting an Address

When entering an address, you can use the keyboard to enter the characters. The characters appear in the **Address** field. **Destinator** automatically searches the **Address** list for the first occurrence of the entered characters. After you have selected a city, **Destinator** displays the next address field, such as street and address number.

Instead of specifying a street, you have the option of selecting the **City Center**. If you don't know the address number, you can select the **Street Midpoint**.

Tap the **OK** button to move through the sequence of address screens.



Go to Another Country

From the **Address Search Mode** screen, you can tap **Other country map** to select another country that you can travel to by vehicle.

 
This feature is available only when you have the following maps installed:

- Map of the country where you are currently located.
- Map of the country where you want to travel.
- The map of the major roads for that continent that connects one map to another (for example, the Major Roads of Europe)

For example, if you are in Paris and you want to travel to Munich, select the map of Germany and designate Munich Town Center as your destination. **Destinator** automatically displays the map of France when traveling on local roads of France, a map of Major Roads of Europe when traveling on a European motorway, and the map of Germany when traveling on local roads of Germany.

Destinator Screen Buttons


The following buttons appear on many of the navigation screens.



When you tap this button for a selected address, group, or place, **Destinator** automatically opens the next screen in the sequence.



 When you tap this button, **Destinator** returns you to the previous screen.



This button provides a list of command options available for the selected address or place.

Destinator

Keyboard Command Keys

The following buttons are available to enhance your search process.



Figure 5 – Search and Keyboard Buttons

1	Lets you remove a character that you have entered.
2	Lets you scroll up or down the list of city or street names.
3	Lets you display different keyboards, including special characters (for example, Greek) and numbers. The operating system installed on the device must be able to support these characters. Note: Destinator lets you search for city and street names without having special characters, such as umlauts or accent marks, which are used in many European languages. For example, you can enter Munchen for München



Select Location and Generate Route

4	Tap the Keyboard button to display the keyboard. Tap the Search button to expand the address list showing more address entries.
---	---

Navigate to an Address

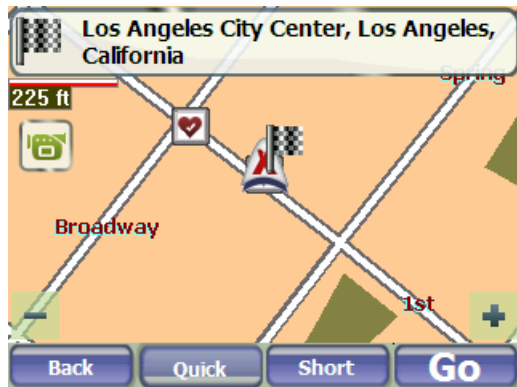 



Figure 6 – Show on Map

You can select from the following route types:

Quick – This option selects the route that takes the least amount of time. Quick is the default setting.

Short – This option selects the route that is shorter in distance. Note: The shorter route may not always be the quickest.

Go – When you tap the **Go** button, **Destinator** calculates the route to your selected destination.

Demo – Tap the  icon to start navigating a simulated route.

Note: Route generation excludes any detours, stops or delays along the route.

Actions

Tap the **Actions** button to:

- **Set an Address as the point of origin** – Tap the **As Starting Point** button to designate the selected address as the route origin.
- **Show on map** – Tap to see the selected address on the map.
- **To favourites** – Tap to add an address to your list of favorite locations. For more information about favorites, see [Address Book](#) on page 13.
- **Information** – Tap to display additional address information and phone number (where available).



Point of Interest (POI)

 


The **Point of Interest (POI)** list is a collection of hundreds of interesting or useful places organized by easy-to-find categories. For example, you can use **Destinator** to guide you to a shopping center, hotel, restaurant, or gas station.


Many categories have subcategories to provide for an even greater list of choices. For example, gas station, may have many subcategories each representing a particular brand name. The same is also true for hotels. Restaurants have subcategories that represent different types of food, such as Indian, Italian, and French.

Search for a Location Near You


You can determine the area where you want to search for a specific place, such as a gas station, hotel, or restaurant. **My Current Location** is automatically selected.



 Tap to search near your current location.



 Tap to search near your specified destination. If a destination has not been selected and a route generated (by tapping the **Go** button), this button is disabled.



Tap to search for a POI in another location. This button opens the **Address Search Mode** screen, which is described on page [6](#).

Search for a POI Name



Tap this button to display the **Search POI** keyboard screen, where you can search by entering text in the **POI Name** field. The Smart Search System automatically displays the POI names that match the characters entered. **Destinator** automatically displays the POI entries and the distance each entry is from your current location.

For example, if I enter "Avis" and tap the **Search** button. Destinator displays all Avis entries in my selected location, as shown in the figure below.


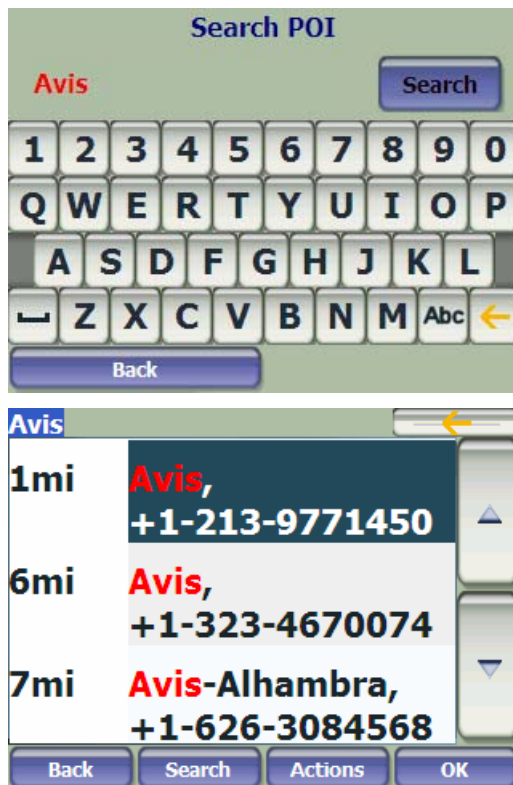 


Figure 7 – Search by POI Name

 

Search for a POI Category



Tap this button to display the most common POI categories.

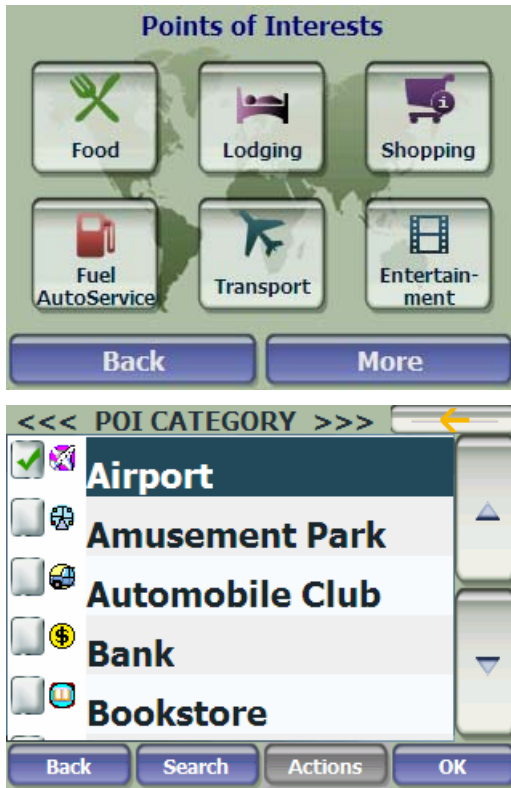 


Figure 8 – Most Common POI Categories

Tap **More** to display the **Point of Interest** screen, where you can search through the entire list of POI categories.

Show or Hide Symbol on Map

You can select or clear the checkmarks next to a **POI** entry to show or hide the **POI** symbol on the **Main Map** screen.

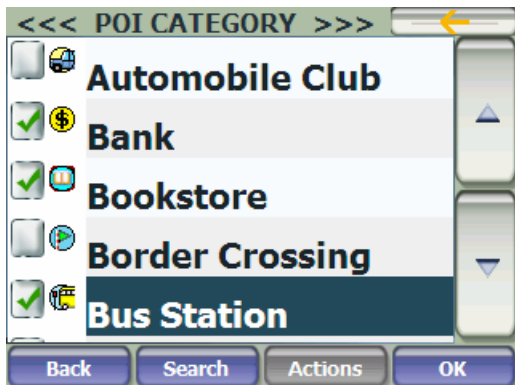 


Figure 9 – Showing a POI Symbol on the Map




Actions

Tap the **Actions** button to:

- **Set an Address as the point of origin** – Tap **As Starting Point** button to designate the selected address as the route origin.
- **Show on map** – Tap to see the selected address on the map.
- **To favourites** – Tap to add an address to your list of favorite locations. For more information about favorites, see [Address Book](#) on page [13](#).
- **Sort by ABC/Distance** - Tap the **Actions** button. Tap the **Sort by ABC** button to display the category entries in alphabetical order.
- **Information** – Tap to display additional address information and phone number (where available).

QuickNav



You can set a **QuickNav** destination so that every time you tap the  icon on the **Main Map** screen, **Destinator** automatically calculates the route to this destination for you. When you tap the **QuickNav** button for the first time, you must select a predefined address or a POI category.


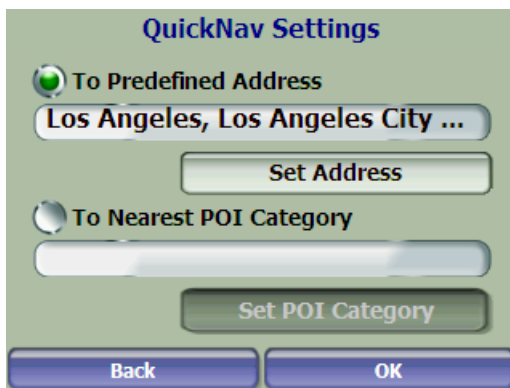 


Figure 10 – Setting the QuickNav Location

 You can change the **QuickNav** settings by tapping the **QuickNav** button located on the **Setup 1** menu.



Recent Place

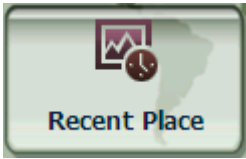

From the **Navigation** menu, tap this button to select an existing destination from a list of destinations that you have previously traveled to.



Figure 11 – Traveling to a Recent Location

Destinator automatically stores the last 64 destinations in memory. After 64 destinations have been saved, the older destination entries are erased.

Actions

Tap the **Actions** button to:

- **Set an Address as the point of origin** – Tap the **As Starting Point** button to designate the selected address as the route origin.
- **To favourites** – Tap to add an address to your list of favorite locations. For more information about favorites, see [Address Book](#) on page [13](#).
- **Delete an item** – Tap the **Actions** button. Tap the **Delete Item** button to delete an entry on the **Recent Locations** screen.
- **Clear the recent location list** – Tap the **Actions** button. Tap the **Clear List** button to clear all locations in the **Recent Locations** screen.
- **Information** – Tap to display additional address information and phone number.

 


Address Book

A **Favorite** is a destination that you have stored for easy retrieval. Save favorite destinations to your **favorites groups** and later you can easily travel to these destinations.

Note: You can also add a favorite destination from the **Address**, **POI**, and **Recent Place** screens.

Save a Favorite Location



From the **Actions** screen, tap this button. Select the group to which you want to add your favorite destination.

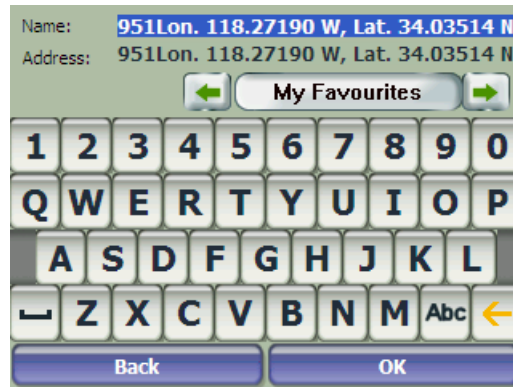 


Figure 12 – Adding a Destination to Your Favorites

The **My Favorites** folder is the default folder where all favorites are stored if not assigned to a group. This folder cannot be deleted.

Going to a Favorite Location



From the **Navigation** menu, tap this button to display the screen containing your favorite groups. Select a group, for example **Restaurants**. **Destinator** automatically displays a list of stored locations for the selected group.

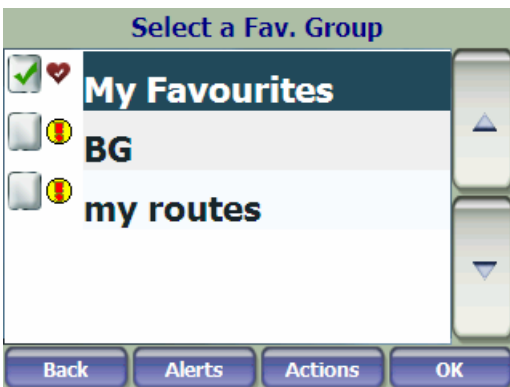 


Figure 13 – Going to a Favorite Destination



You can check or clear the checkmarks next to a favorite entry to show or hide the **Favorites** symbol on the **Main Map** screen.

Creating a Favorite Group

Actions

From the **Favorites** screen, tap this button to add, edit, or delete groups. Enter a group name and select a group icon.



Figure 14 – Adding a Favorites Group

To add favorite destinations to your favorite groups, see [Save a Favorite Location](#) on page 13.

Setting an Alert for a Favorites Group

Alerts

Alerts let you know that you are within a certain distance of an item in a **Favorites** group.



Figure 15 – Setting Your Favorite Alerts

Use the right and left scroll arrows to set the distances for the 1st and 2nd Alerts.

In the **Set Alert Distances** screen, you can disable an alert by setting the 1st Alert to **Off** or by clearing the checkbox next to the selected group.

Notes:

- **Favorite Alert** settings affect all **Favorites** groups.
- The 2nd Alert must be set to sound at a closer distance than the 1st Alert.
- Alerts can be set for a group but not for individual locations. Of course, you can always create a group that has just one location.



Actions

Tap the **Actions** button to:

- **Set an address as the point of origin** – Tap the **As Starting Point** button to designate the selected address as the route origin.
- **Show on map** – Tap to see the selected address on the map.
- **Edit a favorite location** - Tap the **Actions** button. Tap the **Edit Fav. Location** button to change the name, comment, or group location for the selected location.
- **Delete a favorite location** - Tap the **Delete Fav. Location** button to remove the selected location.
- **Information** – Tap to display additional address information.

Destinator



3 – Additional Destinator Features

Driving Directions



From the **Manage Route** menu, tap this button to display a complete turn-by-turn list of directions from your current location to the selected destination. **Destinator** continuously updates the Turn-by-Turn screen to display the most current instructions as you navigate the route.

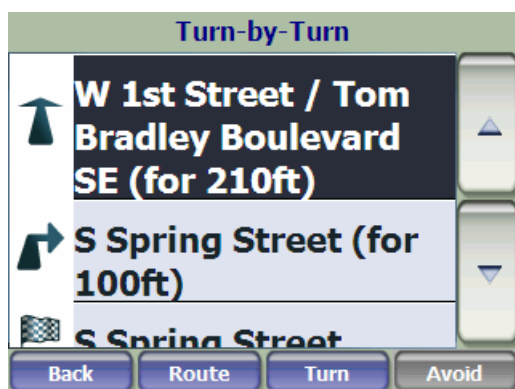 


Figure 16 – Turn-by-Turn Display

Note: The first turn is at the top of the list and the final turn is at the bottom, identified by a checkered flag.

 
The following options are available:

- Route** Tap to display your entire route on the **Main Map** screen, plus the travel distance and the **Estimated Travel Time Remaining (ETR)**.
- Turn** Tap to display the next turn on the **Main Map** screen, including the street name, the distance to the turn, and the turn direction.
- Avoid** Tap to avoid the selected turn in the **Turn-by-Turn** list. **Destinator** recalculates the route automatically. Note that when you exclude a turn, the recalculated route may take longer.

Destinator



Avoid Roads

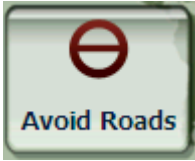

You can specify that certain roads be permanently excluded from your route calculations. Use this feature when you want to avoid congested roads, toll roads, or unsafe streets.

From the **Manage Route** menu, tap the **Avoid Roads** button. The **Avoid Roads** screen appears, displaying predefined road groups.



Figure 17 – Predefined Road Groups

Destinator provides the following predefined road groups:

- **Ferries** – The default value is to avoid
- **Gated Communities** – The default value is to allow
- **Motorways** – Roads that allow for high volume, maximum speed traffic movement between and through major metropolitan areas. The default value is to allow
- **My Roads to Avoid** – This is a default folder that lets you store roads to avoid. You can display the items in this folder and allow or avoid specific roads.
- **Toll Roads**
The default value is to avoid

To allow or avoid a predefined road group:

- Select a predefined group and tap the **Allow/Avoid** toggle button. The next time you calculate a route, Destinator calculates a route based on your avoid or allow selections.

Note: Predefined road groups are allowed or avoided as an entire group. You cannot allow or avoid individual toll roads, highways, or ferries.

Destinator



Creating a Group

Actions Tap this button and select **Add Group**. From the **Add Group** screen, enter the group name and tap **OK**.



Figure 18 – Add a Road Group

The **Actions** screen also lets you edit or delete a selected group.

Adding a Road to Avoid

When you tap **My Roads to Avoid** or a road group, **Destinator** displays the group screen, which lets you designate roads to avoid. From this screen, you can use the **Allow** or **Avoid** buttons to include or exclude individual roads when calculating a route.



Figure 19 – Storing Road Locations

Tap **Actions** and then the **Add Road** button. Select the city and street. The road is displayed on the **Show on Map** screen. Tap the **Avoid** button.



Figure 20 – Adding a Road to Avoid



Actions

Tap the **Actions** button to:

- **Edit Road** – Tap to rename the road and/or select a different group. When you have made your changes, tap **OK**.
- **Delete Road** – Select a road and tap this button to remove the road from your group. **Destinator** no longer avoids the removed road.
- **Show on Map** – Tap to show the map with the displayed destination for you to review before creating a route.
- **Information** – Tap to display the location's address information.

Detour



From the **Manage Route** menu, tap the **Detour** button. The **Detour** screen lets you instruct **Destinator** to create a detour to avoid a road event, such as an accident.




Destinator

Figure 21 – Avoiding a Road Event by Performing a Detour

Select the **Detour** option that you want to generate a detour for the distance specified. For example, if you are traveling on a major highway and you are alerted by the news that there is traffic for the next 2 miles, you can have **Destinator** calculate a detour that takes you off the highway and then returns you back to the highway after a distance of 2 miles.



 Map Browsing

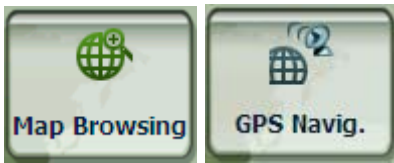

You can browse the map without a **GPS** signal. From the **Options&Settings** menu, tap **Map Browsing** button to disconnect from the GPS receiver.

 



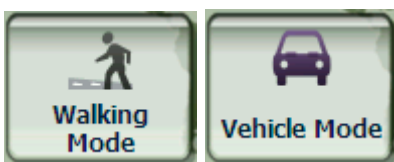 
Figure 22 – Explore the Map

The  icon identifies your current position. You can use the arrow cursor to move the map. When you have located the street destination, you can tap that point on the map. A popup menu appears. Tap **Go There** to navigate to the selected point.

You can reconnect to GPS, by going to the **Options&Settings** menu and tapping the **GPS Navigation** button.

Destinator

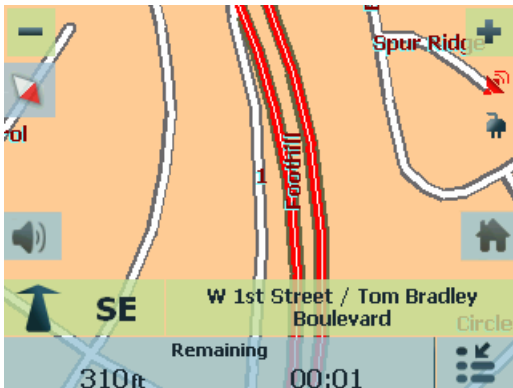Walking Mode



 
Walking Mode lets you travel as a Walking, generating a route up to ten kilometers, which is not limited by vehicle constraints, such as one way streets. When creating a Walking route, **Destinator** avoids highways or other roads where Walkings would not travel. **Voice prompts** are deactivated in this mode.

From the **Options&Settings** menu, tap the **Walking Mode** button. You can switch back to **Vehicle Mode** by tapping the **Vehicle Mode** button.

Note: When **Walking Mode** is selected, **Driving Directions**, **Route Summary**, **Avoid Roads**, and **Detour** features are disabled.



Map Selection

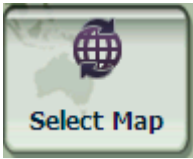


From the **Setup 1** menu, tap the **Select Map** button to change the selected map to another map saved on your SD memory card.



Figure 23 – Select a Map

 Destinator immediately implements the selected map for all navigation features. If it is the first time that you are using a map, an **End-User Agreement License (EULA)** screen appears. Read it and then select the **Agree** checkbox to continue working with **Destinator**.

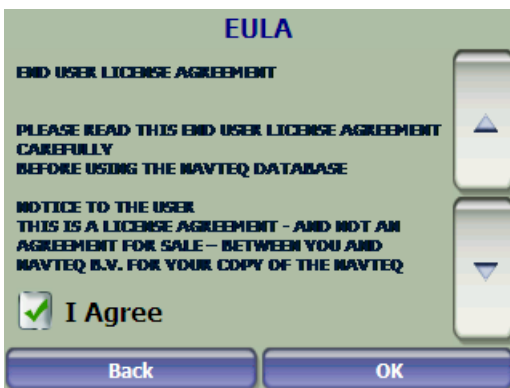

estinator

Figure 24 – Map's End-User License Agreement

You can also choose from the following **Select Map** commands:

 
- **Refresh** – Tap to refresh the screen when a new memory card is inserted into the device.
- **Delete** – Tap to permanently remove a selected map.

Note: You cannot delete the map you are currently using.




4 –Destinator Configurations

Settings Menus

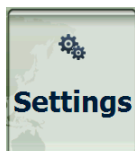

From the **Main menu**, tap the **Settings** button to let you configure **Destinator** system settings and utilize travel playback and demonstration features.

 Prompts

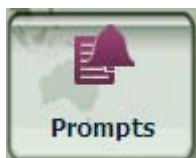

From the **Options&Settings** menu, tap the **Prompts** button to select the types of voice and road name and number notifications that you would like to use while navigating.

Voice Prompts

Speed Warning	Warns you when your car exceeds the speed limit.
Route Recalculation	Notifies you when Destinator recalculates your route. For example, when you miss a turn.
Unreliable GPS Signal	Warns that the GPS signal is too low and unreliable for navigation.
<h2>Destinator</h2>	
GPS Not Found	Alerts you if the GPS signal is lost, or if the power source has been removed from the GPS receiver.
Drive Carefully	Reminder at the start of each journey.

Road Prompts

Both	Destinator tells you the street number and name.
Numbers	Street numbers only.
Name	Street name only.



Language Settings



From the **Setup 1** menu, tap the **Language** button to display the **Language Settings** screen.



Figure 25 – Language Settings

You can select from:

- Language Text – Address and map information, and screen and menu labels
- Voice Guidance
- Say Road Name – Audio pronunciation of road name

The language and voice options installed on your device are determined by your selections in the **Destinator PC Portal**.

Look & Feel Settings Destinator



From the **Setup 1** menu, tap the **Look & Feel** button to select from a list of preinstalled skins. A skin determines the visual effects such as colors and icons displayed.

- **Prefer QWERTY Keyboard** – When this option is selected, the navigation keyboard is displayed as a computer keyboard (QWERTY style) on the screens.
- **Auto Day-Night Adjustment** – When this option is selected, **Destinator** automatically switches between day and night view according to the GPS time and date information provided. If this option is selected, but you manually switch the day /night view, it will remain in that mode you selected until the next time **Destinator** automatically switches the day /night view.

GPS Settings



From the **Setup 2** menu, tap the **GPS Signal** button to display GPS information and to configure the GPS connection settings.

Destinator receives data from a built-in GPS receiver or an external GPS receiver, connected to your navigation device through Bluetooth® Wireless Technology, to pinpoint your location. Your vehicle's location and position are constantly updated unless you are working in the **Browsing Map** mode or you tap the **GPS Off** button. The GPS receiver may take a few minutes to find its initial location. For best results, ensure that the GPS receiver has a clear view of the sky.



The **GPS Signal** screen displays the following information:

- **Longitude**
- **Latitude**
- **Speed**
- **Altitude**
- **Number of Satellites**

If you are working in the **Browsing Map** mode, **Destinator** automatically disconnects from the GPS receiver.

GPS Troubleshooting

Signal too low

When you first start **Destinator** you may hear the “Signal too low” message. This message means that your navigation device hasn’t yet located a reliable GPS signal. Check that your device is connected to a power source, such as the cigarette lighter, and has a clear view of the sky.

GPS Not Found

For devices with an external antenna, the “GPS not found” message means that your device is not connected to a GPS antenna or that the antenna is not properly installed. For more information about GPS, see **GPS Settings** on page [26](#).

Please check that:

- The GPS antenna is extended or flipped up (for an external antenna only).
- The GPS antenna has a clear view of the sky for uninterrupted GPS reception. **Destinator** cannot calculate the route if there is no GPS reception (for example, in a tunnel).
- The navigation device is charged or connected to a power source, such as the cigarette lighter.



Units of Measure

 


From the **Setup 1** menu, tap this button to specify the measurement system you would like to use.

You can select:

- Miles, Yards
- Miles, 10th of a Mile
- Kilometers, Meters

Time Settings

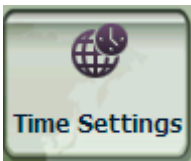

From the **Setup 1** menu, tap this button to display time settings.

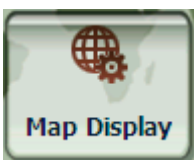 


Figure 26 – Time Zone

Destinator

You can select the **Daylight Savings** checkbox to automatically adjust for daylight savings.

Map Settings



From the **Options&Settings** menu, tap the **Map Display** button to select from the map interface options listed below.

You can choose the following options for the main map:

- | | |
|---------------------------|---|
| Forward up | Orients the map so that the direction you are traveling is always at the top of the screen. |
| Larger Labels | Increases the size of street names to make the map easier to read. |
| Allow Screen Tap | Displays the navigation popup menu when tapping on a map location. |
| Automatic Map Zoom | When selected, the zoom is speed dependent. The map zooms out at higher speeds, displaying a larger map area, and zooms in at slower speeds, displaying a smaller map area. |
| Maneuver Diagram | Displays a large image that indicates your next maneuver, such as left turn or right exit. |
| Next Street Bar | Displays the next street name. |
| Allow Zoom Control | Displays zoom in and zoom out buttons. |
| Compass | Displays the compass, which lets you change the map view display: <ul style="list-style-type: none"> • 2D map view with the forward direction at the top |




Destinator Configurations

- 3D map view with the forward direction at the top
- 2D map view with North at the top


QuickNav Button	Displays the QuickNav button, which you tap to navigate to a pre-selected location
Volume Control	Displays the Volume Control bar.
GPS Status	Displays whether a reliable GPS signal has been located.
Power Indicator	Displays if your device is plugged in or running on battery power.
Information Bar	Displays estimated time of arrival.
Menu Button	Displays the Menu button, which opens the Main menu .

 About

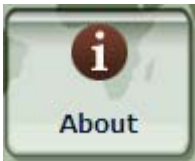

From the **Setup 2** menu, tap this button to displays version and copyright information.

 Help

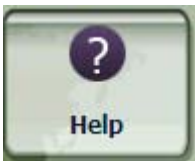

From the **Setup 2** menu, tap this button to displays technical support information.

Destinator



Index

A

- About • 26
- Add to My Favorites • 13
- Adding a Road to Avoid • 17
- Additional Destinator Features • 15
- Alerts for a Favorite Group • 13
- Avoid Roads • 16

B

- Backlight Settings • 28

C

- Cancel Route • 4
- Creating Group • 17

D

- Date-Time Settings • 28
- Destinator Configurations • 21
- Destinator Screen Buttons • 6
- Detour • 18
- Device System Settings • 27
- Driving Directions • 15

F

- Favorite Locations • 12

G

- Go to an Address • 5
- Go to Another Country • 6
- Going to a Favorite Destination • 12
- GPS Settings • 22, 23
- GPS Troubleshooting • 23
- Groups • 13

H

- Help • 26

I

- Introduction • 2

K

- Keyboard Command Keys • 6

L

- Language Settings • 22, 28
- Location Icons • 4
- Location Point on Main Map • 4

- Look & Feel Settings • 22

M

- Main Map • 3
- Main Map Icons • 3
- Map Browsing • 19
- Map Selection • 20
- Map Settings • 25
- Map Views • 4

N

- Navigate to an Address • 7

P

- Walking Mode • 19
- POI category • 9
- POI Name • 8
- Points of Interest (POI) • 8
- Power Setting • 27
- Prompts • 21

Q

- QuickNav • 10

R

- Recent Locations • 11
- Road Prompts • 21
- Route Overview • 4

S

- Save a Favorite Location • 12
- Search for a Location Near You • 8
- Search for a POI category • 9
- Search for a POI Name • 8
- Select Location and Generate Route • 5
- Sending • 7, 10, 11, 14
- Show or Hide Symbol on Map • 9
- System Information • 28

T

- Technical Support • 29
- Time Settings • 24
- Tutorial • 2

U

- Units of Measure • 24

V

- Voice Prompts • 21

Destinator