



# DVD Player

## DVD-HD941



**ELECTRONICS**

HEADQUARTERS  
105 Challenger Road  
Ridgefield Park, NJ 07660-0511  
TEL: 1-800-SAMSUNG

SERVICE DIVISION  
400 Valley Road, Suite 201  
Mount Arlington, NJ 07856  
1-800-SAMSUNG (1-800-726-7864)  
[www.samsungusa.com](http://www.samsungusa.com)



## Important Safety Instructions

 
- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings, Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding- type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus.
- 13) Unplug this apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



## Precautions



TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER(OR BACK). NO USER-SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying the product.

Do not install this equipment in a confined space such as a bookcase or similar unit.

**WARNING :** To prevent damage which may result in fire or electric shock hazard, do not expose this appliance to rain or moisture.

**CAUTION :** DVD PLAYERS USE AN INVISIBLE LASER BEAM WHICH CAN CAUSE HAZARDOUS RADIATION EXPOSURE IF DIRECTED. BE SURE TO OPERATE PLAYER CORRECTLY AS INSTRUCTED.

### CAUTIONS

Caution: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

Attention: Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

This product satisfies FCC regulations when shielded cables and connectors are used to connect the unit to other equipment. To prevent electromagnetic interference with electric appliances, such as radios and televisions, use shielded cables and connectors for connections.

### FCC NOTE (for U.S.A):

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on.

The user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect this equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This class B digital apparatus meets all requirements of the Canadian Interference -- Causing Equipment Regulations.

CLASS 1 LASER PRODUCT  
KLASSE 1 LASER PRODUKT  
LUOKAN 1 LASER LAITE  
KLASS 1 LASER APPARAT  
PRODUCTO LÁSER CLASE 1

**CAUTION**

THIS PRODUCT UTILIZES A LASER. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVER AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

**Note:**

- This unit can be used only where the power supply is AC 120V, 60Hz. It cannot be used elsewhere.
- This DVD player is designed and manufactured to respond to the Region Management Information. If the Region number of a DVD disc does not correspond to the Region number of this DVD player, the DVD player cannot play the disc.
- The product unit accompanying this user manual is licensed under certain intellectual property rights of certain third parties. In particular, this product is licensed under the following US patents: 5,991,715, 5,740,317, 4,972,484, 5,214,678, 5,323,396, 5,539,829, 5,606,618, 5,530,655, 5,777,992, 6,289,308, 5,610,985, 5,481,643, 5,544,247, 5,960,037, 6,023,490, 5,878,080, and under US Published Patent Application No. 2001-44713-A1.

This license is limited to private non-commercial use by end-user consumers for licensed contents.

No rights are granted for commercial use. The license does not cover any product unit other than this product unit and the license does not extend to any unlicensed product unit or process conforming to ISO/IEC 11172-3 or ISO/IEC 13818-3 used or sold in combination with this product unit.

The license only covers the use of this product unit to encode and/or decode audio files conforming to the ISO/IEC 11172-3 or ISO/IEC 13818-3. No rights are granted under this license for product features or functions that do not conform to the ISO/IEC 11172-3 or ISO/IEC 13818-3.

**Handling Cautions**

- Before connecting other components to this player, be sure to turn them all off.
- Do not move the player while a disc is being played, or the disc may be scratched or broken, and the player's internal parts may be damaged.
- Do not put a flower vase filled with water or any small metal objects on the player.
- Be careful not to put your hand into the disc tray.
- Do not place anything other than the disc in the disc tray.
- Exterior interference such as lightning and static electricity can affect normal operation of this player. If this occurs, turn the player off and on again with the POWER button, or disconnect and then reconnect the AC power cord to the AC power outlet. The player will operate normally.
- Be sure to remove the disc and turn off the player after use.
- Disconnect the AC power cord from the AC outlet when you don't intend to use the player for long periods of time.
- Clean the disc by wiping in a straight line from the inside to the outside of the disc.

**Disc Storage**

 
Be careful not to harm the disc because the data on these discs is highly vulnerable to the environment.

- Do not keep under direct sunlight.
- Keep in a cool ventilated area.
- Store vertically.
- Keep in a clean protection jacket.

**Maintenance of Cabinet**

For safety reasons, be sure to disconnect the AC power cord from the AC outlet.

- Do not use benzene, thinner, or other solvents for cleaning.
- Wipe the cabinet with a soft cloth.

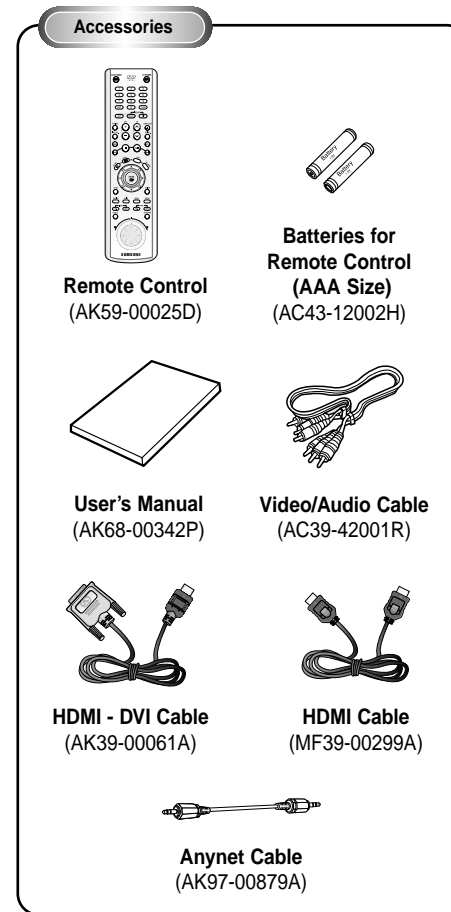

**Install Batteries in the Remote**

1. Open the battery cover on the back of the remote.
2. Insert two AAA batteries. Make sure that the polarities (+ and -) are aligned correctly.
3. Replace the battery cover.

**If remote doesn't operate properly**

- Check the polarity + - of the batteries (Dry-Cell)
- Check if the batteries are drained.
- Check if remote sensor is blocked by obstacles.
- Check if there is any fluorescent lighting nearby.

**Setup**

Important Safety Instructions ..... 2  
 Precautions ..... 3  
 Before you start ..... 5  
 General Features ..... 6  
 Disc Type and Characteristics ..... 7  
 Description-Front Panel ..... 8  
 Display Indicators ..... 9  
 Description-Rear Panel ..... 10  
 Tour of the Remote Control ..... 11

**Connections**

Choosing a Connection ..... 12

**Basic Functions**

Playing a Disc ..... 17  
 Using the Search & Skip Functions ..... 18  
 Using the Display Function ..... 18  
 Using the Disc and Title Menu ..... 19  
 Using the Function Menu ..... 20  
 Repeat Play ..... 20  
 Slow Repeat Play ..... 21  
 Program Play & Random Play ..... 21

**Advanced Functions**

Adjusting the Aspect Ratio (EZ View) ..... 22  
 Selecting the Audio Language ..... 23  
 Selecting the Subtitle Language ..... 23  
 Changing the Camera Angle ..... 24  
 Using the Instant Replay/Skip Function ..... 24  
 Using the Bookmark Function ..... 25  
 Using the Zoom Function ..... 26  
 Super Audio CD Playback ..... 26  
 DVD AUDIO Playback ..... 28  
 Clips Menu for MP3/WMA/JPEG ..... 29  
 Folder Selection ..... 30  
 MP3/WMA Playback ..... 30  
 Picture CD Playback ..... 31

**Changing Setup menu**

Using the Setup Menu ..... 32  
 Setting Up the Language Features ..... 33  
 Setting Up the Audio Options ..... 35  
 Surround Sound Speaker Setup ..... 36  
 Setting Up the Display Options ..... 37  
 Setting Up the Parental Control ..... 38

**Reference**

Controlling a TV with the Remote ..... 40  
 Troubleshooting ..... 41  
 Specifications ..... 43  
 Warranty ..... 44

## General Features

### Excellent Sound

Dolby Digital, a technology developed by Dolby Laboratories, provides crystal clear sound reproduction.

### Screen

Both regular and widescreen(16:9) pictures can be viewed.

### Slow Motion

An important scene can be viewed in slow motion.

### Programmed Play (CD)

You can program tracks to play in desired order.

### Parental Control (DVD)

The parental control allows users to set the level necessary to prohibit children from viewing harmful movies such as those with violence, adult subject matter, etc.

### Various On-Screen Menu Functions

You can select various languages (Audio/Subtitle) and screen angles while enjoying movies.

### EZ VIEW (DVD)

Easy View can convert Letter Box images to full screen viewing on your conventional TV.

### Digital Photo Viewer (JPEG)

You can view Digital Photos on your TV.

### Repeat

You can repeat a song or movie simply by pressing the REPEAT button.

### MP3/WMA

This unit can play discs created from MP3/WMA files.

### Instant Replay (DVD)

This function is used to replay the previous 10 seconds of a movie from the current position.

### Instant Skip (DVD)

This function skips playback ahead 10 seconds.

### Super Audio CD

Super Audio CD is a high quality audio format with higher sampling rates and fuller, richer sound as compared to regular CD.

### DVD AUDIO

DVD AUDIO is a format specifically designed to provide the highest possible audio fidelity capable on DVD.

### HDMI (High Definition Multimedia Interface)

HDMI reduces picture noise by allowing a pure digital video/audio signal path from the player to your TV.

### ANYNET

Using Anynet, you can conveniently operate your Samsung DVD and AV devices with your Samsung TV remote control.

### Note

\* Discs which cannot be played with this player.

- DVD-ROM
- DVD-RAM
- CD-ROM
- CDV
- CDI
- CDGs play audio only, not graphics.

\* Ability to play back may depend on recording conditions.

- DVD-R, +R
- CD-RW
- DVD+RW, -RW

\* The unit may not play certain CD-R, CD-RW and DVD-R due to the disc type or recording conditions.

\* When connecting your DVD player to your TV via the Component jacks, the Video Output in the Setup Menu must be set to Component (I-SCAN). The screen will be red if Video Out is set incorrectly to S-Video.

### COPY PROTECTION






Many DVD discs are encoded with copy protection. Because of this, you should only connect your DVD player directly to your TV, not to a VCR. Connecting to a VCR results in a distorted picture from copy-protected DVD discs.

This product incorporates copyright protection technology that is protected by methods claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners.

Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

## Disc Type and Characteristics

This DVD player is capable of playing the following types of discs with the corresponding logos:

Disc Types (Logos)	Recording Types	Disc Size	Max. Playing Time	Characteristics
<b>DVD-VIDEO</b> 	Audio + Video	5"	Single-sided 240 min. Double-sided 480 min.	<ul style="list-style-type: none"> <li>• DVD contains excellent sound and video due to Dolby Digital and MPEG-2 system.</li> <li>• Various screen and audio functions can be easily selected through the on-screen menu.</li> </ul>
		3 1/2"	Single-sided 80 min. Double-sided 160 min.	
<b>VIDEO-CD</b> 	Audio + Video	5"	74 min.	<ul style="list-style-type: none"> <li>• Video with CD sound, VHS quality &amp; MPEG-1 compression technology.</li> </ul>
		3 1/2"	20 min.	
<b>AUDIO-CD</b> 	Audio	5"	74 min.	<ul style="list-style-type: none"> <li>• CD is recorded as a Digital Signal with better audio quality, less distortion and less deterioration of audio quality over time.</li> </ul>
		3 1/2"	20 min.	
<b>DVD AUDIO</b> 	Audio + Video	5"	400 min.	<ul style="list-style-type: none"> <li>• DVD AUDIO is a format specifically designed to provide the highest possible audio fidelity capable on DVD.</li> </ul>
<b>Super Audio CD</b> 	Audio	5"	74 min.	<ul style="list-style-type: none"> <li>• Super Audio CD is a high quality audio format with higher sampling rates and fuller, richer sound as compared to regular CD.</li> </ul>

### Disc Markings

 
	Play Region Number
	NTSC broadcast system in U.S.A, Canada, Korea, Japan, etc.
	Dolby Digital disc
	Stereo disc
	Digital Audio disc
	DTS disc
	MP3 disc
	Super Audio CD disc
	DVD AUDIO disc

### Play Region Number

Both the DVD player and the discs are coded by region. These regional codes must match in order for the disc to play. If the codes do not match, the disc will not play.

**The Region Number for this player is described on the rear panel of the player.**


## Description-Front Panel

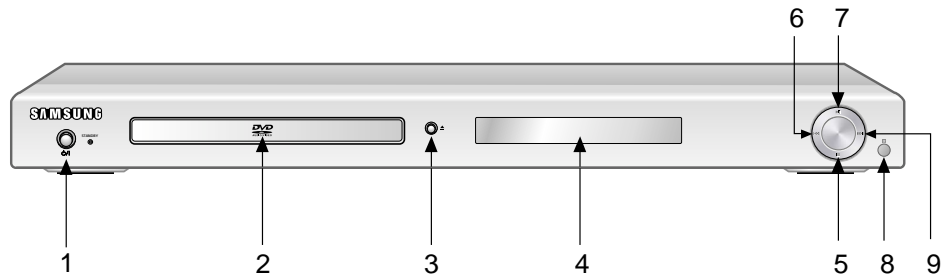

### Front Panel Controls

- 1. STANDBY/ON ( ⏻ )**
  - When the unit is first plugged in, the red indicator lights.
  - When STANDBY/ON button is pressed on, the blue light appears and the player is turned on.
- 2. DISC TRAY**
  - Place the disc here.
- 3. OPEN/CLOSE ( ▲ )**
  - Press to open and close the disc tray.
- 4. DISPLAY**
  - Operation indicators are displayed here.
- 5. STOP ( ■ )**
  - Stops disc play.
- 6. SKIP ( ⏮ ) / SEARCH**
  - Use to reverse skip a scene or music.
- 7. PLAY/PAUSE ( ⏸ )**
  - Begin or pause disc play.
- 8. REMOCON RECEIVER**
- 9. SKIP ( ⏭ ) / SEARCH**
  - Use to forward skip a scene or music.

 
## Display Indicators

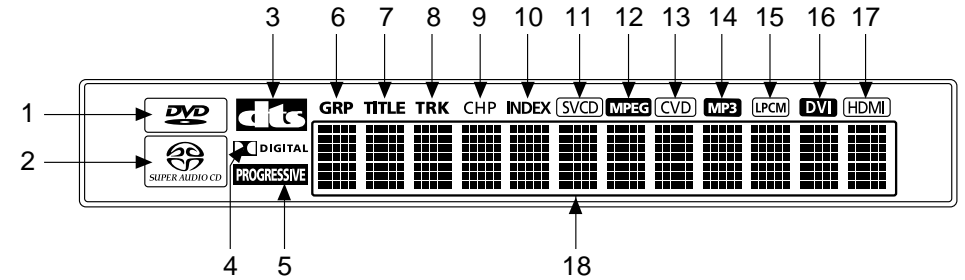

### Front Panel Display

- 1. DVD : DVD is loaded**  
**Audio : DVD-Audio disc is playing**
- 2. Super Audio CD is loaded**
- 3. DTS (Digital Theater System) output**
- 4. Dolby-Digital Disc**
- 5. Progressive Scan Video output**
- 6. DVD-Audio : Group number**
- 7. DVD-Video : Title number**
- 8. DVD-Audio, CD, Video CD, Super Audio CD : Track number**
- 9. DVD-Video : Chapter number**
- 10. DVD-Audio : Index number**
- 11. Disc type indicators : SVCD(Super VCD), VCD, CD**
- 12. MPEG Audio output**
- 13. CVD (Chinese VCD) Disc indicator**
- 14. MP3 Audio output**
- 15. Linear PCM audio output**
- 16. Lights when the device connected to the HDMI Jack is a DVI device**
- 17. Lights when the device connected to the HDMI Jack is a HDMI device**
- 18. Displays various messages concerning operations such as PLAY, STOP, LOAD ...**  
**no DISC** : No disc loaded.  
**OPEN** : The disc tray is open.  
**LOAD** : Player is loading disc information.
 
## Description-Rear Panel

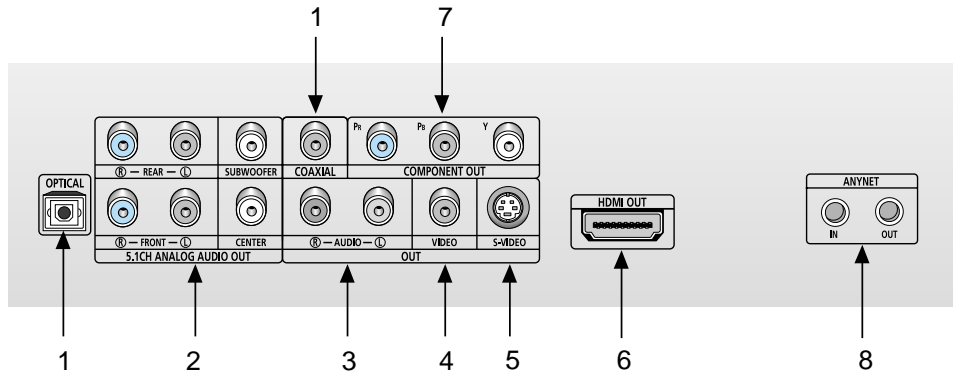

### Rear Panel

#### 1. DIGITAL AUDIO OUT JACKS

- Use an optical or coaxial digital cable to connect to a compatible Dolby Digital receiver. Use to connect to an A/V Amplifier that contains a Dolby Digital or DTS decoder.

#### 2. 5.1CH ANALOG AUDIO OUT JACKS

- Connect to an amplifier with 5.1ch analog input jacks.

#### 3. AUDIO OUT JACKS

- Connect to the Audio input jacks of your television, audio/video receiver.

#### 4. VIDEO OUT JACK

- Use a video cable to connect to the Video input jack on your television.

#### 5. S-VIDEO OUT JACK

- Use the S-Video cable to connect this jack to the S-Video jack on your television for a higher quality picture.
- The Video Output in Setup Menu must be set to S-Video, P-SCAN, or HDMI-DVI.

#### 6. HDMI OUT JACK

- Use the HDMI or HDMI-DVI cable to connect this jack to the HDMI or DVI jack on your television for the best quality picture.
- If HDMI cable is connected with TV available for HDMI output, HDMI mode will work automatically.

#### 7. COMPONENT OUT JACKS

- Use these jacks if you have a TV with Component Video in jacks. These jacks provide Pr, Pb and Y video.

- If Component (P-SCAN) is selected in Setup Menu, P-SCAN mode will work.
- If Component (I-SCAN) is selected in Setup Menu, I-SCAN mode will work.

#### 8. ANYNET JACK

 
- Use these jacks if you have a TV with ANYNET jack. These jacks provide you with a control this unit with a TV remote.

### Important Note

- Consult your TV User's Manual to find out if your TV supports Progressive Scan. If Progressive Scan is supported, follow the TV User's Manual's instructions regarding Progressive Scan settings in the TV's menu system.
- The HDMI output of this unit can be connected to a DVI jack on a TV or other device using a conversion adapter. In this case, it is necessary to use a TV or display with an HDCP-compatible DVI input.
- There may be no image output if connected to a TV or display that is not compatible with the above format (See page 16).
- HDCP(High-bandwidth Digital Content Protection) is a system for protecting DVD content outputted via DVI from being copied. It provides a secure digital link between a video source(PC, DVD, etc) and a display device(TV, projector, etc). Content is encrypted at the source device to prevent unauthorized copies from being made.
- Refer to the instruction manual of the TV or display to be connected to this unit for detailed information regarding the HDMI terminal.
- See page 38 to get more information on how to use the setup menu.

## Tour of the Remote Control

This remote control can also control most TVs. See page 40.

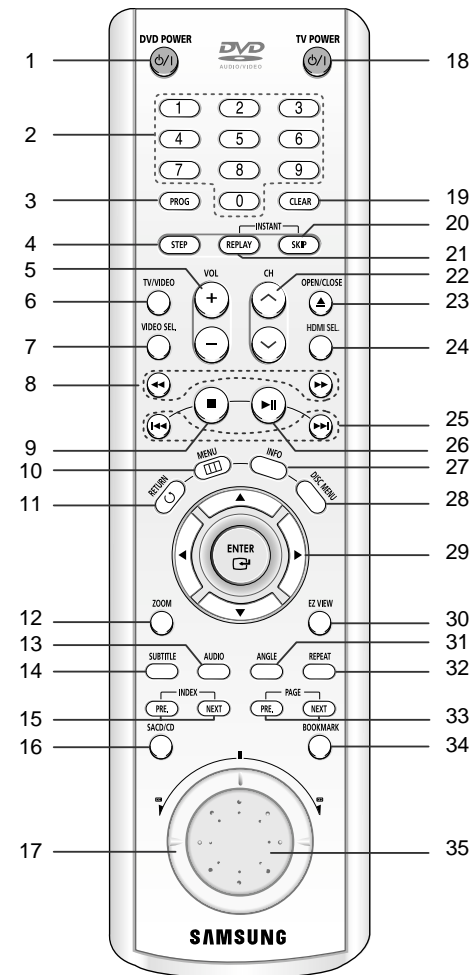

#### 8. SEARCH Buttons (◀ / ▶)

- Allow you to search forward/backward through a disc.

#### 9. STOP Button (■)

- Brings up the DVD player's menu.

#### 11. RETURN Button

- Returns to a previous menu.

#### 12. ZOOM Button

- Enlarges DVD picture.

#### 13. AUDIO Button

- Use this button to access various audio functions on a disc.

#### 14. SUBTITLE Button

- Use to skip the INDEX.

#### 16. SACD/CD Button

- Selects Super Audio CD or CD playback mode.

#### 17. SHUTTLE DIAL (Search mode)

- Performs fast motion play.

#### 18. TV POWER button

- Turns the TV's power on or off.

#### 19. CLEAR Button

- Use to remove menus or status displays from the screen.

#### 20. INSTANT SKIP Button

- This function skips playback ahead 10 seconds.

#### 21. INSTANT REPLAY Button

- This function is used to replay the previous 10 seconds of a movie from the current position.

#### 22. CH ^ / v buttons

- Channel selection.

#### 23. OPEN/CLOSE (▲) Button

- To open and close the disc tray.

#### 24. HDMI SEL. Button

- HDMI or DVI Output resolution setup.

#### 25. SKIP Buttons (◀◀ / ▶▶)

- Use to skip the title, chapter, or track.

#### 26. PLAY/PAUSE Button (▶|)

- Begin/Pause disc play.

#### 27. INFO Button

- Displays the current disc mode.

#### 28. DISC MENU Button

- Brings up the Disc menu.

#### 29. ENTER/DIRECTION Button (UP/DOWN or LEFT/RIGHT Buttons)

- This button functions as a toggle switch.

#### 30. EZ VIEW Button

- Easy View can convert Letter Box images to full screen viewing on your conventional TV.

#### 31. ANGLE Button

- Use to access various camera angles on a DVD.

#### 32. REPEAT Button

- Allows you to repeat play a title, chapter, track, or disc.

#### 33. PAGE Buttons

- Use to skip the PAGE.

#### 34. BOOKMARK Button

#### 35. JOG DIAL (Step mode)

- Operates frame by frame play. In CD mode, performs track search.

### DVD Function Buttons

#### 1. DVD POWER Button

- Turns the power on or off.

#### 2. NUMBER Buttons

- Allows you to program a specific order.

#### 3. PROG Button

- Advances play one frame at a time.

#### 5. VOL +/- Buttons

- Control volumes.

#### 6. TV/VIDEO Button

- Press to display all of the available video sources (i.e., TV, Cable, Video)

#### 7. VIDEO SEL. Button

- Selects Video output format.

 
## Choosing a Connection

The following shows examples of connections commonly used to connect the DVD player with a TV and other components.

### Before Connecting the DVD Player

- Always turn off the DVD player, TV, and other components before you connect or disconnect any cables.
- If you connected an external Audio System, turn on your Audio System and set it to the correct Audio Input.
- Refer to the owner's manual of the additional components you are connecting for more information on those particular components.

### Connection to an Audio System

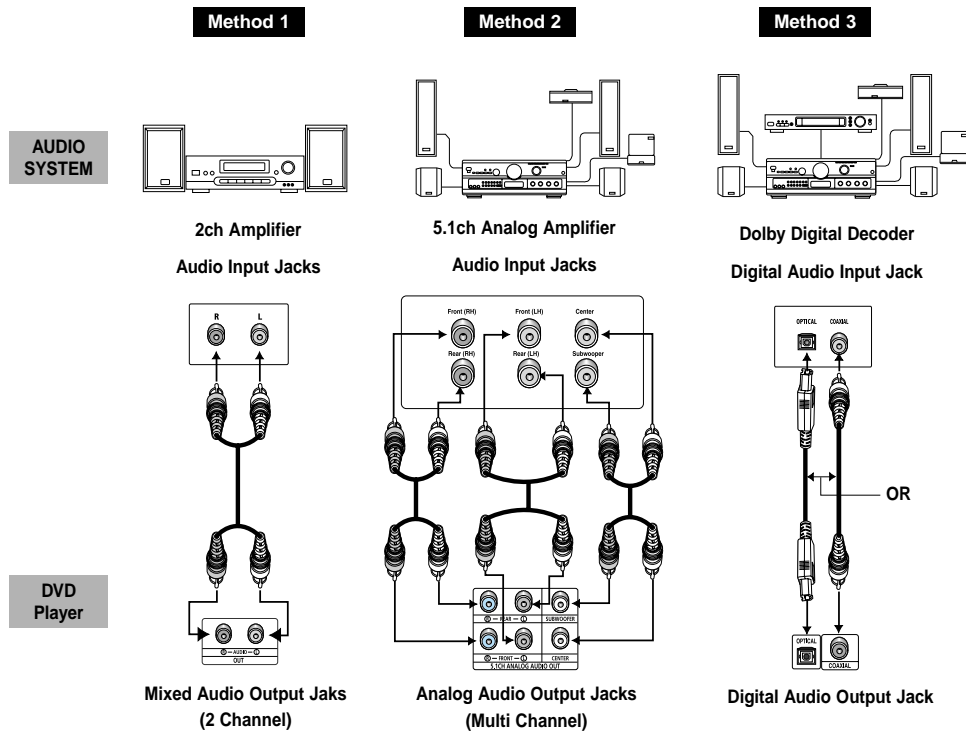


### Note

- DVD-AUDIO only plays back two channel audio through the Digital Audio out. Multi-channel DVD-Audio discs are output through the Analog outputs.
- Super Audio CD plays back only through the Analog outputs. (See page 35)

## Choosing a Connection

### Connection to a TV (For Video)

 TV (Normal, Widescreen, Projection, etc..)

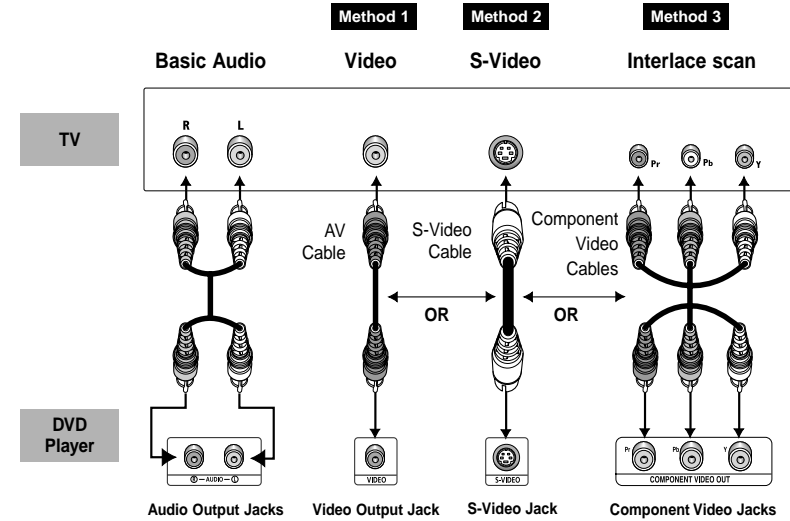

1. Connect a cable with the desired method.
2. Turn on your TV and DVD Player.
3. Set your TV the correct video input by pressing TV/VIDEO button on. (See page 40)
4. Select the video output according to the cable connection.  
If you use the VIDEO SEL. button, you can change easily video output in no disc mode.

### Method 1

DVD Player + TV with Video Input Jack

### Method 2

DVD Player + TV with S-Video Input Jack

(The Video Output in Setup Menu must be set to S-Video, P-SCAN or HDMI-DVI.)

S-Video output does not work when the Video Out in Setup Menu is set to Component (I-SCAN).

### Method 3

DVD Player + TV with Component Video Jacks

(The Video Output in Setup Menu must be set to Component (I-SCAN).)

 
The screen will be red if Video Out is set incorrectly to S-Video.

### Note

- If you press the VIDEO SEL. button with no disc in the unit, the Video output mode changes in the following sequence:  
**(S-Video → I-SCAN → P-SCAN)**

## Choosing a Connection

### Connection to a TV (For Progressive scan, Digital Video)

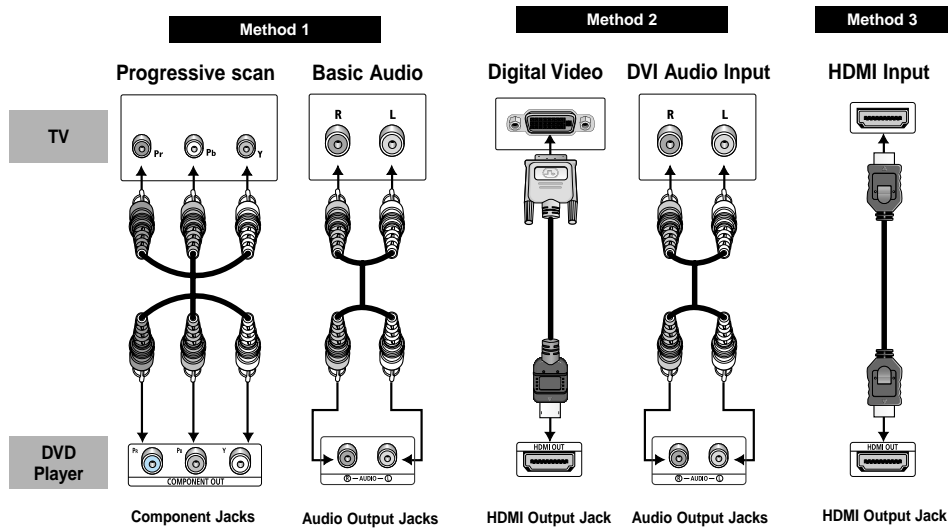

#### Method 1

DVD Player + TV with Component Video Jacks.  
(The Video Output in Setup Menu must be set to Component (P-SCAN).)

#### Method 2

DVD Player + TV with DVI Jack.  
 • Depending on your TV, your hookup for Method 2 may differ from the illustration.  
 (The Video Input on TV must be set to DVI.)

#### Method 3

DVD Player + TV with HDMI Jack.  
 • Depending on your TV, your hookup for Method 3 may differ from the illustration.  
 (The Video Input on TV must be set to HDMI.)

 
#### Important Note

- Consult your TV User's Manual to find out if your TV supports Progressive Scan, DVI or HDMI.
- **If you want to convert Video Output to Progressive Scan, select Component (P-SCAN) in SETUP menu and then select "Yes" within 10 seconds. Finally change the TV's external input to Component (480p).** (See Page 37)
- Use the VIDEO SEL. button to easily change the video output in no disc mode. (See page 11)
- If HDMI or HDMI-DVI cable is plugged into TV, the player output is HDMI/DVI out automatically.
- When the Video output is HDMI/DVI, Component (P-SCAN) will not work.
- If you want to control HDMI output Brightness, you can adjust brightness and contrast in your TV function.
- Refer to your TV user's manual.

## Choosing a Connection

### Connection to a TV (For ANYNET)

The Anynet function allows you to use your Samsung TV's remote control and menu to control Samsung AV devices. Connect the ANYNET OUT port of the DVD Player to the ANYNET in port of your Samsung AV device. See the Anynet manual provided with your Samsung Anynet. enabled TV for more information.

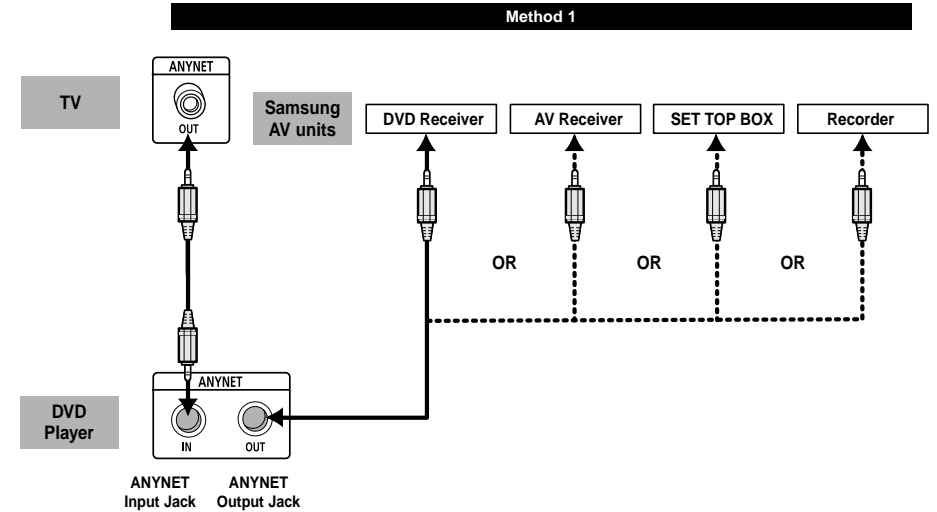

#### Method 1

DVD Player + TV with ANYNET jack.  
 • Depending on your TV, your hookup for Method1 may differ from the illustration.  
 (Refer to ANYNET Manual supplied with the TV for the detailed functional operation and connection diagram.  
 But, you shall set up ANYNET on your TV first.)

#### Important Note

- The ANYNET function can only be used with Samsung Anynet enabled models
- Reversing the connection between the In and Out ANYNET ports will disable the ANYNET function.
- The ANYNET ports are light green(IN) and black(OUT).  
 Be sure to match the ANYNET IN/OUT port with the right cable color.



## Choosing a Connection

### HDMI VIDEO Specifications

When you press the HDMI SEL. button 480p, 720p, 768p, 1080i are selected in order.

The first press of the HDMI SEL. button, brings up the current resolution.

The second press allows you to change the HDMI output resolution.

\* Depending on your TV, certain HDMI output resolutions may not work .

\* Refer to your TV users manual.

### Important Note

- HDMI (High Definition Multimedia Interface)  
HDMI is an interface to enable the digital transmission of video and audio data with just a single connector. Using HDMI, the DVD player transmits a digital video and audio signal and displays a vivid picture on a TV having a HDMI jack.
- Description of the HDMI connection  
HDMI connector - Both uncompressed video data and digital audio data(LPCM or Bit Stream data).
- Though the player uses a HDMI cable, the player outputs only a pure digital signal to the TV.
- If TV does not support HDCP (High-bandwidth Digital content protection), snow noise appears on the screen.
- Why does Samsung use HDMI?  
Analog TVs require an analog video/audio signal. However, when playing a DVD, the data transmitted to a TV is digital. Therefore either a digital-to-analog converter(in the DVD player) or an analog-to-digital converter (in the TV) is required. During this conversion, the picture quality is degraded due to noise and signal loss. DVI technology is superior because it requires no D/A conversion and is a pure digital signal from the player to your TV.
- What is the HDCP?  
HDCP(High-bandwidth Digital Content Protection) is a system for protecting DVD content outputted via DVI from being copied. It provides a secure digital link between a video source(PC, DVD. etc) and a display device(TV, projector . etc). Content is encrypted at the source device to prevent unauthorized copies from being made.

### PROGRESSIVE SCAN OUTPUT (525p)

“CONSUMERS SHOULD NOTE THAT NOT ALL HIGH DEFINITION TELEVISION SETS ARE FULLY COMPATIBLE WITH THIS PRODUCT AND MAY CAUSE ARTIFACTS TO BE DISPLAYED IN THE PICTURE, IN CASE OF 525 PROGRESSIVE SCAN PICTURE PROBLEMS, IT IS RECOMMENDED THAT THE USER SWITCH THE CONNECTION TO THE ‘STANDARD DEFINITION’ OUTPUT. IF THERE ARE QUESTIONS REGARDING YOUR TV SET COMPATIBILITY WITH THIS MODEL 525p DVD PLAYER, PLEASE CONTACT OUR CUSTOMER SERVICE CENTER.”

## Playing a Disc

### Before Play

- Turn on your TV and set it to the correct Video Input by pressing TV/VIDEO button on the TV remote control.
- If you connected an external Audio System, turn on your Audio System and set it to the correct Audio Input.

After plugging in the player, the first time you press the DVD POWER button, this screen comes up :  
If you want to select a language, press a NUMBER button. (This screen will only appear when you plug in the player for the first time.)  
If the language for the startup screen is not set, the settings may change whenever you turn the power on or off. Therefore, make sure that you select the language you want to use.



### Play

1. Press the OPEN/CLOSE button.  
The STANDBY indicator light goes out and the tray opens.
2. Place a disc gently into the tray with the disc's label facing up.
3. Press the PLAY/PAUSE (▶||) button or OPEN/CLOSE button to close the disc tray.
4. Stopping Play  
Press the STOP (■) button during play.
5. Removing Disc  
Press the OPEN/CLOSE button.
6. Pausing Play  
Press the PLAY/PAUSE (▶||) or STEP button on the remote during play.  
- Screen stops, no sound.  
- To resume, press the PLAY/PAUSE (▶||) button once again.

### 7. Step Motion Play

(Except CD/DVD-AUDIO/Super Audio CD)

Turn the Jog dial clockwise or press the STEP button on the remote during play.

- Each time the button is pressed or Jog Dial is turned, a new frame will appear.
- No sound is heard during STEP mode.
- Press PLAY/PAUSE (▶||) button to resume normal play.
- You can only perform step motion play in the forward direction.

### 8. Slow Motion Play

(Except CD/DVD-AUDIO/Super Audio CD)

Press the FWD SEARCH (▶▶) button on the remote during PAUSE or STEP mode.

- By pressing the FWD SEARCH (▶▶) button, you can select slow motion play for 1/8, 1/4 or 1/2 of normal speed.
- No sound is heard during slow mode.
- Press PLAY/PAUSE (▶||) to resume normal play.
- Reverse slow motion play will not work.

### RESUME function

When you stop disc play, the player remembers where you stopped, so when you press PLAY/PAUSE (▶||) button again, it will pick up where you left off. (unless the disc is removed or the player is unplugged, or if you press the STOP (■) button twice.)

### Note

- If the player is left for about 5 minutes in pause mode, it will stop.
- If the player is left in the stop mode for more than about 30 minutes, the power will automatically shut off. (Automatic Power-Off Function)
- If the player is left in the stop mode for more than one minute without any user interaction, a screen saver will be activated. Press the PLAY/PAUSE (▶||) button to resume normal play.
- This ⓪ icon indicates an invalid button press.

## Using the Search & Skip Functions

During play, you can search quickly through a chapter or track or use the skip function to jump to the next selection.

### Searching through a Chapter or Track

During play, press the SEARCH (◀◀ or ▶▶) button and press again to search at a faster speed.

- You can also use the Shuttle dial on the remote by turning.
  - Forward Shuttle dial : ▶▶ 1/8 → ▶▶ 1/4 → ▶▶ 1/2 → Play → ▶▶ 2X → ▶▶ 4X → ▶▶ 8X
  - Reverse Shuttle dial : ◀◀ 2X → ◀◀ 4X → ◀◀ 8X
- This function can be used with Super Audio CD, when the clips menu is off. (See page 27)

DVD	2X, 4X, 64X, 128X
VCD	4X, 8X
CD/Super Audio CD/DVD-AUDIO	2X, 4X, 8X

### Skipping Tracks

During play, press the ◀◀ or ▶▶ button.

- When playing a DVD, if you press the ▶▶ button, it moves to the next chapter. If you press the ◀◀ button, it moves to the beginning of the chapter. One more press makes it move to the beginning of the previous chapter.
- When playing a VCD 2.0 in Menu Off mode, a VCD 1.1, Super Audio CD, DVD-AUDIO or a CD, if you press the ▶▶ button, it moves to the next track. If you press the ◀◀ button, it moves to the beginning of the track. One more press makes it move to the beginning of the previous track.
- If a track exceeds 15 minutes when playing a VCD and you press the ▶▶ button, it moves forward 5 minutes, in menu off mode. If you press the ◀◀ button, it moves backward 5 minutes.

### Note

- When playing a VCD 2.0, you can choose Menu On or Menu Off by using the DISC MENU button.

## Using the Display Function

 
### When Playing a DVD/VCD/CD

- During play, press the INFO button on the remote.
- Use the UP/DOWN buttons to select the desired item.
- Use the LEFT/RIGHT buttons to make the desired setup and then press ENTER.
  - You may use the number buttons of the remote control to directly access a title, chapter or to start the playback from the desired time.
- To make the screen disappear, press the INFO button again.


#### DVD



#### VCD

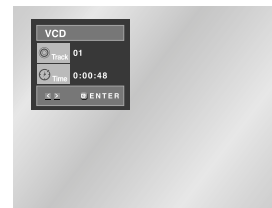

#### CD

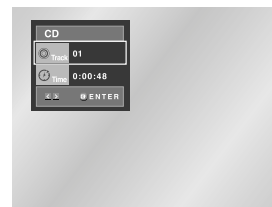 

## Using the Display Function

**Title** To access the desired title when there is more than one in the disc. For example, if there is more than one movie on a DVD, each movie will be identified.

**Chapter** Most DVD discs are recorded in chapters so that you can quickly find a specific passage (similar to tracks on an audio CD).

**Time** Allows playback of the film from a desired time. You must enter the starting time as a reference.

**Audio** Refers to the language of the film soundtrack. In the example, the soundtrack is played in English 5.1CH. A DVD disc can have up to eight different soundtracks.

**Subtitle** Refers to the subtitle languages available in the disc. You will be able to choose the subtitle languages or, if you prefer, turn them off from the screen. A DVD disc can have up to 32 different subtitles.

 
### Note

- When VCD 2.0 is in Menu Off mode only, this function works. (See page 18)

## Using the Disc and Title Menu

### Using the Disc Menu

- During the playback of a DVD disc, press the MENU button on the remote.
- Select **Disc Menu** using the UP/DOWN buttons, then press the RIGHT or ENTER button.

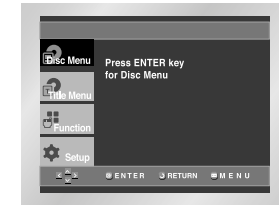

### Using the Title Menu

- During the playback of a DVD disc, press the MENU button on the remote.
- Select **Title Menu** using the UP/DOWN buttons, then press the RIGHT or ENTER button.



### Note

- Depending on a disc, the Title and Disc Menus may not work.
- Title Menu will only be displayed if there are at least two titles in the disc.
- You can also use the Disc Menu, using the DISC MENU button on the remote.
- In VCD 2.0, the DISC MENU button is used to select Menu On or Menu Off mode.

## Using the Function Menu

### Using the Function Menu

1. Press the MENU button during playback.
2. Use the UP/DOWN buttons to highlight **Function**, then press the RIGHT or ENTER button.
3. Function selection screen appears: Info, Zoom, Bookmark, Repeat and EZ View and Front Display.
  - Info (See Page 18-19)
  - Zoom (See Page 26)
  - Bookmark (See Page 25)
  - Repeat (See Page 20)
  - EZ View (See Page 22)
  - Front Display : On
    - On : Lights when the front display is selected ON.
4. Use the UP/DOWN button to highlight one of the 6 functions. Then press the RIGHT or ENTER button to access the function.



### Note

- You can also directly select these functions using their respective buttons on the remote.

## Repeat Play

Repeat the current track, chapter, title, a chosen section (A-B), or all of the disc.

### When playing a DVD/VCD/CD

1. Press the REPEAT button on the remote. Repeat screen appears.
  2. Select Chapter, Title or A-B using the LEFT/RIGHT buttons.
    - Chapter ( ): repeats the chapter that is playing.
    - Title ( ): repeats the title that is playing.
    - A-B : repeats a segment of the disc that you select.
- \* A-B REPEAT
- Press ENTER at the point where you want the repeat play to start (A).
  - Press ENTER at the point where you want the repeat play to stop (B).
  - To terminate the function, press the 'CLEAR' button.
  - A-B REPEAT does not allow you to set point (B) until at least 5 seconds has elapsed after point (A) has been set.

### DVD



### VCD/CD



3. Press ENTER.
4. To return to normal play, press REPEAT again, then press the LEFT/RIGHT buttons to select Off and press ENTER.

### Note

- DVD repeats play by chapter or title, CD and VCD repeat play by disc or track.
- Depending on a disc, the Repeat function may not work.
- When VCD 2.0 is in Menu Off mode only, this function works. (See page 18)

## Slow Repeat Play

This feature allows you to slowly repeat scenes containing sports, dancing, musical instruments being played etc. so you can study them more closely.

### When playing a DVD/VCD

1. During play, press the PLAY/PAUSE ( ) button.
2. Press the FWD SEARCH ( ) button on the remote during PAUSE or STEP mode.
3. Press the REPEAT button on the remote. Repeat screen appears.
4. Select A-B using the LEFT/RIGHT buttons.
5. Press ENTER at the point where you want the repeat play to start (A).
  - A-B REPEAT does not allow you to set point (B) until at least 5 seconds has elapsed after point (A) has been set.
6. Press ENTER at the point where you want repeat play to stop (B).
7. To return to normal play, press REPEAT again, then press the LEFT/RIGHT buttons to select Off and press ENTER.

 
### Note

- The disc will play from A to B repeatedly at the speed you chose.
- To return to normal play, press the CLEAR button and then press the PLAY/PAUSE ( ) button.
- When VCD 2.0 is in Menu Off mode only, this function works. (See page 18)

## Program Play & Random Play

### Program Play (CD)

1. Press the PROG button.
2. Use the LEFT/RIGHT buttons to select PROGRAM. Press the ENTER button.
3. Use the LEFT/RIGHT/UP/DOWN buttons to select the first track to add to the program. Press the ENTER button. The selection numbers appear in the Program Order box.
4. Press the PLAY/PAUSE ( ) button. The disc will be played in programmed order.

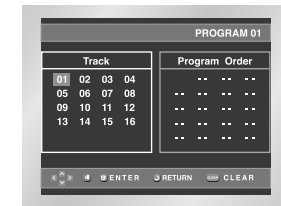

### Random Play (CD)

1. Press the PROG button.
2. Use the LEFT/RIGHT buttons to select RANDOM. Press the ENTER button.



### Note

- Depending on a disc, the Program and Random Play functions may not work.
- This unit can support a maximum of 20 programmed tracks.
- While in playback mode, press the CLEAR button on the remote control to cancel Programmed Play or Random Play.

## Adjusting the Aspect Ratio (EZ View)

### To play back using aspect ratio (DVD)

Press the EZ VIEW button.

- The screen size changes when the button is pressed repeatedly.
- The screen zoom mode operates differently depending on a screen setting in the initial setup menu.
- To ensure correct operation of the EZ VIEW button, you should set the correct aspect ratio in the initial setup (See page 37).

### If you are using a 16:9 TV

#### 1. For 16:9 aspect ratio discs

##### • Wide Screen

Displays the content of the DVD title in 16:9 aspect ratio.

##### • Screen Fit

The top and bottom portions of the screen are cut off. When playing a 2.35:1 aspect ratio disc, the black bars at the top and bottom of the screen will disappear. The picture will look vertically stretched. (Depending on a type of disc, the black bars may not disappear completely.)

##### • Zoom Fit

The top, bottom, left and right portions of the screen are cut off and the central portion of the screen is enlarged.

#### 2. For 4:3 aspect ratio discs

##### • Normal Wide

Displays the content of the DVD title in 16:9 aspect ratio. The picture will look horizontally stretched.

##### • Screen Fit

The top and bottom portions of the screen are cut off and the full screen appears. The picture will look vertically stretched.

##### • Zoom Fit

The top, bottom, left and right portions of the screen are cut off and the central portion of the screen is enlarged.

##### • Vertical Fit

When a 4:3 DVD is viewed on a 16:9 TV, black bars will appear at the left and right of the screen in order to prevent the picture from looking horizontally stretched.

### If you are using a 4:3 TV

#### 1. For 16:9 aspect ratio discs

##### • 4:3 Letter Box

Displays the content of the DVD title in 16:9 aspect ratio. The black bars will appear at the top and bottom of the screen.

##### • 4:3 Pan Scan

The left and right portions of the screen are cut off and the central portion of the 16:9 screen is displayed.

##### • Screen Fit

The top and bottom portions of the screen are cut off and a full screen appears. The picture will look vertically stretched.

##### • Zoom Fit

The top, bottom, left and right of the screen are cut off and the central portion of the screen is enlarged.

#### 2. For 4:3 aspect ratio discs

##### • Normal Screen

Displays the content of the DVD title in 4:3 aspect ratio.

##### • Screen Fit

The top and bottom portions of the screen are cut off and the full screen appears. The picture will look vertically stretched.

##### • Zoom Fit

The top, bottom, left and right portions of the screen are cut off and the central portion of the screen is enlarged.

### Note

- This function may behave differently depending on the type of disc.

 
## Selecting the Audio Language

You can select a desired language quickly and easily with the AUDIO button.

### Using the AUDIO button

1. Press the AUDIO button.
2. The Audio changes when the button is pressed repeatedly.
  - The audio languages are represented by abbreviations.
3. Press the AUDIO button to select Stereo, Right or Left. (On VCD/CD)

#### DVD

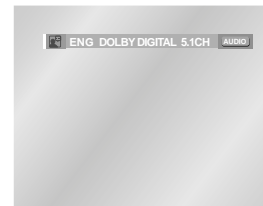

#### VCD/CD



### Note

- This function depends on what languages are encoded on the disc and may not work with all DVDs.
- A DVD disc can contain up to 8 audio languages.
- **How to have the same audio language come up whenever you play a DVD;** Refer to "Setting Up the Language Features" on page 34.

## Selecting the Subtitle Language

You can select a desired subtitle quickly and easily with the SUBTITLE button.

### Using the SUBTITLE button

1. Press the SUBTITLE button.
  - The subtitle languages are represented by abbreviations.
2. The subtitle changes when the button is pressed repeatedly.
3. To turn off the display, press the CLEAR or RETURN button.



### Note

- This function depends on what languages are encoded on the disc and may not work with all DVDs.
- A DVD disc can contain up to 32 subtitle languages.
- **How to have the same subtitle language come up whenever you play a DVD;** Refer to "Setting Up the Language Features" on page 34.

 
## Changing the Camera Angle

When a DVD contains multiple angles of a particular scene, you can use the ANGLE function.

### Using the ANGLE button

If the disc contains multiple angles, the ANGLE mark appears on the screen.

1. Press the ANGLE button, then ANGLE icon will appear with the current angle number and the number of angles available.
2. Press the ANGLE button repeatedly to the desired angle.
3. To remove the ANGLE icon, press the CLEAR or RETURN button.

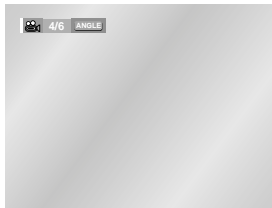

### Note

- If the disc has only one angle, this feature won't work. Currently, very few discs have this feature.

 
## Using the Instant Replay/Skip Function

### Using the Instant Replay function (DVD)

If you miss a scene, you can see it again using this function.

If you press the INSTANT REPLAY button, the current scene moves backward about 10 seconds, and plays back.

\* Depending on the disc, the Instant Replay function may not work.

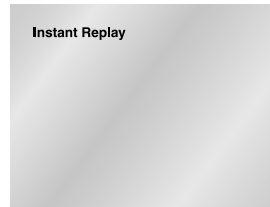


### Using the Instant Skip function (DVD)

Use this function to skip playback about 10 seconds ahead of the current scene.

Press the INSTANT SKIP button.

 - Playback will skip ahead 10 seconds.
- Depending on a disc, this function may not work.

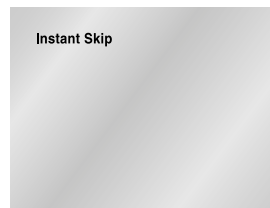


## Using the Bookmark Function

This feature lets you bookmark sections of a DVD or VCD (Menu Off mode) so you can quickly find them at a later time.

### Using the Bookmark Function (DVD/VCD)

 1. During play, press the BOOKMARK button on the remote.
2. Use the LEFT/RIGHT buttons to move to the desired bookmark icon.
3. When you reach the scene you want to mark, press the ENTER button. The icon will change to a number (1, 2, or 3).
4. Press the BOOKMARK button to turn Off the display.

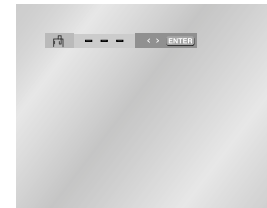

### Recalling a Marked Scene

1. During play, press the BOOKMARK button on the remote.
2. Use the LEFT/RIGHT buttons to select a marked scene.
3. Press the PLAY/PAUSE (▶||) buttons to skip to the marked scene.



### Clearing a Bookmark

1. During play, press the BOOKMARK button on the remote.
2. Use the LEFT/RIGHT buttons to select the bookmark number you want to delete.
3. Press the CLEAR button to delete a bookmark number. Press the BOOKMARK button to turn Off the display.

 
### Note

- Up to three scenes may be marked at a time.
- When VCD 2.0 is in Menu Off mode only, this function works. (See page 18)
- Depending on a disc, the Bookmark function may not work.

## Using the Zoom Function

### Using the Zoom Function (DVD/VCD)

1. During play or pause mode, press the ZOOM button on the remote.  
A Zoom mark will be displayed on screen.
2. Use the UP/DOWN or LEFT/RIGHT buttons to select the part of the screen you want to zoom in on.
3. Press the ENTER button.
  - During DVD play, press ENTER to zoom in 2X/4X/2X/Normal in order.
  - During VCD play, press ENTER to zoom in 2X/Normal in order.

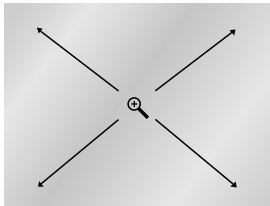

## Super Audio CD Playback

1. Open the disc tray.
2. Place the Super Audio CD disc on the tray.
  - Place the Super Audio CD disc with the labeled side up.
3. Close the tray.
  - The tray closes and you should get a screen that looks like the one below.



### Super Audio CD Clips Menu On Play Function

1. Use the UP/DOWN buttons to select a music title.
2. Press the ENTER button to begin playback of the music title.
  - If you want to use the Repeat Function, press the REPEAT button to change the mode, such as Off, Track, Disc.
    - \*Off : Normal Playback
    - \*Track : Repeats the current music title.
    - \*Disc : Repeats the music titles in the Super Audio CD.
  - If you want to see information about the Disc title and Artist, press the INFO button.
  - If you want to convert to regular CD mode, press the Super Audio CD/CD button.
  - During play or stop mode, you can change the 2CH or MULTI mode by using LEFT/RIGHT buttons. (You can use this function when Super Audio CD disc includes multi channel and 2 channel audio format.)


## Super Audio CD Playback


### Super Audio CD Clips Menu Off Play Function


1. In Stop mode, press the DISC MENU button until the Clips menu is off.
2. During playback, press the INFO button and the screen below appears.
3. Use the UP/DOWN buttons to select the desired item.



4. Use the LEFT/RIGHT buttons to make the desired setup and then press ENTER.
  - You may use the number buttons of the remote control to directly access a track and to start the playback from the desired time.

 **Track** To access the desired Track when there is more than one in the disc.

 **Time** Allows playback from a desired time by using the number buttons.

 **Audio** If you want to change the 2channel or multi channel mode in play or stop mode, press AUDIO button.


- You can use this function when the Super Audio CD disc includes multi channel and 2 channel audio format.
- 2CH : L, R
- MULTI : F/L, F/R, R/L, R/R, C/T, S/W


5. To make the screen disappear, press the INFO button again.

### CD Layer Play Function

During Super Audio CD playback, press the Super Audio CD/CD button to playback the CD layer of a dual layer Super Audio CD disc. (Refer to the page 18 for setting CD playback Function).



 **Track** To access the desired Track when there is more than one in the disc.

 **Time** Allows playback from a desired time. You must enter the starting time as a reference.

### Note

- Some Super Audio CD discs do not include a CD layer.
- Depending on a disc, this function may not work.

## DVD AUDIO Playback

1. Open the disc tray.
2. Place the DVD AUDIO disc on the tray.
  - Place the DVD AUDIO disc with the labeled side up.
3. Close the tray.
  - The tray closes and disc plays.

### Using the Display Function

1. During play, press the INFO button on the remote.
2. Use the UP/DOWN buttons to select the desired item.
3. Use the LEFT/RIGHT buttons to make the desired setup and then press ENTER.
  - You may use the number buttons of the remote control to directly access a Group, Track, Page or to start the playback from the desired time.
4. To make the screen disappear, press the INFO button again.



### Note

Some DVD-AUDIO discs don't down-mix audio. These discs always output 5.1ch analog audio regardless of audio setup.



Most DVD AUDIO discs are recorded in Groups, you can change Groups with this Function.

### Note

- \* Bonus Group playback.
- Some DVD AUDIO discs have Bonus groups. If you want to play a Bonus group, you must enter the Bonus Group code. The code is usually on the DVD AUDIO disc case.



To access the desired Track when there is more than one on the DVD AUDIO disc.



If pages are included with the DVD-AUDIO disc, you can see this icon. To access the desired page, you can use this Function.



If a slide show is included with the DVD-AUDIO disc, you can see this icon. In this case you cannot use PAGE PRE./NEXT buttons.



If a video zone is included with the DVD-AUDIO disc, you can see this icon. In this case, you cannot use PAGE PRE./NEXT buttons.

 


Allows playback of music from a desired time by using the number buttons.

### Page, Index Function

1. Use PAGE PRE./NEXT buttons to Skip the Page when there is more than one in a group.
  - Some DVD-AUDIO discs include a slide show. In the slide show mode, this function can not be use.
  - PAGE is still images. You can see the still images when a DVD-AUDIO disc is played back.
2. Use INDEX PRE./NEXT buttons to Skip the Index when there is more than one in a track.


**Note** Depending on a disc, this function may not work.

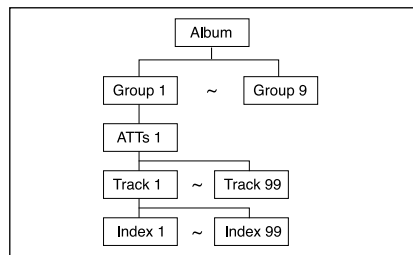

## DVD AUDIO Playback

### REPEAT Play

 1. Press the REPEAT button on the remote during playback.
2. Select Title (T), Group (G) using the LEFT/RIGHT button.
3. Press ENTER.

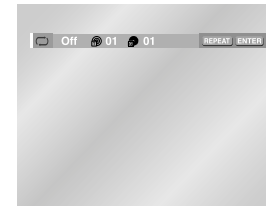

### AUDIO Format Display

During DVD AUDIO playback, press the AUDIO button to see AUDIO Format information.

- LPCM : Linear Pulse Code Modulation.  
Not compressed Audio data format.
- PPCM : Packet Pulse Code Modulation.  
Lossless compressed Audio data format.



 
### Note

Some DVD-AUDIO discs don't allow audio down-mixing. These discs always output 5.1ch analog audio regardless of audio setup.

## Clips Menu for MP3/WMA/JPEG

Discs with MP3/WMA/JPEG contain individual songs or pictures that can be organized into folders as shown below. They are similar to how you use your computer to put files into different folders.

1. Open the disc tray.
2. Place the disc on the tray.
  - Place the disc with the labeled side up.
3. Close the tray.
  - The tray closes and you should get a screen that looks like the one below.

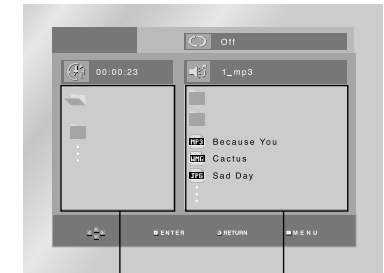

Parent Folder, Current Folder and Peer Folders      Folders and Files in Current Folder

- : Name of currently playing file.
- : Current Playback Time.
- : Current Playback Mode : There are 4 modes. They can be selected in order by pressing the REPEAT button.
  - Off : Normal Playback
  - Track : Repeats the current track.
  - Folder : Repeats the current folder.
  - Random : Files in the disc will be played in random order.

• : MP3 file icon.

• : WMA file icon.

• : JPEG file icon.

• : Folder icon.

• : Current Folder icon.

## Folder Selection

The folder can only be selected in the Stop mode.

### • To select the Parent Folder

 
Press the RETURN button to go to parent folder, or use the UP/DOWN buttons to select “..” and press ENTER to go to the parent folder.

### • To select the Peer Folder

Use the LEFT/RIGHT buttons to highlight left window. Use the UP/DOWN buttons to select the desired folder, then press ENTER.

### • To select the Sub-Folder

Use the LEFT/RIGHT buttons to highlight right window. Use the UP/DOWN buttons to select the desired folder, then press ENTER.

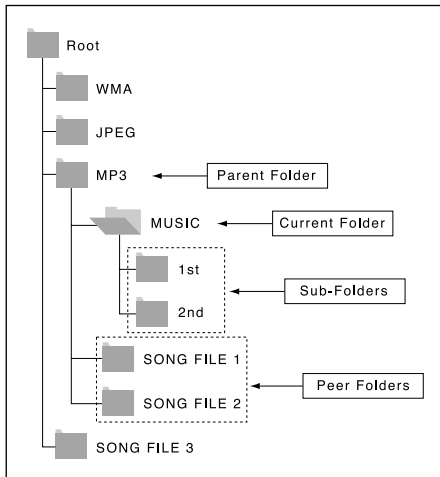

## MP3/WMA Playback

1. Open the disc tray.
  - Place the disc with the labeled side up.
2. Close the tray.
  - The tray closes and you should get a screen that looks like the one below.

### MP3/WMA Play Function

1. Select the desired folder.
2. Use the UP/DOWN or LEFT/RIGHT buttons to select a song file.
3. Press ENTER to begin playback of the song file.



### Repeat/Random playback

Press the REPEAT button to change playback mode. There are 4 modes, such as Off, Track, Folder and Random.

- Off : Normal Playback
- Track : Repeats the current song file.
- Folder : Repeats the song files which have the same extension in the current folder.
- Random : Song files which have the same extension will be played in random order.

\* To resume normal play, press the CLEAR button.

## MP3/WMA Playback

### CD-R MP3/WMA discs

When you record MP3 or WMA files on CD-R, please refer to the following.

#### • Your MP3 or WMA files should be ISO 9660 or JOLIET format.

ISO 9660 format and Joliet MP3 or WMA files are compatible with Microsoft's DOS and Windows, and with Apple's Mac. This format is the most widely used.

#### • When naming your MP3 or WMA files, do not exceed 8 characters, and enter “.mp3, .wma” as the file extension.

General name format of: Title.mp3. or Title.wma. When composing your title, make sure that you use 8 characters or less, have no spaces in the name, and avoid the use of special characters including: (.,/, \, =, +).

#### • Use a decompression transfer rate of at least 128 Kbps when recording MP3 files.

Sound quality with MP3 files basically depends on the rate of compression/decompression you choose. Getting CD audio sound requires an analog/digital sampling rate, that is conversion to MP3 format, of at least 128 Kbps and up to 160 Kbps. However, choosing higher rates, like 192 Kbps or more, only rarely give better sound quality. Conversely, files with decompression rates below 128 Kbps will not be played properly.

#### • Use a decompression transfer rate of at least 64Kbps when recording WMA files.

Sound quality with WMA files basically depends on the rate of compression/decompression you choose. Getting CD audio sound requires an analog/digital sampling rate, that is conversion to WMA format, of at least 64Kbps and up to 192Kbps. Conversely, files with decompression rates below 64Kbps or over 192Kbps will not be played properly.

#### • Do not try recording copyright protected MP3 files.

 
Certain "secured" files are encrypted and code protected to prevent illegal copying. These files are of the following types: Windows Media™ (registered trade mark of Microsoft Inc) and SDMI™ (registered trade mark of The SDMI Foundation). You cannot copy such files.

• **Important:** The above recommendations cannot be taken as a guarantee that the DVD player will play MP3 recordings, or as an assurance of sound quality. You should note that certain technologies and methods for MP3 file recording on CD-Rs prevent optimal playback of these files on your DVD player (degraded sound quality and in some cases, inability of the player to read the files).

• This unit can play a maximum of 3,000 files and 300 folders per disc.

## Picture CD Playback

1. Select the desired folder. (See page 30 to select the folder)
2. Use the UP/DOWN buttons to select a Picture file in clips menu and then press the ENTER button. You should get a screen that looks like the one below.

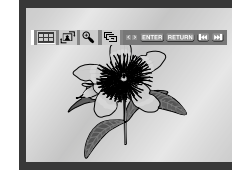

• Use the INFO button on the remote control to select the menu you want to view and then press the ENTER button.

• : Returns to the Album Screen.

• To see the next 6 pictures, press the button.

 
• To see the previous 6 pictures, press the button.

• : Each time the ENTER button is pressed, the picture rotates 90 degrees clockwise.

• : Each time the ENTER button is pressed, the picture is enlarged up to 4X. (Normal → 2X → 4X → 2X → Normal)

• : The unit enters slide show mode.

\*Before beginning the Slide Show, the picture interval must be set.

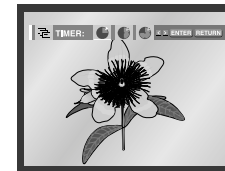

• : When this icon is selected and ENTER is pressed, the pictures change automatically with about a 6 second interval.

• : The pictures change automatically with about a 12 second interval.

• : The pictures change automatically with about a 18 second interval.

\*Depending on a file size, the amount of time between each picture may be different from the manual.

\*If you don't press any button, the slide show will start automatically in about 10 seconds by default.



## Picture CD Playback

### Note

- If no buttons on the remote control pressed for 10 seconds, the menu will disappear. Press the INFO button on the remote control to display the menu again.
- Press the STOP button to return to the clips menu.
- When playing a Kodak Picture CD, the unit displays the Photo directly, not the clips menu.

### CD-R JPEG Discs

- Only files with the ".jpg" and ".JPG" extensions can be played.
- If the disc is not closed, it will take longer to start playing and not all of the recorded files may be played.
- Only CD-R discs with JPEG files in ISO 9660 or Joliet format can be played.
- The name of the JPEG file may not be longer than 8 characters and should contain no blank spaces or special characters (. / = +).
- Only a consecutively written multisession disc can be played. If there is a blank segment in the multisession disc, the disc can be played only up to the blank segment.
- A maximum of 3000 images can be stored on a single CD.
- Kodak Picture CDs are recommended.
- When playing a Kodak Picture CD, only the JPEG files in the pictures folder can be played.
- Kodak Picture CD : The JPEG files in the pictures folder can be played automatically.
- Konica Picture CD : If you want to see the Picture, select the JPEG files in the clips menu.
- Fuji Picture CD : If you want to see the Picture, select the JPEG files in the clips menu.
- QSS Picture CD : The unit cannot play QSS Picture CD.
- If the number of files in 1 Disc is over 3000, only 3000 JPEG files can be played.
- If the number of folders in 1 Disc is over 300, only JPEG files in 300 folders can be played.

## Using the Setup Menu

The Setup menu lets you customize your DVD player by allowing you to select various language preferences, set up a parental level, even adjust the player to the type of television screen you have.

1. With the unit in Stop mode, press the MENU button on the remote. Select **Setup** using UP/DOWN buttons, then press the RIGHT or ENTER button.

- ❶ **Language Setup** : Setup of the Language.
- ❷ **Audio Setup** : Setup of the Audio Options.
- ❸ **Display Setup** : Setup of the Display Options. Use to select which type of screen you want to watch and several display options.
- ❹ **Parental Setup** : Setup of the Parental Level. Allows users to set the level necessary to prevent children from viewing unsuitable movies such as those with violence, adult subject matter, etc.



2. Use the UP/DOWN buttons on the remote to access the different features.
3. Press the ENTER or RIGHT button to access the sub features.

To make the setup screen disappear after setting up, press the MENU button again.

### Note

 
Depending on a disc, some Setup Menu selections may not work.

## Setting Up the Language Features

If you set the player menu, disc menu, audio and subtitle language in advance, they will come up automatically every time you watch a movie.

### Using the Player Menu Language

1. With the unit in Stop mode, press the MENU button.
2. Select **Setup** using UP/DOWN buttons, then press the RIGHT or ENTER button.
3. Select **Language Setup** using UP/DOWN buttons, then press the RIGHT or ENTER button.

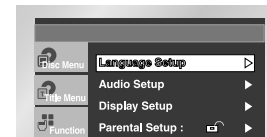

4. Select **Player Menu** using UP/DOWN buttons, then press the RIGHT or ENTER button.



5. Use the UP/DOWN buttons to select the desired language.



6. Press the ENTER button.

- The language is selected and the screen returns to Language Setup menu.
- To make the SETUP menu disappear, press the RETURN or LEFT button.

### Using the Disc Menu Language

This function changes the text language only on the disc menu screens.

1. With the unit in Stop mode, press the MENU button.
2. Select **Setup** using UP/DOWN buttons, then press the RIGHT or ENTER button.
3. Select **Language Setup** using UP/DOWN buttons, then press the RIGHT or ENTER button.
4. Select **Disc Menu** using UP/DOWN buttons, then press the RIGHT or ENTER button.
5. Use the UP/DOWN buttons to select the desired language.
  - Select "Others" if the language you want is not listed.



6. Press the ENTER button.
  - The language is selected and the screen returns to Language Setup menu.

## Setting Up the Language Features

### Using the Audio Language

1. With the unit in Stop mode, press the MENU button.
2. Select **Setup** using UP/DOWN buttons, then press the RIGHT or ENTER button.
3. Select **Language Setup** using UP/DOWN buttons, then press the RIGHT or ENTER button.
4. Select **Audio** using UP/DOWN buttons, then press the RIGHT or ENTER button.
5. Use the UP/DOWN buttons to select the desired language.
  - Select "Original" if you want the default soundtrack language to be the original language the disc is recorded in.
  - Select "Others" if the language you want is not listed.



6. Press the ENTER button.
  - The language is selected and the screen returns to Language Setup menu.

### Using the Subtitle Language

1. With the unit in Stop mode, press the MENU button.
2. Select **Setup** using UP/DOWN buttons, then press the RIGHT or ENTER button.
3. Select **Language Setup** using UP/DOWN buttons, then press the RIGHT or ENTER button.
4. Select **Subtitle** using UP/DOWN buttons, then press the RIGHT or ENTER button.
5. Use the UP/DOWN buttons to select the desired language.
  - Select "Automatic" if you want the subtitle language to be the same as the language selected as the audio preference.
  - Select "Others" if the language you want is not listed. Some discs may not contain the language you select as your initial language; in that case the disc will use its original language setting.



6. Press the ENTER button.
  - The language is selected and the screen returns to Language Setup menu.

#### Note

 
- If the selected language is not recorded on the disc, the original pre-recorded language is selected.
- **How to make the SETUP menu disappear or return to menu screen during set up;** Press RETURN or LEFT button.

## Setting Up the Audio Options

1. With the unit in Stop mode, press the MENU button.
2. Select **Setup** using UP/DOWN buttons, then press the RIGHT or ENTER button.
3. Select **Audio Setup** using UP/DOWN buttons, then press the RIGHT or ENTER button.



4. Use the UP/DOWN buttons to select the desired item. Then press the RIGHT or ENTER button.

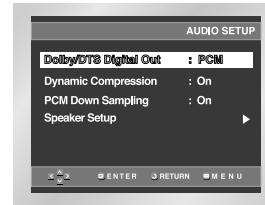

#### 1 Dolby/DTS Digital Out

1. PCM : Converts to PCM(2CH) audio.
2. Bitstream : Outputs Dolby Digital or DTS Bitstream via digital output. Select Bitstream when connecting to a Dolby digital and DTS Decoder.

**Note** There is no analog audio output when you play a DTS disc.

#### 2 Dynamic Compression

1. On : To select dynamic compression.
2. Off : To select the standard range.

#### 3 PCM Down Sampling

1. On : Select this when the amplifier connected to the player is not 96KHz compatible. In this case, the 96KHz signals will be down converted to 48KHz.
2. Off : Select this when the amplifier connected to the player is 96KHz compatible. In this case, all signals will be output without any changes.

**Note** Even when PCM Down sampling is Off

- Some discs will only output down sampled audio through the digital outputs.
- High sampling rate DVD-Audio discs (192KHz or 176.4KHz) always output audio down sampled to 96KHz or 88.2KHz through the digital outputs.
- When playing LPCM or PPCM DVD protected by copyright. If digital audio source is 48KHz/16bit, the Digital output is mute.

#### 4 Speaker Setup (See page 36)

#### Note

 
- **How to make the SETUP menu disappear or return to menu screen during set up;** Press RETURN or LEFT button.
- Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.
- "DTS" and "DTS Digital Out" are trademarks of Digital Theater Systems, Inc.
- DVD-AUDIO
  - Outputs 2 channel digital audio only.
  - Some DVD-AUDIO discs do not downmix, so they will not output 2 channel digital audio.
  - MULTI channel DVD-AUDIO discs play back through the analog outputs.
- Super Audio CD
  - Outputs analog signals only.
- HDMI
  - If your TV is not compatible with compressed multi-channel formats(Dolby Digital, DTS, MPEG), you should set Digital Audio to PCM.
  - If your TV is not compatible with LPCM sampling rate over 48kHz, you should set PCM Down Sampling to On.
  - Super Audio CD audio is only available through the analog outputs. It is not possible to output Super Audio CD audio via the HDMI output or Digital Audio Output.

## Surround Sound Speaker Setup

1. With the unit in Stop mode, press the MENU button.
2. Select **Setup** using UP/DOWN buttons, then press the RIGHT or ENTER button.
3. Select **Audio Setup** using UP/DOWN buttons, then press the RIGHT or ENTER button.



4. Use the UP/DOWN buttons to select **Speaker Setup**. Then press the RIGHT or ENTER button.

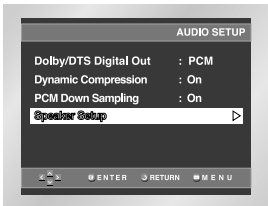

5. Use the UP/DOWN or LEFT/RIGHT buttons to select the desired item. Then press the ENTER button.



The default settings : FRONT L, R (Small), CENTER (Small), SURROUND (Small).  
Select the size of the speakers to be connected.

### • Front (FL, FR)

- **Large**: Normally select this.
- **Small**: When the sound distorts or the surround sound effects are difficult to hear, select this. This activates the Dolby Digital bass redirection circuitry and outputs the bass frequencies of the speaker from the subwoofer.

### • Center

- **None**: If you do not connect a center speaker, select this.
- **Large**: Normally select this.
- **Small**: When the sound distorts, select this. This activates the Dolby Digital bass redirection circuitry and outputs the bass frequencies of the center speaker from other speakers.

### • Surround (SL, SR)

- **None**: If you do not connect a center speaker, select this.
- **Large (Rear/Side)**: Normally select either of these according to the rear speaker's position.
- **Small (Rear/Side)**: When the sound distorts or the surround sound effects are difficult to hear, select either of these according to the rear speaker's position. This activates the Dolby Digital bass redirection circuitry and outputs the bass frequencies of the rear speaker from other speakers.

## Setting up TEST

The test output signals come clockwise starting from the Front Speaker(L). Adjust Channel Balance so that speakers output equally in your room.

FRONT(L) → CENTER → SUBWOOFER →  
FRONT(R) → SURROUND(R) → SURROUND(L)

 
### Note

How to make the SETUP menu disappear or return to menu screen during set up. Press RETURN or LEFT button.


- The subwoofer test output signal is lower than the other speakers.
- The MPEG Multichannel logo is a trademark registered by PHILIPS Corporation.
- If you set Front (L, R) "Small", LFE(Subwoofer) is set "On" automatically.

## Setting Up the Display Options

1. With the unit in Stop mode, press the MENU button.
2. Select **Setup** using UP/DOWN buttons, then press the RIGHT or ENTER button.
3. Select **Display Setup** using UP/DOWN buttons, then press the RIGHT or ENTER button.

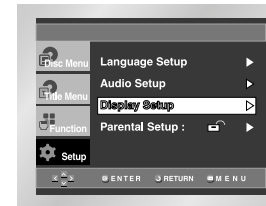

 4. Use the UP/DOWN buttons to select the desired item. Then press the RIGHT or ENTER button.

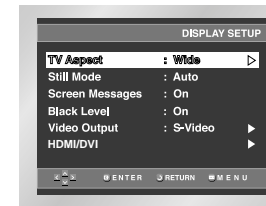

### ① TV Aspect

Depending on the type of television you have, you may want to adjust the screen setting (aspect ratio).

1. 4:3 Letter Box : Select when you want to see the total 16:9 ratio screen DVD supplies, even though you have a TV with a 4:3 ratio screen. Black bars will appear at the top and bottom of the screen.
2. 4:3 Pan Scan : Select this for conventional size TVs when you want to see the central portion of the 16:9 screen. (Extreme left and right side of movie picture will be cut off.)
3. 16:9 Wide : You can view the full 16:9 picture on your widescreen TV.

### ② Still Mode

These options will help prevent picture shake in still mode and display small text clearer.

1. Auto : When selecting Auto, Field/Frame mode will be automatically converted.
2. Field : Select this feature when the screen shakes in the Auto mode.
3. Frame : Select this feature when you want to see small letters more clearly in the Auto mode.

### ③ Screen Messages

Use to turn on-screen messages On or Off.

### ④ Black Level

Adjusts the brightness of the screen.(On/Off)

 
### ⑤ Video Output

Select Video Output.

1. S-Video : Select when you want to use Video and S-Video Out.
2. Component (I-SCAN) : Select when you want to use Video and Component 480i(Interlace) Out
3. Component (P-SCAN) : Select when you want to use Component 480p(Progressive) Out.

\* If you press the VIDEO SEL. button, Video output mode is changed in regular sequence in no disc mode. (S-Video → I-SCAN → P-SCAN)

\* If the Yes/No selection in the Display Setup sub Menu is not made within 10 seconds, the screen returns to the previous menu.

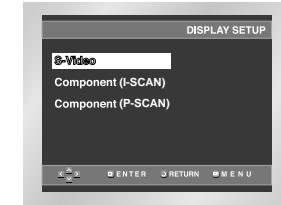

\* If an HDMI or HDMI-DVI Cable is plugged into your TV, the player output is HDMI/DVI Out automatically, and the Video Out cannot be changed. To change the Video Out, the HDMI or HDMI-DVI Cable must be unplugged.

## Setting Up the Display Options

### 6 HDMI/DVI

This setting is used when the unit is connected by HDMI or DVI with Display devices (TV, projector, etc).

 
#### 1. Resolution

- 480p : 720 x 480
- 720p : 1280 x 720
- 768p : 1024 x 768
- 1080i : 1920 x 1080

#### 2. DVI Output

You can use this function to set DVI output format (mode A-B).

- This function corrects a TV screen when it is not centered to secure a normal view.
- If DVI Output is set incorrectly, the screen can be seen abnormally.
- Mode A : The screen moves to the left.
- Mode B : The screen moves to the right.  
This function may not work normally.

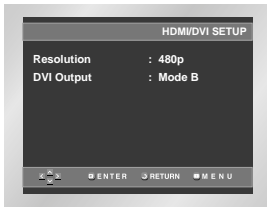

### Important Note

- If Video Output is set incorrectly, the screen can be blocked. (See page 41)
- The resolutions available for HDMI output depends on the connected TV or projector. For details, see the user's manual of your TV or projector.
- When the resolution changes, the image may be corrupted or the output may take longer than normal.

 
## Setting Up the Parental Control

The Parental Control function works in conjunction with DVDs that have been assigned a rating, which helps you control the types of DVDs that your family watches. There are up to 8 rating levels on a disc.


1. With the unit in Stop mode, press the MENU button.
2. Select **Setup** using UP/DOWN buttons, then press the RIGHT or ENTER button.
3. Select **Parental Setup** using UP/DOWN buttons, then press the RIGHT or ENTER button.




4. Use RIGHT or ENTER to select **Yes** if you want to use a password. The **Enter Password** screen appears.

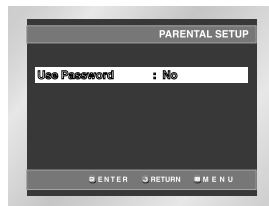

 5. Enter your password. The **Re-enter Password** screen appears to confirm the password. Enter your password again. The player is locked (🔒).

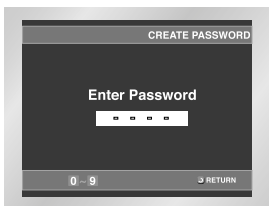

## Setting Up the Parental Control

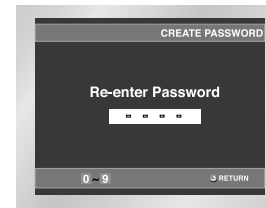 

### Setting Up the Rating Level

 
1. With the unit in Stop mode, press the MENU button.
2. Select **Setup** using UP/DOWN buttons, then press the RIGHT or ENTER button. The player is locked (🔒).



3. Select **Parental Setup** using UP/DOWN buttons, then press the RIGHT or ENTER button.
4. Enter your password. The Parental Setup screen appears.




5. Select **Rating Level** using UP/DOWN buttons, and press ENTER or RIGHT button.

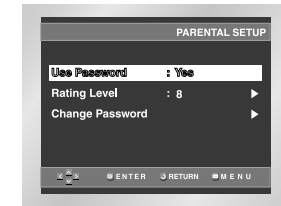

6. Select the Rating Level you want using UP/DOWN buttons. For example, if you select up to Level 6, discs that contain Level 7, 8 will not play.
  - To cancel the Rating Level, select No using RIGHT or ENTER in Use Password.

#### e.g) Setting up in LEVEL6.

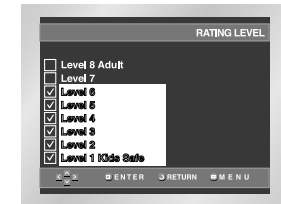 

### About the Change Password

- Highlight **Change Password** using UP/DOWN buttons.
- Press ENTER button.
- The **Change Password** screen appears.
- Enter your new password. Enter the new password again.

### Note

- **How to make the SETUP menu disappear or return to menu screen during set up;** Press RETURN or LEFT button.
- If you have forgotten your password, see page 41.

## Controlling a TV with the Remote

The remote can also be set up to control most TVs. To program the remote, use the code that corresponds to your brand.

TV Codes			
BRAND	CODE	BRAND	CODE
ANAM	10, 11, 12, 13, 14, 15, 16, 17, 18	NORDMENDE	72, 73
AIWA	82	NOKIA	74
BANG&OLUFSEN	57	PANASONIC	53, 54, 74, 75
BLAUPUNKT	71	PHILIPS	06, 55, 56, 57
BRANDT	73	PHONOLA	06, 56, 57
BRIONVEGA	57	PIONEER	58, 59, 73, 74, 75
CGE	52	RADIOLA	06, 56
CONTINENTAL EDISON	75	RADIOMARELLI	57
DAEWOO	19, 20, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34	RCA	45, 46
EMERSON	64	REX	74
FERGUSON	73	SABA	57, 72, 73, 74, 75
FINLUX	06, 49, 57	SALORA	74
FORMENTI	57	SAMSUNG	01, 02, 03, 04, 05, 06, 07, 08, 09
FUJITSU	84	SANYO	41, 42, 43, 44, 48
GRADIENTE	70	SCHNEIDER	06
GRUNDIG	49, 52, 71	SELECO	74
HITACHI	60, 72, 73, 75	SHARP	36, 37, 38, 39, 48
IMPERIAL	52	SIEMENS	71
JVC	61, 79	SINGER	57
LG	06, 19, 20, 21, 22, 78	SINUDYNE	57
LOEWE	06, 69	SONY	35, 48
LOEWE OPTA	06, 57	TELEAVA	73
MAGNAVOX	40	TELEFUNKEN	67, 73, 75, 76
METZ	57	THOMSON	72, 73, 75
MITSUBISHI	06, 48, 62, 65	THOMSON ASIA	80, 81
MIVAR	52, 77	TOSHIBA	47, 48, 49, 50, 51, 52
NEC	83	WEGA	57
NEWSAN	68	YOKO	06
NOBLEX	66	ZENITH	63

- Turn on the TV.
- Point the DVD's remote at the TV.
- While holding the TV POWER button down, enter the code for your brand.
- If the TV turns off, setup is complete. Enter other codes of the same brand if the first code does not work.
- To operate the TV, use the "TV Function Buttons" described on page 11.

### Important Note


 

- The remote may not be able to control every model TV of the brands listed.
- If you replace the remote control's batteries, set the brand code again.

e.g) For Samsung TVs

While holding down the TV POWER button, enter 0 and then 1.

## Troubleshooting

Before requesting service (troubleshooting), please check the following.

Problem	Action	Page
No operations can be performed with the remote.	<ul style="list-style-type: none"> <li>Check the batteries in the remote. They may need replacing.</li> <li>Operate the remote control at a distance of no more than 20 feet.</li> <li>Remove batteries and hold down one or more buttons for several minutes to drain the microprocessor inside the remote to reset it. Reinstall batteries and try to operate the remote again.</li> </ul>	P5
Disc does not play.	<ul style="list-style-type: none"> <li>Ensure that the disc is installed with the label side facing up.</li> <li>Check the region number of the DVD.</li> </ul>	P7
5.1 channel sound is not being reproduced.	<ul style="list-style-type: none"> <li>5.1 channel sound is reproduced only when the following conditions are met:                             <ol style="list-style-type: none"> <li>The DVD player is connected with the proper amplifier</li> <li>The disc is recorded with 5.1 channel sound.</li> </ol> </li> <li>Check whether the disc being played has the "Dolby 5.1 ch" mark on the outside.</li> <li>Check if your audio system is connected and working properly.</li> <li>In a SETUP Menu, is the Audio Output set to Bitstream?</li> </ul>	P12
The  icon appears on screen.	<ul style="list-style-type: none"> <li>The features or action cannot be completed at this time because:                             <ol style="list-style-type: none"> <li>The DVD's software restricts it.</li> <li>The DVD's software doesn't support the feature (e.g., angles).</li> <li>The feature is not available at the moment.</li> <li>You've requested a title or chapter number or search time that is out of range.</li> </ol> </li> </ul>	P17
Disc Menu doesn't appear.	<ul style="list-style-type: none"> <li>Check if the disc has a Menu.</li> </ul>	P32-39
Play mode differs from the Setup Menu selection.	<ul style="list-style-type: none"> <li>Some of the functions selected in the Setup Menu may not work properly if the disc is not encoded with the corresponding function.</li> </ul>	P37
The screen ratio cannot be changed.	<ul style="list-style-type: none"> <li>The Screen Ratio is fixed on your DVDs.</li> </ul>	P35
No audio.	<ul style="list-style-type: none"> <li>Make sure you have selected the correct Digital Output in the Audio Options Menu.</li> </ul>	P37
The screen is blocked	<ul style="list-style-type: none"> <li>Press power on from a cold start with no disc in the unit. Press the  button on the front panel for 5 seconds. The SELECT MENU LANGUAGE display will appear. Select the number button of the desired language.</li> </ul>	P38-39
Forgot password	<ul style="list-style-type: none"> <li>Press power on from a cold start with no disc in the unit. Press the  button on the front panel for 5 seconds. The SELECT MENU LANGUAGE display will appear. Select the number button of the desired language. Press the MENU button, and then press DOWN button to select Setup, then press RIGHT or ENTER. Press Up or Down to select Parental Setup The Parental Setup is now unlocked as indicated on the display. You can change your password.</li> </ul>	
If you experience other problems.	<ul style="list-style-type: none"> <li>Go to the contents and find the section of the instruction book that contains the explanations regarding the current problem, and follow the procedure once again.</li> <li>If the problem still cannot be solved, please contact your nearest authorized service center.</li> </ul>	

## Troubleshooting

Problem	Action	Page
No HDMI output.	<ul style="list-style-type: none"> <li>Check the Video output is HDMI enabled.</li> <li>Check the connection between the TV and the HDMI jack of DVD player.</li> <li>See if the TV supports this 480p/720p/768p/1080i DVD player.</li> </ul>	P14-16
Abnormal HDMI output screen.	<ul style="list-style-type: none"> <li>If snow noise appears on the screen, it means that TV does not support HDCP (High-bandwidth Digital Content Protection).</li> <li>Refer to your TV users manual.</li> </ul>	P16
Screen is red in Component mode.	<ul style="list-style-type: none"> <li>Set the Video output to I-SCAN or P-SCAN.</li> </ul>	P13

## Specifications

General	Power Requirements	AC 120V ~ 60Hz
	Power Consumption	14 W
	Weight	5.07 lbs
	Dimensions	W 16.93 in x D 9.84 in x H 1.92 in
	Operating Temperature Range	+41°F to +95°F
	Operating Humidity Range	10 % to 75 %
Disc	DVD (DIGITAL VERSATILE DISC)	Reading Speed : 11.45 ~ 15.09 ft/sec. Approx. Play Time (Single Sided, Single Layer Disc) : 135 min.
	CD : 5" (COMPACT DISC)	Reading Speed : 15.75 ~ 18.37 ft/sec. Maximum Play Time : 74 min.
	CD : 3 1/2" (COMPACT DISC)	Reading Speed : 15.75 ~ 18.37 ft/sec. Maximum Play Time : 20 min.
	VCD : 5"	Reading Speed : 15.75 ~ 18.37 ft/sec. Maximum Play Time : 74 min. (Video + Audio)
Video Output	Composite Video	1 channel : 1.0 Vp-p (75 Ω load)
	Component Video	Y : 1.0 Vp-p (75 Ω load) Pr : 0.70 Vp-p (75 Ω load) Pb : 0.70 Vp-p (75 Ω load)
	S-VIDEO	Luminance Signal : 1.0 Vp-p (75 Ω load) Chrominance Signal : 0.286 Vp-p (75 Ω load)
	HDMI	High Definition Multimedia Interface
Audio Output	2 Channel	L(1/L), R(2/R)
	5.1 Channel	F/L, F/R, R/L, R/R, C/T, S/W
	*Frequency Response	48 kHz Sampling : 4 Hz to 22 kHz 96 kHz Sampling : 4 Hz to 44 kHz
	*S/N Ratio	110 dB
	*Dynamic Range	100 dB
	*Total Harmonic Distortion	0.004 %

\*: Nominal specification

- Samsung Electronics Co., Ltd reserves the right to change the specifications without notice.
- Weight and dimensions are approximate.

# Warranty

---

## LIMITED WARRANTY TO ORIGINAL PURCHASER

THIS SAMSUNG BRAND PRODUCT, AS SUPPLIED AND DISTRIBUTED BY SAMSUNG ELECTRONICS AMERICA, INC. (SAMSUNG) AND DELIVERED NEW, IN THE ORIGINAL CARTON TO THE ORIGINAL CONSUMER PURCHASER, IS WARRANTED BY SAMSUNG AGAINST MANUFACTURING DEFECTS IN MATERIALS AND WORKMANSHIP FOR THE FOLLOWING LIMITED WARRANTY PERIOD:

### **One (1) Year Parts and Labor**

This limited warranty begins on the original date of purchase, and is valid only on products purchased and used in the United States, and does not include transportation, installation, removal or reinstallation.

WARRANTY REPAIRS MUST BE PERFORMED BY SAMSUNG'S AUTHORIZED SERVICE CENTER. TO RECEIVE WARRANTY SERVICE, THE ORIGINAL DATED BILL OF SALE MUST BE PRESENTED UPON REQUEST AS PROOF OF PURCHASE TO SAMSUNG OR SAMSUNG'S AUTHORIZED SERVICE CENTER. TRANSPORTATION TO AND FROM THE SERVICE CENTER IS THE RESPONSIBILITY OF THE PURCHASER.

SAMSUNG WILL REPAIR OR REPLACE THIS PRODUCT, AT OUR OPTION AND AT NO CHARGE WITH NEW OR RECONDITIONED PARTS, IF FOUND TO BE DEFECTIVE DURING THE LIMITED WARRANTY PERIOD SPECIFIED ABOVE. The product must be returned during the warranty period with transportation charges prepaid to SAMSUNG's designated service center. Prior to returning any product for warranty service, the purchaser must contact SAMSUNG for problem determination and service procedures. SAMSUNG DOES NOT WARRANT UNINTERRUPTED OR ERROR-FREE OPERATION OF THE PRODUCT.

All replaced parts and products become the property of SAMSUNG and must be returned to SAMSUNG. Replacement parts and products assume the remaining original warranty, or ninety (90) days, whichever is longer.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, noncommercial use of this product and shall not apply to the following, including, but not limited to: damage which occurs in shipment; applications and uses for which this product was not intended; failures or problems which are caused by products or equipment not supplied by SAMSUNG; accidents, misuse, abuse, neglect, misapplication, fire, water, lightning or other acts of nature; incorrect electrical line voltage, fluctuations or surges; damage caused by improper or faulty installation; improper connection with any peripheral; product alteration or modification; improper or unauthorized repair; cosmetic damage or exterior finish; product with altered serial numbers; failure to follow operating instructions, customer adjustments, maintenance and environmental instructions that are covered and prescribed in the instruction book; use of non-SAMSUNG or unauthorized parts, supplies, accessories or equipment which damage this product or result in service problems; failures or problems due to incompatibility with other equipment.