


User Manual for C70



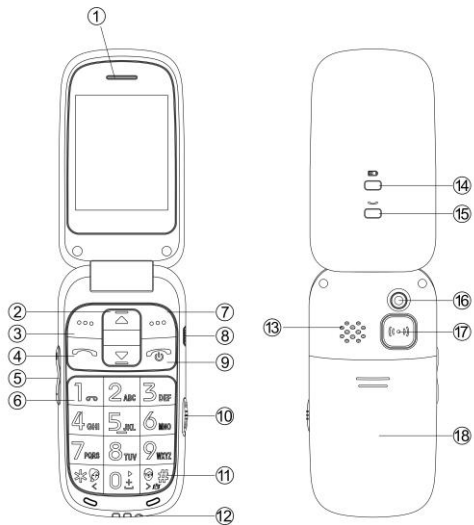

The instruction of button and telephone appearance

1. Earpiece	2. Arrow keys
3. Left selection key	4. Call key
5. Volume key	6. Voice mail
7. Right selection key	8. Seat-type charging socket
9. End call/Power on/Power off	10. Torch key
11. Silent/Input method	12. Torch light
13. Loudspeaker	14. LED light (Charging)
15. LED light (Missed calls)	16. Camera lens
17. SOS Key	18. Battery cover

Contents

Installation.....	5
Installing SIM card, memory card and battery.....	5
Phonebook.....	5
Search.....	6
Add new contact.....	6

Photo contact.....	6
Phonebook settings	7
Message.....	7
Write Message	8
Inbox	8
Drafts	8
Outbox	8
Sent Messages	8
Call center.....	8
Call history.....	8
Call setting.....	9
Organizer.....	9
Alarm.....	9
Calculator.....	10
Calendar.....	10
Tasks.....	10
Bluetooth.....	10
Multimedia.....	11
Camera.....	11

Image viewer.....	11
FM radio.....	12
File Manager	13
Settings.....	13
SOS Setting.....	13
Phone setting.....	14
User profiles.....	14
Speed dial.....	14
Block function.....	15
Key shortcuts	15
Security settings.....	15
Restore factory settings.....	16
Safety and Attentions.....	16

Installation

IMPORTANT

Turn off the phone and disconnect the charger before removing the battery cover.

Installing T-FLASH memory card

Insert the memory card into the slot under the SIM card holder, make sure card's contacts face downwards ,take care and please do not scratch or bend the contracts on the card.

T-Flash card is used as phone storage, when connect to computer by USB cable, You can copy MP3 to **My Music**, copy picture to **Images** or **Photos** and copy e-book to **E-book**.

Installing the SIM card

- 1) Insert SIM Card into the SIM card slot upon the memory card holder. (Make sure the SIM card's contacts are facing inwards.)
- 3) Before taking out the SIM card, please turn off the phone first.

Installing the battery

For the first time use, please use up the battery and charge for 4 hours to achieve the best state of battery. Remove the battery cover ,insert the battery into the battery compartment, replace the battery cover.

Phonebook

Add New Contact

You can add the new contact to the SIM card or phone, by press **OK** to confirm .





1. Enter name and telephone number
2. Setup the caller picture: use the keypad  and  to select the picture from **default, from camera, from file**.
3. Setup default ringtone. Press the keypad  and  to switch
4. Press **Options** to save.

Photo Contact

1. Press Option => **Edit** - Enter a name and numbers for contact, also Caller Picture and ring tones.

The picture will be displayed when you call the corresponding contact or when they are calling you. Select one of the following options and press **OK**:

- 1) Select **From camera**, and take a picture.

Remark: using default image size 240x320pixel instead of taking a picture, which can make the Caller picture more suitable and nice.

- 2) Select **From File** , and then select one existing picture from Phone or Memory card.

Remark: using default image size 240x320pixel to make the Caller picture more suitable and nice.

Phonebook Setting:

1. Preferred storage: you can save the new contact to the SIM card , phone or both.
2. Memory status: to check how many contacts in the SIM card and the phone .
3. Copy contacts: you can copy the contacts to the SIM card or to the phone.
4. Move contacts: you can move the contacts to the SIM card or the phone.
5. Delete all contacts: you can delete all the contacts in the SIM card or the phone .

In the phonebook, you can check the contact persons, send SMS, make a call, edit, delete, copy and set up incoming call group.

Messaging

White Message

1. Select **“write message”** and press **OK**.
3. Input your message then press **Option**.
3. Choose **“Send to”** to add receiver phone number and then press **ok** to **send** .

Inbox

Received Messages are listed in this menu.

Drafts

Draft messages are listed in this menu.

Outbox


The messages which are sent failed are stored in the Outbox.

Sent messages

Sent messages are listed in this menu.

Call Center

Call History



1. you can choose **Calling Center**, or to check the **Call History**
2. Use  Scroll to view Missed/Dialed/Received calls or delete call logs

Call Settings

You can set **Caller ID**, **Call Waiting**, **Call Divert**, **Call barring**, and **Advanced settings**.

Organizer

Alarm

1. To edit an alarm press **Edit** and press **OK**.
2. Use key  and  select **ON** or **OFF**.
3. Enter time with number keypad .

4. Scroll to select **repeat** to choose **Once, Everyday or Custom**. The same way to setup **Alarm tone , Snooze and Alert type**.
5. To stop the alarm, press off and press Done.

Note: The Alarm is available even the phone is power off.

Calculator

In the standby mode, press **Menu**, scroll to **Calculator** and press **OK**. Input numbers by keypad .Use



to select an operation (+, -, x, ÷) and press **OK**.

Calendar

In the Calendar ,you can view the date and day of the week, and remark the big event and appointments of the date .

Tasks

In the Tasks ,you can add some important things in it, such as :dating ,Birthday .

Bluetooth

Power on/off: Select on/off to enable/disable Bluetooth.

Visibility: Select on/off to make the phone visible /invisible to other devices.

My device: Saved device name and allow you to add new devices.

Search audio device: Search for the available audio device, search by press Yes .if connect other device, need to share password, enter it and press OK.

My name: Name for current device.

Advanced: Set Audio Path, check the Storage, view Bluetooth Address.

Multimedia

Camera

1. Press  to take photo.
2. To view photos, press **Options** and select **Photos**.

Warning! If memory card is insufficient, delete some document or expand the storage with T card.

Image Viewer

View all saved photos under this menu.

FM Radio

To use the FM Radio, you need to Insert the headset first.

1. Use side key to adjust the volume.
2. Press right soft key to go back to standby mode. The radio will continue to play.

Important

1. Press the number key”0” to turn on/off the FM radio
2. Press side **volume key** to control volume
3. Press the **Arrow keys** select channel`

File Manager

Use it to manage all files, you can rename, copy, delete, move the files.

1. Press **Menu**, scroll to **Settings**, select **File management** and press **OK**.
2. Select from **phone** or **SIM card**
3. Press **Options** to open. You can check all saved documents such as Audio, My music, Photos and Video etc.

Settings



SOS Settings

1. Scroll to select Status on/off and setup SOS numbers & SOS SMS then press **Save**.
2. If status on , when you press SOS button at the back of the telephone, the phone will send emergency sound and call the saved 5 numbers.

Warning!

The SOS function must be activated before use. For some interference factors (e.g. Internet, environment and etc.), SOS function is not available.



Phone Settings

1. Time and date : Press **OK** to into it ,select the home city and format, entry the time and date ,then press **Save**
2. Language : Press **OK** to into it, use  to select the language you like.
3. Preferred Writing method: Press **OK** to into it, use  to select the language you like.
4. Display: Under this menu, you can change wallpaper. you can use the wallpaper from system or you can personalized customization it .

Profiles

1. Scroll to select available mode, General/Silent/Meeting/Outdoor.
2. Long press **# key** will change to **Meeting mode**.
3. After you select one mode, you can setup it's **Alert type, Ring type, Incoming call ring ,Ringtone Volume, Message tone/Volume, Keypad tone/Volume, tone for power on /off** .


Speed dial


1. *and #Key: press **OK** to turn the status **on** or **off**, then press  to set the * and # key number from the phonebook., then press **OK** to save.
2. 2-9numbers: press **OK** to turn the status **on** or **off**, then press  to set the 2-9 numbers from the phonebook, then press **OK** to save.

Block Function

You can disable functions to simply use of the phone.

Key Shortcuts

The **Up Arrow Key Shortcut** is default to be **Message**, use  key ,you can change it to be **Phonebook, Call Center, Organizer, Camera, Multimedia, Photo contacts**.

The **Down Arrow Key Shortcut** is default to be **Photo contacts**, use  key ,you can change it to be **Phonebook, Call Center, Organizer, Camera, Multimedia, Message**.

Security settings

1. SIM security: Under tis menu ,you can turn **ON/OFF** the PIN lock ,and change the PIN code .
2. Phone security: Under this menu ,you can turn **ON/OFF** the phone lock ,and change the phone password.the **default password** of the phone is “1122”.

Restore Factory Settings

In this menu ,after you input the phone password ,you can let all the settings of the phone back to the

original settings. the **default password** of the phone is “1122”.

Safety and Attentions

In order to use your mobile phone safely and efficiently, please read your messages before using:

- Please be careful when you are near chemical plant, gas station, tank farm and other exploders. Even if your mobile phone is in standby, it will send out RF signal as well. Therefore, please power off your mobile phone.
- When you are driving, do not use your mobile phone. If you have to use it, please park your car then have your calling.
- Don't use your mobile phone in the hospital so as not to disturb the operation of medical equipment, such as heart pacemakers, hearing aids and etc. You should obey relevant rules before using.
- Please power off your mobile phone before the plane taking off so as not to disturb flying. It is dangerous and illegal to use mobile phone on board.
- Please place your mobile phone and all accessories where is untouchable for kids.

- Accessories and battery: please use the dedicated accessory and battery of our company. If not, it will destroy the phone and lead to danger. Please do not shortcut, tear down and adapt the battery. If the phone has excessive temperature, discolor, variant, bulking, weeping and other unusual phenomenon, please stop using and change the battery immediately so as not to affect the safety. Please place the old batteries in specific recycle spots.
- No charging without the battery. When you take off the battery, please power off the mobile phone so as not to destroy the property of the phone.
- The phone is not waterproof. Please keep it dry.
- Avoid using the phone in an excessive and too low temperature.
- Not throw, fall and beat the phone so as not to destroy the internal and external phone.
- Authorized Service: install and maintain the phone by professional people. Please not tear off the phone on your own.
- The counting unit of radiation standard is called SAR. In the international norm, the SAR limitation is 2.0 W/Kg. The maximal SAR of this phone is 0.482 W/Kg. It meets the state criterion of GB 21288-2007.

