

## **GENERAL**

The lock operates with a numeric six-digit code or word with 6 letters. A Secondary code can be added. Each key press is confirmed with an audio and light signal. After entry of a valid code a double signal follows. An invalid entry is followed by a long signal. After 10 seconds without entry, an already entered part of the code is cancelled.

### **To open**

Enter code: i.e. 1-2-3-4-5-6 (factory code);  
unlock door and open. If not opened within 3 seconds, the lock secures automatically.

### **Locking:**

Close door and turn handle fully to closing position. The lock is secured. Control blocking status by trying to turn handle back.

### **Manipulation protection:**

Entry of four consecutive invalid codes – keypad is blocked for 5 minutes. During this period, the light flashes every 10 seconds and any key press causes a long signal. After expiration, entry of two more invalid codes restarts the 5-minute blocking period.

### **Change code:** with safe door open

Press and hold key "0" until double signal. The light remains on during the following actions.

- enter old code (double signal)
- enter new code (double signal) and repeat new code (double signal)

In case of entry errors (long signal), the old code remains valid.

Safety reference: All codes are to be securely stored. Do not use personal data (i.e. Birthdays, telephone numbers etc.) as the code. Change the factory code before you start using the safe!

### **Second opening code**

### **Activate:**

Press and hold key "1" until double signal. The light remains on during the following actions.

- enter manager code
- enter secondary code twice (double signal after each)

The second code can be changed like the Manager code. With the Manager code, the secondary code can be deleted. This is not possible the other way round.

### **Delete secondary code:**

Press and hold key "3" until double signal. The light remains on during the following actions.

- enter manager code
- The secondary code is deleted.

### **What if...**

... you hear a long beep after your combination last digit and the lock does not open?

**You are entering a not valid combination. Repeat the operation making attention you are entering the correct code.**

... light signal flashes every 10 seconds, and, when you push a button you hear a long beep?

**You entered 4 times a wrong combination and the lock is in time penalty. Wait 5 minutes and try again. Two more consecutive invalid codes will restart additional 5 minutes penalty period**

... you do not hear any beep when you push a button?

**Replace the battery. If the problem is not solved, call your service centre.**

... you can open but you hear a long sequence of beeps after your combination last digit?

**Immediately replace the battery. (use only 9V Duracell batteries)**

**In case of questions or technical errors please see [www.secretsafes.eu](http://www.secretsafes.eu)**

