User's Manual

Federal Communications Commission (FCC) Statement

This Equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from

which the receiver is connected to.

- Consult the dealer or an experienced radio/TV technician for help.

Warning :

Use only shielded signal cables to connect I/O devices to this equipment.

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

TABLE OF CONTENTS

QUICK INSTALLATION GUIDE	2
TO INSTALL SOFTWARE AND DRIVER (FOR PC USER)	2
TO INSTALL SOFTWARE AND DRIVER (FOR MAC USER)	2
TO INSTALL HARDWARE	3
ONE BUTTON SCAN	5

CYBERVIEW X – MS USER'S INTERFACE	10
、MAIN WINDOW AREA 【FIXED WINDOW】	11
、PREVIEW WINDOW AREA 【FIXED WINDOW】	19
、ACTIVE FRAME SETTING WINDOW AREA 【FLOATING WINDOW】	21
、THUMBNAIL PANEL WINDOW AREA 【FLOATING WINDOW】	22
TECHNICAL SUPPORT	23

GETTING STARTED

Check the package content before getting started.

For Quick Installation please refer to Quick Installation Guide. (Ref. Pg. 3~7)



Package Contents

- · Slide Scanner.
- · Magazine (Straight Type).
- Power Adapter [HIGH POWER : HPA-401234U3 or LINEARITY : LAD6019AB4]
- Warning! Using any other power adapter may severely damage the scanner and will void the product warranty.
- · Power Code.
- · USB 2.0 Cable.
- · IEEE 1394 Cable.
- · CyberView X -MS Driver. (MS stands for Multiple Slide capability)
- · TWAIN or Plug-In compliant application software CD.
- · Printed User's Manual.

REMARKS:

- 1. The model implented with Digital ICE³™ TECHNOLOGY please refer to Digital ICE^{3™} user's guide.
- 2. TWAIN or Plug-In compliant application software means the imaging software such as Photoshop Elements, this is subject to change without notice.

Operating Ambient Temperature Range 50º to 104ºF (10º to 40ºC)
Note : Do not turn on the scanner unless it is within this range If the scanner has been stored or transported outside of this range, allow it to return to within this range before turning it on.
Operating Ambient Humidity Range 15% to 76% relative humidity (non-condensing)
Note : If the scanner is stored or to be transported in cold

QUICK INSTALLATION GUIDE (QIG)

TO INSTALL SOFTWARE AND DRIVER... (For PC User)

- IF WINDOWS XP IS INSTALLED ON YOUR SYSTEM DURING DRIVER INSTALLATION A LOGO TESTING DIALOGUE BOX MAY APPEAR, IF THIS IS THE CASE PLEASE SELECT "CONTINUE ANYWAY".
 Be sure to install the Application Software <u>BEFORE</u> installing the scanner driver CyberViewX –MS.
 You may install the scanner driver directly if you have already installed TWAIN compliant application software in your computer.
- a.Place the TWAIN or Plug-In compliant application software CD into CD-ROM. If you have CD autoplay switched off on the CD drive then you will need to explore the CD and double click the file "AutoPlay.exe" and follow the on-screen instructions to complete the installation.
- b.Place the CyberView X MS CD PC revision into CD-ROM which will autoplay. If you have autoplay switched off on the CD drive then you will need to explore the CD and double click the file "LAUNCH.EXE". Click the "CyberView X" and follow the on-screen instructions to complete the installation.
- Notice : If you are Win XP users, please DO NOT eject the CyberView X MS CD after rebooting. After rebooting, connect the scanner with PC computer and turn on the power of scanner. Windows XP will detect USB or IEEE 1394 hardware then search for the driver on the CD :
 - 1. In "Found New Hardware Wizard" window, select "Install the software automatically (Recommended) and click "Next".
 - 2. In "Completing the Found New Hardware Wizard" window, click "Finish", then eject the CD.

TO INSTALL SOFTWARE AND DRIVER... (For MAC User)

MAC user before Installing the Scanner Driver...

- Be sure to install Application Software (ex: Adobe Photoshop Elements) BEFORE installing the scanner driver CyberView X MS.
- a. Place the TWAIN or Plug-In compliant application software into CD-ROM and double click it to install the program then eject the CD.
- b. Place the CyberView X MS CD MAC revision into CD-ROM and "CyberView X MS" CD icon will display on the desktop.
- c. Double click "CyberView X MS" icon.

d. Double click "CyberView X MS installer" folder to install the driver.

The Memory Setting for MAC User

1. Click the application software in "Application" folder such as Adobe Photoshop or Photoshop Elements and press "Apple" + "I" to pop-up the memory setting window.



2. To modify the "Minimum Size" greater than 128000K then close the window.

TO INSTALL HARDWARE ...

- a. Connect the slide scanner
 - Please check the USB / IEEE 1394 switch on back panel. Switch to symbol * for IEEE1394 interface or symbol * for USB interface.



 To a power source Make sure scanner is TURNED OFF.
 Plug the AC adapter in AC power source FIRST before plugging into the scanner.

- 3. To an USB or IEEE 1394 port Attach one end of USB or IEEE 1394 cable to computer. Attach another end of cable to back panel of scanner.
- b. Put the slide(s) into magazine
 - 1. Turn the magazine as illustrated with the embossed letters "COMPACT MAGAZINE 50" on top and the white strip on the right.
 - 2.Hold the slide right side up facing forward you, rotate the slide as illustrated and Insert it one by one into the magazine.
 - Warning : Please load slides into the magazine properly and make sure the slide mounts are in good condition. Improperly inserted slide or slide with distorted/damaged slide mount may cause serious jam which may damage both the slide and the scanner.



- c. Load the magazine into the scanner
 - 1. Load the magazine into the scanner as illustrated (with the embossed letters facing up and the white stripe near the front panel of the scanner).



2. Push the slide transport arm [2-1] fully into unit and load the magazines into the scanner until it touches the slide transport arm [2-2].



- d. Power on the scanner calibration will begin and the slide transport arm will move in and out of the scanner. MAKE SURE THERE IS ENOUGH ROOM IN FRONT OF THE SCANNER FOR THE SLIDE TRANSPORT ARM TO EXTEND FULLY, DO NOT PUSH THE ARM BACK DURING CALIBRATION.
- e. Additional features
- 1. Manual Control Panel

You can advance or reverse the slide by pressing the navigation button (**COP**)

and scan manually with the scan button (•) to enable one button scan function.

Navigation and Scan Buttons

Please Note:

When installing your new scanner onto a Windows XP/2000 system that already has another USB Flatbed scanner or All-in-one Scan/Copier/Printer device installed, it may be necessary for you to disconnect the other Flatbed scanner from the USB port for the Film scanner to work properly, as stated on the Microsoft website.

Knowledgebase article # 324756

% One Button Scan...

Open the CyberView X – MS driver program FIRST and press the scan button to scan the film or slide, there are 2 way to open the CyberView X–MS:

- Open the imaging application software such as Photoshop Elements or Album and acquire the CyberView X-MS. (Ref. Pg.7 to acquire the CyberView X-MS driver program)
 - 1-1. Select the film type and resolution.

E N G

L

S

н

1-2.Press the scan button (${\mbox{\circle*{-}}}$) and scanner will automatically pop up a setting window as below.

- 1-2-1. If select "To Host", the scanner will scan the slide and send to the application software which you open.
- 1-2-2.If select "To File", the scanner will scan the slide and save to the path that you set.
- 1-3. Press the scanner button (●) until you are requested to input the amout that you want to scan to file then release, then push the "OK" to next setting window on the screen.
 - 1-3-1.If select "To Host", the scanner will scan the slide and send to the application software which you open.
 - 1-3-2. If select "To File", the scanner will scan the slide and save to the path that you set.
- 2. Select "Start > Programs > CyberView X_MS" and select "CyberView X" to open the CyberView X application loader.
 - 2-1. Select the film type and resolution you want to scan.

2.2.1. Press the scan button and it will pop-up the "Save To Files" setting window. Input the save path, file name and file type. (Ref. Pg.11 to change the setting)

- 2.2.2. After setting, click "OK" to scan the image to file.
- 2.3.1. Press the scan button until you are requested to input the amout that you want to scan to file then release, then push the "OK" to next setting window.
- 2.3.2.It will pop up a "Save To Files" setting window. Input the save path, file name and file type. (Ref. Pg.11 to change the setting)
- 2.3.3. After setting, click "OK" to scan the image to file.

NOTE: If you do not open CyberViewX – MS FIRST, the scan button will not function.

3. Slide Viewer

Insert the slide into the slide viewer for previewing. The scanner has to be switched on.



4. Single Slide Scanning

- Load the empty magazine into tunnel FIRST until it touches the slide transport arm completely then go one step forward to be sure that the transport arm is in the first cabin of the magazin.

- Press the eject button [3-1] then slide holder will lift-up.
- Place the slide as illustrated [3-1] into the slide holder and press the slide holder down [3-2].
- Open the CyberView X MS driver program to scan the slide.

Attention! When using the single slide scanning function, please check the slide transport arm has been moved completely into the unit and the cover for magazine tunnel is taken off.



[3-2]

HOW TO SCAN THE SLIDE(S)

Start To Scan...

STEP 1 – Acquire Driver(For PC and MAC User)

Open TWAIN compliant application software. Select "File→ Import" then choose "CyberViewX - MS..." to acquire the TWAIN driver.

STEP 2 – Scan Setting...

Select the film type.

EX : If the film is Positive, then select Positive > Generic > Generic Positive.

9	-		Generic P Positi	osi ve	live
Neg	gative	×			
Pos	itive	•	Generic	۲	Generic Positive 2
В&	W	۰Ţ			✓ Generic Positive
					Raw Image

STEP 3 – Pre-scanning...

Select the "Prescan Current Frame" to pre-scan the slide loaded into the scanner or "Prescan..." to pre-scan slide or slides at specific positions.

	-
Prescan Current Frame	Prescan Current Frame
Prescan 1 - 36	Prescan 1 - 36
Prescan 1 - 50	Prescan 1 - 50
Prescan 1 - 80	Prescan 1 - 80
Prescan 1 - 100	Prescan 1 - 100
Prescan	Prescan
[Single Pre-scan]	【Multi-Pre-scan】

STEP 4 – To Set Desired Resolution...

Setup the resolution of scanning image, the default scanning resolution is 1800dpi.

Notice : The higher resolution you set the more scanning time is needed and larger hardisk space required.

Ex : The color image file size for one side with different resolution:

Scanning Resolution	Color Mode	File Size (w/o compression)
300dpi	24 bit	About 350KB
600dpi	24 bit	About 1 MB
1800dpi	24 bit	About 11 MB
3600dpi	24 bit	About 52 MB

Scan	
1800	▼ DP
1800	
2100	
2400	
2700	
3000	

[Choose the resolution]

STEP 5 – To Scan

Choose "Scan Current Frame" to scan the slide loaded into the scanner or "Multi-Scan..." to input the number how many slides you want to scan in the magazine.



[Multi-Scan]

STEP 6 – Exit

[Single Scan]

After scanning, all of the images will be transfer to the application software (ex : Adobe Photoshop Elements), click the "X" on the upper-right hand corner of the window or "**Scan** > Exit" to close the driver. You can then edit, save and print the scanned images from the application.

There is a message pop-up "Would you like to apply current scan resolution to default?" click "Yes" to save , "No" to discard the current setting or "Cancel" to return Cyber View X.





E N G L I S H

10

Description of CyberView - MS

There are four major parts of CyberView X user interface

- I 🕔 Main Window Area 【Fixed Windows】
- Menu Command

Scan

1. Prescan

Prescan Current Frame : Pre-scan the existing slide.

Prescan 1 – 36 (1 - 50, 1 - 80, 1 - 100): Pre-scan the 1-36(50, 80, 100) frame. Prescan...: Pre-scan the current slide or designate frame(s) you input,

to separate by comma symbol.

Presson	and the second se	×
Set Range	Г	
	Please input frame number or r Prescan	onge. Example: 1,3,5-12

2. Scan

Scan Current Frame : Scan the current slide.

 $\label{eq:scan} Scan \ Selected \ Frames \ : \ Scan \ the \ slide(s) \ you \ selected.$

 $\label{eq:multi-Scan...} \text{ Scan the slide}(s) \text{ which you input the number}.$

Scan Current Frame to File... : Scan the existing slide to a file and set the file path, file name, Index, start number , file type and jpeg quality, then click "OK".

C:Documents and Setti	ings\Andy-PC\My Documents	
Base File Name : image		Browse
Trailing Index after Base File Name	File Type :	TIF
Digits : 3	JPEG Quality :	Good
Options :	Filename Example :	

i. Select Browse and choose the designated folder you wish to save the scanned image to.

- ii. Enter the file name.
- iii. Trailing Index after Base File Name

-Digits: user can adjust the digits to define the length of the file name and can it carry up to 6 digits at most)

-Options:

use Film Index: Automatically accumulate the number and the default number is 1 user Defined Start Number: user can change the default number

iv. Choose the file type to "TIF" or "JPG".

v. Choose image quality in JPEG file. (Good, Better, or Best)

3. Revert : Discard all modifications and restores the image back to the original state in preview windows.

4. Preference... : Attribute setting windows.

 Prescan Resolution ○ 75 dpi ○ 300 dpi 	Color Depth : Scan Mode : 1800 <u>×</u>	8 bit • Normal •	
01/ Broat			Canad

i. "Prescan Resolution" - To set the default per pre-scan resolution.

iii. "Color Depth" – To set the default color depth while scanning.

iv. "Scan Mode" - To set the default scan mode while scanning.

☐ Auto Exposure] ☐ Auto Gamma	Digital Noise Reduction Intensity 0 200

i. "Auto Exposure" - Click to apply Auto Exposure to all of the scanned films.

ii. "Auto Gamma" - Click to apply Auto Gamma to all of the scanned films. iii."Digital Noise Reduction" – Click to apply Digital Noise Redution to all of the scanned **films.**

Scan Setting Advanced Setting		Default Scam	nıng Area	ROC/GEM	
Enable user settin	g for auto-c	rop U.J.A.			
Full Scene	3.75	* 3.75	cm	Default	
Landscape/Portrait	3.5	* 2.3	cm	Default	
Small Scene	2.3	* 2.3	cm	Default	
Scan Offset (+/-)	Offset X	e Offset Υ γ ∫0	cm	Default	

To set the scanning area of scene, there are 3 type of scene including "Full Scene", "Landscape/Portrait" and "Small Scene", you can adjust the scanning area setting of slide size or click "Default" to standard setting. Adjust the "Scan Offset" setting to move the image position of slide.

Scan Setting Advanced :	Setting Default Scanning Area	ROC/GEM	
Enable ROC	50		
🔽 Enable GEM	75		

(ONLY AVAILABLE ON UNITS WITH DIGITAL ICE³™ TECHNOLOGY BUILT IN.)

- i. Enable / disable "Enable ROC" to start or close the ROC function default while scanning.
- ii. Enable / disable the "Enable GEM" to start or close the GEM function default while scanning.
- 5. Exit : Closes the CyberView X MS user interface.

There is a message pop-up "Would you like to apply current scan resolution to default?" click "Yes" to save , "No" to discard the current setting or "Cancel" to return to Cyber View X.

Cyber¥iew X	
Would you like to apply current You can also set default scan re box.	scan resolution to default ? solution on Preference Dialog
Yes No	Cancel
🗖 Don't show me again.	

Preview

- 1. Zoom In : Magnify image.
- 2. Zoom Out : Reduce image.
- 3. Rotate 90 Left : Turn the image 90° counter clockwise.
- 4. Rotate 90 Right : Turn the image 90° clockwise.
- 5. Flip Horizontal : Flips the image horizontally.
- 6. Flip Vertical : Flips the image vertically.

Image Adjustment

1. Variations : Provide different views of image with options to make changes to highlights midtones etc.



2. Color Balance... : To adjust the brightness, contrast, saturation, and color (CMY or RGB) of the image. Comparison between before and after adjusted will be shown for reference.

Image Adjustment	
Variations Color Balance Curves and Le Before	rels After
- Brightness +	Cyan Red O 🚊 🔎
- Contrast +	Magenta Green
3	
Setting	
▼ Sav	Delete Reset All Apply to all frames
R: 53 G: 47 B: 25	X: 88 Y: 155 OK Cancel

For Example :

Your previewed image appears to be too dark you can use the "Brightness" slider in the "Color Balance" window to adjust the image, selecting the slider in the center and moving it to the right you will notice your image's "After" view is getting lighter, once it is adjusted to your liking you can click on "OK" and the changes will be sent to the scanning hardware, this can also be used to adjust each of the functions in "Color Balance" by moving slider to adjust the image then select OK to save changes to be sent to the scanner when you select SCAN. (for more precise adjustments please use the Curves and Levels option window) See Next…

3. Curves and Levels... : To adjust image quality by moving Curve and Levels. Comparison between before and after adjusted will be shown for reference.



E N G L I S H

For Example :

Your previewed image appears to be too dark you can use the Input slider in the Curves and Levels window to adjust the image, selecting the Gray slider in the center and moving it to the left you will notice your image's "After" view is getting lighter, once it is adjusted to your liking you can click on "OK" and the changes will be sent to the scanning hardware, this can also be used to adjust each color channel independently, using the channel drop down menu "RGB = All colors" R = Red, G = Green, and B = Blue, if you find your image has too much or not enough of any one color you can adjust this using these tools Example : Too much/not enough Red select R from the Channel drop down menu (just below the "Before" image on the left) and using the input slider adjust the color then select OK to save changes to be sent to the scanner when you select SCAN.

Windows

Setting 200% 200% 100 100 % 100 % 100 % 100 % 100 % 100 % 100 % Set As Default 100		
Control 200% 100 % 100 % 100 % 100 % Set As Default 200% 100	xposure Setting	
200% [100 % [100 % [100 % Set As Default	-Exposure Control —	An and the second
100 % 100 % 100 % Set As Default	50%	200%
100 %	R	100 %
Set As Default	G	100 %
Set As Default	в —	100 %
	🦵 Set As Defa	ult
	Bj	utt

1. Exposure Setting... : To adjust the exposure time (R,G, B) press "Reset" to reactors to the default setting

2. Output Preview... : To preview the output format of image. A pop-up window to set the output media (type and side), parameter (resolution and size)

utput Preview	Output Media
	Type: Paper
	Width Height 8:500 * 11.000 in
	Output Parameter
	Custom ▼ 1800 DP1 Width Height 1.387 × 0.914 in €

Help

- 1.User Manual : Opens the electronic user's manual.
- 2. Update Firmware : Upgrade the firmware version, select the path where the file of firmware has been saved. (These files may be downloaded from our website)
- About...: Displays system information (including operation system, CPU) , product information (including product name, model name, hardware version, firmware version, software version, device information including interface and optical resolution) .

Function Bar Diagram

In order to optimize scanned image quality, please select your film type and brand from the toolbar.

•	Generic Negative Negative	[Negative]
•	Generic Positive Positive	【Positive 】(also known as Slide)
•	Generic B&W B&W	【Black and White】
·	Prescan: Pre-scan the	e current film, press button down for more options.
1	Scan: Scan film, press	s drop down button for more options.
) ·	lmage Adjustment: Pr	ess drop down button for more options.
2	Output Preview: To di	splay the output preview image.
	Backward One Frame	: Moves film back one frame.
	Forward One Frame:	Moves film forward one frame.
	Reload Magazine: Re ret	set the frame number, the location number will be uened to 1.
<u>*</u>	Set Current Position:	Change the current position number, the location number will be chenaged what number you input.
	Go to: Will pop-up a want to move	dialogue box to prompt you to enter which frame you e to.
Stat	us line	

To shows the RGB values in the image on the lower right hand corner.

Exposure R: 100% G: 100% B: 100%

、 Preview Window Area 【Fixed Window】

Toolbar Diagram

To select the scan area, more than one selection could be done at one time.

Zoom In: To magnify the image where the cursor point, the image will be magnified one time every click until maximum multiple (1000%).

Zoom Out: To reduce the size point the cursor to the desired area, the image will reduce by half with every click until the least multiple (25%) .



Rotate 90 Left : To rotate the image counter clockwise 90 degrees.

Rotate 90 Right : To rotate the image clockwise 90 degrees.



Flip Horizontal: To Flip the image 180 degrees horizontally.



Flip Vertical: To Flip the image 180 degrees vertically.

Revert: Discard all modifications and restores the image back to the original state in preview windows.

(m)

ROC : Automatically restores original colors by analyzing the base image and applying corrections to the faded colors. (ONLY AVAILABLE ON UNITS WITH BUILT IN DIGITAL ICE³™ TECHNOLOGY.)



GEM : Automatically enhances the clarity of a scanned film image while preserving its colors, gradations and sharpness. (ONLY AVAILABLE ON UNITS WITH BUILT IN DIGITAL ICE³™ TECHNOLOGY.)

Note: GEM will only have obvious effect on 1800 DPI or above.

Preview Window

Preview the image you pre-scan, you can select the measurement unit "in"-"cm"-"px" by clicking the upper-left corner.



Status Line

On the lower left hand corner, it shows the color level of red, green, blue and coordinates of location [ex:I]; on the lower right hand corner, it shows the zoom scale, which frame it located, how many blocks you selected [ex:II].

R:U G:U B:U	X:1.443 Y:1.4	413 [1]	
Zoom Scale: 100%	Location: 1	Selections : 1	(II)

、Active Frame Setting Area 【Floating Window】

A comprehensive advanced mode is available to allow for more user defined adjustments.

Normal mode [ex : I] to input the basic parameter to scan (including scan resolution, film size, color depth).

Advanced mode [ex : II] to input the parameter of scan and output (including scan resolution, size, color depth and output resolution, size, scan mode).

The "Active Frame Setting" only imitates in the current preview image, clic	k "Apply
to All" to imitate in all preview images.	





、Thumbnail Panel Area 【Floating Window】

Displays thumbnail view of pre-scanned images. By default all pre-scanned images are selected. Note the small check mark below each image.



When scanning more than 6 frames (6 at a time are viewable in the thumbnail panel) you may scroll to view more by clicking on the right arrow button. The left / right arrow buttons allow you to scroll throught pre-scanned images with ease.

Thumbnail Panel	
+ - 7	7

To de-select frames you do not wish to scan click on the check mark box to remove selection.



TECHNICAL SUPPORT

CyberView X - MS

For question regarding film scanner and CyberView X-MS driver, please contact with your dealer immediatly.

Bundled application software

For questions regarding **bundled application software**, you can refer to the *HELP* function on the application menu bar or visit the software company's website.

**This user manual has also been archived in the packaged CD.