 





DIGITAL
PICTURE FRAME
12.1"
User's Manual


QUICK START GUIDE

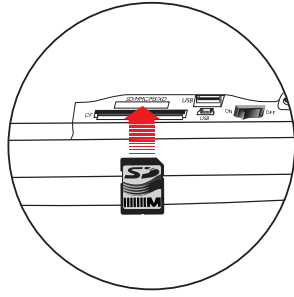

 - 1 Insert memory card**
into the card slot labeled SD/MMC/MSxD
or the card slot labeled CF.

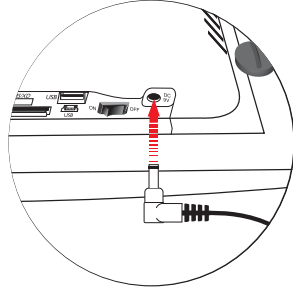

 - 2 Insert AC Power
adapter** into the input jack.
Plug the power adapter into an
electrical outlet.

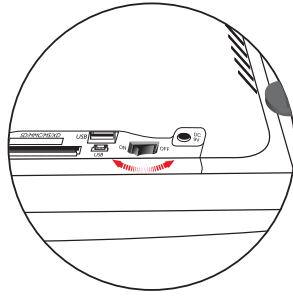


- 3 Switch on the frame**
Automatic slideshow will begin in a
few seconds.

For additional features and instructions please refer to the user manual.



 www.smartpartsproducts.com





ABOUT OPTIPIX PRO

OptiPix Pro is designed to help you find, optimize and transfer pictures to your frame. The software, residing on your computer, will guide you through 3 Easy Steps.

OptiPix Pro will help you:

- View your vertical photos the right way
- Sharpen your photos
- Find and transfer photos to your frame
- Fit more pictures on your frame

OptiPix Pro will not alter your originals – it will create copies that will be optimized and transferred to your frame. Using **OptiPix Pro** you can store up to **2,000** pictures in your frame!

Use your frame to get the message out. With Smartparts, Inc.'s exclusive **OptiPix Pro** software for Windows it's easy to convert and transfer PowerPoint slides, PDF files, and most picture and graphic files directly to your digital frame.

HOW TO INSTALL

The software's installation file is preloaded on the frame's internal memory. To install it on your Windows computer, perform the following steps:

1. With the frame turned off, connect it to your computer using the supplied USB cable.
2. Turn on the frame and wait several seconds for the computer to recognize it as a new device.
3. On the computer, click on the Start menu, and select My Computer.
4. Within the My Computer window, double-click on the drive with the label that matches the model number of your digital picture frame. The model number usually begins with SP.
5. In the window that opens, double-click on the setup file and follow the on-screen instructions.

After **OptiPix Pro** is installed on your computer, remove the setup file from the frame's memory to allow more room for photos, videos and music. You can move the file to your hard drive if you'd like, or simply delete it.



www.smartpartsproducts.com



Table of Contents

Important Safety Precautions.....	2
What's Included.....	3
Introduction.....	4
How to Display the Frame.....	5
Getting Started	
How to Insert Memory Card	
How to Select Memory Card.....	6
The Three Modes.....	7-9
<i>View Your Pictures</i>	
<i>Listen to Your Music</i>	
<i>View Your Videos</i>	
<i>Settings</i>	
Copying and Deleting Files.....	10
Connecting to a Computer.....	11
SyncPix™ Desktop.....	12
Troubleshooting.....	13
Technical Specifications & Warranty.....	14



Important Safety Precautions

Always follow these basic safety precautions when using your digital picture frame. This will reduce the risk of fire, electric shock, and injury.

Warning: To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.

Warning: To prevent the risk of electric shock, do not remove the cover. There are no user-serviceable parts inside. Refer all servicing to qualified personnel.

 
- The digital picture frame is for indoor use only.
- Unplug the digital picture frame before performing care and maintenance.
- Do not block the ventilation holes on the back of the digital picture frame at any time.
- Keep your digital picture frame out of direct sunlight and heat sources.
- Protect the power cord. Route power cords so that they are not likely to be walked on or pinched by items placed on or against them. Pay particular attention to the point where the cord attaches to the digital picture frame.
- Only use the AC adapter included with the digital picture frame.
Using any other power adapter will void your warranty.
- Unplug the power cord from the outlet when the unit is not in use.





What's Included

Digital Picture Frame
AC Power Adapter (9V, 2.0A)
This User's Guide
Remote Control
USB Cable
Stand

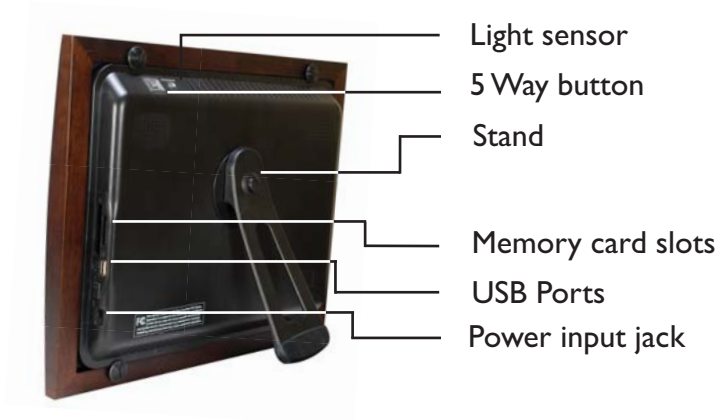

3



Introduction

Congratulations on your new Smartparts SyncPix™ digital picture frame! SyncPix™ frames include revolutionary technology that makes transferring photos from a memory card to the frame virtually effortless.

 
Your new picture frame does some amazing things.

- Your new digital picture frame lets you view photos and videos and listen to music – all without a computer.
- An automatic, continuous slide show lets you enjoy all of your photos with ease.
- The included remote control makes it simple to select photos, change settings, and more.
- Photos can be viewed directly from memory cards or from the frame's built-in memory.
- The frame can be connected to a computer to quickly and easily transfer pictures from your hard drive.



How to Display the Frame

To begin using your SyncPix™ digital picture frame, start by connecting the stand or hanging the frame on a wall.

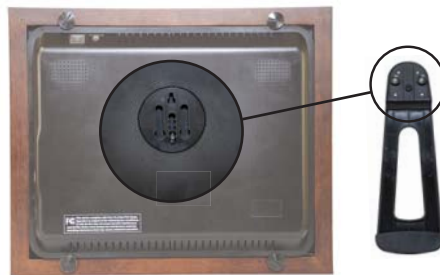

The stand is connected by inserting the round knobs at the top into the opening on the back of the frame and sliding it upward. The display angle of the frame can be adjusted by sliding the stand up or down. The frame can be displayed vertically by rotating the stand 90 degrees counter-clockwise.

The slot on the back of the frame can also be used to hang the unit on a wall.



Getting Started

To begin using your digital picture frame right away, follow these simple steps.

1. Connect the AC power adapter to the frame and plug the adapter into an electrical outlet. (100-240 V, 50-60Hz)
2. Insert a memory card into the appropriate card slot, or plug a USB flash drive into the USB port on the side of the frame.
3. To turn on the frame press the switch to the side of the frame to the on position.
4. Slide show begins automatically. To stop press Exit.

How to Insert Memory Card

There are two memory card slots on the side of the digital picture frame. The smaller slot is for Secure Digital™, Multi-Media Card™, Memory Stick™, Memory Stick Pro™, Memory Stick Duo™, Memory Stick Pro Duo™ and xD Picture Cards. The larger slot will accept Compact Flash cards. A card can be inserted in only one direction. It should fit snugly when properly inserted. Do not force a card or you will risk damaging your digital picture frame and the card.

How to Select Memory Card

To select from the various types of memory, press Exit until the memory devices are highlighted at the bottom of the screen, and then use the left and right arrow buttons to select the desired memory type. Press OK to access the selected memory type.



The Three Modes

There are three modes for using your digital picture frame. To change modes, press the Exit button until the options on the left side of the screen are highlighted. Use the up and down arrows to highlight the desired mode and then press Enter

View Your Pictures

Highlight View Your Pictures and press OK. Use the arrow buttons to highlight the photo you want to view. Press OK to view the photo. While viewing a single photo you can move to the previous or next photo by using the left and right arrow buttons. The up and down arrow buttons are used to rotate the photo on the screen. To see a slide show of your pictures, press the Slideshow button on the remote control. To end the slide show, press Exit.

Listen to Your Music

Highlight Listen to Your Music and press OK. Use the up and down arrow buttons to highlight the song you want to hear and press OK to play the song. To stop, press Exit. Your digital picture frame can play music files in the WMA file format. If music files are present, the music will also be played in the background during the slide show.



View Your Videos

Highlight View Your Videos and press OK. Use the up and down arrow buttons to highlight the video clip you want to watch and press OK. To stop the video, press Exit. Your digital picture frame can play video clips that are in the AVI Motion JPEG format, up to 640x480 resolution and up to 30 frames per second.

Settings

Highlight Settings and press Enter. Use the up and down arrow buttons to highlight the setting you would like to change and press Enter to access it.

Slide Show – Press enter to start the slide show. This is how you would start the slide show without the use of the remote control.

Multiple Picture Display – Turning this feature on will result in photos being displayed on the screen four at a time.

Slide Show Transition – This allows you to choose from among several transition effects.

Slide Show Speed - The slide show speed can be set to Fast, Medium or Slow.





Display Image Size – Select Original to have your photos show in their original shape even if they do not match the shape of the screen. Select Optimal to have your photos fill the screen (some cropping may occur).

Repeat – Select Repeat One to have each individual video or music file repeat continuously. Select Repeat All to have all video or music files repeat continuously. Select Repeat Off to have video or music files played only once.

Clock – Select On to have a clock displayed on the menu screen. After pressing On the year will be highlighted. Use the up and down arrow buttons to change the number, then use the right arrow button to move to the next number. Continue until the date and time are correct and then press OK.

Alarm – Select On to use the alarm function. The alarm can be set to ring at a specific time each day. The hours and minutes are set in the same manner as used in setting the Clock.

Light Sensor – When activated, the frame's built-in light sensor automatically turns the frame off when the room is darkened and back on when it is light.

Language – Select English, French or Spanish.

Reset Settings – Select Yes to restore your digital picture frame to its factory default settings.



Copying and Deleting Files

Photos, music and video files can be deleted or copied to another type of memory. For example, you can copy your pictures from the memory card you normally use in your camera to the Expansion Memory or Internal Memory.

To copy one photo, highlight the thumbnail and press the Menu button. Highlight Copy Picture to and press OK. Only the available memory types will be shown. Highlight the type of memory that you want to save your picture to and press OK. The picture will be copied.

To copy multiple pictures at once you can select them before accessing the Copy Picture to function. To select a photo for copying, highlight it in the thumbnail screen and press the Up Volume button on the remote control. A check mark will appear in the corner of the thumbnail. Select all the photos you would like to copy and then press Menu and Copy Picture to as described above.

Copying music and video files is done in a very similar manner. However, to select multiple files, use the right arrow button to add the check mark next to each file.

To delete, highlight the file or files as above and select the delete option from the menu.





Connecting to a computer

Using the supplied USB cable, you can connect your digital picture frame to a computer to transfer files between the two devices.

With the frame turned off, connect the small end of the cable to the frame and the large end to your computer. Turn the frame on and allow the computer a few moments to recognize the device. The frame's internal memory and any memory cards inserted in the frame will appear as external storage devices on the computer. Compatible picture, audio and video files can be copied to the internal memory or memory cards in the frame through normal copy-and-paste or drag-and-drop methods or by using Smartparts Sync™ Pix desktop software you can optimize and transfer pictures in three easy steps:

1. Find the pictures to transfer
2. Optimize your pictures
3. Finally transfer your picture to your frame and enjoy the slide show!

The frame must be disconnected from the computer to display photos or videos or play music.



SyncPix™ Desktop

You can also use SyncPix desktop software with your SyncPix frame.

Visit www.syncpix.com to download your complementary copy of the software. Use SyncPix Desktop to do the following:

- **SMART COPY** - Copying your pictures from your computer to your frame is as easy as 1-2-3
- **SMART FIT** – Using advanced image understanding technology, photographs can be automatically focused on the most important areas without distorting the picture. A Smartparts' EXCLUSIVE!
- **SMART SCALE** – Automatically corrects for rotation, optimizes the size and characteristics of each photo to match your particular frame allowing the frame to hold up to 2000 pictures.
- **SMART VIEW** - Convert pdf, powerpoint, and many image formats for viewing on your picture frame.



Troubleshooting

Symptoms	Reasons	Settle method
Displays unrecognizable code	Check if correct language option is set	Set language selection in the Setup menu
Cannot insert memory cards	The card is being inserted in the wrong direction	Insert the cards in correct direction
Cannot save files	The flash capacity is not large enough	Restart the unit, delete some files, or format the flash memory
Dark screen	Unit doesn't turn on or AC adapter connection is improper	Check if the unit is turned on or AC adaptor is properly connected
No sound	Volume is set at 0	Press the Volume + button to increase the volume
Unable to display or download file	The file format is not supported or USB is improperly connected or memory card is damaged	Make sure the file format is supported or the computer and the player are in correct connection or memory card is not damaged
Some files cannot be displayed	The card is not compatible with the unit or the file format is incorrect	Use another card or change to a correct file format



Technical Specifications

Product :	12" LCD Digital Picture Frame with SyncPix™ technology
Input Formats:	Secure Digital™ , Multi Media Card™ , Compact Flash™ , xD-Picture Card™ , Memory Stick™ , Memory Stick PRO™ , Memory Stick Duo™ , Memory Stick PRO Duo™ and USB Flash Drives
File Format:	JPEG, AVI Motion JPEG, MPEG-I, MP3
Internal Memory:	256MB
USB Ports:	Mini-USB (for file transfer) USB (for USB Flash Drives)
Power Input:	100V -240V AC, 50~60HZ
Power Output:	12V DC, 1.5A
Features:	Play picture, music & video files Auto-optimization of photos Extendable/removable stand Remote control Variable speed slide show Range of transition styles for slide show

Warranty

Smartparts, Inc. warrants its digital picture frames against manufacturing defects for a period of 90 days from date of purchase.

For technical support, please visit our web site at:
www.smartpartsproducts.com.

