



instructions for use



WARNING: AVOID SERIOUS INJURY FROM FALLING OR SLIDING OUT. ALWAYS USE THE SEAT HARNESS. NEVER LEAVE CHILD UNATTENDED. IMPORTANT: KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE. A CHILD'S SAFETY IS YOUR RESPONSIBILITY. THIS VEHICLE IS SUITABLE FOR ONE CHILD.

GENERAL INFORMATION & SAFETY

- Follow all instructions carefully. Incorrect use will cause damage to stroller.
- This product has been designed to take the weight of a child of 25kg (55lbs) maximum and maximum height of 110 cm (44").
- Children should be harnessed in at all times and should never be left unattended.
- **IMPORTANT - It is important for your child's safety that the harness be correctly fitted and adjusted. If not adjusted correctly in accordance with the instructions the stability of the stroller will be compromised.**
- The harness and seat belt are not a substitute for proper adult supervision.
- The child should be clear of moving parts while making adjustments.
- **IMPORTANT - DANGER: It is important that care is taken to ensure that children are kept clear of the stroller when folding or unfolding. Pinch points and scissoring actions are unavoidable during these operations.**
- Do not carry additional children, goods or accessories in or on this stroller except as permitted in this manual. They may cause the stroller to become unstable or place unneeded stress on the stroller that could lead to breakage.
- Overloading, incorrect folding and the use of accessories, e.g. child seats, bag hooks, rain covers, buggy boards, etc., other than those approved manufacturer may damage or break this vehicle.
- Any damage caused by the use of accessories not supplied by manufacturer will not be covered by the terms of our warranty.
- Never leave child in the stroller when ascending or descending stairs or escalators or when traveling on other forms of transport.
- The stroller should always open and fold easily. Do not force it. It may be necessary to re-read the instructions.
- Negotiate curbs and rough ground carefully. Repeated impact will cause damage to the stroller.
- Never allow children to stand on the footrest.
- Do not leave the stroller exposed to heat, i.e., by a radiator in direct sunlight.
- Do not place items on the top of the hood as it may cause damage to the hood.

MAINTENANCE AND REPAIR

This vehicle requires regular maintenance by the user. Regularly check all rivets and connecting devices for tightness and security. Inspect all brakes, wheels and tires and replace or repair if necessary. Check all safety devices for correct operation, in particular the primary and secondary locks. These should be free to move at all times. Never continue to use a product that is not structurally sound.

- We recommend a service every 12 months.
- If wheels squeak, lubricate sparingly with Teflon or silicone coating. Do NOT use oil or grease based products, as this will attract dirt, which will clog the movement.
- Only manufacturer replacement parts should be used. It may be unsafe to use parts not supplied by manufacturer.

CLEANING

- Clean frame with a damp cloth and a mild detergent and dry thoroughly.
- If the stroller chassis parts have been exposed to salt water we recommend that they be rinsed down with fresh (tap) water as soon as possible.
- The hood maybe sponged lightly using a damp cloth and a mild detergent. The seat cover, head cushion and harness pads maybe washed. Dry thoroughly before reuse.
- Do not fold or store the product while wet and never store in a damp environment this can cause mildew to form.

The manufacturer reserves the right to make design changes to any of their products as part of their continuous design improvement program. This product is designed and manufactured to comply with **ASTM F833** Standard Consumer Safety Performance Specification for Carriages/Strollers and is **JPMA** certified.


INSTRUCTIONS

IMPORTANT:

- READ THESE INSTRUCTIONS CAREFULLY BEFORE USE AND KEEP THEM FOR FUTURE REFERENCE.
- APPLY BOTH BRAKES WHEN PARKING THE STROLLER.
- YOUR CHILDREN'S SAFETY MAY BE AFFECTED IF YOU DO NOT FOLLOW THESE INSTRUCTIONS.

ASSEMBLY

Insert frame peg into front wheel swivels.
Audible CLICK will be heard.

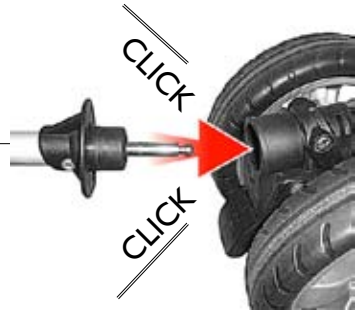

I. TO OPEN THE STROLLER

⚠ WARNING: Ensure that all locking devices are engaged before use.


- A Release storage clip.
- B Open the stroller.
- C Using foot, push the foot peg down fully to engage the primary lock.



2. TO OPERATE REAR BRAKES

⚠ WARNING: Parking device shall be engaged during the loading and unloading of children.

- A TO ENGAGE BRAKES: With foot, push the brake levers fully down.
- B TO RELEASE BRAKES: Pull the brake levers fully up.

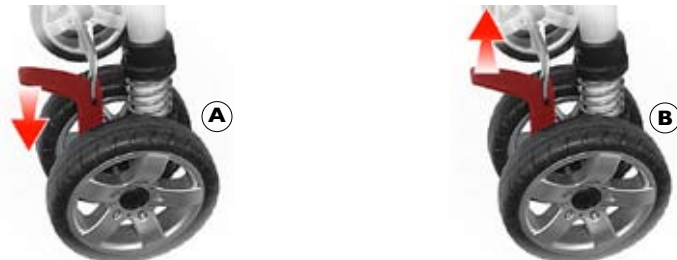

3. TO OPERATE FRONT WHEEL SWIVEL LOCKS

A TO LOCK SWIVELS: Push down BOTH swivel locking levers.

B TO UNLOCK SWIVELS: Lift BOTH swivel locking levers.



4. SEAT BELT/ SHOULDER HARNESS OPERATION

⚠ WARNING: Avoid serious injury from falling or sliding out. Always use the crotch strap in combination with the waist belt and shoulder straps.



TO FIT HARNESS

A Insert both fasteners securely into clasp.

B Adjust strap lengths. Crotch strap and shoulder harness should be snug.

TO RELEASE HARNESS

C Squeeze fastener prongs and pull up.

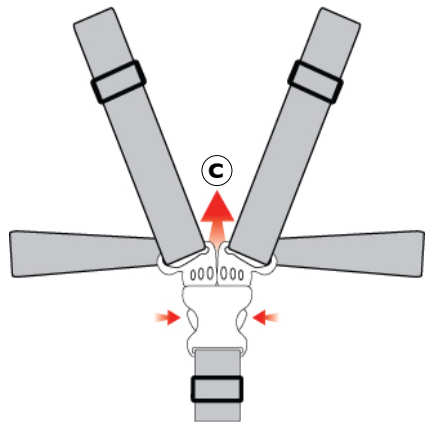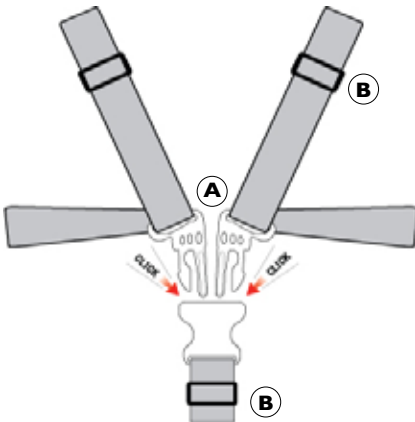


5. TO FIT HEAD CUSHION

- A Attach Velcro straps to corresponding Velcro strips on seat rear.



6. TO FIT HARNESS PADS

- A Lay open pad under shoulder harness strap.
- B Fold pad over and secure Velcro strips.

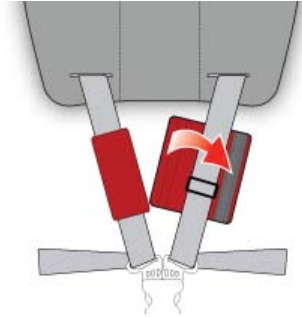


7. TO OPERATE THE LEG REST

- A Press triggers.
- B Move leg rest up or down until triggers locate in one of 2 positions.



8. TO ADJUST SEAT RECLINE


- A TO RECLINE SEAT BACK: PRESS BOTH hand grips to release seat locks and slide the seat back to desired position. Release hand grips to engage locks on both sides.
- B TO RAISE SEAT BACK: From rear of stroller push seat back to original upright or desired intermediate position.

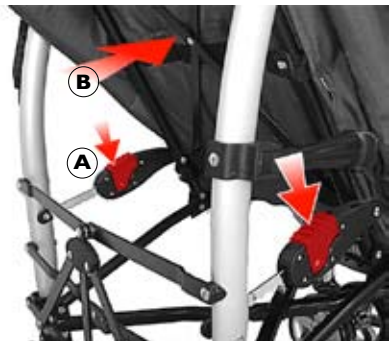

9. TO ATTACH THE HOOD

⚠️ WARNING: Overloading may cause a hazardous unstable condition.
Maximum total capacity of hood pocket - 1.1 lb (0.5 kg).

- A With stroller open clip the hood to the handle tubes just above the hinge blocks.
- B Wrap Velcro strips around handle tubes.
- C Place rear apron behind seat back and attach Velcro to seat sides (one each side).
- D Push hood forward and spring loaded hinges will expand.

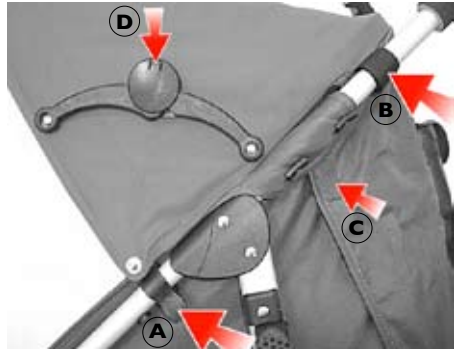

10. TO FOLD THE STROLLER



Ensure sun visor is folded away beneath the hood.

Ensure seat back is in its fullest upright position and hood (if fitted) is folded back.

Remove contents of shopping bag.

It is recommended that the harness is fastened before folding the stroller.

- A Using foot, lift up on foot plate to release primary lock.
- B Push down on secondary lock lever.
- C Grip handles and push forward.
- D Compress folded stroller and engage the storage clip.

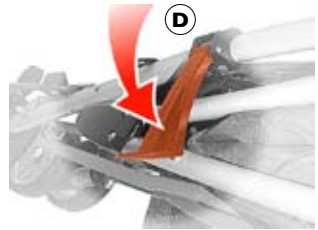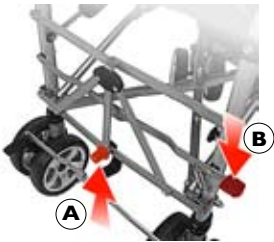



IMPORTANT- WARRANTY WILL BE VOID IF DEFACED OR REMOVED

LIMITED WARRANTY

Your stroller is guaranteed to be free from any manufacturing defects for a period of 2 years from the date of purchase under normal use and provided it is used in compliance with the operating instructions. This warranty extends only to the original retail purchaser and is only valid when supplied with proof of purchase. Please retain proof of purchase with this Limited Warranty.

Should a repair be needed please contact the retailer from whom the product was purchased.

Please note that the warranty will not be applicable if:

A fault is the cause of misuse or poor maintenance.

Repairs are carried out by a third party.

The stroller is faulty due to general wear and tear which is the result of everyday use.

A stroller is damaged as a result of an accident.

The manufacturer is not satisfied that the stated warranty terms and conditions have been met.

Bergeron By Design
15 South Second Street
Dolgeville, New York 13329
T | 315 429 8407
F | 315 429 8862

© 2008 Bergeron By Design

The information contained herein is subject to change without notice.
Bergeron By Design shall not be liable for technical errors or omissions herein.