

HEAD OFFICE
Top Vision Group
Waarderweg 58
2031 BP - Haarlem
The Netherlands
T. +31 23 5176 677
F. +31 23 5310 241
E. info@topvisiongroup.com
W. www.topvisiongroup.com

EUROPEAN OFFICES

France
Top Vision - Agence France
25-27 rue de Fécamp
75012 - Paris
France
T. +33 1 43 44 76 11
F. +31 1 43 45 81 40
E. info@topvisiongroup.fr
W. www.topvisiongroup.fr

Spain
Creaciones RTC
Aulestia I Pijoan, 14
08012 - Barcelona
España
T. +34 93 23 77 476
F. +34 93 41 51 313
E. info@rtc-optica.com

United Kingdom
Top Vision UK - Vision House
Gatehouse Lane, Framfield
E. Sussex - TN225RS
England
T. +44 870 840 23 78
F. +44 870 840 23 79
E. uk@topvisiongroup.com

Italia
G.M.O Milano
Via Croce Rossa 86
35129 - Padova
Italia
T. +390 49 807 55 70
F. +390 49 807 55 65
E. gmopd@tin.it

Deutschland
Top Vision
Vordere heide 36
54293 - Trier
Deutschland
T. +49 651 9953 605
F. +49 651 9953 629
E. info@topvisiongroup.de
W. www.topvisiongroup.de

 
Denmark
Ponti - Top Vision
Box 249
8500 - Grenaa
Denmark
T. +45 86 30 08 00
F. +45 86 32 57 79
E. info@topvisiongroup.dk

OR CONTACT YOUR LOCAL DEALER:

PLACE FIRM STAMP HERE

HEAD OFFICE: WAARDERWEG 58 - 2031 BP HAARLEM - THE NETHERLANDS
TEL. +31 23 517 6677 - FAX +31 23 531 0241 - E-MAIL [INFO@TOPVISIONGROUP.COM](mailto:info@topvisiongroup.com)

TOP VISION GROUP

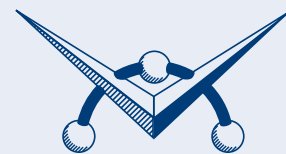

SECURE DISPLAY SYSTEMS



essence
REMOTE CONTROLLED



20th FIRST CENTURY
SOLUTIONS

USER MANUAL

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical unit, basic precautions should always be followed, including the following:
Read all instructions before using the Secure Display System

DANGER - To reduce the risk of electric shock:

1. Always unplug this unit from the electrical outlet before cleaning.
2. This SECURE DISPLAY SYSTEM contains electronic components. Do not open these without a qualified electrician or an official Top Vision dealer.

WARNING - To reduce the risk of burns, fire, electric shock, or injury to persons:

1. Unplug from outlet before reassembling parts.
2. Close supervision is necessary when this unit is used by, or near children, invalids, or disabled persons.
3. Use this unit only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. Never operate this unit if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the SECURE DISPLAY SYSTEM to a service center for examination and repair.
5. Keep the cord away from heated surfaces.
6. Never drop or insert any object into any opening.
7. Do not use outdoors / for indoor use only!
8. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.

SAVE THESE INSTRUCTIONS !

MAINTENANCE INSTRUCTIONS

Instructions for cleaning and user maintenance operations:

1. The exterior of a SECURE DISPLAY SYSTEM may only be cleaned with a non-static brush.
2. The SECURE DISPLAY SYSTEM has no user serviceable parts. All malfunctional or damaged components are to be replaced by a service representative duly authorized by Top Vision Group BV or an official Top Vision dealer.

INTENDED USE

1. The indented use of the Secure Display System is to display eyewear frames and sunglasses.
2. This product is for commercial use only.

AC ADAPTER

Input: 100-240 V~1.0A, 50-60Hz
Output: 24V  1.5 A



99BJ
E17677
ITE
POWER
SUPPLY

CAUTION: FOR INDOOR USE ONLY 


SERVICE GUIDELINES BEFORE CONTACTING A TOP VISION SERVICE AGENT.

When you are encountering a malfunction with the Essence Freestanding display, there are several basic points you can check yourself before contacting a Top Vision service agent.

A: All of the columns do not work:

Check the following:

1. Check if the unit is plugged into an outlet.
2. Check if the infra red receiver eye on the display is not blocked in any way.
3. Check if the remote control is pointed properly at the receiver eye (see step 24)
4. Check if the remote control is being used close enough to the display. (within approx. 5 mtr)
5. Check if the led of the remote control still lights up when used.
If not: the battery or the remote control needs to be replaced.
6. If you hear an alarm signal, contact Top Vision Group
7. Check if the receiver has not forgotten the codes. Recode the receiver (See page 8)
8. Check if the cable in the base is plugged in correctly (See sketch A)
If none of the above points apply and/or help contact a Top Vision service agent.

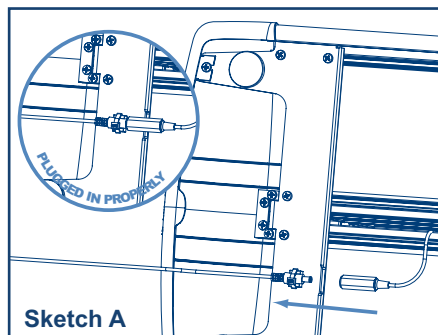


B: One or several of the columns do not work:

Check the following:

1. Check if each cable is plugged in correctly into the column (See sketch B).
Connect another cable to the column to check if the defect might be in the cable/receiver.

If none of the above points apply or/and help contact a Top Vision service agent.

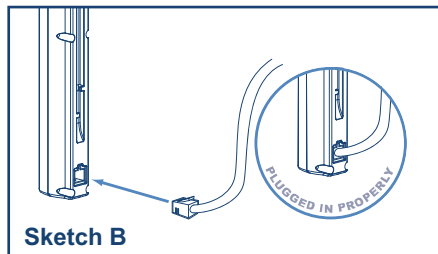

C: One or several of the columns do not close properly:

Check the following:

1. Check if the security hooks (that must sink into the bridge support) are not blocked in any way.

If none of the above points apply and/or help contact a Top Vision service agent.

D: The remote control works poorly

Check the following:

1. The remote control is being used close enough to the display. (within approx. 5 mtr)
2. If the led of the remote control still lights up when used. The battery or the remote control might need to be replaced.
3. Check if the infra red receiver eye on the display is not blocked in any way.

If none of the above points apply or/and help contact a Top Vision service agent.

Warranty:

Your Top Vision display is warranted by Top Vision Group B.V. * for a period of twelve (12) months from the date of purchase under the terms of our general conditions. The international Top Vision warranty covers material and manufacturing defects. The manufacturer's warranty does not cover:

1. The battery of the remote control.
2. Damage resulting from improper handling or assembly.
3. Possible consequential damage resulting e.g. from defects, use, improper use or non-functioning of the display.

In case of defects covered by the warranty, your Top Vision display or the parts that are malfunctioning will be replaced free of charge. The warranty for the replacement display or display-parts ends twelve (12) months after the date of purchase of the replacement display or display-parts. Any further claims against Top Vision Group B.V. e.g. for compensation damage, withdrawal from the purchase contract or refund of the purchase price are excluded. Your dealer carries sole responsibility for any other guarantees. The warranty becomes void in the event of servicing or repair of the display by any person not duly authorized by Top Vision Group B.V. or its representatives. In case of a defect, please contact your official Top Vision dealer or one of our authorized distributors as mentioned on www.topvisiongroup.com. The above manufacturer's warranty does not affect the purchaser's right against the seller nor any other statutory rights the purchaser may have.

For Top Vision Service agent addresses, see the backside of this manual or visit www.topvisiongroup.com

CONTENTS FOR 3 COLUMNED DISPLAY ES48-1-REM

BOX 1																
76 x 53 x 21 cm																
Article:	Voet essence 3/6	72404	90205	90206	90211	73410	73411	E Blok 420	73901	73911	95627	95021	95088	95610	94060	
Quantity:	1x	1x	2x	2x	4x	2x	2x	6x	1x	4x	1x	4x	4x	2x	1x	
Size:	660 x 400 mm	453 x 30 mm	42 mm	42 mm	M8 x 14	400 x 130	400 x 130	420 x 100 mm	→ M5 X 50	140 x 3,6	4,8 x 16	M5 x 8	798 x 60	2,5 mm		
BOX 2																
187 x 9,5 x 9,5 cm																
Article:	72021								72052							
Quantity:	2x								2x							
Size:	1830 x 60 mm								1025 x 28 mm							
BOX 3																
83,5 x 39 x 17,5 cm																
Article:	E Blok 420 3K	E Blok 420 3K rem	73902	70040	70041	REMOTE	70088	70089	Article: 72451							
Quantity:	1x	1x	1x	3x	3x	1x	1x	1x	Quantity: 1x							
Size:	420 x 100 mm	420 x 100 mm	→	4 x 16	4 x 20		1500 mm	1500 mm	Size: 420 x 1050 mm							
BOX 4																
154,5 x 19 x 10 cm																
Article:	K-TXT 16 rem (SI)								TXT strips							
Quantity:	3x								3 x 16							
Size:	1436 mm								180 x 38							

CONTENTS FOR 4 COLUMNED DISPLAY ES64-2-REM

BOX 1																
56,5 x 53 x 21 cm																
Article:	Voet essence 4	72403	90205	90206	90211	73410	73411	E Blok 230	73901	73911	95627	95021	95088	95610	94060	
Quantity:	1x	1x	2x	2x	4x	2x	2x	6x	1x	4x	1x	4x	4x	2x	1x	
Size:	473 x 400 mm	263 x 30 mm	42 mm	42 mm	M8 x 14	400 x 130	400 x 130	230 x 100 mm	→ M5 X 50	140 x 3,6	4,8 x 16	M5 x 8	798 x 60	2,5 mm		
BOX 2																
187 x 9,5 x 9,5 cm																
Article:	72021								72052							
Quantity:	2x								2x							
Size:	1830 x 60 mm								1025 x 28 mm							
BOX 3																
26,5 x 39 x 17,5 cm																
Article:	E Blok 230 4K	E Blok 230 4K rem	73903	70040	70041	REMOTE	70088	70089	Article: 72450							
Quantity:	1x	1x	1x	4x	4x	1x	1x	1x	Quantity: 1x							
Size:	230 x 100 mm	230 x 100 mm	→	4 x 16	4 x 20		1500 mm	1500 mm	Size: 230 x 1050 mm							
BOX 4																
154,5 x 19 x 10 cm																
Article:	K-TXT 16 rem (SI)								TXT strips							
Quantity:	4x								4 x 16							
Size:	1436 mm								180 x 38							

CONTENTS FOR 5 COLUMNED DISPLAY ES80-1-REM

BOX 1																
76 x 53 x 21 cm																
Article:	Voet essence 5/10	72405	90205	90206	90211	73410	73411	E Blok 800	73901	73911	95627	95021	95088	95610	94060	
Quantity:	1x	1x	2x	2x	4x	2x	2x	6x	1x	4x	1x	4x	4x	2x	1x	
Size:	1040 x 400 mm	833 x 30 mm	42 mm	42 mm	M8 x 14	400 x 130	400 x 130	800 x 100 mm	→ M5 X 50	140 x 3,6	4,8 x 16	M5 x 8	798 x 60	2,5 mm		
BOX 2																
187 x 9,5 x 9,5 cm																
Article:	72021								72052							
Quantity:	2x								2x							
Size:	1830 x 60 mm								1025 x 28 mm							
BOX 3																
83,5 x 39 x 17,5 cm																
Article:	E Blok 800 5K	E Blok 800 5K rem	73904	70040	70041	REMOTE	70088	70089	Article: 72452							
Quantity:	1x	1x	1x	5x	5x	1x	1x	1x	Quantity: 1x							
Size:	800 x 100 mm	800 x 100 mm	→	4 x 16	4 x 20		1500 mm	1500 mm	Size: 800 x 1050 mm							
BOX 4																
154,5 x 19 x 10 cm																
Article:	K-TXT 16 rem (SI)								TXT strips							
Quantity:	5x								5 x 16							
Size:	1436 mm								180 x 38							


CONTENTS FOR 6 COLUMNED DISPLAY ES96-2-REM

BOX 1  76 x 53 x 21 cm																				
	Article:	Voet essence 3/6	72404	90205	90206	90211	73410	73411	E Blok 420	73901	73911	95627	95021	95088	95610	94060				
	Quantity:	1x	1x	2x	2x	4x	2x	2x	6x	1x	4x	1x	4x	4x	2x	1x				
	Size:	660 x 400 mm	453 x 30 mm	42 mm	42 mm	M8 x 14	400 x 130	400 x 130	420 x 100 mm	→	M5 X 50	140 x 3,6	4,8 x 16	M5 x 8	798 x 60	2,5 mm				
BOX 2  187 x 9,5 x 9,5 cm																	BOX 4  154,5 x 19 x 10 cm			
	Article:	72021								72052										
	Quantity:	2x								2x										
	Size:	1830 x 60 mm								1025 x 28 mm										
BOX 3  45,5 x 39 x 17,5 cm									BOX 5  58 x 120 x 1,5cm											
	Article:	E Blok 420 6K	E Blok 420 6K rem	73902	70040	70041	REMOTE	70088			70089	72451								
	Quantity:	1x	1x	2x	6x	6x	1x	1x			1x	1x	1x							
	Size:	420 x 100 mm	420 x 100 mm	→	4 x 16	4 x 20		1500 mm			1500 mm	420 x 1050 mm								

USER MANUAL: ESSENCE FREESTANDING DISPLAYS

Opening and locking:

 
To open or lock the columns, aim the remote control at the receiver eye and press the button. The led lights on the columns will then light up and the columns will produce a short sound signal.

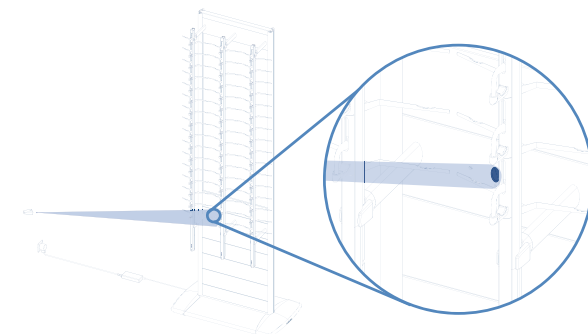

INSTRUCTION MANUAL: ESSENCE FREESTANDING DISPLAYS

CONTENTS FOR 10 COLUMNED DISPLAY ES160-2-REM

BOX 1 76 x 53 x 21 cm																				
	Article:	Voet essence 5/10	72405	90205	90206	90211	73410	73411	E Blok 800	73901	73911	95627	95021	95088	95610	94060				
	Quantity:	1x	1x	2x	2x	4x	2x	2x	6x	1x	4x	1x	4x	4x	2x	1x				
	Size:	1040 x 400 mm	833 x 30 mm	42 mm	42 mm	M8 x 14	400 x 130	400 x 130	800 x 100 mm	➔	M5 X 50	140 x 3,6	4,8 x 16	M5 x 8	798 x 60	2,5 mm				
BOX 2 187 x 9,5 x 9,5 cm																	BOX 4 154,5 x 19 x 10 cm			
	Article:	72021								72052										
	Quantity:	2x								2x										
	Size:	1830 x 60 mm								1025 x 28 mm										
BOX 3 83,5 x 39 x 17,5 cm									BOX 5 96 x 120 x 1,5cm											
	Article:	E Blok 800 10K	E Blok 800 10K rem	73904	70040	70041	REMOTE	70088		70089						72452				
	Quantity:	1x	1x	2x	10x	10x	1x	1x		1x						1x				
	Size:	800 x 100 mm	800 x 100 mm	➔	4 x 16	4 x 20		1500 mm		1500 mm						800 x 1050 mm				

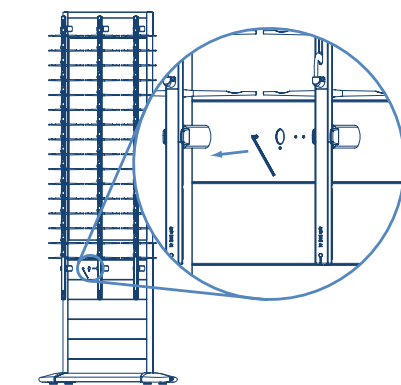


SAFETY

Remove safety screws

The adjustig buttons are protected by a screw, preventing misuse.

If adjustments are required, first loosen the screw covering the buttons next to the receiver eye.

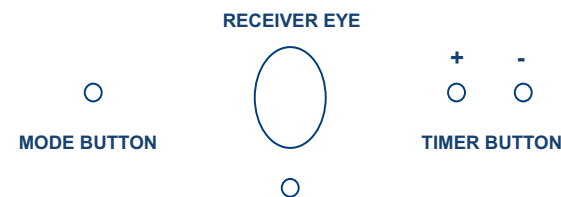

MODE BUTTON

Adding or removing remote controls codes:

Each production order is given a unique remote control code to prevent misuse of the security system by third parties. Upon delivery, the code is pre-programmed in the remote control and the receiving electronics. If desired, it is possible to add extra codes later. It is also possible to erase programmed codes, for example in case of loss or theft of one of the remote controls.

Adding a code:

To add codes, press the embedded **"mode"** button on the receiver for three seconds. This will be confirmed by a long sound signal and the green led will light up. Then, aim the new remote controls at the receiver eye, one at a time and press the button on the remote control. The remote control is accepted if you hear a short sound signal. A double sound signal will be heard if it was an existing remote control.

Leave the programming mode by pressing the **"mode"** button again. This is confirmed by three short sound signals and the led turning off. When no programming action is executed for more than 60 seconds, the programming mode is closed automatically.

Removing a code:

Press the **"mode"** and the **"-"** button simultaneously for a few seconds, to erase all programmed remote controls. This is confirmed by three sound signals. The led will stay on during erasure, followed by a long sound signal to confirm that all remote controls codes have been erased. You can add new codes with the procedure above.

Switch sound on/off:

To turn the sound singals on or off, press the embedded **"mode"** button on the receiver for three seconds. This will be confirmed by a long sound signal and the green led will light up. Then, press the **-** button to switch the sound off. This is confirmed by three light signals. Press the **+** button to switch the sound back on. This is confirmed by three sound signals.

TIMER BUTTON

Timer function, locking automatically:

Upon delivery, the timer function is on and set at an interval of 120 seconds (2 minutes). When the frame security is unlocked the timer automatically locks it again after the interval. The timer interval can be changed using the **+** and **-** buttons on the receiver unit (in stages of 30 seconds). The maximum interval is 300 seconds (5 minutes). The minimum (0 seconds) switches the timer off. When pressing the **+** or **-** buttons a high (+) or low (-) sound signal is produced. When the the maximum or minimum is reached, a double sound signal is produced. The maximum and minimum can be quickly reached by pressing the **+** or **-** button for a longer time.

Comfort timer function:

Just before the automatic closure, the green led on the receiver will blink and a tripple sound signal will be heard. If desired to continue your sales pitch and keep the column(s) opened, one push of the button on the remote control will extend the timer interval by 5 minutes. A second push of the button on the remote control during this 5-minute extension will lock the columns again. The sales progress will not be interferred but security of the frames remains guaranteed. During the timer interval it will always be possible to lock the frame security using the remote control.

NL

DIT GEREEDSCHAP IS BENODIGD:

GB

THESE TOOLS ARE REQUIRED:

DE

DIESE WERKZEUGE BENÖTIGEN SIE:

FR

VOICI LES OUTILS DONT VOUS AVEZ BESOIN:

SE

DE HÄR VERKTYGEN BEHÖVER DU:

IT

GLI ATTREZZI NECESSARI:

ES

HERRAMIENTAS NECASARIAS:

S.A.F.E.T.Y...D.I.S.P.L.A.Y.

230v - +/-10% °50/60 Hz °30VA


This product complies with the requirements of the European Directives 72/23/EEC AND 89/336/EEC. Patent: US 4.805.781/DE 37836501 Patents pending: OA 1004019NED and others

CAUTION; For Indoor Use Only.



.3

.8


20

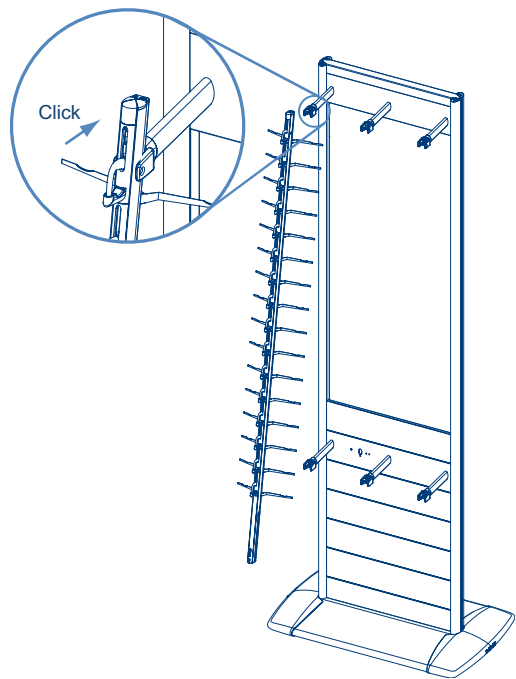


21

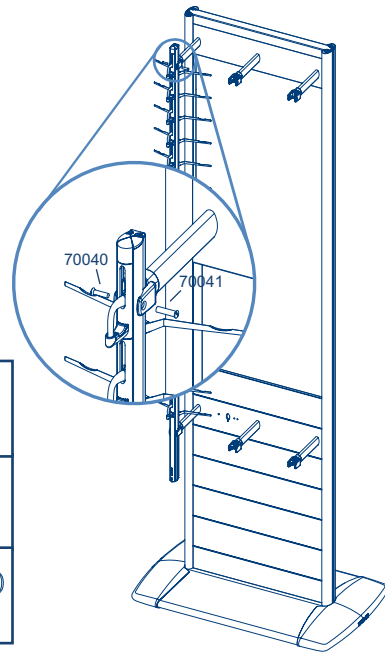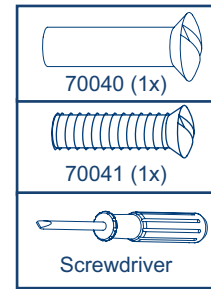  


1

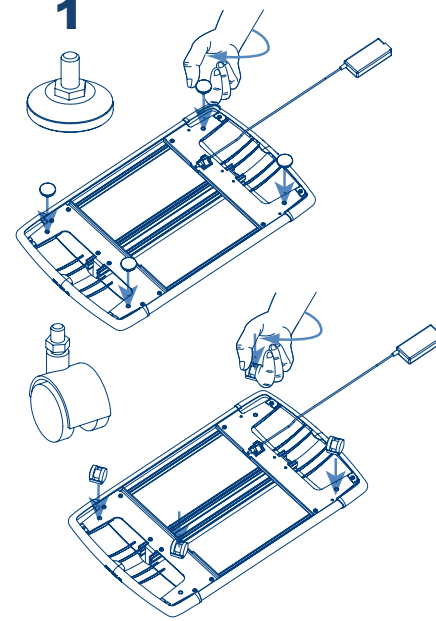 


2

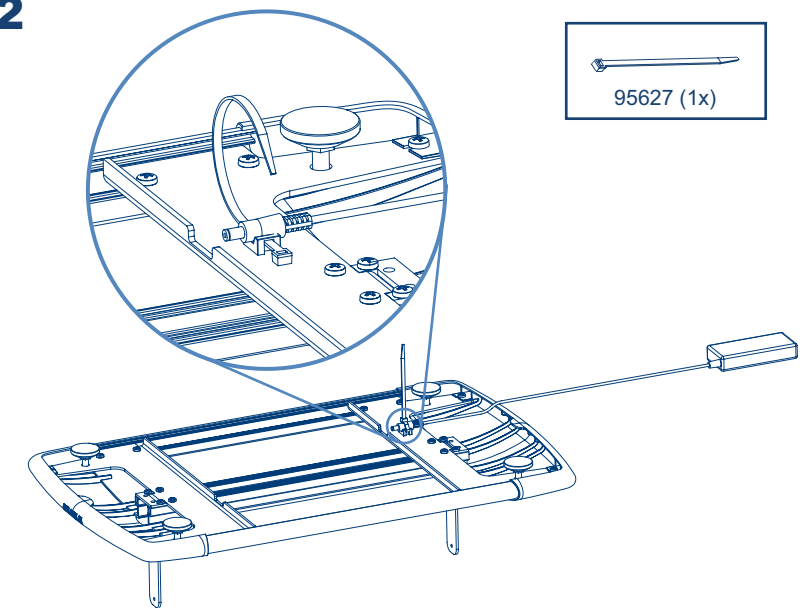 


22

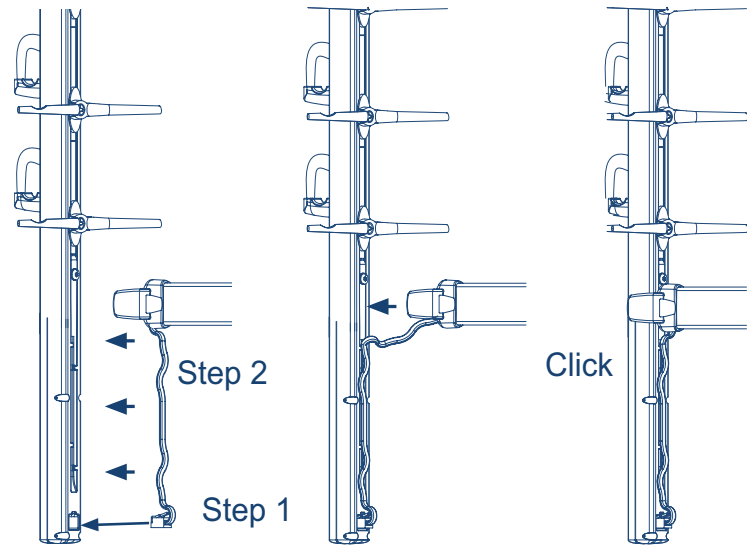 



23

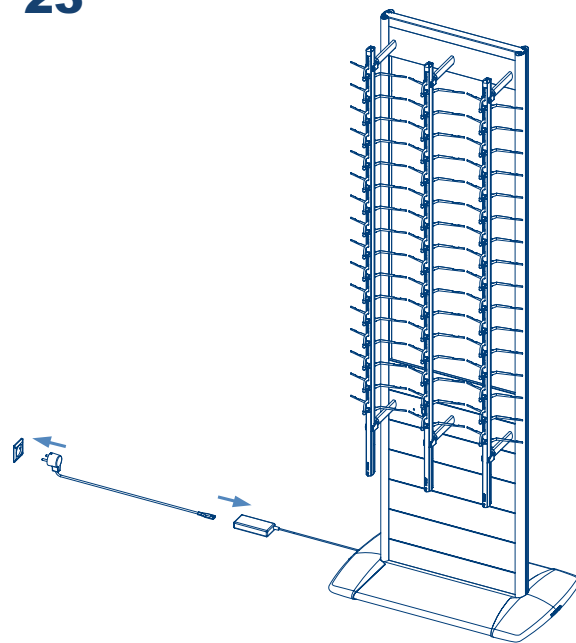 


3a

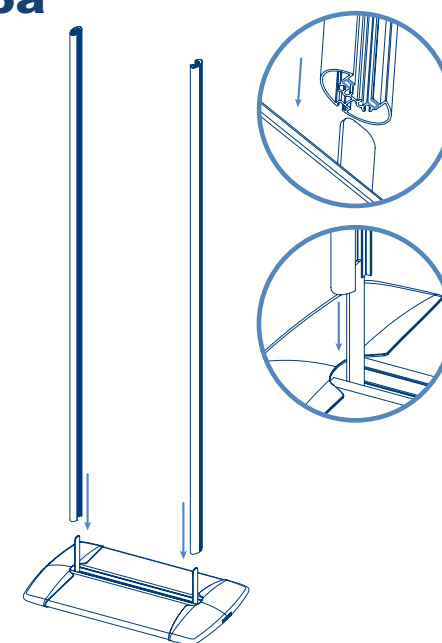 


3b

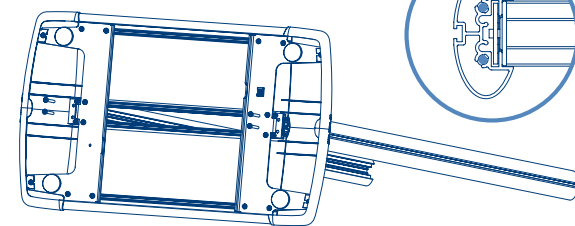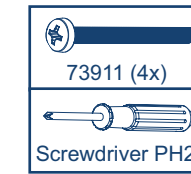  

4a

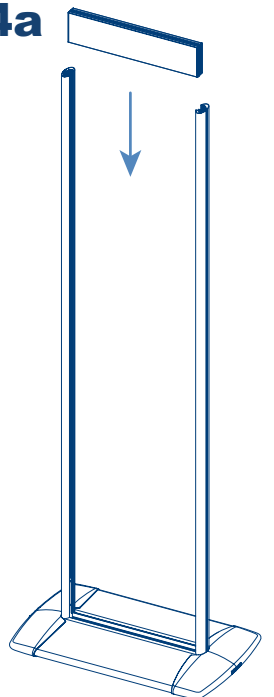 


24

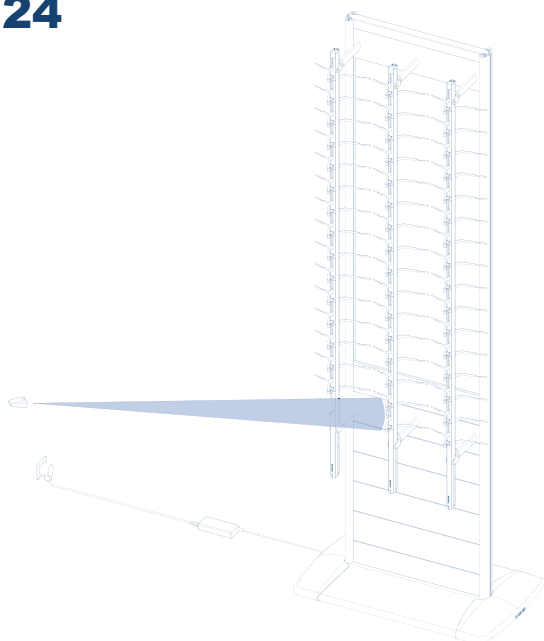 


CHANGING BASECAPS

 
1

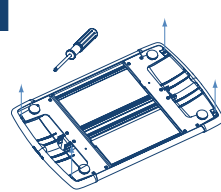


2

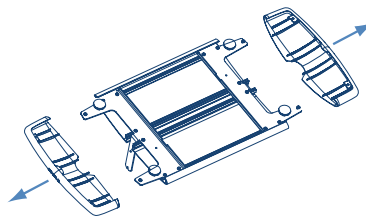 

3

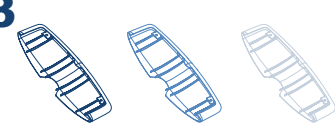 


4

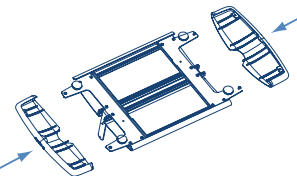 


CHOOSE COLOUR

 
5

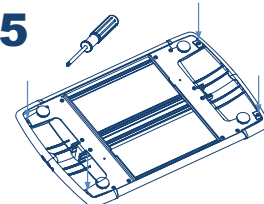


4b

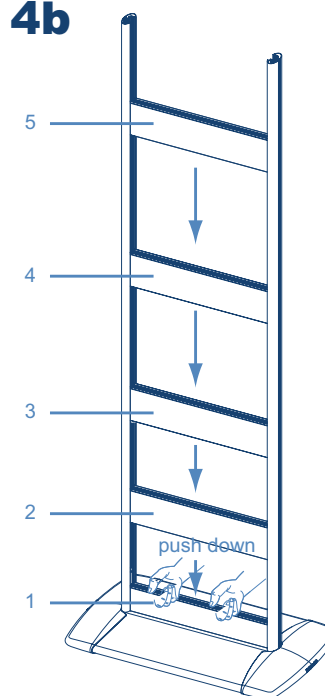 

5

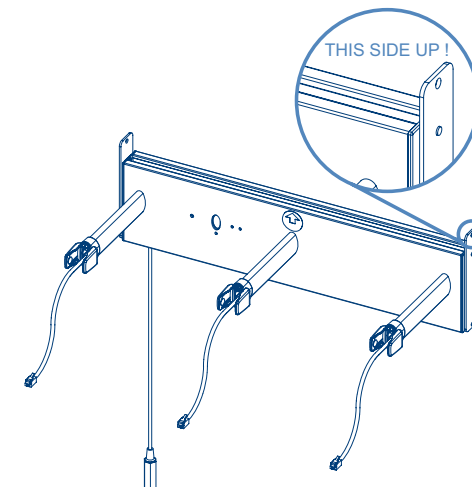 


6a

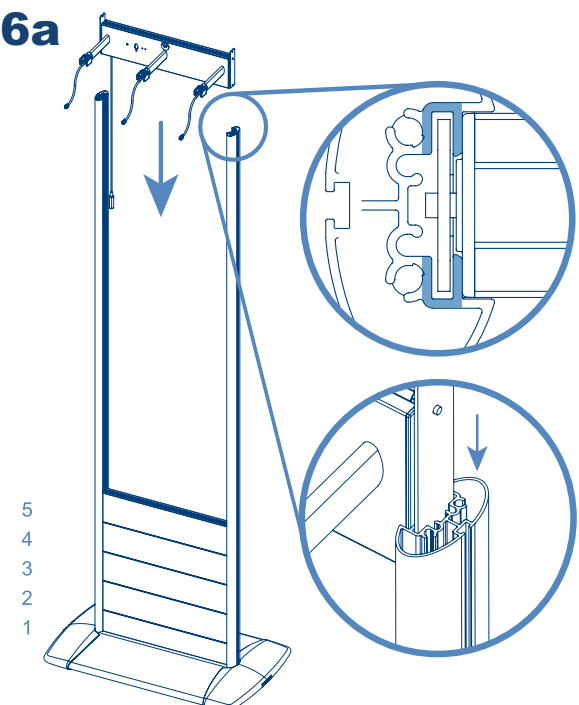 


5
4
3
2
1

 
6b

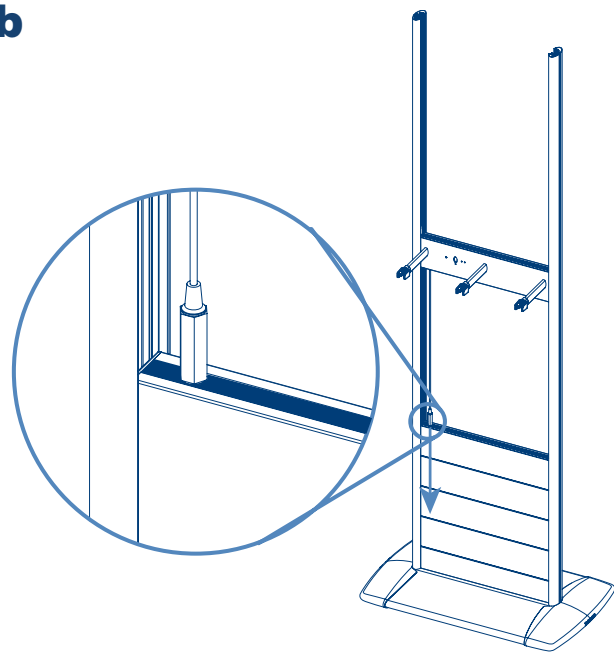


8

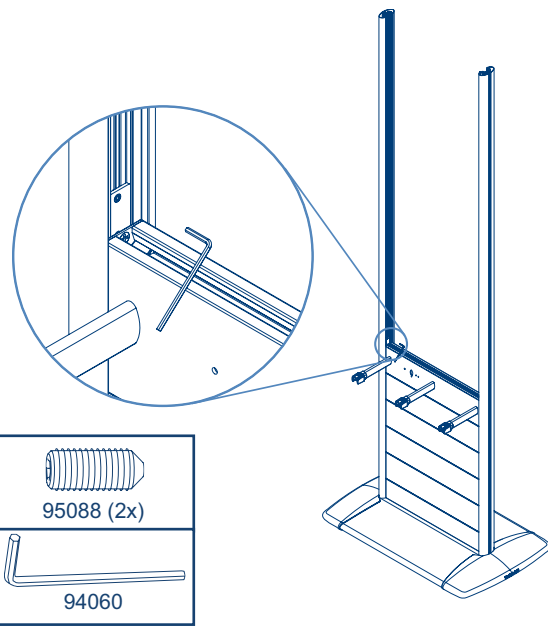 


13

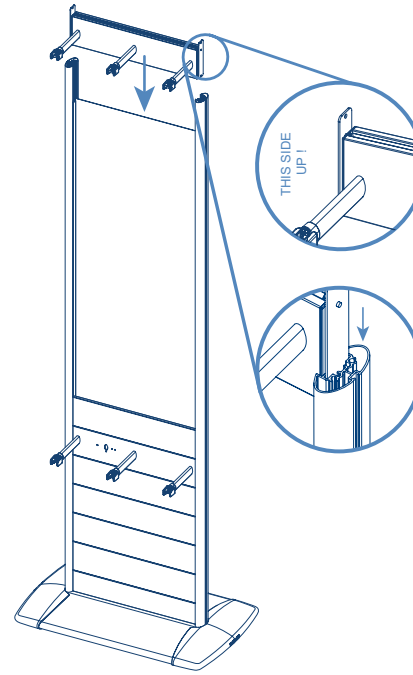 


14

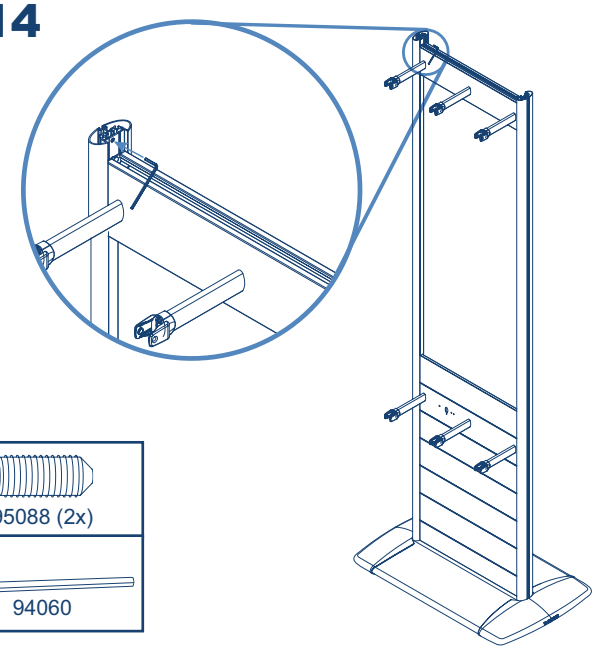 


8

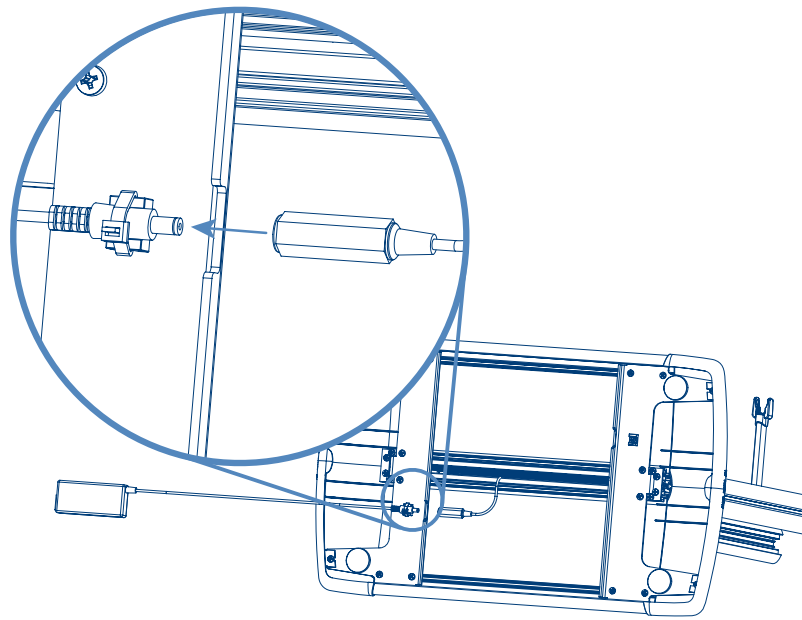 


9

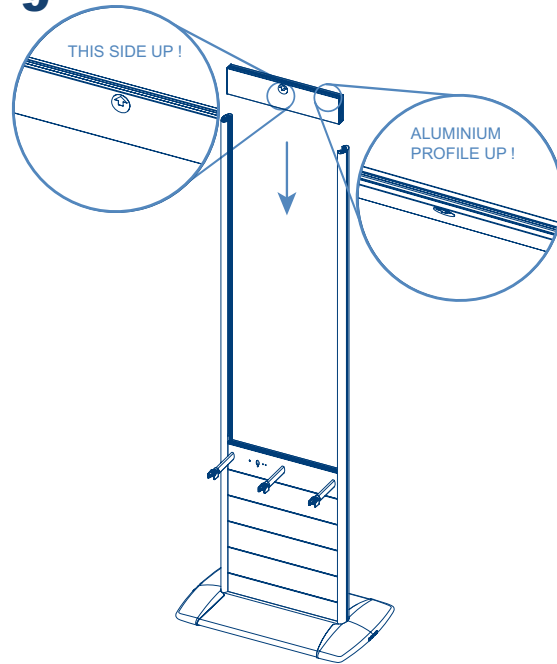 


15

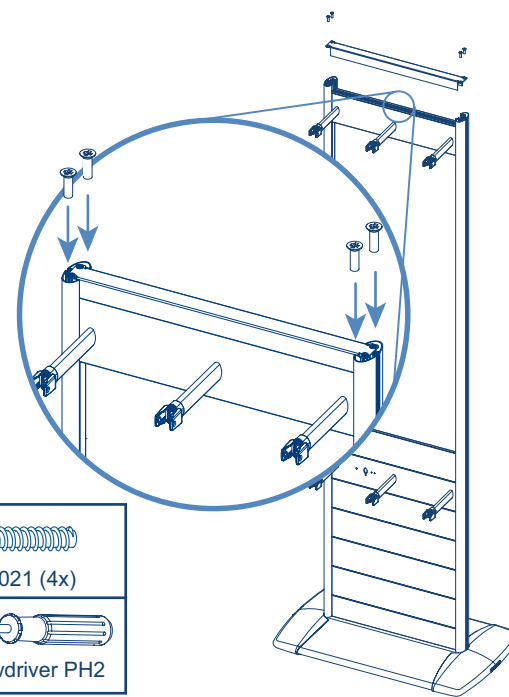 


16

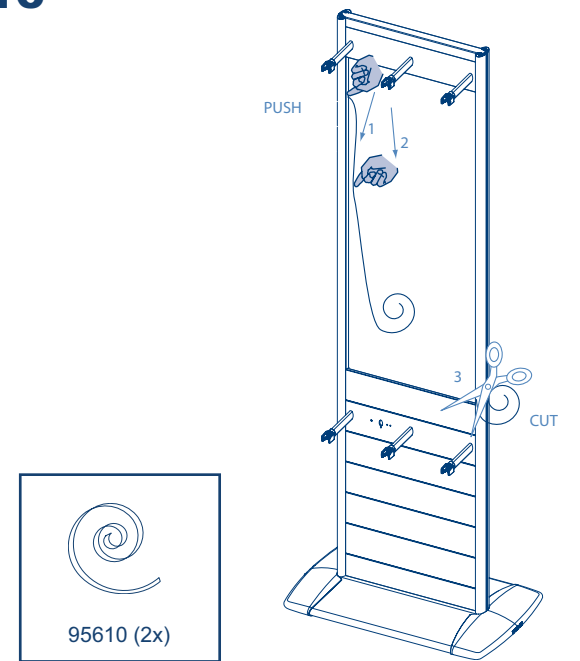 


10

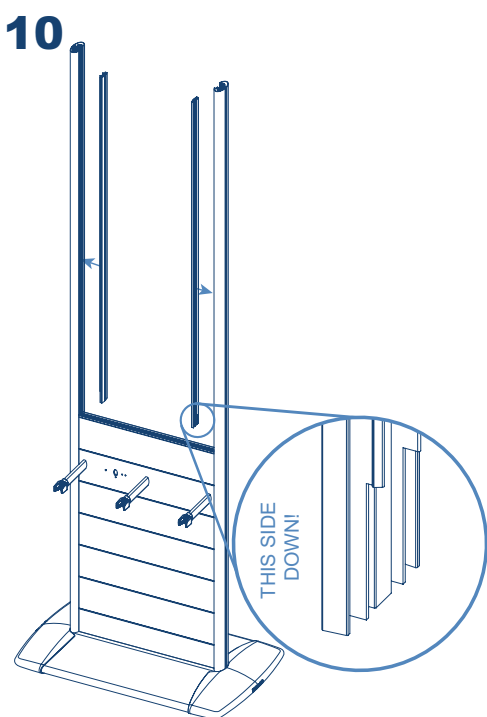 

11

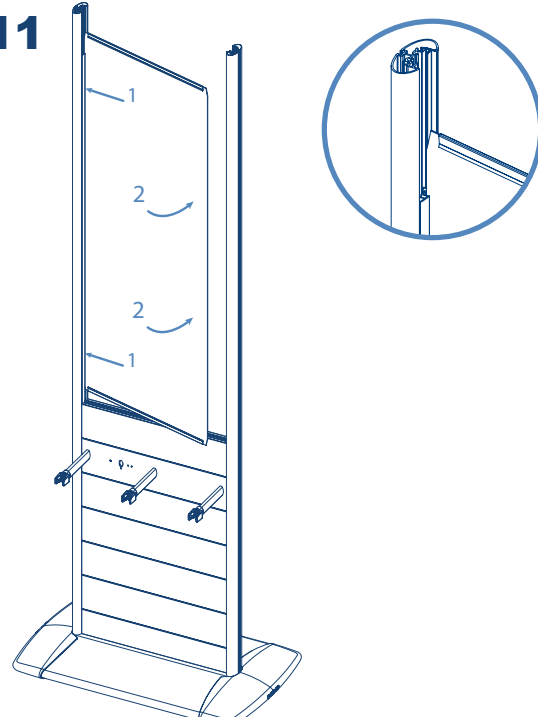 


12

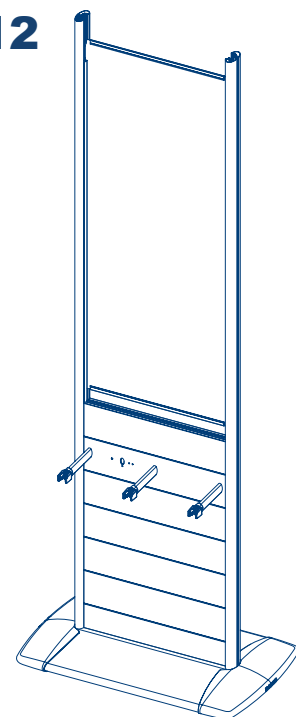 

17



 18

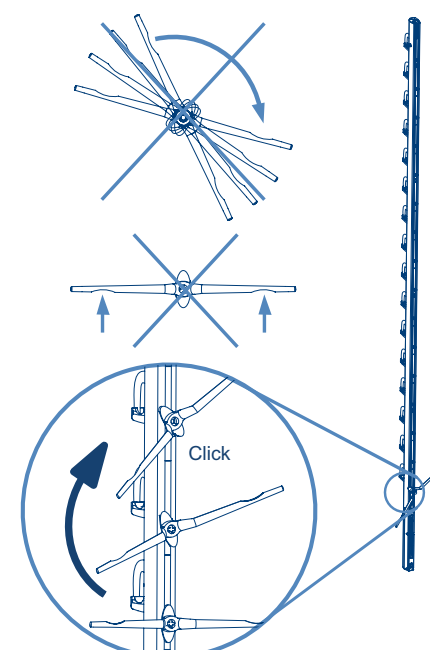

19

