

Electronic Data Platform User Manual

27/07/2015	Last updated version

ELEC	ELECTRONIC DATA PLATFORM USER MANUAL1		
1.	INTRODUCTION	6	
1.1 1.2 1.3 1.4	Glossary Public and private menu items System requirements Availability and use of the EDP and EBS	6 7	
2.	AUTHENTICATION	7	
2.1 2.1. 2.2	Precondition for authentication	8 8	
2.3 2.3 2.4 2.5 2.6		8 9 9	
3.	TRANSMISSION		
3.1	Capacities and Contracts	11	
3.1. 3.1.	.1 Service requests / Offers 🔳	11	
3.1. 3.1. 3.1.	.3 Capacities on Interconnection Points	24 25	
3.1. 3.1.	.6 Capacities on Quality conversion Points	25 25	
3.1. 3.2	.8 Allocation Agreements		
3.2. 3.2. 3.2. 3.3	.1 Works and interventions impact on Interconnection Points	28 28 29	
3.3.			
3.3. 3.3.	.2 Hourly refreshed measurements on nodes and lines	30	
3.3. 3.3.	.4 Further remarks about Metering and Topology	35	
3.3.			
3.4	Balancing and Allocations		
3.4. 3.4.	.2 Market Balancing Position	40	
3.4. 3.4. 3.4.	.4 Imbalance Smoothing Allocation 🙃	44	
3.4.	.6 Flow data – Allocations for previous Gas Years	47	
3.5 3.5.	.1 Nominations and Flows on Interconnection Points	47	
3.5. 3.5. 3.5.	.3 Ex-ante and ex-post Interconnection Point information	47	
3.6	Invoicing	47	
3.6.			
3.6.	, 3		
3.6.	.3 Preliminary Allocation Details 🔳	48	

User Manual

3.6.	4 Validated Allocation Details and ARS Capacity	49
3.6.		
3.6.		
3.7	Nominations	55
3.7.		
3.7.		
3.7.		55
3.8 <i>3.8.</i>	Regulatory and contractual documents	55 55
3.8.		
3.8.	, ,	
3.8.		
3.8.		
3.8.	• , ,	
3.8.	1 7 1	
3.9	REMIT messages	
4.	STORAGE	57
4.1	Capacities and Contracts	57
4.1.	1 Capacity Rights Injection 🔳	57
4.1.		
4.1.		
4.1.		
4.1.		
4.1.		
4.1.		
4.2	Maintenance	
<i>4.2.</i> 4.3	1 Works and interventions impact on Installation Point Metering	63
4.3.		
4.3. 4.3.	, 0,	
4.4	Storage Inventory and Allocation	
4.4.		
4.4.		
4.4.		72
4.5	Flow Data	
4.5.	1 Inventories Storage Report	73
4.6	Invoicing	
4.6.		
4.6.		
4.6.	3 Other invoices: Fluxys Belgium 🔳	79
4.6.		
4.6.	5 Gas in Storage Account for LHT Storage	79
4.6.	6 Synchronization GIS-level LHT Storage 🔳	80
4.6.	7 Transfers Monthly Fuelgas Balance for LHT Storage 🔳	80
	Regulatory and contractual documents	81
4.7.		
4.7. 4.7.		
4.7. 4.7.		
4.8	REMIT messages	
5.	LNG TERMINALLING	
5.1	Contracting and Capacities	82

5.1.1 5.1.2	Available Terminalling capacity Overview of the available slots on the Primary and Secondary Markets	
5.1.3	Capacity Rights - Send Out Capacity Rights	
	Capacity Rights - Storage Capacity Rights	02
5.1.4		
5.1.5	Capacity Booking - Daily Send out Rights	
5.1.6	Capacity Booking - Daily storage Rights 🔳	86
5.1.7	Capacity Booking - Waive additional Entitlement Firm	87
5.2 Schedu	ıling	88
5.2.1	AMS - Available Monthly Slots 🔳	
5.2.2	IBS - Indicative berthing Schedule 🔳	89
5.2.3	RBS - Rolling Berthing Schedule	90
5.2.4	BS - Berthing Schedule	
	pproval	
5.3.1	Request for Ship Approval	
5.3.2	List of approved ships for the Zeebrugge LNG Terminal	
5.3.3	Fluxys LNG ship approval procedure	93
5.3.4 5.4 Mainter	Nautical management measuresnance	
5.4 Mainter	Work and intervention impact on LNG Terminal Zeebrugge	
5.4.2	Planned Maintenance Events	
-	ng	
	Metering 🖬	
5.5.1	Topology 🖬	
5.5.2 5.5.3	Further remarks about Metering and Topology	
	ventory & Allocations	
5.6.1	Inventories LNG Report	
5.6.2	Gas In Storage	
5.6.3	Gas in Storage Forecast	
	Provisional Hourly Allocations	
5.6.4	provisional Hourly Allocations	
	Allocation Details	
5.7.1		_
5.7.2	Invoices	
5.7.3	Invoices for truck companies 🔳	
<i>5.7.4</i>	Other invoices: Fluxys LNG 📮	
5.7.5	Gas In Storage Account for LNG Terminal	. 111
5.7.6	Synchronization GIS-level LNG Terminal	. 112
<i>5.7.</i> 7	Transfers Monthly Energy Balance & Monthly Fuelgas Balance for LNG	Termina
	113	
5.8 Regula	tory and contractual documents	
5.8.1	Terminalling model	
5.8.2	Terminalling services offer	
5.8.3 5.8.4	TariffsSpecific requirements at the LNG Terminal Delivery point	
5.8.5	Specific requirements at the LNG Terminal Delivery point	
	planning for shippers	
5.9.1	Authorize appointment	
5.9.2	LNG truck quality and quantity document	
5.9.3	LNG truck loadings	. 113
5.9.4	Manage automatic confirmations	
•	blanning for trucking companies	
5.10.1	Truck loading appointment scheduling	
5.10.2	Appointment overview	
5.10.3	Contract overview	. 114

User Manual

6.	AUTOMATIC DOWNLOADS	114
5.11	REMIT messages	114
5.1	0.4 LNG truck quantity and quantity document 🔳	114

©2015, Fluxys Introduction • 5

1. Introduction

1.1 Glossary

Agreement	Generic naming for STA (Standard Transmission Agreement), SSA
	(Standard Storage Agreement) and LTA (LNG Terminalling
	Agreement)
ACT	Access Code for Transmission
Business Party	A Business Party is a company with whom Fluxys Belgium does
(BP)	business (i.e. has a capacity contract). In Fluxys Belgium's ICT
	systems, a Business Party typically is limited to one of the possible
	activities (Transmission - Storage - Terminal) in which Fluxys
	Belgium or one of its subsidiaries is the operator. In other words, if
	the same company is active for all three activities (i.e. has an active
	STA, SSA and TSA), it will be technically registered as different
	business parties in the respective ICT system of the concerned
Pusiness Berty	activity.
Business Party Association (BPA)	A Business Party Association is a "federating" concept to allow
ASSOCIATION (DPA)	users from the same company or affiliated companies to view data or perform actions for different activities (Transmission, Storage
	and/or Terminal) on the Fluxys Belgium Electronic Data Platform,
	without being registered or having to sign in several times. Even if
	the company has only one activity, a BPA should be created.
Electronic Booking	Part of the Electronic Data Platform provided by the TSO which
System	allows Grid Users to subscribe Transmission Services.
(EBS)	
Electronic Data	The internet application offered by Fluxys Belgium to the Fluxys
Platform	Service User on which Fluxys Belgium and its affiliates shall give
(EDP)	access to both public and private data and its associated Electronic
(LDI)	Booking System through which the Grid User can subscribe
	Transmission Services.
Fluxys Belgium	Fluxys Belgium has three regulated commercial activities, being
activity	Transmission, Terminal and Storage.
Fluxys Service	The Fluxys Service User is a generic naming for Transmission
User	Service User, Storage User, Terminal User.
Single Point Of	Fluxys Service User Representative appointed by the Fluxys
Contact or SPOC	Service User according to procedures set forth in the Agreements (STA, SSA, LTA) who shall be the contact person between the
	Fluxys Service User and Fluxys Belgium and its affiliates, and who
	is entitled to do the Administration Setup.
	le original to do the Administration Cotap.
	A SPOC is always defined for a Business Party Association (BPA)
	and an activity. The SPOC can only define user rights for the BPA
	and the Fluxys Belgium activity that is associated to him.
Transmission	Generic naming used in this document only for Grid User, Gas
Service User	User, TSO.
User	The user that is associated to a BPA. This user can sign in to the
	EDP and to the EBS with a user name and password.
Working Hours	From Monday to Friday between 9 am and 6 pm Belgian Local
	Time, except during bank holidays in Belgium or the TSO's general
	holiday schedule.
	I manage and a second control of the second

1.2 Public and private menu items

The public menu items are visible and common for everyone.

©2015, Fluxys Introduction • 6

The menu items with the symbol are only privately accessible, namely if the user is actually logged on. Depending on his role (which was defined by the SPOC) he may or may not access all functionality shown on this screen.

1.3 System requirements

- Internet browser requirements for public menu items
 - 2 latest versions of Internet Explorer (currently 8.0 en 9.0)
 - Mozilla Firefox 10
 - o Chrome 16
 - Safari 5
- Internet browser requirements for private menu items: only Internet Explorer 8.0 or higher is supported.
- JavaScript must be enabled
- · Cookies must be accepted

1.4 Availability and use of the EDP and EBS


The Electronic Data Platform and Electronic Booking System are intended to be accessible 24 hours per day and 7 days a week. Assistance in case of technical problems or unavailability of the EDP or EBS for whatsoever reason or the helpdesk will only be ensured by Fluxys Belgium or one of its affiliates during Working Hours.

Fluxys Belgium and any of its affiliates reserve the right to suspend or otherwise limit the availability of part or all of the EDP or EBS at any moment to make all modifications likely to improve or expand its operation or simply to ensure its maintenance. The Fluxys Service User will be notified in due time of any change in the EDP or EBS or any such unavailability. Fluxys Belgium and any of its affiliates will use its reasonable endeavours to keep such unavailability to a minimum.

The use of the EDP, and the data published on it, is at the user's own discretion and risk. Data on EDP may contain inaccuracies.

2. Authentication

A user must log on via the Electronic Data Platform (https://gasdata.fluxys.com/) in order to access the EDP or EBS. The procedure for gaining access to the Electronic Data Platform is available on the Fluxys Belgium website.

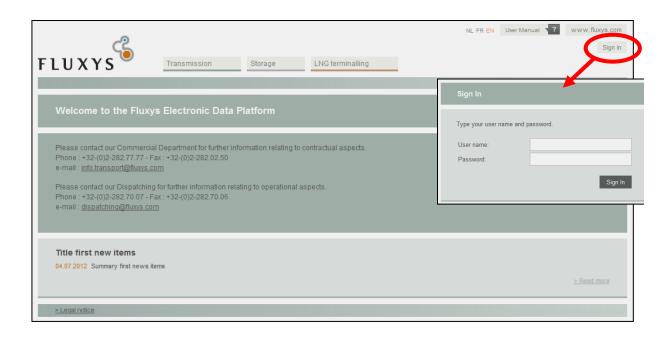

2.1 Background information

2.1.1 **SPOCs**

The Fluxys Belgium Sales Administrator will then define one or more SPOCs for the BPA. A SPOC is a user with SPOC role(s) for one or more Fluxys Belgium activities.

For example, a SPOC user on Terminal activity will be able to create and manage users for his BPA in the Terminal activity.

The SPOC user details (mobile phone number and user email address) and corporate email address are required and shall be registered in the system by the Fluxys Belgium Sales Administration. The SPOC user will receive an email, stating the URL of the Electronic Data Platform and the user name. The password will be sent by SMS. This system-generated password has to be changed before the SPOC user will be able to login to the system.

2.2 Precondition for authentication

A user must have been granted access to the Electronic Data Platform and/or Electronic Booking System through his company SPOC1.

The SPOC will assign the correct user rights for the relevant Fluxys Belgium activities. The SPOC can also reset the password of the user if he had forgotten it, or unlock the user account if the user had locked himself.

2.3 Authentication processes

2.3.1 First time login

The user receives an email when his account is created by his company SPOC. The system-generated password is sent through SMS. For clarity's sake, next symbols don't appear in the password.

I: lower case L

I: upper case i

¹ The former use of Client Certificates has been abandoned: rather than having to purchase a certificate and supply it to Fluxys Belgium or Fluxys LNG to request creation or modification of a user account, the customer's SPOC will be able to define and manage users online.

o: lower case o O: upper case o

The 1 and 0 do sometimes appear in the system-generated password.

The user should reset the system-generated password before logging in. The password should contain minimum 8 characters and maximum 20 characters, should consist of at least 1 upper case letter, 1 lower case letter and 1 digit or special character (except the special characters ' " \ &).

2.3.2 Authenticate

The user has to authenticate with user name and password before entering the Electronic Data Platform. If the password is entered incorrectly 5 subsequent times in a row, the system locks the user.

2.4 Log in



Click the "sign in" button in the right upper corner of the screen. The user is asked to fill in his user account (mentioned in the email he received) and his password (mentioned in the SMS when this is the first time, or reset by the user himself when this is not the first time).



The user name followed by the BPA name between brackets shows when the user has signed in.

2.5 Consult my info

Click the user name. The following screen appears



The external user can consult his user information, being:

- First name
- Last name
- User name
- Telephone number
- Mobile phone number
- Email address

The user can also consult the information for the SPOCs of his BPA

- Name
- Email address
- Mobile telephone number

2.6 Change password

In the above screen, the "change password" button can be clicked.

The user can change his password by typing in the old password and then typing the new password twice, in order to ensure that the entered value is the correct one.

The password should contain minimum 8 characters and maximum 20 characters. It should consist of at least 1 capital letter, 1 small letter and 1 number or special character (except the special characters ' " \ &). The password cannot contain the user Id.

3. Transmission

3.1 Capacities and Contracts

3.1.1 Service requests / Offers

3.1.1.1 Introduction

Fluxys Belgium wants to offer Transmission Services to the market online to support the liquidity and flexibility of the market. For that purpose a web-enabled application EBS (Electronic Booking System) was developed.

Booking service requests through EBS requires specific access rights to the Electronic Data Platform as detailed in "Attachment H" of the "Access Code for Transmission".

3.1.1.1.1 Services

Fluxys Belgium offers transmission services to the market. In order to commercialize transmission capacity Fluxys Belgium has defined a number of products in a product catalogue. These products can be subscribed by means of a Service request (1 Service Request corresponds to 1 service).

Specific rules are applicable for service requests which are entered by the grid user via EBS. Not all transmission services will be bookable by grid users via EBS. A limited number of transmission services can only be requested via the manual workflow (written requests via FAX, mail and e-mail). E.g. assignments of capacity need to be requested in writing.

Only Firm or in specific cases Backhaul Transmission Services are offered in EBS. Interruptible capacity or other capacity types cannot be selected by the grid user.


3.1.1.1.2 Euro threshold

Booking of Services through EBS is limited to 750 000 euro per transaction. In case this threshold is exceeded, the request must be handled via the semi-automatic workflow in EBS and will require additional validation by Fluxys Belgium staff.

3.1.1.1.3 EBS time horizon

The booking window in EBS is the applicable period of 36 months during which a grid user can book transmission services using automatic workflow (i.e. without intervention by Fluxys Belgium staff).

Booking window EBS

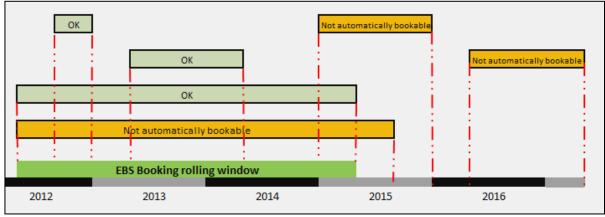

As shown in the scheme above, only bookings of Transmission Services which do not exceed the booking window are acceptable. Service bookings which start later or which do not end within the foreseen timeframe are not automatically bookable via EBS, but must be handled via the semi-automated workflow in EBS and will require additional validation by Fluxys Belgium staff.

Day Ahead bookings of transmission services are accepted via EBS up to **24h00**, allowing the grid user to be able to nominate timely. **Within Day** bookings of transmission services via EBS are <u>not</u> possible.

3.1.1.1.4 EBS Workflow

When the User with validator rights submits a binding transmission service request via EBS it triggers a validation process which requires him to register a code. At this time the system will also perform a check on the business rules as explained above (Euro threshold, EBS booking window, etc.). He will receive this code via text message (SMS) on his mobile phone number indicated in its registered personal information.

Automatic workflow

In case the requested transmission service is available and in case the validation process check and the checks on business rules completed successfully, the transmission service transaction <u>will be booked automatically</u> within the Electronic Booking System and a confirmation email will be sent to the User who has submitted the binding transmission service transaction request.

In case of failure of the authentication process check, the transmission service transaction request is not treated by the Electronic Booking System and can be resubmitted or cancelled by the User.

Semi-Automatic workflow

In case of unavailability of the requested transmission service or in case additional processing of the requested transmission service is required (e.g. in case the allocation agreement needs to be checked), the transmission service transaction will be accepted within the Electronic Booking System and forwarded to Fluxys commercial back office for further analysis.

The TSO has the right to ask the grid user to provide Additional Financial Security in order to comply with the creditworthiness assessment described in the Standard Transmission Agreement (STA).

The Electronic Booking System allows the grid user to view and modify its transmission service transaction request before confirming the request. The grid user is solely responsible for checking the accuracy of any transmission service transaction request and therefore:

- a) The grid user shall not be allowed to invoke any error after confirmation, and
- b) Any such error shall not invalidate the request.


At the explicit request of the grid user, a submitted request can be cancelled, subject to the application of a regulated tariff (the cancellation fee) approved by the CREG, for as long as such request for cancellation is made within ten (10) Business Days following the request, that the concerned Transmission Service is not yet in effect and for as long as the grid user can demonstrate an obvious error in the handling of the transaction.

3.1.1.2 Getting Started

Once the grid user is logged on, a number of menu options are enabled. For accessing EBS the grid user must select the "Contracting" screens as shown in the print-screen below:




Next, the grid user can access EBS by selecting the "Service Requests" section:

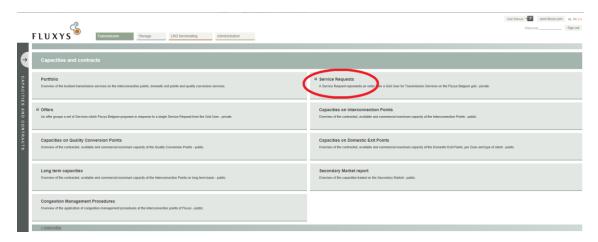

3.1.1.3 Booking Transmission Service requests via EBS

To create a new request, a number of parameters need to be filled out such as the requested product, service period and capacity...

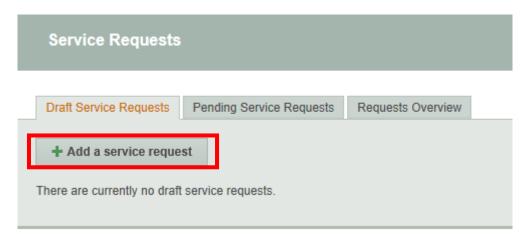

The grid user initiates this process by clicking on the "Add a service request" button (see print-screen above). By doing so, the following screen appears:




3.1.1.3.1 Step 1 - Choose a product

In this section the grid user needs to fill out a number of parameters. In the first step the grid user can indicate the Service Type:



However this is an optional step, the grid user can also select the applicable product directly in the following cell.

In the same section he must also select the applicable product. This can be done by selecting a product from the pick-list or by typing (part of) the name directly in this cell:

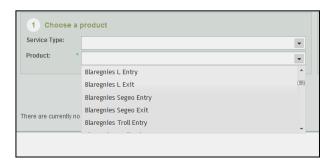

The number of products shown in this pick list is in function of the selected Service Type.

3.1.1.3.2 Step 2 - Enter details

In this section the requestor will need to fill out the Rate Type, the corresponding Service Period and the wanted Quantity. The parameters which need to be filled out may be different in function of the selected 'Service Type'.

Rate Type



In case of a **Yearly Rate Type**, the user will need to indicate both the required start date and the number of applicable years. In case of a **Seasonal Rate Type**, all operational periods will be allowed. As a consequence, the grid user might choose to split his service requests, in order to obtain a combination of a service with a yearly rate type and a service with a seasonal rate type.

E.g. wanted request with service period of 18 months -> grid user may choose to split this request into 1 service request with a service period of 12 months in order to obtain a service with a yearly rate type and a service request with a service period of 6 months and a seasonal rate type.

3.1.1.3.3 Step 3 - Save the Service Request

When saving the service request, the system will perform an availability check. The system returns to the overview screen, where the result of the availability check will be shown.


Note in the print-screen below that the requested product is not automatically bookable in this case. The reason might be that the commercial staff needs to check the allocation agreements first or needs to check the availability of requested service. Therefore the request must be handled via the semi-automated workflow in EBS and will require additional validation by Fluxys Belgium staff. The system will push this request towards the semi-automatic workflow in EBS as indicated below:



As long as the request is not "confirmed" (see step 4), the grid user can change the parameters or delete the request. In order to change the data the requestor must select the request and click on the symbol in the screen below:



As a result an additional screen opens where these changes can be entered.

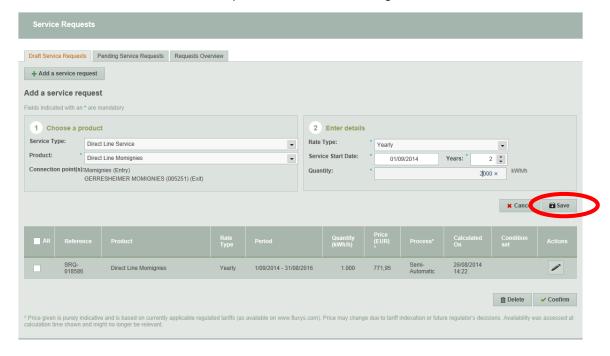

In the example above the quantity was changed (value 1000 was replaced by value 2000). These changes will only be taken into account after they are saved.

Note that the price of the transaction is also indicated in this screen. This price is indicative and is based on the regulated tariff which is applicable at the time of the price calculation. A complete overview of the applicable tariffs is available on www.fluxys.com.

3.1.1.3.4 Step 4 - Confirm the Service Request

Once a Service Request has been saved, a "confirm" button will appear in the screen.




Semi automatic flow

In this example the capacity is not automatically bookable via EBS; therefore the commercial department will need to verify whether the request can be fulfilled.

If the user chooses to submit his service request (via click on "Confirm" button) this will result in: "sending" the service request via EBS to Fluxys Belgium for further handling. By doing so, the grid user triggers an availability check and a validation process which requires him to register a code which he receives via a text message on his mobile phone.

The user selects the Service Request(s) and clicks on the "Confirm" button and receives as a result the following message on-screen:

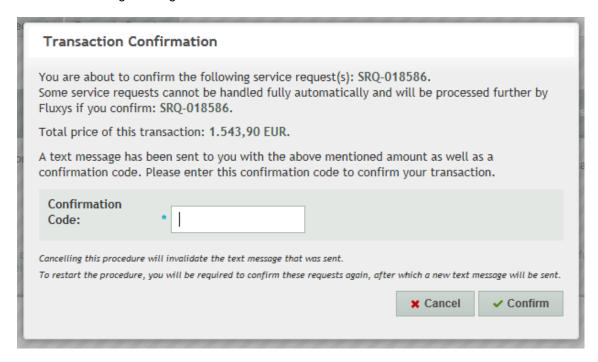

The system confirms via this message that his request is about to be received for further handling (in this example the requested service is not automatically bookable), upon finding confirmation.

Simultaneously the system will also send a text message to the user (mobile phone number has to be registered by the SPOC) which contains a Confirmation Code.

Text Message:



With this code the user can confirm his request. Note that the message also mentions the total transaction price. This price is indicative and is based on the regulated tariff which is applicable at the time of the price calculation. A complete overview of the applicable tariffs is available on www.fluxys.com.

3.1.1.3.5 Step 5 - Enter Confirmation Code

By entering the confirmation code in the confirmation screen, the user confirms his request. As a result the system will send an e-mail to the user confirming that his request was received and will be further handled by the commercial department:

Dear Sir or Madam,

We thank you for confirming the following Service Request(s):

- SRQ-001063

Unfortunately, this/these Service Request(s) could not be processed fully automated by the Electronic Booking System and will be handled further by our commercial team.

However please note that this/these requested service(s), insofar fully available, are to be considered as being contracted. We will of course keep you informed.

We apologize for any inconvenience this might cause you and thank you for your cooperation. Kind regards,

Sent by the Electronic Booking System

Sales Administration
Commercial Regulated
FLUXYS BELGIUM

Avenue des Arts 31 - 1040 Brussels - Belgium

Tel: + 32 2 282 77 77

E-mail: info.transport@fluxys.com


As of this point the request in this example is no longer handled automatically. This request is now forwarded to the commercial department for further handling. The request will be handled by the commercial department strictly respecting the "first committed first served" principle. In function of the requested service, commercial staff will perform a number of checks (e.g. Allocation Agreement check, Allocation Rule check, check availability ...).

The grid user can also verify in the "Pending Service Requests" screen that his offer is pending further handling by the commercial department.




Automatic flow

In this other example the requested service is automatically bookable via EBS. The grid user completes all the required fields and clicks and saves the request by clicking on the "Save" button.

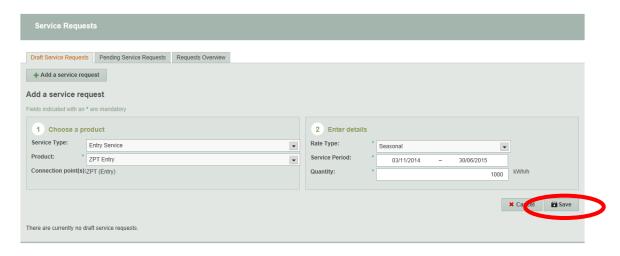

In this case the system indicates that this service can be booked fully automatically.

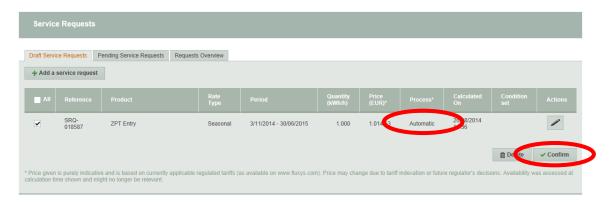

If the user chooses to submit his product request (via click on "Confirm" button) this will result in booking the requested services. By doing so, the grid user also triggers an availability check and an authentication process which requires hereto register a code which he receives via SMS on his mobile phone.

The user selects the Service Request(s) which he would like to confirm and clicks on the "Confirm" button and as a result the system will display a "Transaction Confirmation Message" on-screen.

The system confirms via this "Transaction Confirmation Message" that the requested service will be booked if the user confirms it with the Confirmation Code which he will receive via a text message.

Simultaneously the system will also send a text message to the user which contains the Confirmation Code.

Text Message:



By entering this confirmation code in the confirmation screen, the user confirms his request. As a result the system will send a mail to the user confirming his booking:

Dear Sir or Madam,

We thank you for your request and have the pleasure to inform you that the service(s) under offer(s) as listed below has/have been **contracted** in our systems. We are now ready to accept your nominations.

- OFR-100066/1

Please find attached the related Service Confirmation Form(s) ("SCF") which is/are to be added to and form(s) an integral part of the Standard Transmission Agreement ("STA"), attachment 1. Kind regards,

Sent by the Electronic Booking System

Sales Administration
Commercial Regulated
FLUXYS BELGIUM

Avenue des Arts 31 - 1040 Brussels - Belgium

Tel: + 32 2 282 77 77

E-mail: info.transport@fluxys.com

Attached in this mail the grid user can also find the Service Confirmation Form.

3.1.1.3.6 Step 6 - Alternative Offers

In case the requested service is not automatically bookable via EBS (see example in Semi automated flow above), the commercial department will need to verify whether the request can be fulfilled.

Example 1

The requested service is not automatically bookable via EBS. The reason might be that commercial staff needs to check the allocation agreements first.

Suppose that this is the case in our following example: an allocation agreement needs to be checked

As soon as commercial staff has performed the required checks (if required contacting the end user and involved grid user(s)) the request will be "accepted". This means that the requested service will be booked in our system.

As a result the system will send a mail to the user confirming his booking:

Dear Sir or Madam,

We thank you for your request and have the pleasure to inform you that the service(s) under offer(s) as listed below has/have been **contracted** in our systems. We are now ready to accept your nominations.

- OFR-100063/1

Please find attached the related Service Confirmation Form(s) ("SCF") which is/are to be added to and form(s) an integral part of the Standard Transmission Agreement ("STA"), attachment 1.

Kind regards,

Sent by the Electronic Booking System

Sales Administration
Commercial Regulated
FLUXYS BELGIUM

Avenue des Arts 31 - 1040 Brussels - Belgium

Tel: + 32 2 282 77 77

E-mail: info.transport@fluxys.com

This mail will also include the Service Confirmation Form.

Note that since the grid user already confirmed this request before it was send to the commercial department no additional confirmation by the grid user is required after completion of the required checks by the commercial department. The requested service is now booked as requested in our system.


Example 2

In some cases it might not be possible to offer the requested service. Suppose not enough capacity is available to fulfil the request. Based upon the entered parameters the system will check whether enough firm capacity of the requested product is available to satisfy the request.

In the following example, not enough capacity is available to fulfil the service request and the commercial department will propose an alternative offer.

Suppose that the initial request was the following:

The grid user has requested 2000kWh/h; suppose that only 1800kWh/h is available during the requested service period:

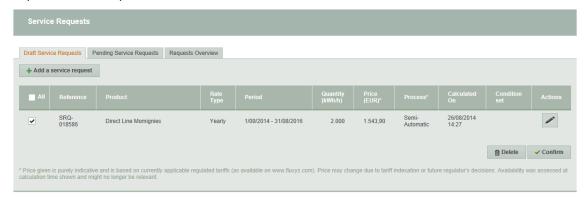

The commercial department will suggest interruptible capacity as an alternative in case not enough firm capacity is available to fulfil the Firm transmission request. Therefore an alternative offer will be created and will be offered in EBS.

In our example the proposed alternative offer will include:

- 1800kWh/h Firm Transmission Service
- 200kWh/h Interruptible level 1 Transmission Service

This offer will be shown as an alternative offer in the Electronic Booking System. The grid user will receive an email to inform him of this event.

Mail informing the grid user that an alternative offer was proposed in EBS

Dear Sir or Madam,

We thank you for your Service Request(s).

We have the pleasure to inform you that the following **alternative offer**(s) has/have been proposed on our Electronic Booking System:

- OFR-001145/1

Therefore, could you please consult the pending offers screen in the Electronic Booking System and <u>accept/refuse</u> the alternative offer(s), as listed above?

We kindly remind you that <u>in the meantime</u> the <u>offered capacity has not yet been reserved</u> and that this/these alternative offer(s) remain(s) valid to the extent that the capacity has not been booked by another Grid User in the meantime.

We thank you in advance.

Kind regards,

Sent by the Electronic Booking System Sales Administration Commercial Regulated

FLUXYS BELGIUM

Avenue des Arts 31 - 1040 Brussels - Belgium

Tel: + 32 2 282 77 77

E-mail: info.transport@fluxys.com

As a result the proposed alternative offer will appear in the "offer" screen:




In this screen the grid user will be able to accept or refuse this alternative offer.

Please note that the offered capacity will not be reserved and that this alternative offer remains only valid to the extent that the capacity has not been booked by another grid user in the meantime.

By clicking on the "accept" button the grid user accepts this offer. By doing so, the grid user also triggers an availability check and a validation process which requires him to register a code which he receives via SMS on his mobile phone.

The system confirms via this "Transaction Confirmation Message" that the requested service will be booked if the user confirms it with the Confirmation Code which he will receive via a text message.

Simultaneously the system will also send a text message to the user which contains the Confirmation Code.

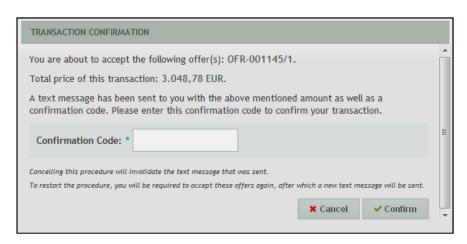


Once the grid user accepts, he will receive an e-mail confirming the booking of the proposed services and containing the service confirmation form.

In case the grid user cancels the confirmation, using the "cancel" button in the above screen, the request will not be confirmed and will remain with status "draft". As a result no booking will occur and no services will be contracted.

3.1.2 Portfolio

Via the Electronic Data Platform it is possible for the grid user to download his portfolio of contracted services.

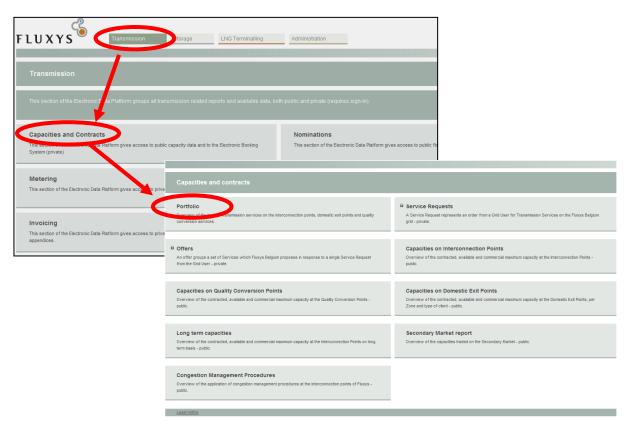

Navigate towards "Capacities and Contracts" in the "Transmission" section on the electronic data platform and select the "Portfolio" tab in order to consult the portfolio.



In the Portfolio screen the grid user can select to export his portfolio to a XML file or to CSV file. This export can be generated as of a specific date for an unlimited period or for a specific period with a begin date and an end date.

Note that this is private data which is made available to a specific grid user only, with restricted use depending on the access rights granted to the User of the Electronic Data Platform, as detailed in Attachment H of the STA.

3.1.3 Capacities on Interconnection Points

Fluxys publishes the contracted, available and commercial maximum capacities at every interconnection point on its network for the next 15 years.

- Firm Capacity: capacity that is guaranteed under all normal circumstances.
- Backhaul Capacity: offered at unidirectional interconnection points, in the opposite direction
 of the physical gas flow direction and is usable as long as the resulting physical flow
 remains in the physical direction of the interconnection point
- Interruptible Level 1 Capacity: capacity with an interruption probability of 5% based on historical flows.
- Interruptible Level N capacity: interruptible capacity unlimitedly made available, but without any guarantee as to the chance of being interrupted during the contract period.

The following table explains the column names

CCF	Contracted Capacity Firm
ACF	Available Capacity Firm
CMCF	Commercial Maximum Capacity Firm
ССВ	Contracted Capacity Backhaul
ACB	Available Capacity Backhaul
CMCB	Commercial Maximum Capacity Backhaul
CCIL1	Contracted Capacity Interruptible Level 1
ACIL1	Available Capacity Interruptible Level 1
CMCIL1	Commercial Maximum Capacity Interruptible Level 1
CCILN	Contracted Capacity Interruptible Level N
ACILN	Available Capacity Interruptible Level N
CMCILN	Commercial Maximum Capacity Interruptible Level N

The set of interconnection points that can be chosen as parameter contains both the interconnection points valid in the former transmission model, and in the new entry-exit transmission model. By default all the interconnection points are checked.

The report shows for each day in the requested period only data for the interconnection points that are valid on that day. Attention, the download can only be done for blocks of 2 years.

3.1.4 Capacities on Domestic Exit Points

Fluxys publishes the contracted, available and technical capacities at each Zone, H and L, of its network with the aggregated set of data for the supply points connected to this Zone.

The following table explains the column names

CCF	Contracted Capacity Firm	
ACF	Available Capacity Firm	
TC	Technical Capacity	

3.1.5 Secondary Market Report

Capacities booked on the secondary market are reported in aggregated form, per interconnection point, direction and type of capacity. The types of capacities are firm, Backhaul and interruptible.

3.1.6 Capacities on Quality conversion Points

Fluxys publishes the contracted, available and commercial maximum capacities at every conversion point on its network.


The following table explains the column names

CCF	Contracted Capacity Firm
ACF	Available Capacity Firm
CMCF	Commercial Maximum Capacity Firm
CCI	Contracted Capacity Interruptible
ACI	Available Capacity Interruptible
CMCI	Commercial Maximum Capacity Interruptible
DF	Demand Factor
SF	Seasonal Factor
MF	Maintenance Factor
IF	Interruption Factor

3.1.7 Congestion Management Procedures

Congestion occurs when a Service Request for Firm Transmission Services at an Interconnection Point or an End User Domestic Exit Point cannot be confirmed due to lack of available Firm Transmission Services and if none of proactive congestion management measures or any other alternatives envisaged between TSO and Grid User have provided for an acceptable solution.

Congestion Management Procedures at Interconnection Points:

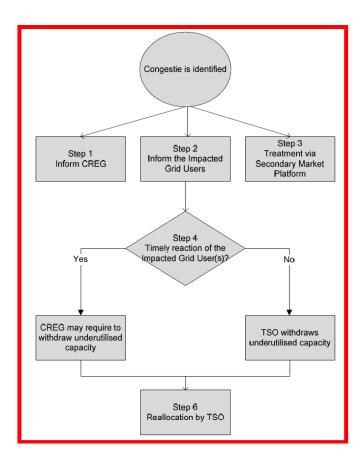

3.1.7.1 Unsuccessful requests for firm capacity

Occurrence of unsuccessful, legally valid requests for firm capacity products with a duration of one month or longer including the number and volume of the unsuccessful requests.

3.1.7.2 Auctions cleared at prices higher than the reserve price

In the case of auctions, where and when firm capacity products with a duration of one month or longer have cleared at prices higher than the reserve price.

3.1.7.3 No firm capacity offer

Where and when no firm capacity product with a duration of one month or longer has been offered in the regular allocation process.


3.1.7.4 Capacity made available through congestion management procedures

Total capacity made available through the application of the congestion-management procedures.

3.1.8 Allocation Agreements


In this section, Allocation Agreements are listed, available for consultation and approval. In the folder tree a distinction is made between:

- To Approve:
- Allocation Agreements which need to be signed by all involved parties are listed in this section.
- If the user wants to select the Allocation Agreement(s) to approve it should not use the filter panel.
- The user can approve or reject the Allocation Agreement by clicking on the approve or reject button in the screen.
- In case of rejection, the user needs to fill in a rejection reason in the comment field and Fluxys Belgium will immediately contact all involved parties. A new version of the Allocation Agreement will be prepared and published for approval by all involved parties.

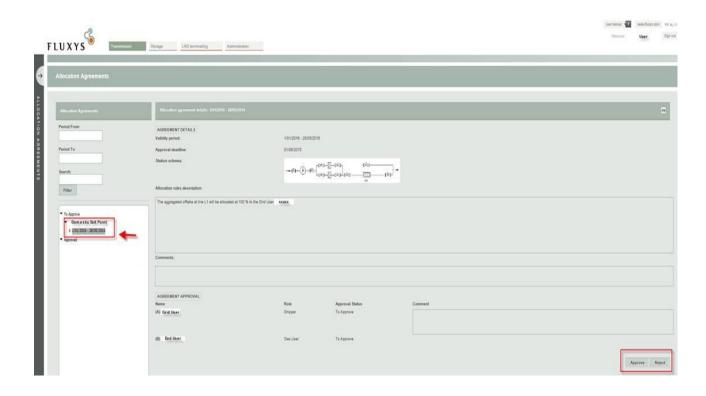

- Approved:

- Allocation Agreements which have been signed by all involved parties are listed and available for consultation in this section.
- The filter panel gives the possibility to select Allocation Agreements which are relevant for a specific period.
- If the user wants to display the Allocation Agreement for a specific period, then he should first select the correct period in the tree under the name of the Domestic Exit Point.

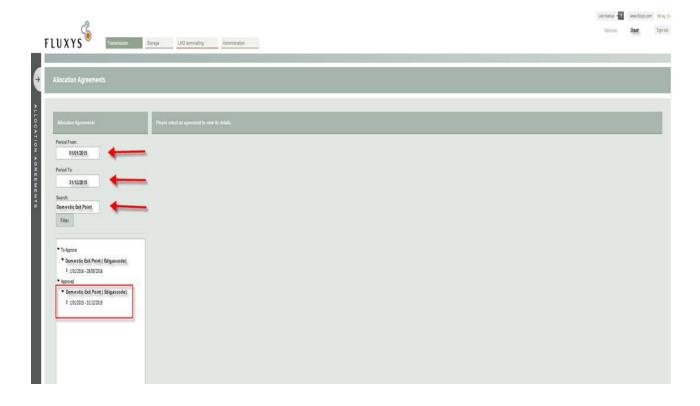

The following information is then available:

Agreement details :

Validity Period: the period for which the Allocation Agreement is concluded by all involved parties

Approval deadline: the deadline to meet for the approval of the Allocation Agreement (only relevant if not already approved by all involved parties)

Station Schema: a schema of the receiving station of the Domestic Exit Point (by clicking on the image, the window enlarges)

Allocation rule description: the description of the rule which will be applied to calculate the allocation to the Grid User(s) of the Quantities of Natural Gas offtaken at the Domestic Exit Point.

- Agreement Approval:

The involved parties: Grid User and Final Costumer The status of the approval: Approved / Refused.

3.2 Maintenance

3.2.1 Works and interventions impact on Interconnection Points

Fluxys publishes the works and interventions impact on interconnection points, describing the following information:

IP	Interconnection Point
Sub Grid	Subgrid to which the interconnection point belongs
Direction	Direction of gas flow
Gas day	Gas day
Gas Hour	Gas hour
CCFB	Contracted Capacity Firm & Backhaul
PIFB	Planned Interruption Firm & Backhaul
UIFB	Unplanned Interruption Firm & Backhaul
RCFB	Remaining Capacity Firm & Backhaul
RCFB %	Remaining Capacity Firm & Backhaul %
CCI	Contracted Capacity Interruptible
PII	Planned Interruption Interruptible
All	Actual Interruption Interruptible
RCI	Remaining Capacity Interruptible
RCI %	Remaining Capacity Interruptible %
Nature	Nature of Work Maintenance

3.2.2 Works and interventions impact on Domestic Exit Points

Overview of the contracted, available and commercial maximum capacity at the Interconnection Points on long term basis

TSO and Grid User agree to cooperate in the planning and scheduling of any installations, connections, disconnections and removals of relevant facilities so as to facilitate necessary maintenance, repair and replacement works, and to reduce necessary interruption periods and to minimize interruptions.

Maintenance, repair or replacement works affecting the MTSRf and/or MTSRb shall be limited in duration and instances insofar as reasonably possible.

3.2.3 Works and interventions impact on Quality Conversion

Overview of works and interventions planned for the current year on the Fluxys Belgium Grid that could affect the execution of your transmission contracts on the Quality Conversion Services.

The TSO shall, in accordance with the Standard Transmission Agreement, notify the Grid User with its best estimates on maintenance and its influence on the Real Quality Conversion Capacity of the different Quality Conversion Services.

3.3 Metering

3.3.1 Daily refreshed measurements on nodes and lines

The Measurements in this section are refreshed on a daily basis. The user can consult daily measurements on nodes or lines for a selected period (Short or long period (More than 1 month)). Only the nodes and lines for which the user has view rights are available.

In this case, precise selections are necessary via filters:

- Period: From ... to
- Show node level or by lines
- Select one or several nodes/lines via the selection list



For each node or metering line for each day on the selected period, a line is displayed with the following measurements:

- The Flow Measurements: Volume, Energy, GCV, Pressure, Temperature, Gross Volume and Conv. Volume.
- The **Gas Composition** tab displays the measurements of the composition of the gas.
- The **Gas Characteristics** tab displays the measurements retrieved by the gas analysis: Density, Wobbe, NCV, Kref, CO2 EF, GCV and a validation status.
- The status field shows the validation status of the measurements:
 - No Data
- Raw data are measurements that are not at all verified or validated
- Verified data means that a preliminary verification check has been done
- Validated data means that the measurement has been validated

Please note that the all measurements are flow weighted averages (Except Volume and Energy).

The user can also export the measurement information for the selected period in different file formats:

- XML
- CSC (Comma delimited or semicolon delimited)
- Excel

3.3.2 Hourly refreshed measurements on nodes and lines

The measurements are refreshed on an hourly basis. When opening the measurements section, the Hourly View with flow measurements for the last available hour is displayed for all the nodes. From this screen the user can navigate to the Daily and Monthly Views for flow measurements and gas characteristics.



In the Hourly View the user can find a list of flow measurements for all nodes and/or lines on a selected gasday and gashour.

The Daily View is subdivided in three tabs: Flow Measurements, Gas Composition and Gas Characteristics. This view shows the hourly measurements for the selected node or line on the selected day.

The Monthly View shows the daily measurements for the selected node or line during the selected month. This view is subdivided in the same three tabs as the Daily view.

3.3.2.1 Hourly View


The hourly view provides the measurements for all the nodes and/or lines on the selected gasday and gashour. Only the nodes and lines for which the user has view rights are available.

In this case, some filters are available:

 Date: At the top (just below the hourly, daily and monthly tabs) the date selector is located. The date shown is the gasday of the measurements displayed in the measurement grid. The last available report button will automatically select the current day and hour.



- Show nodes: the measurements on node level
- Show lines: the measurements by lines
- All: No filter is applied.
- Node Type: Filter by border or by supply
- Search parameter:
 - Choice between "Name" or "Codification number"
 - Complete the box "Contains" with the exact "Codification number" or the exact name
 - Apply Filter

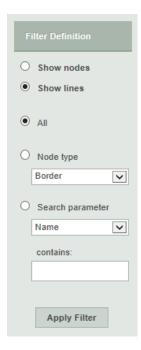


On the left hand side a bar with all the available hours in the selected gasday is presented. Clicking on a specific hour will select this hour and display the measurements of this hour in the measurements grid. When changing the gasday the first gashour of that day is selected.



The center of the screen shows all the flow measurements on the selected gasday and gashour. For each node or metering line, a line is displayed with the following measurements:


- The amount of Volume that flowed through the node or metering line (Converted to normal conditions (25°C and 1 atm))
- The amount of **Energy** that flowed through the node or metering line during this hour

- The **GCV** calculated from the gas flow. This value is calculated as the fraction of Energy/Volume.
- The **Pressure** of the gas
- The **Temperature** of the gas
- The **Gross Volume** is the physical volume of the gas at the current conditions.
- The **VnConv** is the normalized Volume that is measured by the volume converter.
- For a metering line, the boolean value **Measured Before** indicates if the measurements are included in the measurements of another metering line. This parameter is not used for nodes!
- For a metering line, the boolean value In Maintenance indicates if it is in maintenance.
 In that case, the metering results are usually not reliable. As this parameter is not used for nodes, it is always best to use the measurements from the node!
- The **Status** field shows the validation status of the measurements:
 - No Data
 - Raw data are measurements that are not at all verified or validated
 - Verified data means that a preliminary verification check has been done
 - Validated data means that the measurement has been validated

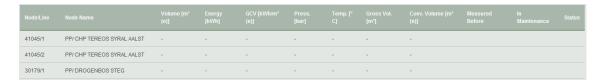

3.3.2.2 Daily View

The daily view can be selected by clicking on the Daily View tab on the top of the screen.

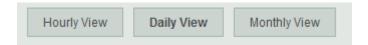


In this case, some filters are available:

 Date: At the top (just below the hourly, daily and monthly tabs) the date selector is located. The date shown is the gasday of the measurements displayed in the measurement grid. The last available report button will automatically select the current day and hour.




- Show nodes: the measurements on node level
- Show lines: the measurements by lines
- All: No filter is applied.
- Node Type: Filter by border or by supply
- Search parameter:
 - Choice between "Name" or "Codification number"
 - Complete the box "Contains" with the exact "Codification number" or the exact name
 - Apply Filter

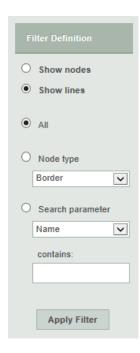

Below the date, a drop down list with all the nodes and/or lines is located. This list allows the user to select the node or line for which the measurements are shown. If a filter is set, the list is automatically adapted to hold only the nodes and/or metering lines that satisfy the filter. The list is ordered by codification number.



The measurement section is divided in three areas (tabs): Flow Measurements, Gas Composition and Gas Characteristics. For the selected node or metering line an overview of the measurements is given for every gashour of the selected gasday.

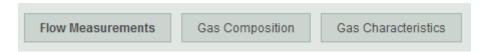

The **Flow Measurements** tab displays the same measurements as the Hourly View: Volume, Energy, GCV, Pressure, Temperature, Gross Volume, Conv. Volume Measured Before, In Maintenance and Status.

The **Gas Composition** tab displays the hourly measurements of the composition of the gas and the GCV as it is measured (derived from the composition).


The **Gas Characteristics** tab displays the hourly measurements retrieved by the gas analysis: Density, Wobbe, NCV, Kref, CO2 EF, GCV and a validation status.

The status field shows the validation status of the measurements:

- No Data
- Raw data are measurements that are not at all verified or validated
- Verified data means that a preliminary verification check has been done
- Validated data means that the measurement has been validated

3.3.2.3 Monthly View

In the Monthly View all the measurements are aggregated per day of the selected month instead of the gashour of the selected gasday. The layout of this view is the same as the one from the Daily View. The monthly view can be selected by clicking on the Monthly View tab.

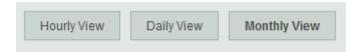

3.3.2.4 Remark

Please note that the GCV is based on the weighted average following the volume measured on the site.

3.3.2.5 Download

There are essentially two main options to download measurement information from the application:

- The user can download the information manually by using the Graphical User Interface.
- It is also possible to address the download feature directly by using the Download URL.

3.3.2.5.1 Manual download by the user

The user can download the required information manually by navigating to the Download section for a certain gasday period (Not longer than one month) on the filtered nodes and metering lines:

- Hourly Flow Measurements
- Corrected Hourly Flow Measurements
- Hourly Gas Analysis
- Daily Gas Analysis

It is possible to choose between two different file formats:

- CSV
- XML

To download a period longer than one month, the user can download via the daily refreshed measurements (Section 3.3.1).

The function "Corrected Hourly Flow Measurements" let see measurements corrections that have been made during the selected period (Ex: On 09.02.2015 if Fluxys make corrections on the Measurements of 28/01/2015, this changes will be visible by selecting the period from 02.09.2015).


3.3.2.5.2 Automatic download by an application

See chapter 6.

3.3.3 Topology 🔳

This section provides information about the metering topology elements on which the user has the right to view data. The view rights are derived from the contracts which are based on Gas Exchange Locations. These gas exchange locations can be subdivided in a set of Nodes.

3.3.3.1 Content

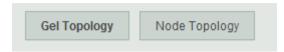

A Gas Exchange Location (GEL) consists of node memberships. A node can be a member of a GEL during a given time period. The membership has a weight with which the measurements of the respective node are aggregated in the result for the associated GEL. All this information can be found per GEL under the button **GEL Topology** (This option is accessible to limited users (It depends of their contractual link with Fluxys)).

Under the **Node Topology** button a drop-down box can be found with all the nodes on which the user has the right to view data.

The whole history of the node and the underlying metering lines are shown after selecting a node. The node history consists of the name changes and the EAN number.

The metering line history consists of the measured before status, operational status and the EAN number.

3.3.3.2 Download

There are essentially two main options to download topology information from the application:

- The user can download the information manually by using the Graphical User Interface.
- It is also possible to address the download feature directly by using the Download URL.

3.3.3.2.1 Manual download by the user

The user can download the required information manually by navigating to the Download section. This section provides selections to download the whole history of either:

- · Gas Exchange Location Topology: for all GELs on which the user has the right to view data
- Node Topology: for all GELs on which the user has the right to view data

It is possible to choose between two different file formats:

- CSV
- XML

3.3.3.2.2 Automatic download by an application

See chapter 6.

3.3.4 Further remarks about Metering and Topology

3.3.4.1 Aggregation of measurements

Since a Gas Exchange Location (GEL) consists of a set of nodes and a node consists of a set of metering lines, the measurements for a complete GEL should be aggregated.

We advise to start the aggregation for a complete GEL from the set of nodes and not from the set of metering lines! A metering line can go 'In Maintenance' or the measurements can already be accounted in the measurements of another metering line, i.e. 'Measured Before'.

The measurements on the node level take these two parameters into account and can therefore readily be used for the aggregations.

Example

What is the total energy on gas exchange location A at gas day X, hour Y?

The topology of gas exchange location A at gas day X and hour Y is:

```
    Membership 1: Node n1, weight w1 = -1
```

- Membership 2: Node n2, weight w2 = -1
- Membership 3: Node n3, weight w3 = 1

The measurements of nodes n1, n2 and n3 at gas day X and hour Y are:

- Node n1: e1 = 100 kWh
- Node n2: e2 = 200 kWh
- Node n3: e3 = 500 kWh

Calculation

```
Total energy (e) = e1 * w1 + e2 *w2 + e3*w3 = 100*-1 + 200*-1 + 500*1
```

= 200 kWh

3.3.5 Real Time Measurement on Interconnection Points

The Real-time Data screen offers an overview of the last available real-time metering data on GELs for which the current user has a valid real-time metering contract. The user can select to narrow down the shown data to a single GEL. Once the screen is opened the available data can be updated by clicking on the Refresh button.



Report Content

3.3.5.1 GEL selection

All GELs available to the user are listed in a drop-down menu. By selecting a single GEL from the list the shown data will be narrowed down to all data belonging to the selected GEL. To return to the general overview the user can select the "All GELs" option from the drop-down menu.

3.3.5.2 Requesting an update

The real-time data shown on the screen is not updated automatically after opening the screen. However, in the database the available data will be refreshed with the latest available data every six minutes.

By clicking the Refresh button the user can ask for an update. If the available data has been updated, the most recent version of the metering data will be displayed. The application does not keep track of the real-time value history, so previously shown data is lost after updating the screen.

3.3.5.3 Download web service

See chapter 6.

3.3.6 Wobbe Index


This report enables Grid Users to monitor the gas quality of the gas they import into the Belgian network. The gas quality of this imported gas should be in balance with the gas quality of the gas that is exported to the UK.

Values for gashours larger than the current gashour are not available, meaning that future gashours and gasdays will be suppressed.

The value for the Wobbe at a certain point and certain gashour can change over time. At anytime the best available value is published.

All Wobbe values are defined on Interconnection Points with underlying nodes, except for 2 values on the H-zone and on the L-zone which are defined as the weighted average of the Wobbe values for all Interconnection Points of such Zones.

Grid Users receive the Wobbe Index in a data format and also downloads are made available. The values contain 2 decimal digits.

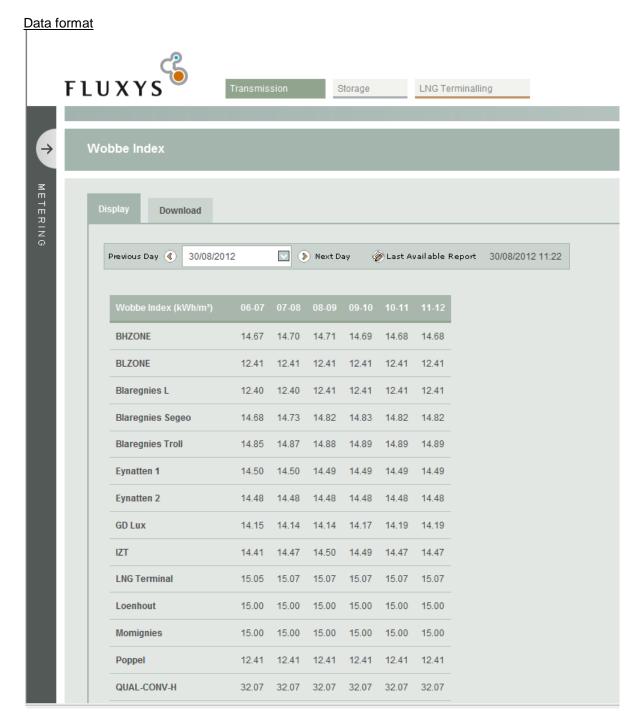

Downloads:

Using the download functionality the Grid User can download, either the latest available report, or he can make a selection of a date range which include the latest available report. Downloads are made available in CSV and XML formats.

3.4 Balancing and Allocations

3.4.1 Grid User Balancing Position

The Grid User Balancing Position publication holds Market Threshold and No Incentive Zone Limits, together with the position and possible settlements for the Market and the Grid User. It also indicates whether the data is based on provisional or forecasted values.

Grid Users receive the Grid User Balancing Position information for the H-zone and/or the L-zone depending on their activities in a graph and data format and also downloads are made available.


The Market Settlement could be either a Market Shortfall or a Market Excess, a direction is conventionally defined:

A positive Market Settlement correspond to a Market Shortfall, Fluxys Belgium injects gas into Grid User Balancing Position of causing Grid Users, Fluxys Belgium buys gas to compensate the Market Shortfall,

A negative Market Settlement corresponds to a Market Excess, Fluxys Belgium withdraws gas from Grid User Balancing Position of causing Grid Users, Fluxys Belgium sells gas to compensate Market Excess.


This publication is published every hour (H+30') with the latest actual and forecasted values. All values are rounded to 1kWh.

Graph format:

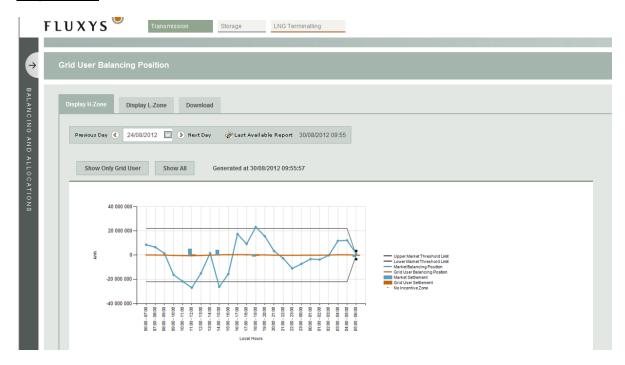


By selecting a specific Zone, and a gasday, balancing information will be shown. Using the "Show Only Grid User" button, the graph will only contain information about the Grid User itself and no longer the Market information. The format of the graph will be adapted, so that the graph is easier to read.

Selecting the "Show All" button will result in the publication of the initial graph with both Grid User and Market information

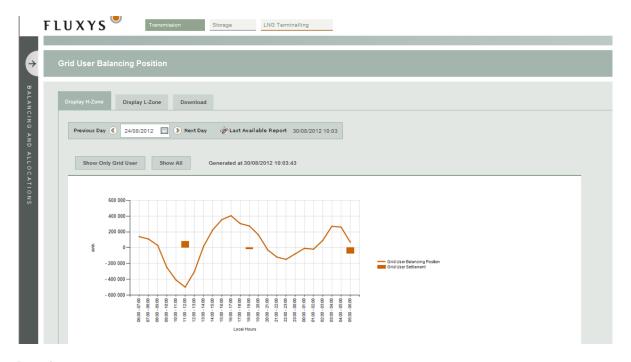


Data format:

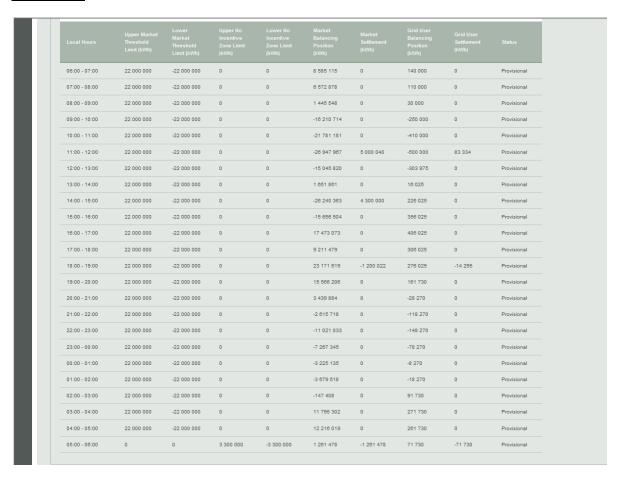

Downloads:

Using the download functionality the Grid User can download, either the latest available report, or he can make a selection of a date range which include only the latest available report, or all versions.

Downloads are made available in CSV and XML formats.

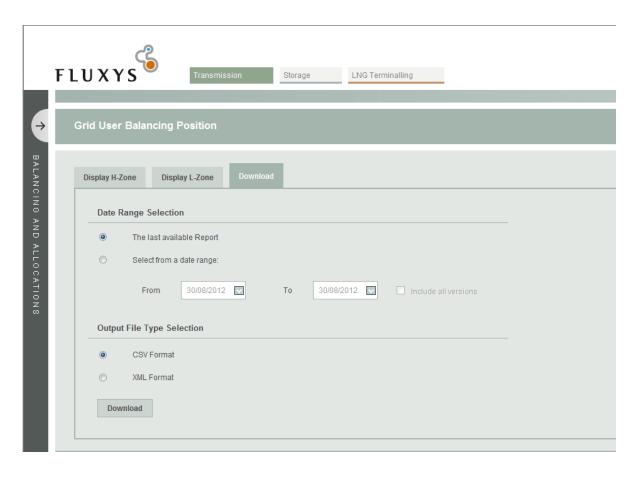

3.4.2 Market Balancing Position

This publication is published every hour with 1 hour delay (H+1:30) with the latest actual and forecasted values.

All values are rounded to 1kWh.

The Market Balancing Position screen opens with a few parameters that can be filled in



1. Choice between models

- the former transmission model which is valid until 30/09/2012
- the new entry exit model which is valid as from 1/10/2012, and which is selected by default

2. Selection of balancing zones

The possible selection of balancing zones changes according to the chosen model By default all balancing zones are selected

3. Selection of period

If the former transmission model is chosen, the value for *to date* cannot be larger than 30/09/2012.

If the Entry Exit model is chosen, the value for *from date* cannot be smaller than 1/10/2012.

The choice between the models defines the report that is shown

3.4.2.1 Entry Exit Transmission model

The Market Position publication holds Market Threshold and No Incentive Zone Limits, together with the position and possible settlements for the Market.

It also indicates whether the data is based on provisional or forecasted values.

The Market Settlement could be either a Market Shortfall or a Market Excess, a direction is conventionally defined:

- A positive Market Settlement corresponds to a Market Shortfall. Fluxys Belgium injects gas into Grid User Balancing Position of causing Grid Users, Fluxys Belgium buys gas to compensate the Market Shortfall
- A negative Market Settlement corresponds to a Market Excess. Fluxys Belgium withdraws gas from Grid User Balancing Position of causing Grid Users, Fluxys Belgium sells gas to compensate the Market Excess.

UMTL	Upper Market Threshold Limit	MT+ h,z (cfr ACT attachment A 2.2 List of Definitions)
LMTL	Lower Market Threshold Limit	MT- h,z (cfr ACT attachment A 2.2 List of Definitions)
UNIZ(L)/(H)	Upper Non Incentive Zone Limit (H zone or L zone)	NIZ H / NIZ L (cfr ACT attachment A 2.2 List of Definitions)
LNIZ(L)/(H)	Lower Non Incentive Zone Limit (H zone or L zone)	NIZ H / NIZ L (cfr ACT attachment A 2.2 List of Definitions)
MBP	Market Balancing Position	
MS	Market Settlement	

3.4.2.2 Former transmission model

The balancing system in the former transmission model is a daily balancing regime with hourly tolerances. These tolerances are calculated for every system user separately from his subscribed redelivery capacity in the balancing zone (BAP). The published data are the aggregated cumulative tolerances. Maximum cumulative tolerance is the sum of booked and available cumulative tolerances.

For the determination of the imbalance position, Fluxys Belgium publishes the forecasted values for the last gas hour of the gas day. Once the gas day has started, forecasted values are replaced by provisional allocations.

Flexibility utilization is expressed in percentages and compares the total imbalance position to the booked level of tolerances.

MFT+	Maximum Flexibility Tolerance Positive
MFT-	Maximum Flexibility Tolerance Negative
BFT+	Booked Flexibility Tolerance Positive
BFT-	Booked Flexibility Tolerance Negative
AFT+	Available Flexibility Tolerance Positive
AFT-	Available Flexibility Tolerance Negative
ImbP	Imbalance Positions
ImbP Status	Imbalance Position Status
FU (%)	Flexibility Utilization

3.4.3 Provisional Hourly Allocations

For a complete description of the Provisional Hourly Allocations data publication, please refer to the annex C1 of the ACT.

3.4.3.1 Purpose

The 'Provisional Hourly Allocation Report' screen gives the ability to navigate through all of the user's Provisional Hourly Allocation reports of the past 3 years. The allocations are categorized by their respective gashour.

3.4.3.2 Published data

For each gashour a list of all provisional allocations is given. Every allocation detail concludes the gashour and gasday, the shipper account, the EDIGAS-code of the location and the allocation value (expressed in kWh).

3.4.3.3 Access to publications

The provisional hourly allocations can be accessed in three different ways: via the display section, the download section and via a download URL.

The display section allows the grid user to view and consult the provisional hourly allocations online and the download section and download URL give the grid user the ability to download the available allocations in different file formats for further usage.

3.4.3.3.1 Display section

The last available Provisional Hourly Allocation Report will be displayed by default.

If the user wants to display the allocations for a different gashour, then he should first select the correct gasday with the calendar tool at the top left corner of the screen. By default the Allocations first gashour of the day is displayed. Then the correct gashour can be chosen from the bar on the left side of the screen.



Additionally to the allocation data, the generation date and time of the report is displayed on top of the screen.

3.4.3.3.2 Download section

To manually download provisional hourly allocations, the user should select the download tab.

The download screen gives two options to download the provisional hourly allocations. The gasday or range of gasdays and the output file format can be chosen by the user.

Date range selection:


- Last available report
 - This option returns the provisional hourly allocations for the last gasday.
- Date range:

Select all the gasdays starting at gasday 'From' until gasday 'To'. The FROM date may not be later in time than the TO date and the maximum date range is limited to one week. The screen automatically changes the FROM or TO date if the maximum date range of one week is exceeded.


Output File Type Selection:

Three file types are available for manual download:

- CSV
- XML

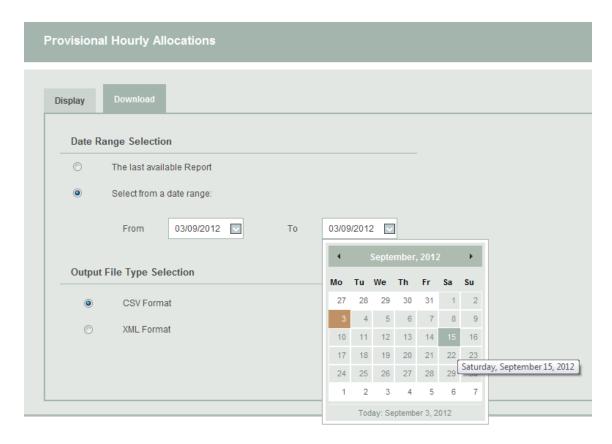

After the user has set the right parameters to download the desired Provisional Hourly Allocations and clicked the Download button, the File Download screen pops up, giving him the choice to directly open the file, or to save it.

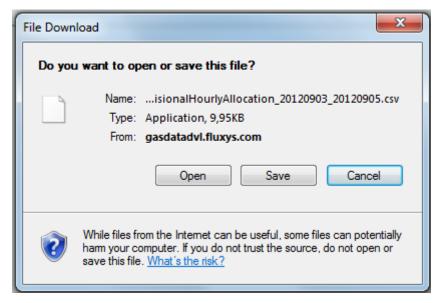

3.4.3.3.3 Automatic download URL

See chapter 6.

3.4.4 Imbalance Smoothing Allocation


The Imbalance Smoothing Allocation publication holds hourly Imbalance Smoothing Allocations for a specific gasday.

Grid Users receive the Imbalance Smoothing Allocations for the H-zone and/or the L-zone depending on their activities in a data format and also downloads are made available.

This publication is published every day around 11h30 CET with the latest values for the upcoming 4 gasdays.


All values are rounded to 1kWh.

Data format

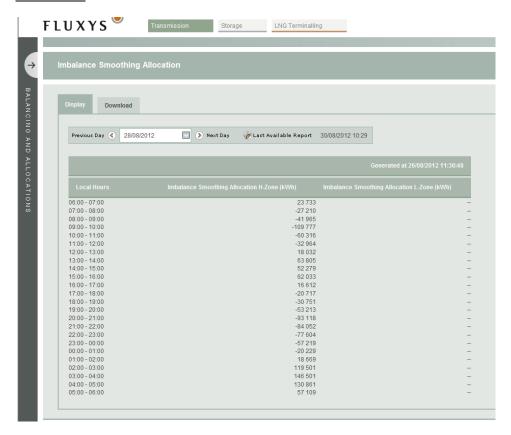

Downloads:

Using the download functionality the Grid User can download, either the latest available report, or he can make a selection of a date range which include the latest available report. Downloads are made available in CSV and XML formats.

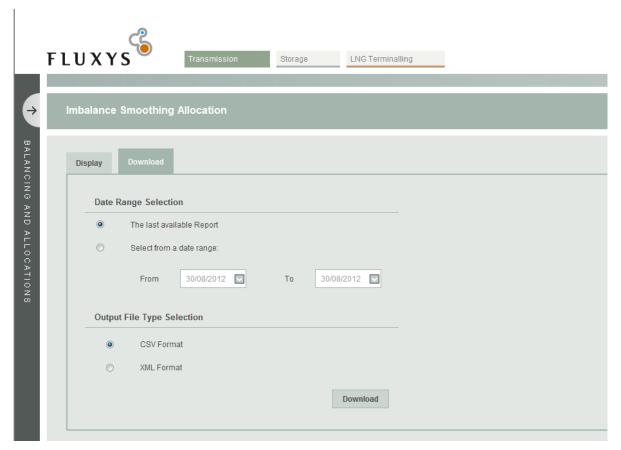

3.4.5 Temperatures

Daily Equivalent Temperature

Both forecasted and realized values are made available for system users to calculate their tolerances in the balancing system of Fluxys.

The Daily Equivalent Temperature is the sum of 60% of the temperature of Day D, 30% of D-1 and 10% of D-2. The forecasted daily equivalent temperature is based on the latest available realized temperatures and the forecasted daily temperatures.

Degree-day Temperature

The Degree-day Temperature is a measurement reflecting the demand for energy needed to heat buildings.

Degree-day Temperatures are defined relative to the base temperature of 16.5°C: the outside temperature above which a building needs no heating. If the average daily temperature is lower than the base temperature, the degree day temperature is the difference between both:

Example 1: average daily temperature = $-5^{\circ}C$ \square Degree-day temperature = 21.5 Example 2: average daily temperature = $5^{\circ}C$ \square Degree-day temperature = 11.5

If the average daily temperature is equal to or higher than the base temperature, the degree day temperature is zero:

Example 3: average daily temperature = 20°C □ Degree-day temperature = 0

FDET (°C)	Forecasted Daily Equivalent Temperature
RDET (°C)	Realized Daily Equivalent Temperature
DD (°C)	Degree Days
CDD (°C)	Cumulated Degree Days (start= 1st of

0-4-1
L October)

3.4.6 Flow data - Allocations for previous Gas Years

The history of daily allocations for interconnection point in entry and exit-mode for period 2005-2011.

3.5 Flow Data

3.5.1 Nominations and Flows on Interconnection Points

Day-Ahead nominations	DAN	The aggregated quantities of gas nominated by all system users for the following gas day at the first nomination window closure at 14.00h
Final Nominations	FN	The aggregated quantities of gas ultimately nominated by all system users for the gas hour/day
Interruptions	INT	The aggregated quantities of interrupted gas
Allocations	Alloc	Per gas day and per interconnection point the aggregated quantities of gas allocated to all system users having nominated gas quantities. Allocations at the interconnection points are provided separately for entry and exit.
Physical Flow	PF	The metered flow at the interconnection point. The data of the Physical Flow is reported on the entry-direction of every Interconnection Point. The sign indicates the direction of the flow, a positive value for incoming borders into the Fluxysgrid and a negative value for outgoing flows.
Gross Calorific Value	GCV	The conversion factor between m³(n) and kWh expressed in kWh/m³(n)

3.5.2 Nominations and Flows on Domestic Exit Points

Day-Ahead nominations	DAN	The aggregated quantities of gas nominated by all system users for the following gas day at the first nomination window closure at 14.00h
Final Nominations	FN	The aggregated quantities of gas ultimately nominated by all system users for the gas hour/day
Interruptions	INT	The aggregated quantities of interrupted gas
Allocations	Alloc	The aggregated quantities of gas allocated to all system users having nominated gas quantities at the exit-points in Belgium, grouped by Client Type
Physical Flow	PF	The aggregated metered flow at the group of Client Type per Balancing Zone
Gross Calorific Value	GCV	The conversion factor between m³(n) and kWh expressed in kWh/m³(n)

3.5.3 Ex-ante and ex-post Interconnection Point information

This report is the Nominations and Flows on Interconnection Points report, using a predefined selection of criteria in accordance with ENTSOG guidelines (European Network of Transmission System Operators for Gas).


3.5.4 Ex-ante and ex-post Domestic Exit Point information

This report is the Nominations and Flows on Domestic Exit Points report, using a predefined selection of criteria in accordance with ENTSOG guidelines (European Network of Transmission System Operators for Gas).

3.6 Invoicing

3.6.1 Invoices

When the Invoices menu-item is clicked, the Invoices section will open.

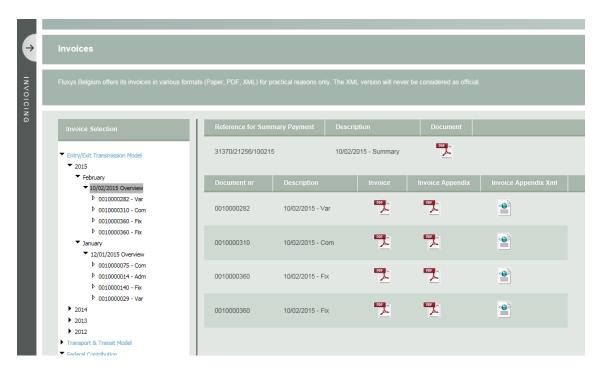

In this section all the available invoices are listed in the folders in the left menu.

In the folder tree a distinction is made between

- New Transmission model (for invoices about months as from 1/10/2012)
- Old Transmission Model (for invoices about months before 1/10/2012)
- Federal contribution (as from 1/04/2014)

The folders are sorted by the available invoicing dates. By opening a folder the invoices for this invoicing date will be displayed in the middle of the screen.

Note that if you click on the folder, the application will automatically display the first invoice underneath it.

3.6.2 Other invoices - Fluxys Belgium 🔳

This section of EDP gives access to private data concerning invoices and appendixes for non-regulated activities.


3.6.3 Preliminary Allocation Details

Besides the fully validated allocation details (see 3.6.4), Fluxys also provides a preliminary version of the allocation details. A preliminary allocation detail is made available around M+5 days, but contains information that has not yet been fully validated.

3.6.3.1 General Overview

There are different tabs for the preliminary allocation details for


- Transmission
 - New Transmission Model
 - For all activity months as from 10/2012
- Transport
 - Old Transmission Model Transport
 - For all activity months before 10/2012
- Transit
 - o Old Transmission Model Transit
 - For all activity months before 10/2012

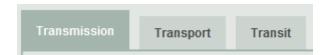

In a drop-down menu near the top of the Consult Preliminary screen the user can select a month for which he wants to see the preliminary allocation details. The drop-down menu will list all months that have preliminary allocation details available. By default the most recent month is selected.



Once the month is selected, the preliminary allocation details for that month are shown. They can be downloaded separately, or with the button "download preliminary allocation details" one can download a zip file containing all the preliminary allocation details.

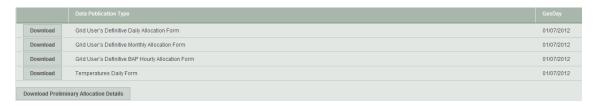

3.6.3.2 Download

The user can choose between downloading a single allocation detail and downloading all allocation details for the selected month.

3.6.3.2.1 Single file download

When the user selects the file he wants to download he can choose between immediately opening the file and saving the file to disk. The allocation detail is offered as a CSV file that can be viewed using Excel or notepad.

3.6.3.2.2 Complete download

Again the user will get the choice between viewing and saving the file. When downloading a complete set of allocation details files, the user receives a .zip archive containing all CSV allocation details files for the selected month.

3.6.4 Validated Allocation Details and ARS Capacity 🔳


There are different allocation details for Transmission (New Transmission Model) and for Transport and Transit (Old Transmission Model). A distinction between these types is made in the navigation tree.

- Transmission
 - o New Transmission Model
 - For all activity months as from 10/2012
- Transport
 - Old Transmission Model Transport
 - For all activity months before 10/2012
- Transit
 - Old Transmission Model Transit
 - For all activity months before 10/2012

An invoice date will never contain months before 10/2012 together with months as from 10/2012. This means that the new model and old model are strictly separated, and there will never be the same invoice date for the old model and the new model.

The ARS capacity calculation is also available in this part.


As the filter option "All" is selected on the panel by default, the navigation panel shows all available invoicing months and allocation details versions. The user can use the Navigation Tree to select an allocation detail and view or download the document.

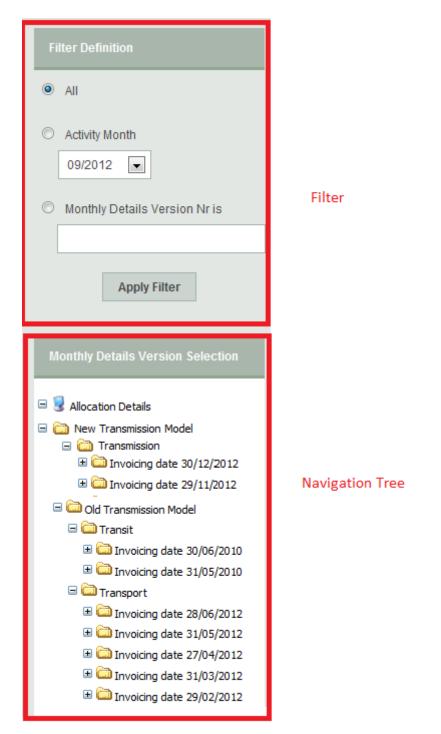

The user can modify the filter applied on the collection of available allocation details organized in the navigation tree. The allocation details are grouped per type of allocation details (level 1 and 2 of the navigation tree), per invoicing month (level 3 of the navigation tree) and per monthly details version number (level 4 of the navigation tree).

The Navigation Tree, the Filter Panel and the different downloading options will be discussed in the following sections.

3.6.4.1 Navigation Tree

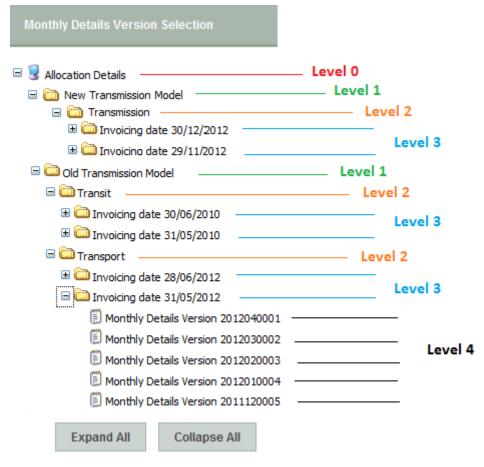

The navigation provides a tree structure of all invoicing dates (i.e. document date of the allocation details) of the last 3 years and the associated bundled/linked Monthly Details Version Numbers:


- Level 0: label 'Allocation Details'.
 - This navigation tree is built for the quick navigation through the archived collection of allocation details of the last 3 years. The filter above provides additional browsing facilities and is applicable on the tree content.
- Level 1 and 2: Distinction between type of allocation detail
 - New Transmission Model
 - Transmission
 - Old Transmission Model
 - Transport
 - Transit
- Level 3: Invoicing Dates (invoicing data available for the past 3 years).

This level of the navigation tree contains the invoicing dates or document dates of the last 36 invoicing months.

Level 4: Monthly Details Version Number

In the fourth level, the user can find all the Monthly Details Version Numbers that are attached/bundled/linked to a particular invoicing date or document date. If a Monthly Details Version Number has been selected in the navigation tree, the user will have the possibility to download all the allocation details associated with that particular Monthly Details Version Number, and related to the invoicing date of the previous level. All the related allocation details for a particular Monthly Details Version Number and Invoicing Month/Document date will be shown in the Allocation Details Download Panel to the right of the Navigation Tree. These particular allocation details can be downloaded separately or all together in a zip file.

3.6.4.2 Filter Panel

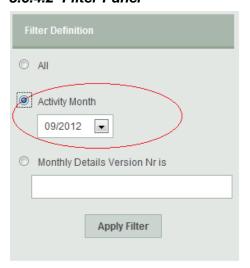

=> Only the Monthly Details Versions of Activity Month September 2012 are shown in the navigation tree, even though the invoicing dates contain other Monthly Details Versions

The Filter Panel gives the user the possibility to filter/limit the available Monthly Details Version Numbers in the navigation tree for easy and quick navigation. After applying a desired filter-option by selecting the preferred filter option and clicking the "Apply Filter" button, this option is highlighted. The filter panel consists of the following criteria/options.

All

If this option is chosen, no filter is applied. The option "All" gives all the available Monthly Details Version Numbers grouped by the Invoicing Date (=document date) to which they are linked/bundled.

Activity Month

This filter criterion gives the user the option to restrict the available Monthly Details Version Numbers shown in the navigation tree to a pre-defined Activity Month in the combo-box.

Monthly Details Version Number

This option offers the possibility to search and request a specific Monthly Details Version Number that fully matches the expression entered in the corresponding edit-box. As so, the user can limit the Monthly Details Version Numbers shown in the navigation tree to one particular version.

3.6.4.3 Download


Essentially, there are two different ways in which the download features of the application can be used:

- Download the desired information through the Graphical User Interface.
- Address the download feature directly by using the Download URL.

3.6.4.3.1 Manual download by the user

The user can download the allocation details of a selected invoicing date or linked to the selected Monthly Details Version Number by navigating to the desired allocation type (level 1 and 2), invoicing month (level 3) and Monthly Details Version Number (level 4).

If a Monthly Details Version Number has been selected in the fourth level of the navigation tree, all the related allocation details for a particular Monthly Details Version Number and Invoicing Date/Document Date are shown in the Allocation Details Download Panel to the right of the Navigation Tree.

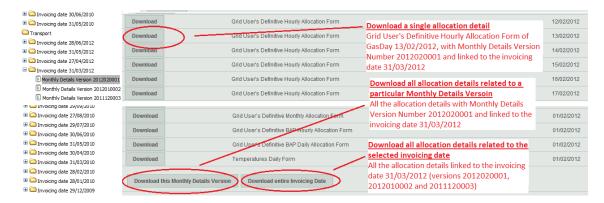

The user has the possibility to choose the granularity of the group of allocation details to download:

- A particular single allocation detail can be downloaded by clicking the download button in front of the associated allocation detail line. Subsequently, this allocation detail file is downloaded as a CSV file which can be opened with either Notepad or Excel, and/or can also be saved to a local drive.
- All the allocation details related to a particular Monthly Details Version Number can be downloaded by selecting the option "Download this Monthly Details Version" and clicking the "Start Download" button. This bundle of allocation details is downloaded as a ZIP file containing all the allocation details in CSV file format.
- The download of all the allocation details of all the allocation details versions related to the selected invoicing date of the previous level is executed by selecting the option "Download entire Invoicing Date", and clicking the "Start Download Button". This group of allocation details is downloaded as a ZIP file containing all the allocation details in CSV file format.

After the user has initiated a download, the File Download screen pops up giving him the choice to either directly open the file or save it.

More information on the description and content of these files can be found in the Implementation Information at

http://www.fluxys.com/belgium/en/Services/Transmission/BeluxStarterKit/BeluxModel_

3.6.4.3.2 Automatic download by an application

See chapter 6.

3.6.5 Settlement Prices

The Settlement Price publication holds prices for settlements that have occurred. Grid Users receive data about the H-zone and the L-zone.

The Market Settlement could be either a Market Shortfall or a Market Excess, a direction is conventionally defined:


A positive Market Settlement correspond to a Market Shortfall, Fluxys Belgium injects gas into Grid User Balancing Position of causing Grid Users, Fluxys Belgium buys gas to compensate the Market Shortfall.

A negative Market Settlement correspond to a Market Excess, Fluxys Belgium withdraws gas from Grid User Balancing Position of causing Grid Users, Fluxys Belgium sells gas to compensate the Market Excess

This publication is refreshed whenever the price for a settlement becomes available.


Grid Users receive the Settlement Prices for the H-zone and the L-zone in a data format and also downloads are made available.

Data format

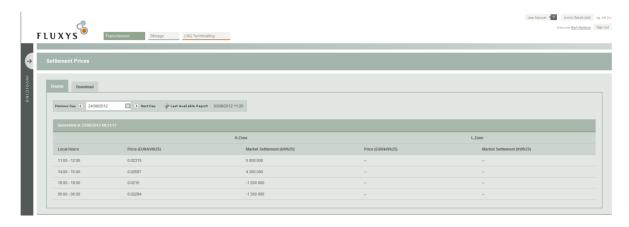

Downloads:

Using the download functionality the Grid User can download, either the latest available report, or he can make a selection of a date range which include the latest available report. Downloads are made available in CSV and XML formats.

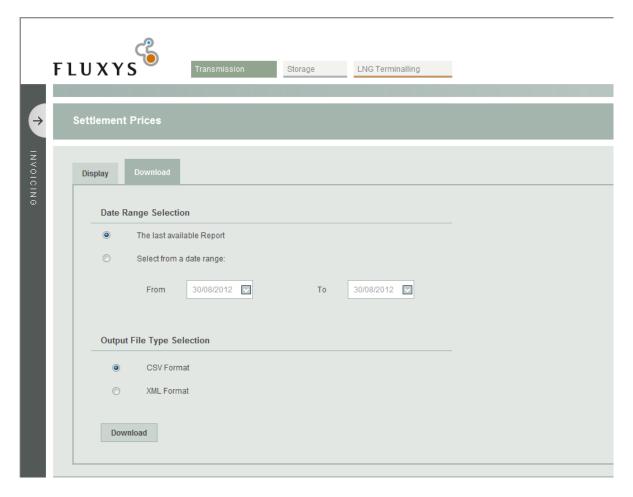

3.6.6 Monthly Interconnection point account statement

Monthly interconnection point account statement for customers of Fluxys and published every month on Electronic Data Platform.

This report contains the monthly detail of Grid User activities on the New Transmission Model.

3.7 Nominations

3.7.1 DA Nominations for previous Gas Years

The history of daily Shipper Day-ahead Nominations for interconnection point in entry and exitmode, at first gate closure 14.00 D-1 for period 2005-2011.

3.7.2 Final Nominations for previous Gas Years

The history of final daily Shipper Nominations for interconnection point in entry and exit-mode for period 2005-2011.

3.7.3 Nomination restrictions on quality conversion points

The restrictions which limit the within-day renominations on the quality conversion points to the renomination band.

3.8 Regulatory and contractual documents

3.8.1 Standard Transmission Agreement (STA)

The object of this Agreement is to lay down the terms and conditions upon which the Grid User will be able, on and from the Start Date, to subscribe to Services offered by the TSO and upon which the TSO shall perform such Services.

Subject to the terms and conditions of this Standard Transmission Agreement and the attachment C 1 of the Access Code for Transmission, TSO shall operate and maintain the Transmission Grid in accordance with the applicable regulation.

Subject to the terms and conditions of this Standard Transmission Agreement and the attachment A of the Access Code for Transmission, during the Contract Period, TSO shall provide Grid User with, and Grid User shall pay for, the Transmission Services as Grid User may have subscribed pursuant to any Services Confirmation and/or has been allocated, for the relevant Service Period and in accordance with any terms and conditions set out in the relevant Services Confirmation.

3.8.2 Access Code for Transmission (ACT)

The Access Code for Transmission consists of a standard set of terms and conditions governing regulated access to the Transmission Services offered by the Transmission System Operator to any Grid User on the Transmission Grid operated by Transmission System Operator in accordance with the code of conduct regarding access to the natural gas transmission network. storage facility for natural gas and LNG facility as approved by royal Decree of 23 December 2010 (the Code of Conduct).

The purpose of the Access Code for Transmission is to define the set of rules and procedures governing the Transmission Services offered by Transmission System Operator to Grid Users on the Transmission Grid. In addition to being governed by the Access Code for Transmission, the Transmission Services offered by Transmission System Operator to any Grid User on the Transmission Grid shall be subject to the terms and conditions set out in the Standard Transmission Agreement entered into between Transmission System Operator and any such Grid User.

3.8.3 Tariffs

Overview tariffs, tariff methodology and tariff calculator.

3.8.4 Capacity calculation methodology

Fluxys updates annually its ten-year indicative investment program. These actualizations take into account the evolution of the needs for supply of natural gas, requests for new connections and the new needs of the grid users as a result of market consultations.

In order to actualize the investment program, Fluxys performs simulations on the existing configuration of its grid, based on the data for the expected development as a result of the request for transmission capacity and the estimated evolution of capacities. Different scenarios

are investigated taking into account different possible configuration of gas flow, peak consumption and the maximum grid imbalance.

These grid simulations on a largely bi-directional and highly interconnected grid remain a continuous and complex exercise. Based on these transmission grid simulations, the firmness of the capacity of the grid users and end-users can be guaranteed.

3.8.5 Specific requirements of Interconnector Points

Operating conditions and quality requirements at Interconnection Points.

3.8.6 Transmission Program (TP)

The transmission program describes certain information regarding the transmission model and the related services offered by Fluxys Belgium for the period running from the start of the Entry/Exit model until 2015 and gives an overview of the services offered by Fluxys Belgium. This transmission program is intended for information purposes and includes information that is set out in detail in the access code for transmission.

3.8.7 Specifications on supply points

The general specifications on the supply points describing the characteristics that the supplied natural gas must meet.

3.9 REMIT messages


Regulation on Energy Market Integrity and Transparency

<u>Purpose</u>: Publishing information to foster open and fair competition through reporting that may impact price and applies to market participants (including TSO's or Grid-Users who enters into transactions in wholesale energy markets).

4. Storage

4.1 Capacities and Contracts

4.1.1 Capacity Rights Injection

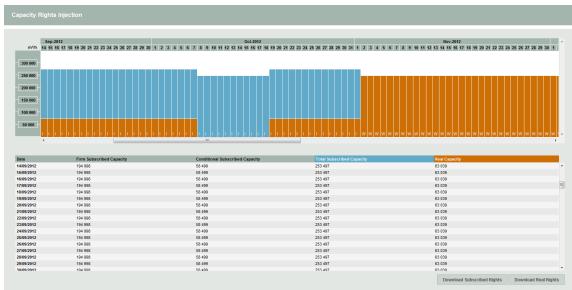

Injection Capacity Consult Screen

Information about injection capacities is retrieved for a period of 7 months: one month in the past and six months in the future.

The upper section presents a graph with the daily total subscribed and total real injection capacities for the selected plant over the time line (horizontal axis), which has a daily basis (GasDays). The view displays 60 days and is scrollable. The default view when opening contains 3 days history and 56 days in the future.

The installation mode is displayed at the bottom of the bar chart. (I = Injection, S = Stop and W = Withdrawal)

The lower section shows the same information in a table, but with two extra columns: the firm subscribed and conditional subscribed injection capacities. The values are given in m³/h and are rounded.

The real injection capacities in withdrawal and stop mode are set to sum of all withdrawal rights. The possible reverse nomination that will be confirmed depends on the actual forward flow.

The subscribed and real injection rights can be downloaded to an .xml file by pressing resp. the 'Download Subscribed Rights' button and the 'Download Real Rights' button. This allows you to save the .xml files on one of your drives.

In following link you can find an impression of how the XML looks like:

http://www.fluxys.com/belgium/en/Services/Transmission/BeluxStarterKit/BeluxModel_


Downloads button, FDB. Dossription of Storage agetion adf.

'Downloads' button, EDP - Description of Storage section.pdf

The .xml files will provide, for the period for which the rights are available on the screen, essentially the same information as for withdrawal.


When clicking on a vertical bar representing one GasDay, the bottom half of the display changes to a detailed hourly view.

Several extra columns are also visible showing the correction factor: the maintenance, conditional, volume and account factors, the Day Ahead Market and the installation mode. Please note that the Day Ahead Market capacity is on Plant level, not on storage user level.

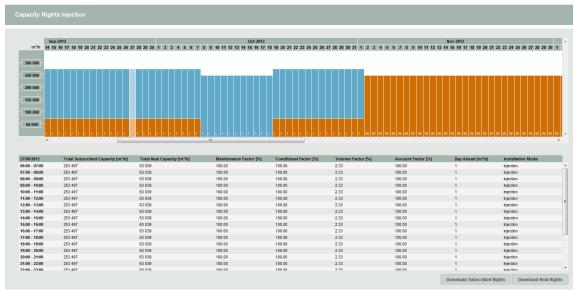

Injection Capacity Consult Screen with Details (vertical bar clicked)

4.1.2 Capacity Rights Withdrawal

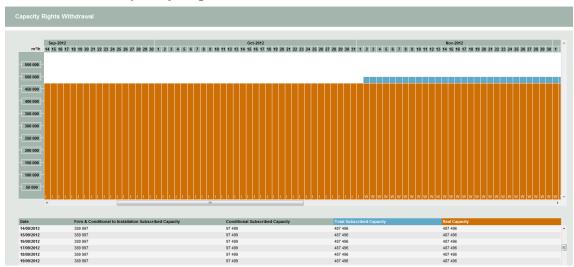

Withdrawal Capacity Consult Screen

Information about withdrawal capacities is retrieved for a period of 7 months: one month in the past and six months in the future.

The upper section presents a graph with the daily total subscribed and total real withdrawal capacities for the selected plant over the time line (horizontal axis), which has a daily basis (GasDays). The view displays 60 days and is scrollable. The default view when opening contains 3 days history and 56 days in the future.

The installation mode is displayed at the bottom of the bar chart. (I = Injection, S = Stop and W = Withdrawal)

The lower section shows the same information in a table, but with two extra columns: the firm subscribed and conditional subscribed withdrawal capacities. The values are given in m³/h and are rounded.

The real withdrawal capacities in injection and stop mode are set to sum of all injection rights. The possible reverse nomination that will be confirmed depends on the actual forward flow.

The subscribed and real withdrawal rights can be downloaded to an .xml file by pressing resp. the 'Download Subscribed Rights' button and the 'Download Real Rights' button. This allows you to save the .xml files on one of your drives.


In following link you can find an impression of how the XML looks like:

http://www.fluxys.com/belgium/en/Services/Transmission/BeluxStarterKit/BeluxModel

'Downloads' button, EDP - Description of Storage section.pdf


When clicking on a vertical bar representing one GasDay the bottom half of the display changes to a detailed hourly view.

Several extra columns are also visible showing the correction factor: the maintenance, conditional, volume and account factors, the Day Ahead Market and the installation mode. Please note that the Day Ahead Market capacity is on Plant level not on storage user level.

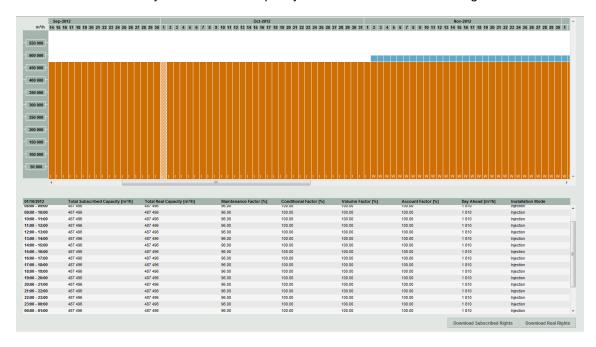

Withdrawal Capacity Consult Screen with Details (vertical bar clicked)

4.1.3 Capacity Rights Storage

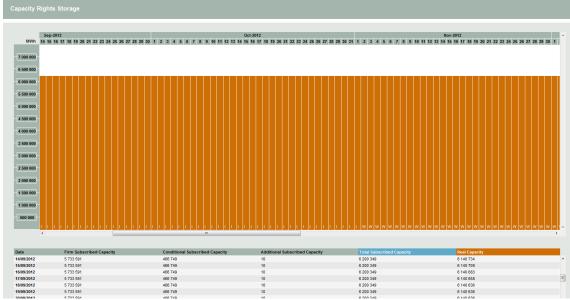

Storage Capacity Consult Screen

Information about storage capacities is retrieved for a period of 7 months: one month in the past and six months in the future.

The upper section presents a graph with the daily total subscribed and total real storage capacities for the selected plant over the time line (horizontal axis), which has a daily basis (GasDays). The view displays 60 days and is scrollable. The default view when opening contains 3 days history and 56 days in the future.

The installation mode is displayed at the bottom of the bar chart. (I = Injection, S = Stop and W = Withdrawal)

The lower section shows the same information in a table, but with three extra columns: the firm subscribed, the conditional subscribed and the additional subscribed storage capacities. Note that values are given in MWh and are rounded.

The subscribed and real storage rights can be downloaded to an .xml file by pressing resp. the 'Download Subscribed' button and the 'Download Real Rights' button. This allows you to save the .xml files on one of your drives.

In following link you can find an impression of how the XML looks like:

http://www.fluxys.com/belgium/en/Services/Transmission/BeluxStarterKit/BeluxModel_

'Downloads' button, EDP - Description of Storage section.pdf

4.1.4 Seasonal Program

Seasonal Program Screen

Receivulate Monthly Totals Submit Seasonal Program Download Doour

The information on the seasonal program can be retrieved for 4 periods of 6 months each. The default period is the current month till 5 months in the future. The other periods are the past 6 month period and 2 future periods of 6 months each. The list box provides the possibility to select the period of choice.

The seasonal program in the past as well as full day + 1 cannot be edited anymore.

To define the seasonal program, just enter the amount in the Month Values field of the appropriate month and click the Set button underneath. This will cause the amount to be evenly distributed over the days of the month. It is also possible to enter daily amounts after which 'Recalculate Monthly Totals' has to be clicked to update the monthly total.

When the program has been entered or changed, the 'Submit Seasonal Program' button has to be clicked to save the amounts. While submitting the amounts, the amounts will be restricted to the subscribed rights. In case the original amounts are capped by this action, the definitive amounts are published in red font.

At the bottom of the columns, the Monthly Totals and the Netted Of values are displayed. The Netted Of value is calculated by subtracting the total withdrawal amount of the month from the total injection amount of that month.

The seasonal program can be downloaded to an .xml file by pressing the 'Download Documents' button. This allows you to save the .xml file on one of your drives.

In following link you can find an impression of how the XML looks like:

http://www.fluxys.com/belgium/en/Services/Transmission/BeluxStarterKit/BeluxModel

'Downloads' button, EDP - Description of Storage section.pdf

4.1.5 Congestion Indicators

Indicators screen

This section represents a table with the congestion indicators for Injection, Withdrawal & Storage for each day of the current month.

It is possible to retrieve the congestion indicators for another month by using the previous month or next month buttons. A rolling window of 13 months will be provided; this means that only historic data till 13 months in the past can be consulted.

The data will be displayed as percentages, being a value between 0 and 100. Two significant decimal numbers will be shown.

If no data is available for a number of possible causes (f.e. before 15/4/2012, dates in the future), "--" is displayed.

The indicators for Injection are: Daily Maximum %, Daily Average % and Plant Daily Average %. The indicators for Withdrawal are: Daily Maximum %, Daily Average % and Plant Daily Average %.

The indicators for Storage are: GIS Unused % Forecast, GIS Unused Capacity (MWh) and and Plant GIS % Forecast.

The indicators can be downloaded to an .xml file by pressing the 'Download Documents' button. This allows you to save the .xml file on one of your drives.

In following link you can find an impression of how the XML looks like:

http://www.fluxys.com/belgium/en/Services/Transmission/BeluxStarterKit/BeluxModel_

'Downloads' button, EDP - Description of Storage section.pdf

Notes:

- 1. Additional storage capacity is not taken into account for the indicators (GIS utilization rates)
- 2. The storage indicators for the current day will be available from 16h15
- 3. The injection and withdrawal indicators for the previous day will be available from 8h30AM

4.1.6 Overview remaining Storage Services

The remaining Storage Services (Injection / Withdrawal / Volume) for the primary market are displayed in the corresponding table view and are updated on a regular basis (and depending on the allocation calendar).

The Storage Services offered on the secondary market are displayed in the corresponding table view and are posted on request of the selling Storage User.

For more detailed information on the available Storage Services, Storage User can contact the storage operator on info.storage@fluxys.com.

4.1.7 Secondary Market report

Under this tab Storage users have the possibility to view the available capacities on the secondary market offered in an anonymous way. Storage users that want to offer capacity on this platform or interested to buy capacities have to contact the storage operator on info.storage@fluxys.com

4.2 Maintenance

4.2.1 Works and interventions impact on Installation Point

Works and interventions (i.e. planned maintenance) impacting the Installation Point are published for the following calendar year as from the 1st October preceding the calendar year. The information is updated every month. Detailed information on short term changes impacting the service rights (Injection / Withdrawal) are published by the maintenance factors as described in 4.1.

4.3 Metering

4.3.1 Hourly refreshed measurements on nodes and lines <a>I

When opening the measurements section, the Hourly View with flow measurements for the last available hour is displayed for all the nodes. From this screen the user can navigate to the Daily and Monthly Views for flow measurements and gas characteristics.



In the Hourly View the user can find a list of flow measurements for all nodes on a selected gasday and gashour.

The Daily View is subdivided in three tabs: Flow Measurements, Gas Composition and Gas Characteristics. This view shows the hourly measurements for the selected node on the selected day.

The Monthly View shows the daily measurements for the selected node during the selected month. This view is subdivided in the same three tabs as the Daily view.

4.3.1.1 Hourly View

The hourly view provides the measurements for all the nodes on the selected gasday and gashour. Only the nodes for which the user has view rights are available.

At the top (just below the hourly, daily and monthly tabs) the date selector is located. The date shown is the gasday of the measurements displayed in the measurement grid. The last available report button will automatically select the current day and hour.




On the left hand side a bar with all the available hours in the selected gasday is presented. Clicking on a specific hour will select this hour and display the measurements of this hour in the measurements grid. When changing the gasday the first gashour of that day is selected.




The center of the screen shows all the flow measurements on the selected gasday and gashour. For each node, a line is displayed with the following measurements:

- The amount of Volume that flowed through the node or metering line (Converted to normal conditions (25°C and 1 atm)).
- The amount of **Energy** that flowed through the node or metering line during this hour
- The **GCV** calculated from the gas flow. This value is calculated as the fraction of Energy/Volume.
- The **Pressure** of the gas
- The **Temperature** of the gas
- The **Gross Volume** is the physical volume of the gas at the current conditions.
- The VnConv is the normalized Volume that is measured by the volume converter
- Measured Before: Only for metering line (Not applicable for Storage).
- In Maintenance: Only for metering line (Not applicable for Storage).
- The Status field shows the validation status of the measurements:
 - No Data
 - Raw data are measurements that are not at all verified or validated
 - Verified data means that a preliminary verification check has been done
 - Validated data means that the measurement has been validated

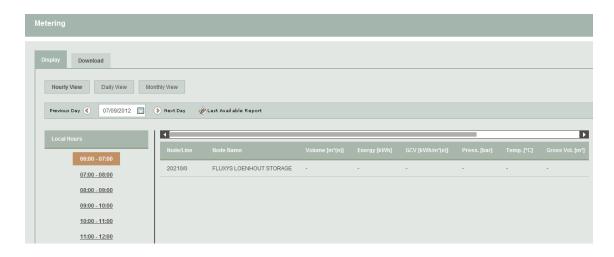

4.3.1.2 Daily View

The daily view can be selected by clicking on the Daily View tab on the top of the screen.

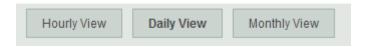


Right beneath the tab selector, a gasday selection is given. Here the gasday of the measurements can be chosen. The last available report button automatically sets the gasday to the current day.



Below the date, a drop down list with all the nodes and/or lines is located. This list allows the user to select the node or line for which the measurements are shown. If a filter is set, the list is automatically adapted to hold only the nodes and/or metering lines that satisfy the filter. The list is ordered by codification number.



The measurement section is divided in three areas (tabs): Flow Measurements, Gas Composition and Gas Characteristics. There are only measurements available on the two last tabs if a gas analysis has been done on the gas for this node. For the selected node an overview of the measurements is given for every gashour of the selected gasday.

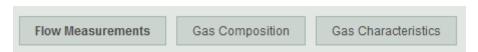

The **Flow Measurements** tab displays the same measurements as the Hourly View: Volume, Energy, GCV, Pressure, Temperature, Gross Volume, Conv. Volume, Measured Before, In Maintenance and Status.

The **Gas Composition** tab displays the hourly measurements of the composition of the gas and the GCV as it is measured (derived from the composition).


The **Gas Characteristics** tab displays the hourly measurements retrieved by the gas analysis: Density, Wobbe, NCV, Kref, GCV, CO2 EF and a validation status.

The **status** field shows the validation status of the measurements:

- No Data
- Raw data are measurements that are not at all verified or validated
- Verified data means that a preliminary verification check has been done
- Validated data means that the measurement has been validated

4.3.1.3 Monthly View

In the Monthly View all the measurements are aggregated per day of the selected month instead of the gashour of the selected gasday. The layout of this view is the same as the one from the Daily View. The monthly view can be selected by clicking on the Monthly View tab.

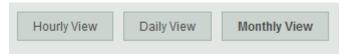

4.3.1.4 Remark

Please note that the GCV is based on the weighted average following the volume measured on the site.

4.3.1.5 Download

There are essentially two main options to download measurement information from the application:

- The user can download the information manually by using the Graphical User Interface.
- It is also possible to address the download feature directly by using the Download URL.

4.3.1.5.1 Manual download by the user

The user can download the required information manually by navigating to the Download section for a certain gasday period (Not longer than one month) on the filtered nodes and metering lines:

- Hourly Flow Measurements
- Corrected Hourly Flow Measurements
- Hourly Gas Analysis
- Daily Gas Analysis

It is possible to choose between two different file formats:

- CSV
- XML

The function "Corrected Hourly Flow Measurements" let see measurements corrections that have been made during the selected period (Ex: On 09.02.2015 if Fluxys make corrections on the Measurements of 28/01/2015, this changes will be visible by selecting the period from 02.09.2015).


4.3.1.5.2 Automatic download by an application

See chapter 6.

4.3.2 Topology

This section provides information about the metering topology elements on which the user has the right to view data. The view rights are derived from the contracts which are based on Gas Exchange Locations. These gas exchange locations can be subdivided in a set of Nodes.

4.3.2.1 Content

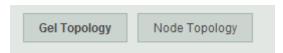

A Gas Exchange Location (GEL) consists of node memberships. A node can be a member of a

GEL during a given time period. The membership has a weight with which the measurements of the respective node are aggregated in the result for the associated GEL. All this information can be found per GEL under the button **GEL Topology** (This option is accessible to limited users it depends of their contractual link with Fluxys - not applicable for Storage).

Under the **Node Topology** button a drop-down box can be found with all the nodes on which the user has the right to view data.

The whole history of the node is shown after selecting a node. The node history consists of the name changes and the EAN number.

The metering line history consists of the measured before status, operational status and the EAN number.

4.3.2.2 Download

There are essentially two main options to download topology information from the application:

- The user can download the information manually by using the Graphical User Interface.
- It is also possible to address the download feature directly by using the Download URL.

4.3.2.2.1 Manual download by the user

The user can download the required information manually by navigating to the Download section. This section provides selections to download the whole history of either:

- Gas Exchange Location Topology: for all GELs on which the user has the right to view data
- Node Topology: for all GELs on which the user has the right to view data

It is possible to choose between two different file formats:

- CSV
- XML

4.3.2.2.2 Automatic download by an application

See chapter 6.

4.3.3 Further remarks about Metering and Topology

4.3.3.1 Aggregation of measurements

Since a Gas Exchange Location (GEL) consists of a set of nodes and a node consists of a set of metering lines, the measurements for a complete GEL should be aggregated.

We advise to start the aggregation for a complete GEL from the set of nodes and not from the set of metering lines. A metering line can go 'In Maintenance' or the measurements can already be accounted in the measurements of another metering line, i.e. 'Measured Before'.

The measurements on the node level take these two parameters into account and can therefore readily be used for the aggregations.

Example

What is the total energy on gas exchange location A at gas day X, hour Y?

The topology of gas exchange location A at gas day X and hour Y is:

- Membership 1: Node n1, weight w1 = -1
- Membership 2: Node n2, weight w2 = -1
- Membership 3: Node n3, weight w3 = 1

The measurements of nodes n1, n2 and n3 at gas day X and hour Y are:

- Node n1: e1 = 100 kWh
- Node n2: e2 = 200 kWh
- Node n3: e3 = 500 kWh

Calculation

```
Total energy (e) = e1 * w1 + e2 * w2 + e3* w3
= 100*-1 + 200*-1 + 500*1
```

= 200 kWh

4.4 Storage Inventory and Allocation

4.4.1 Provisional Hourly Allocations

For a complete description of the Provisional Hourly Allocations data publication, please refer to the annex D1 of the Access Code for Storage.

4.4.1.1 Purpose

The 'Provisional Hourly Allocation Report' screen gives the ability to navigate through all of the user's Provisional Hourly Allocation reports of the past 3 years. The allocations are categorized by their respective gashour.

4.4.1.2 Published data

For each gashour a list of all provisional allocations is given. Every allocation detail concludes the gashour and gasday, the shipper account, the EDIGAS-code of the location and the allocation value (expressed in kWh).

4.4.1.3 Access to publications

The provisional hourly allocations can be accessed in three different ways: via the display section, the download section and via a download URL.

The display section allows the grid user to view and consult the provisional hourly allocations online and the download section and download URL give the grid user the ability to download the available allocations in different file formats for further usage.

4.4.1.3.1 Display section

The last available Provisional Hourly Allocation Report will be displayed by default. If the user wants to display the allocations for a different gashour, then he should first select the correct gasday with the calendar tool at the top left corner of the screen. By default the Allocations first gashour of the day is displayed. Then the correct gashour can be chosen from the bar on the left side of the screen.



Additionally to the allocation data, the generation date and time of the report is displayed on top of the screen.

4.4.1.3.2 Download section

To manually download provisional hourly allocations, the user should select the download tab.

The download screen gives two options to download the provisional hourly allocations. The gasday or range of gasdays and the output file format can be chosen by the user.

Date range selection:

Last available report

This option returns the provisional hourly allocations for the last gasday.


• Date range:

Select all the gasdays starting at gasday 'From' until gasday 'To'. The FROM date may not be later in time than the TO date and the maximum date range is limited to one week. The screen automatically changes the FROM or TO date if the maximum date range of one week is exceeded.


Output File Type Selection:

Three file types are available for manual download:

- CSV
- XML

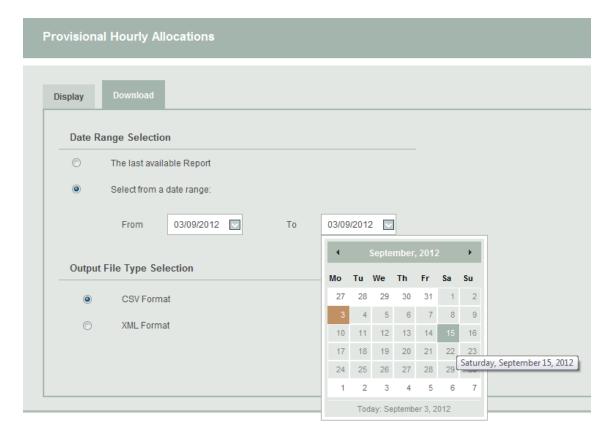

After the user has set the right parameters to download the desired Provisional Hourly Allocations and clicked the Download button, the File Download screen pops up, giving him the choice to directly open the file, or to save it.

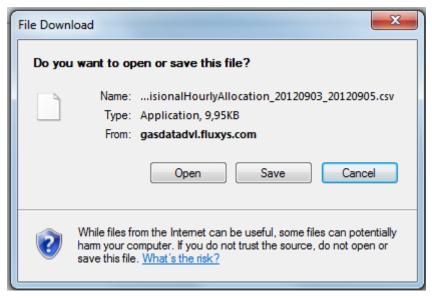

4.4.1.3.3 Automatic download URL

See chapter 6.

4.4.2 Gas In Storage

GIS data allows grid users to keep track of the amount of energy they have in storage in the Fluxys storage installations.

4.4.2.1 Display


The Gas In Storage screen opens by default the last available GIS Report.

The GIS Report screen gives the ability to navigate through the user's GIS Reports of the last past 3 years. Therefore, the user will find a calendar menu item where he can select the appropriate day for which he wants to consult the GIS Report. So, by changing the date, the user can navigate through all his available Reported Daily Imbalance Reports.

The title of each GIS Report consists of the gasday for which the report applies. The GIS data is delivered on a per hour basis. For every hour (expressed in local time) following elements are displayed:

- Begin and end time of the hour
- For each plant at which a grid user is active
 - Amount of GIS position of the user (kWh)
 - Total amount of GIS (kWh)
 - Generation time of the GIS message

The report is built up as the gasday progresses with a new line being added every hour.

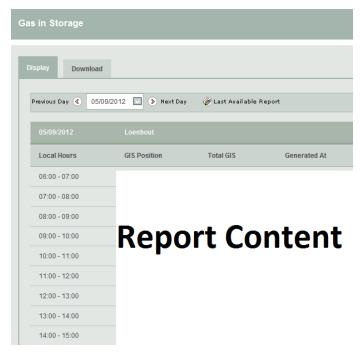

4.4.2.2 Download


There are two different ways in which the download features of the application can be used. These different options are intended for different sorts of use. On one hand, the user can download the desired information by using the Graphical User Interface. On the other hand, it is also possible to address the download feature directly by using the Download URL.REPORT

4.4.2.2.1 Manual download by the user

On one hand, the user can download the last available report or a range of reports using the Graphical User Interface by navigating to the download section of the application.

In the Gas In Storage screen, the user can specify all the parameters of the desired download.


The download procedure for the GIS Reports follows the same rules and principles as the download procedure of the Provisional Hourly Allocations. Therefore, we refer to paragraph 4.4.1.3.2 for more information on downloading report information.

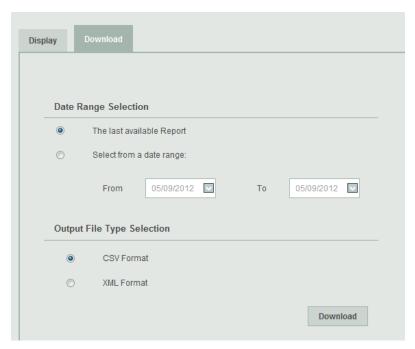

4.4.2.2.2 Automatic download by an application

See chapter 6.

4.4.3 Gas in Storage Forecast

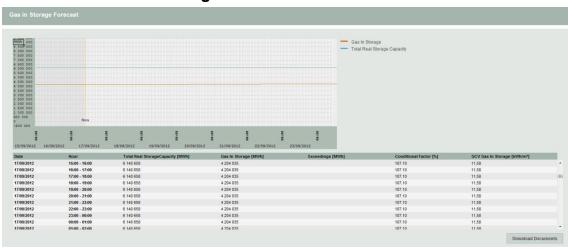

GIS / Storage Right screen

The upper section represents a graph with two curves: the GIS level in red and the total real storage rights in blue. The picture displays an hourly detail for a period of 9 gasdays (yesterday, today and next week). The vertical axis shows the amount in MWh. The current hour is represented by a vertical line. The first gashour of a day is also highlighted.

The lower section shows the same information in a table, but with two extra columns: the conditional factor and the GCV Gas In Storage.

When the Gas In Storage is negative or, at any given hour, greater than the cumulated storage rights of the plant, this is regarded as an exceeding. The exceeding amount is shown in both the graph and the table.

The gas in storage can be downloaded to an .xml file by pressing the 'Download Documents' button. This allows you to save the .xml file on one of your drives.

The .xml file will provide, for the period (tags \Period\Start, \Period\End) for which gas in storage is available on the screen, the gas in storage in kWh and m3

(tag \DailyBalances\DailyBalance\HourlyBalances\HourlyBalance\ EnergySteeringAccount (kWh)or \ VolumeSteeringAccount (in m3)

and the total gas in storage in the well

(tag \DailyBalances\DailyBalance\HourlyBalances\HourlyBalance\ EnergyTotalGis (kWh) per gasday

(tag \DailyBalances\DailyBalance\Gasday)

and per gashour

(tag \DailyBalances\DailyBalance\HourlyBalances\HourlyBalance\GasHour).

4.5 Flow Data

4.5.1 Inventories Storage Report

Specific factors for storage users to calculate their real injection and withdrawal rights


UFI	Underground Factor for Injection
CFI	Conditional Factor for Injection
MFI	Maintenance Factor for Injection
UFW	Underground Factor for Withdrawal
CFW	Conditional Factor for Withdrawal
MFW	Maintenance Factor for Withdrawal

ASC	Available Storage Capacity
CSCF	Contracted Storage Capacity Firm
CSCC	Contracted Storage Capacity Conditional
TSC	Technical Storage Capacity
GIS	Gas In Storage
WV	Working Volume
DANI	Day-Ahead Nomination Injection
DANW	Day-Ahead Nomination Withdrawal
FNI	Final Nomination Injection
FNW	Final Nomination Withdrawal
AllocIN	Allocation Injection
AllocWD	Allocation Withdrawal
PF	Physical Flow
GCV	Gross Calorific Value in kWh/m³(n)

4.6 Invoicing

4.6.1 Allocation Details


As the filter option "All" is selected on the panel by default, the navigation panel shows all available invoicing months and allocation details versions. The user can use the Navigation Tree to select an allocation detail and view or download the document.

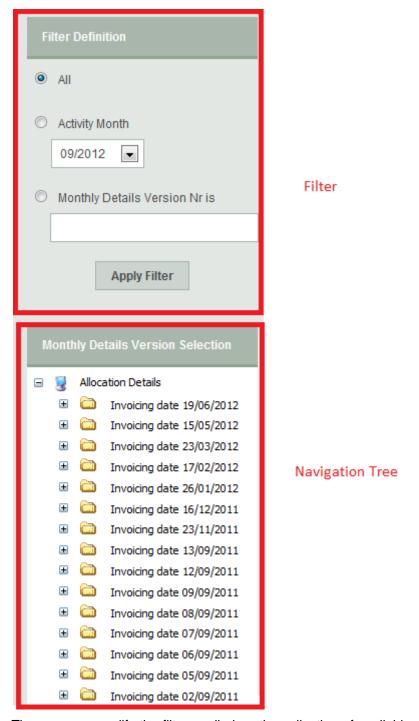

The user can modify the filter applied on the collection of available allocation details organized in the navigation tree. The allocation details are grouped per invoicing month and per monthly details version number.

The Navigation Tree, the Filter Panel and the different downloading options will be discussed in the following sections.


4.6.1.1 Navigation Tree

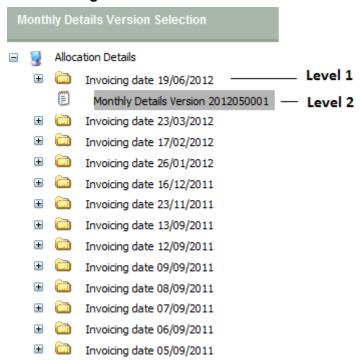

The navigation provides a tree structure of all invoicing dates (i.e. document date of the allocation details) of the last 3 years and the associated bundled/linked Monthly Details Version Numbers:

- Level 0: label 'Allocation Details'.
 - This navigation tree is built for the quick navigation through the archived collection of allocation details of the last 3 years. The filter above provides additional browsing facilities and is applicable on the tree content.
- Level 1: Invoicing Dates (invoicing data available for the past 3 years).
 This level of the navigation tree contains the invoicing dates or document dates of the last 36 invoicing months.
- Level 2: Monthly Details Version Number
 - In the second level, the user can find all the Monthly Details Version Numbers that are attached/bundled/linked to a particular invoicing date or document date. If a Monthly Details Version Number has been selected in the navigation tree, the user will have the possibility to download all the allocation details associated with that particular Monthly Details Version Number, and related to the invoicing date of the previous level. All the related allocation details for a particular Monthly Details Version Number and Invoicing Month/Document date will be shown in the Allocation Details Download Panel to the right of the Navigation Tree. These particular allocation details can be downloaded separately or all together in a zip file.

4.6.1.2 Filter Panel

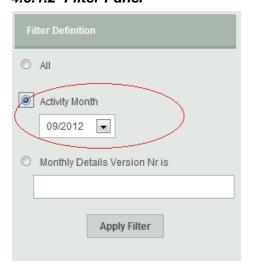

=> Only the Monthly Details Versions of Activity Month September 2012 are shown in the navigation tree, even though the invoicing dates contain other Monthly Details Versions

The Filter Panel gives the user the possibility to filter/limit the available Monthly Details Version Numbers in the navigation tree for easy and quick navigation. After applying a desired filter-option by selecting the preferred filter option and clicking the "Apply Filter" button, this option is highlighted. The filter panel consists of the following criteria/options.

All

If this option is chosen, no filter is applied. The option "All" gives all the available Monthly Details Version Numbers grouped by the Invoicing Date (=document date) to which they are linked/bundled.

Activity Month

This filter criterion gives the user the option to restrict the available Monthly Details Version Numbers shown in the navigation tree to a pre-defined Activity Month in the combo-box.

Monthly Details Version Number

This option offers the possibility to search and request a specific Monthly Details Version Number that fully matches the expression entered in the corresponding edit-box. As so, the user can limit the Monthly Details Version Numbers shown in the navigation tree to one particular version.

4.6.1.3 Download


Essentially, there are two different ways in which the download features of the application can be used:

- Download the desired information through the Graphical User Interface.
- Address the download feature directly by using the Download URL.

4.6.1.3.1 Manual download by the user

The user can download the allocation details of a selected invoicing date or linked to the selected Monthly Details Version Number by navigating to the desired invoicing month (level 1) and Monthly Details Version Number (level 2).

If a Monthly Details Version Number has been selected in the fourth level of the navigation tree, all the related allocation details for a particular Monthly Details Version Number and Invoicing Date/Document Date are shown in the Allocation Details Download Panel to the right of the Navigation Tree.

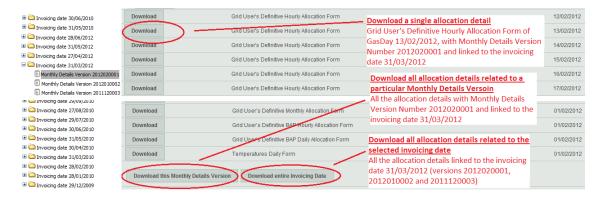

The user has the possibility to choose the granularity of the group of allocation details to download:

- A particular single allocation detail can be downloaded by clicking the download button in front of the associated allocation detail line. Subsequently, this allocation detail file is downloaded as a CSV file which can be opened with either Notepad or Excel, and/or can also be saved to a local drive.
- All the allocation details related to a particular Monthly Details Version Number can be
 downloaded by selecting the option "Download this Monthly Details Version" and clicking
 the "Start Download" button. This bundle of allocation details is downloaded as a ZIP file
 containing all the allocation details in CSV file format.
- The download of all the allocation details of all the allocation details versions related to the
 selected invoicing date of the previous level is executed by selecting the option "Download
 entire Invoicing Date", and clicking the "Start Download Button". This group of allocation
 details is downloaded as a ZIP file containing all the allocation details in CSV file format.

After the user has initiated a download, the File Download screen pops up giving him the choice to either directly open the file or save it.

More information on the description and content of these files can be found in the Implementation Information at


http://www.fluxys.com/belgium/en/Services/Transmission/BeluxStarterKit/BeluxModel

4.6.1.3.2 Automatic download by an application

See chapter 6.

4.6.2 Invoices 📮

4.6.2.1 Navigation Tree

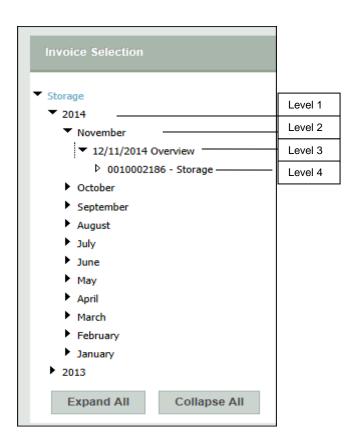

The navigation provides a tree structure of all invoicing dates from April 2013 and the associated bundled/linked Invoice Numbers:

- Level 0: label 'Storage'.
 - This navigation tree is built for the quick navigation through the archived collection of invoices from April 2013.
- Level 1: Invoicing year
 - This level of the navigation tree contains the invoicing year.
- Level 2: Invoicing month
 - This level of the navigation tree contains the invoicing month.
- Level 3: Invoicing Dates (invoicing data available from April 2013).
 - This level of the navigation tree contains the invoicing dates. If a invoicing version number has been selected in the navigation tree, the user will have the possibility to download all the invoices associated
- Level 4: Invoicing Number
 - In this level, the user can find all the invoicing version numbers that are attached/bundled/linked to a particular invoicing date.

4.6.2.2 Download

A manual download for the desired information through the Graphical User Interface can be done.

4.6.2.2.1 Manual download by the user

The user can download the document of a selected invoicing date or linked to the selected invoice number by navigating to the desired invoicing month (level 2).



4.6.3 Other invoices: Fluxys Belgium

This section of EDP gives access to private data concerning invoices and appendixes for non-regulated activities.

4.6.4 DAM-NNS report

Invoicing details for the calculation of the variable part of the Service Fee for the DAM/NNS Service, the part of the confirmed (last) Nominations above the applicable Real Withdrawal Capacity or Real Injection Capacity is allocated to the DAM/NNS. Filename YYYYMM contains invoicing details of invoice YYYYMM+1

4.6.5 Gas in Storage Account for LHT Storage


This report contains the monthly detail of the individual total inventory position (GIS account level) at the Loenhout storage installation plant during the month.

The Gas In Storage account is published every month on Electronic Data Platform.

	LOENHOUT STORAGE PLANT	FLUXYS
GIS Account for	xxxxxx	
Month	September 2014	kWh
1. Quantities IN		
Allocated Quantities	IN	193 415 621
Distribution of Differen	nce Actual Own Consumption vs Allocated Gas in Kind:	
MM-2014		2 088 314
Total Quantities IN		195 503 935
2. Quantities OUT		
Allocated Quantities	OUT	1 470 753
Allocated Gas in Kind		1 583 154
Total Quantities OUT		3 053 907
3. Balance		
GIS at 01/09/2014 06:00		1 883 873 485
+ Quantities IN		195 503 935
- Quantities OUT		- 3 053 907
GIS at 01/10/2014 06:00		2 076 323 513
Change in GIS		192 450 028

4.6.6 Synchronization GIS-level LHT Storage


The synchronization between the steering and validation level of the Gas In Storage account at the Loenhout storage Installation point. The scheduling date for this synchronization is communicated by Fluxys Belgium NV with the publication on Electronic Data Platform.

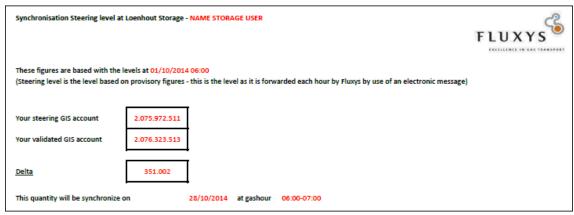

4.6.7 Transfers Monthly Fuelgas Balance for LHT Storage

Distribution of the Monthly Fuelgas Balance at the Loenhout Installation plant.

This operation is done the following month. The scheduling date for this transfer is communicated by Fluxys with the publication on Electronic Data Platform.

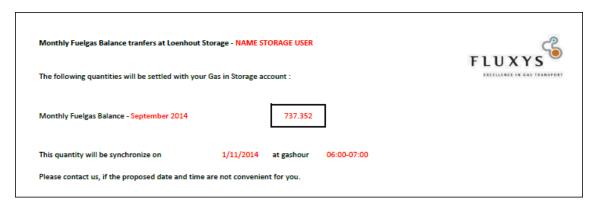

4.7 Regulatory and contractual documents

4.7.1 Storage Model

<u>Link</u> to Program for storage – description of services

4.7.2 Conditions and Tariffs

Link to Tariffs for storage services

4.7.3 Contractual Documents

Link to Storage agreements and access code

4.7.4 Subscription of capacity

Link to Subscription and allocation on the primary market

4.8 REMIT messages

Regulation on Energy Market Integrity and Transparency

<u>Purpose</u>: Publishing information to foster open and fair competition through reporting that may impact price and applies to market participants (including TSO's or Grid-Users who enters into transactions in wholesale energy markets).

5. LNG Terminalling

5.1 Contracting and Capacities


5.1.1 Available Terminalling capacity

Information about the booked and available services at the Zeebrugge LNG Terminal.

5.1.2 Overview of the available slots on the Primary and Secondary Markets

A list of Slots which are available first-come-first-serve. A Slot can be used to unload, store and regasify an LNG cargo.

5.1.3 Capacity Rights - Send Out Capacity Rights

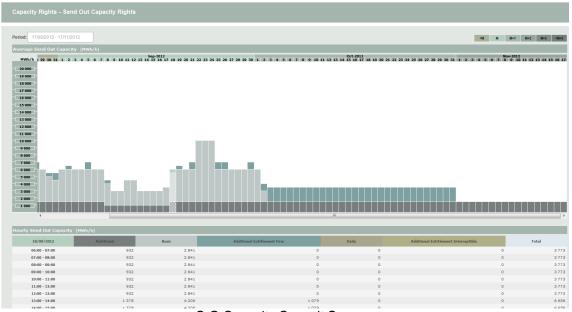

S-O Capacity Consult Screen

Information about Send Out capacities is retrieved for a period of 3 months: one month in the past and two months in the future. The color code will help to identify the current month.

The upper section presents a daily average of the S-O capacities over the time line (horizontal axis); the major time steps are month and the minor ones are days (GasDays). Given the hourly resolution nature of the capacities, the daily average is only informational. Clicking on a given day in the upper section will load the hourly details for that day. By default, "tomorrow" is loaded. Note that values are given in MWh/h and are rounded.



Send Out capacities hourly details for one given day.

The "Download Documents" button will allow the download of this information in XML format.

5.1.4 Capacity Rights - Storage Capacity Rights

Capacity Rights - Storage Capacity Rights Period: 17,032012 - 17/11/2012 Average Storage Capacity [m1 Mc] 69,2011 - 20,0000 - 2

STO Capacity Consult Screen

Information about Storage capacities is retrieved for a period of 3 months: one month in the past and two months in the future. The color code will help to identify the current month.


The upper section presents a daily average of the STO capacities over the time line (horizontal axis); the major time steps are month and the minor ones are days (GasDays). Given the hourly resolution nature of the capacities, the daily average is only informational. Clicking on a given day in the upper section will load the hourly details for that day. By default, "tomorrow" is loaded. Note that values are given in m³ LNG and are rounded.



Storage capacities hourly details for one given day.

The "Download Documents" button will allow the download of this information in XML format.


5.1.5 Capacity Booking - Daily Send out Rights

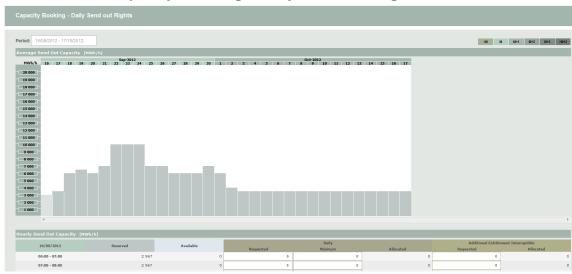

Book Daily S-O Screen

Information about send out capacity bookings is retrieved for a period of 32 days: yesterday, today and 30 days in the future. The color code will help to identify the current month.

The upper section presents a daily average of the S-O capacities over the time line (horizontal axis); the major time steps are months and the minor ones are days (GasDays). Given the hourly resolution nature of the capacities, the daily average is only informational. The grey boxes represent the total booked capacity (via basic or additional rights), while the olive ones relates to either booked (future) or allocated (yesterday and today after 11am) capacities. Clicking on a given day in the upper section will load the hourly details for that day. By default, "today" is loaded. Note that values are given in MWh/h and are rounded.

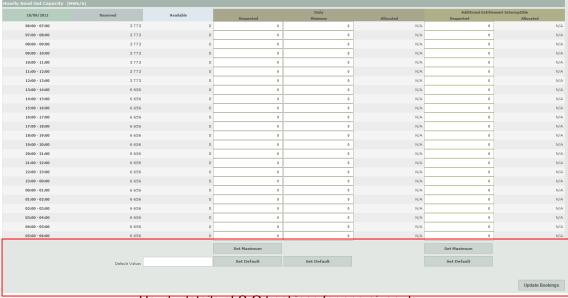


Hourly details of S-O bookings for one given day.

The buttons and text fields in the red rectangle are only available for users with role "validator" and/or "composer" in the LNG activity.

The "Set Maximum" button can be used to copy the content (<u>exact value – without rounding</u>) of the *Available* column to the *Requested* column(s). The "Set Default" button, used in combination with the "Default Value" box will copy the same value in all rows of a column. Use the "Update Bookings" button to validate the requested quantities. In contrast to the Transmission activity, where the composer user prepares bookings and the validator user validates these bookings, there is no validate action needed in the LNG activity. Both the composer user and the validator user can make bookings, and these are immediately accepted without any validation action.

When allocated (daily for next day @ 11 am), the capacities are available in the Allocated column and the update booking button is disabled. "N/A" in this column must be interpreted as not yet allocated, while "0" is to be interpreted as zero quantity allocated. Allocated quantities are also available in the consult S-O screen

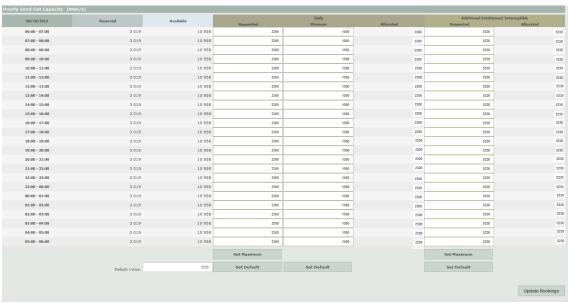

Hourly details of allocated S-O for one given day


Capacity Booking - Daily Storage Rights Period: 16/09/2012 - 17/10/2012 Average Rights Average Storage Capacity (==1.bic) Average Capacity (==

5.1.6 Capacity Booking - Daily storage Rights

Book Daily S-O Screen

Information about storage capacity bookings is retrieved for a period of 32 days: yesterday, today and 30 days in the future. The color code will help to identify the current month.

The upper section presents a daily average of the STO capacities over the time line (horizontal axis); the major time steps are months and the minor ones are days (GasDays). Given the hourly resolution nature of the capacities, the daily average is only informational. The grey boxes represent the total booked capacity (via basic or additional rights), while the olive ones relates to either booked (future) or allocated (yesterday and today after 11am) capacities. Clicking on a given day in the upper section will load the hourly details for that day. By default, "today" is loaded. Note that values are given in m³ LNG and are rounded.

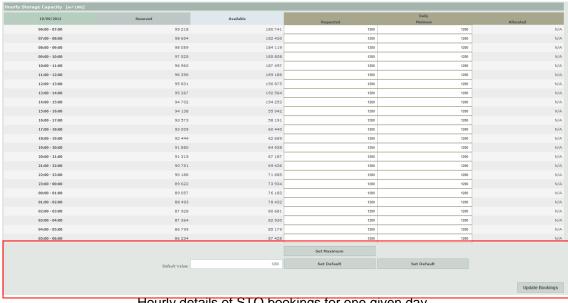


Hourly details of STO bookings for one given day.

The buttons and text fields in the red rectangle are only available for users with role "validator" and/or "composer" in the LNG activity.


The "Set Maximum" button can be used to copy the content (exact value – without rounding) of the Available column to the Requested column. The "Set Default" button, used in combination with the "Default Value" box will copy the same value in all rows of a column. Use the "Update Bookings" button to validate the requested quantities. In contrast to the Transmission activity, where the composer user prepares bookings and the validator user validates these bookings, there is no validate action needed in the LNG activity. Both the composer user and the validator user can make bookings, and these are immediately accepted without any validation action.

When allocated (daily for next day @ 11 am), the capacities are available in the *Allocated* column and the update booking button is disabled. "N/A" in this column must be interpreted as not yet allocated, while "0" is to be interpreted as zero quantity allocated. Allocated quantities are also available in the consult STO screen

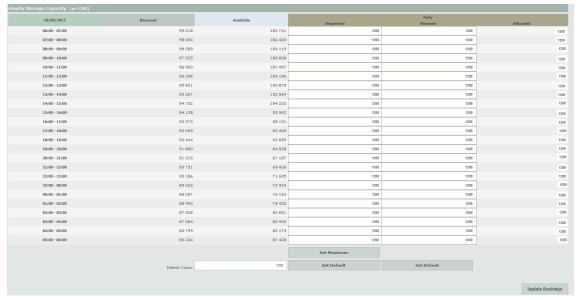

Hourly details of allocated STO for one given day


5.1.7 Capacity Booking - Waive additional Entitlement Firm <a>I

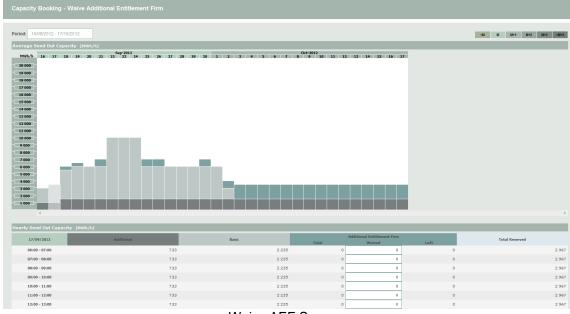

Waive AEF Screen

Information about send-out capacities is retrieved for a period of 32 days: yesterday, today and 30 days in the future. The color code will help to identify the current month.

The upper section presents a daily average of the S-O capacities over the time line (horizontal axis); the major time steps are month and the minor ones are days (GasDays). Given the hourly resolution nature of the capacities, the daily average is only informational. The grey boxes represent the total booked capacity (via basic or additional rights), while the turquoise ones relate to allocated AEF capacities. Clicking on a given day in the upper section will load the hourly details for that day. By default, "today" is loaded. Note that values are given in MWh/h and are rounded.

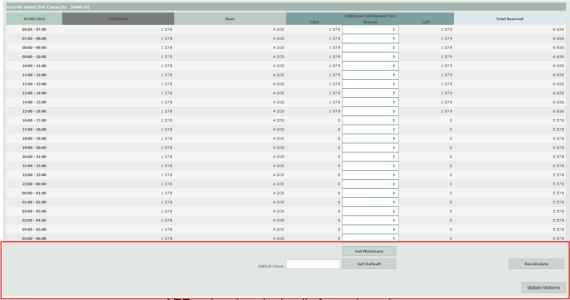


AEF waiver hourly details for a given day

The buttons and text fields in the red rectangle are only available for users with role "validator" and/or "composer" in the LNG activity.

The "Set Maximum" button can be used to copy the content (<u>exact value – without rounding</u>) of the *Total* column to the *Waived* column. The "Set Default" button, used in combination with the "Default Value" box will copy the same value in all rows of a column. Use the "Recalculate" button to trigger an update of the difference. Use the "Update Waivers" button to validate the requested quantities. In contrast to the Transmission activity, where the composer user prepares bookings and the validator user validates these bookings, there is no validate action needed in the LNG activity. Both the composer user and the validator user can make bookings, and these are immediately accepted without any validation action.

5.2 Scheduling


5.2.1 AMS - Available Monthly Slots

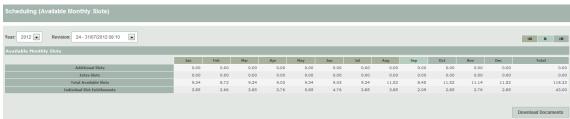

By default the last published version for the current year is loaded. The color code will help to identify the current month; the combo boxes allow a quick navigation to any published version of the AMS for the previous, current and next year.

The "Download Documents" button will allow the download of this information in XML format


5.2.2 IBS - Indicative berthing Schedule

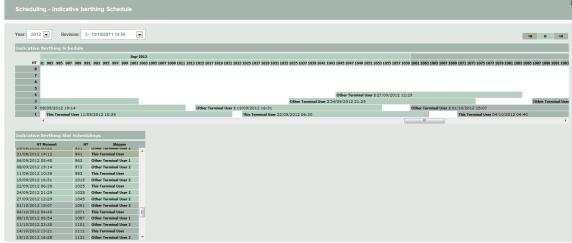

IBS Consult Screen


By default the last published version for the current year is loaded. The color code will help to identify the current month; the combo boxes allow a quick navigation to any published version of the IBS for the previous, current and next year.

The upper section presents the planned slots over the time line (horizontal axis); the major time steps are months and the minor ones are High-Tides. Slots are represented as boxes with a duration of 20 High Tides. The lower section presents the same information in a tabular view. Using the scrollbars, the user can move over the timeline. Clicking on a slot in both the upper and lower section will load detailed information about the planned slot.

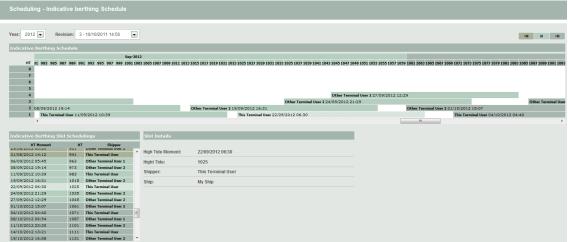

Slot details in IBS for own slots


Note that details are only available for own slots. Slots owned by other parties are also visualized, but not all details can be accessed.

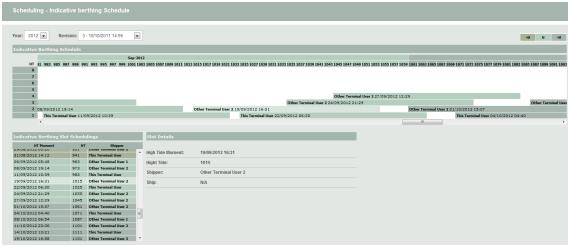

Slot details in IBS for other grid user's slots

The "Download Documents" button will allow the download of this information in XML format.

5.2.3 RBS - Rolling Berthing Schedule

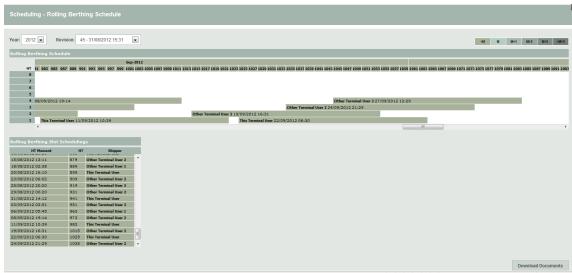

RBS Consult Screen

By default the last published version for the current year is loaded. The color code will help to identify the current month as well as M+1, M+2 and M+3 related information; the combo boxes allow a quick navigation to any published version of the RBS for the previous, current and next year.

The upper section presents the planned slots over the time line (horizontal axis); the major time steps are months and the minor ones are High-Tides. Slots are represented as boxes with a duration of 20 High Tides. The lower section presents the same information in a tabular view. Using the scrollbars, the user can move over the timeline. Clicking on a slot in both the upper and lower section will load detailed information about the planned slot.



Slot details in RBS for own slots

Note that details are only available for own slots. Slots owned by other parties are also visualized, but not all details can be accessed. Unsubscribed slots (not owned by any parties but reserved by Fluxys LNG for further commercialization) are also explicitly visible.



Slot details in RBS for other grid user's slots

The "Download Documents" button will allow the download of this information in XML format.



BS Consult Screen

The list of past, current and planned berthing/unloading is loaded for a period of one month in the past and one year in the future.

The upper section presents the information in a tabular view, using a color scheme to distinguish past from upcoming events. The timing information ("Early", "On Time", "Late") relates to the difference between the last communicated ETA (Estimated Time of Arrival) and the slot start time, with regards to the berthing window. This timing is only informational. The status information ("Expected", "Berthing", "Queuing", "Departed, "Cancelled") relates to the progress of the (un)loading. The type can be loading or unloading according to the type of berthing purpose.

Clicking on a row (one berthing) will load detailed information over the berthing time-sheet of this (un)loading. Note that this information is only available for own slots. Event moment is indicated with a status ("Expected", "Registered", "Validated") and always reflects the last updated situation. "Expected" relates to the <u>calculated event moment</u>, based on standard process time and previous event time. "Registered" refers to the provisional event moment (if "registered" differs from "expected", upcoming events will be updated). "Validated" refers to the final event moment.



Berthing timesheet details

The "Download Documents" button will allow the download of this information in XML format.

5.3 Ship approval

5.3.1 Request for Ship Approval

The Grid-User has to fill out the 'Request for Ship Approval' when a Grid-User intends to use an LNG vessel which has not yet been approved and is therefore not mentioned on the 'List of Approved Ships for Zeebrugge LNG Terminal'.

Link to Fluxys site:

http://www.fluxys.com/belgium/en/services/Ingterminalling/shipapprovalprocedure/shipapprovalform.aspx

Ship Approval Procedu		
Request for Ship Approv	al	
First name		*
Name		*
Company		*
Phone		*
E-mail		*
Terminal user		*
Vessel name(s) and IMO number(s)	^	*
	<u> </u>	
	If identical sister ships, mark with "=", e.gShip 1 (IMO x 00x)=Ship 2 (IMO x 00x) -Ship 3 (IMO x 00x)	
What is de expected berthing slot to be used?	^	*
	V	
	Z8621 8	
	Validation Enter the characters from the image above	
Submit		

5.3.2 List of approved ships for the Zeebrugge LNG Terminal

List the ships which are currently approved according to the relevant procedures, to berth at the Zeebrugge LNG Terminal facility.

Link to Fluxys site:

http://www.fluxys.com/belgium/en/Services/LNGTerminalling/ShipApprovalProcedure/~/media/files/services/lng%20terminalling/shipapprovalprocedure/approved%20ships_20120820.ashx

5.3.3 Fluxys LNG ship approval procedure

Relevant Fluxys procedure for approval of ships.

Link to Fluxys site:

http://www.fluxys.com/belgium/en/Services/LNGTerminalling/ShipApprovalProcedure/~/media/files/services/lng%20terminalling/shipapprovalprocedure/fluxyslng_shipapprovalprocedure_en%20pdf.ashx

5.3.4 Nautical management measures

General nautical rules applicable for LNG vessels within the Zeebrugge port area. Link to Fluxys site:

http://www.fluxys.com/belgium/en/Services/LNGTerminalling/ShipApprovalProcedure/~/media/files/services/lng%20terminalling/shipapprovalprocedure/nautical_management_measures%20pd f.ashx

5.4 Maintenance

5.4.1 Work and intervention impact on LNG Terminal Zeebrugge

Terminal Operator shall, operate, maintain and repair the LNG Terminal and keep the LNG Terminal in good working order and condition in order to fulfil its obligations and operate the LNG Terminal in accordance with the standards of a Reasonable and Prudent Operator.

Terminal Operator has the right to shut-off, reduce or curtail all or part of the LNG Terminal for maintenance, repair or replacement works of the LNG Terminal which works may have an impact on the availability of the LNG Services.

The works and interventions overview lists the works and interventions planned for the current year that could affect the execution of your LNG terminal contracts





Year	Month	Week	Nr Days Shutdown	Description	Impact	Impact From	Impact To	Status
2014	9	38	6	Shutdown 2014: Send Out	Reduced Send Out: 47 % from the send out available	14/09/2014	20/09/2014	Done
2015	5	20	8	Shutdown 2015	Reduced Send Out: 47% from the send out available	16/05/2015	24/05/2015	Scheduled
2015	5	20	2	Shutdown 2015	No slots available for loading/unloading LNG vessels	16/05/2015	18/05/2015	Scheduled
2015	5	20	4	Shutdown 2015	1 Ship unloading operation possible. No loading	18/05/2015	22/05/2015	Scheduled
2015	5	21	2	Shutdown 2015	No slots available for loading/unloading LNG vessels	22/05/2015	24/05/2015	Scheduled

Long Term Planned Works and Interventions with a possible impact on LNG Terminal Zeebrugge - Status on 31/10/2014


5.4.2 Planned Maintenance Events



The list of past, current and planned maintenance events is loaded for a given year. The combo box allows an easy navigation to the previous and upcoming year. By default the current year is loaded.

The upper section presents the information in a tabular view, using a color scheme to distinguish past from upcoming events. The status information ("Past", "Current", "Planned") relates to the progress of the planned maintenance (today compared to start date) and not the

<u>actual execution of the maintenance itself</u>. Clicking on a row will load detailed information about the event.

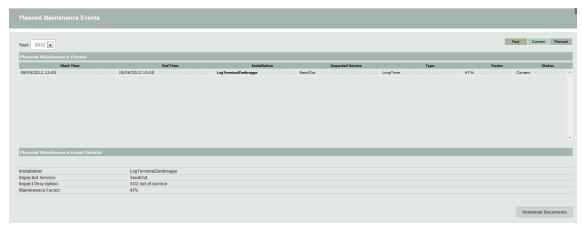


Maintenance event details

The "Download Documents" button will allow the download of this information in XML format.

5.5 Metering

5.5.1 Metering

When opening the measurements section, the Hourly View with flow measurements for the last available hour is displayed for all the nodes. From this screen the user can navigate to the Daily and Monthly Views for flow measurements and gas characteristics.

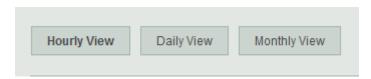

In the Hourly View the user can find a list of flow measurements for all nodes and/or lines on a selected gasday and gashour.

The Daily View is subdivided in three tabs: Flow Measurements, Gas Composition and Gas Characteristics. This view shows the hourly measurements for the selected node or line on the selected day.

The Monthly View shows the daily measurements for the selected node or line during the selected month. This view is subdivided in the same three tabs as the Daily view.

5.5.1.1 Hourly View

The hourly view provides the measurements for all the nodes and/or lines on the selected gasday and gashour. Only the nodes and lines for which the user has view rights are available.

At the top (just below the hourly, daily and monthly tabs) the date selector is located. The date shown is the gasday of the measurements displayed in the measurement grid. The last available report button will automatically select the current day and hour.




On the left hand side a bar with all the available hours in the selected gasday is presented. Clicking on a specific hour will select this hour and display the measurements of this hour in the measurements grid. When changing the gasday the first gashour of that day is selected.




The center of the screen shows all the flow measurements on the selected gasday and gashour. For each node or metering line, a line is displayed with the following measurements:

- The amount of **Volume** that flowed through the node or metering line (Converted to normal conditions (25°C and 1 atm).
- The amount of **Energy** that flowed through the node or metering line during this hour
- The **GCV** calculated from the gas flow. This value is calculated as the fraction of Energy/Volume.
- The **Pressure** of the gas
- The **Temperature** of the gas
- The **Gross Volume** is the physical volume of the gas at the current conditions.
- For a metering line, the boolean value Measured Before indicates if the measurements are included in the measurements of another metering line. This parameter is not used for nodes!
- For a metering line, the boolean value **In Maintenance** indicates if it is in maintenance. In that case, the metering results are usually not reliable. As this parameter is not used for nodes, it is always best to use the measurements from the node!
- The **Status** field shows the validation status of the measurements:
 - No Data
 - Raw data are measurements that are not at all verified and validated
 - Verified data means that a preliminary verification check has been done
 - Validated data means that the measurement has been validated

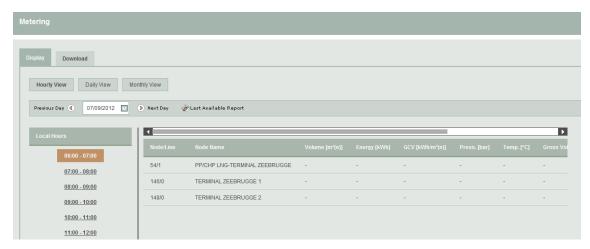


5.5.1.2 Daily View

The daily view can be selected by clicking on the Daily View tab on the top of the screen.

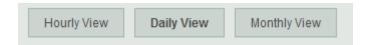


Right beneath the tab selector, a gasday selection is given. Here the gasday of the measurements can be chosen. The last available report button automatically sets the gasday to the current day.

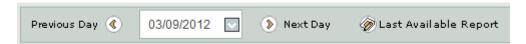

Below the date, a drop down list with all the nodes and/or lines is located. This list allows the user to select the node or line for which the measurements are shown. If a filter is set, the list is automatically adapted to hold only the nodes and/or metering lines that satisfy the filter. The list is ordered by codification number.



The measurement section is divided in three areas (tabs): Flow Measurements, Gas Composition and Gas Characteristics. There are only measurements available on the two last tabs if a gas analysis has been done on the gas for this node or metering line. For the selected node or metering line an overview of the measurements is given for every gashour of the selected gasday.

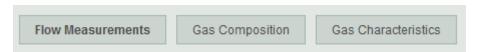

The **Flow Measurements** tab displays the same measurements as the Hourly View: Volume, Energy, GCV, Pressure, Temperature, Gross Volume, Conv. Volume, Measured Before, In Maintenance and Status.

The **Gas Composition** tab displays the hourly measurements of the composition of the gas and the GCV as it is measured (derived from the composition).


The **Gas Characteristics** tab displays the hourly measurements retrieved by the gas analysis: Density, Wobbe, NCV, Kref, GCV, CO2 EF and a validation status.

The **status** field shows the validation status of the measurements:

- No Data
- Raw data are measurements that are not at all verified and validated
- Verified data means that a preliminary verification check has been done
- Validated data means that the measurement has been validated

5.5.1.3 Monthly View

In the Monthly View all the measurements are aggregated per day of the selected month instead of the gashour of the selected gasday. The layout of this view is the same as the one from the Daily View. The monthly view can be selected by clicking on the Monthly View tab.

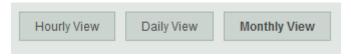

5.5.1.4 Remark

Please note that the GCV is based on the weighted average following the volume measured on the site.

5.5.1.5 Download

There are essentially two main options to download measurement information from the application:

- The user can download the information manually by using the Graphical User Interface.
- It is also possible to address the download feature directly by using the Download URL.

5.5.1.5.1 Manual download by the user

The user can download the required information manually by navigating to the Download section for a certain gasday period (Not longer than one month) on the filtered nodes and metering lines:

- Hourly Flow Measurements
- Corrected Hourly Flow Measurements
- Hourly Gas Analysis
- Daily Gas Analysis

It is possible to choose between two different file formats:

- CSV
- XML

The function "Corrected Hourly Flow Measurements" let see measurements corrections that have been made during the selected period (Ex: On 09.02.2015 if Fluxys make corrections on the Measurements of 28/01/2015, this changes will be visible by selecting the period from 02.09.2015).


5.5.1.5.2 Automatic download by an application

See chapter 6.

5.5.2 Topology

This section provides information about the metering topology elements on which the user has the right to view data. The view rights are derived from the contracts which are based on Gas Exchange Locations. These gas exchange locations can be subdivided in a set of Nodes.

5.5.2.1 Content

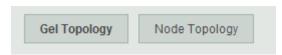

A Gas Exchange Location (GEL) consists of node memberships. A node can be a member of a GEL during a given time period. The membership has a weight with which the measurements of the respective node are aggregated in the result for the associated GEL. All this information can be found per GEL under the button GEL Topology. This option is accessible to limited users (It depends of their contractual link with Fluxys).

Under the Node Topology button a drop-down box can be found with all the nodes on which the user has the right to view data.

The whole history of the node and the underlying metering lines are shown after selecting a node. The node history consists of the name changes and the EAN number.

The metering line history consists of the measured before status, operational status and the EAN number.

5.5.2.2 Download

There are essentially two main options to download topology information from the application:

- The user can download the information manually by using the Graphical User Interface.
- It is also possible to address the download feature directly by using the Download URL.

5.5.2.2.1 Manual download by the user

The user can download the required information manually by navigating to the Download section. This section provides selections to download the whole history of either:

- Gas Exchange Location Topology: for all GELs on which the user has the right to view data
- Node Topology: for all GELs on which the user has the right to view data

It is possible to choose between two different file formats:

- **CSV**
- **XML**

5.5.2.2.2 Automatic download by an application

See chapter 6.

5.5.3 Further remarks about Metering and Topology

5.5.3.1 Aggregation of measurements

Since a Gas Exchange Location (GEL) consists of a set of nodes and a node consists of a set of metering lines, the measurements for a complete GEL should be aggregated.

We advise to start the aggregation for a complete GEL from the set of nodes and not from the set of metering lines! A metering line can go 'In Maintenance' or the measurements can already be accounted in the measurements of another metering line, i.e. 'Measured Before'.

The measurements on the node level take these two parameters into account and can therefore readily be used for the aggregations.

Example

What is the total energy on gas exchange location A at gas day X, hour Y?

The topology of gas exchange location A at gas day X and hour Y is:

- Membership 1: Node n1, weight w1 = -1
- Membership 2: Node n2, weight w2 = -1
- Membership 3: Node n3, weight w3 = 1

The measurements of nodes n1, n2 and n3 at gas day X and hour Y are:

- Node n1: e1 = 100 kWh
- Node n2: e2 = 200 kWh
- Node n3: e3 = 500 kWh

Calculation

Total energy (e) = e1 * w1 + e2 * w2 + e3* w3

= 100*-1 + 200*-1 + 500*1 = 200 kWh

5.6 LNG Inventory & Allocations

5.6.1 Inventories LNG Report

GIS	Gas In Storage
DANCF	Day-Ahead Nomination in Counter Flow
DANSO	Day-Ahead Nomination in Send-Out
FNCF	Final Nomination in Counter Flow
FNSO	Final Nomination in Send-Out
AllocCF	Allocation Counter Flow
AllocSO	Allocation Send-Out
PF	Physical Flow
GCV	Gross Calorific Value in kWh/m³(n)

The Gas in Storage is either expressed in Energy (kWh) or in volume of LNG (m³[LNG]).

5.6.2 Gas In Storage

GIS data allows grid users to keep track of the amount of energy they have in storage in the Fluxys storage installations.

5.6.2.1 Display


The Gas In Storage screen opens by default the last available GIS Report.

The GIS Report screen gives the ability to navigate through his user's GIS Reports of the last past 3 years. Therefore, he will find a calendar menu item where he can select the appropriate day for which he wants to consult the GIS Report. So, by changing the date, the user can navigate through all his available Reported Daily Imbalance Reports.

The title of each GIS Report consists of the gasday for which the report applies. The GIS data is delivered on a per hour basis. For every hour (expressed in local time) following elements are displayed:

- Begin and end time of the hour
- For each plant at which a grid user is active
 - o Amount of gas in storage (kWh)
 - Total amount of gas in the tank (kWh)
 - Generation time of the GIS message

The report is built up as the gasday progresses with a new line being added every hour. These are provisional data.

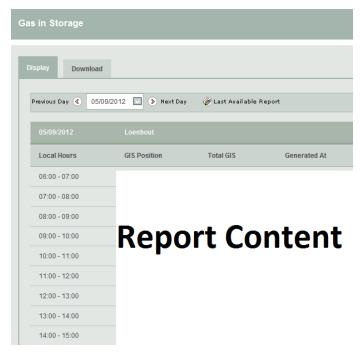

5.6.2.2 Download


There are two different ways in which the download features of the application can be used. These different options are intended for different sorts of use. On one hand, the user can download the desired information by using the Graphical User Interface. On the other hand, it is also possible to address the download feature directly by using the Download URL.EPORT CONTENT

5.6.2.2.1 Manual download by the user

On one hand, the user can download the last available report or a range of reports using the Graphical User Interface by navigating to the download section of the application.

In the Gas In Storage screen, the user can specify all the parameters of the desired download.


The download procedure for the GIS Reports follows the same rules and principles as the download procedure of the Provisional Hourly Allocations. Therefore, we refer to paragraph 5.6.4.2.2 for more information on downloading report information.

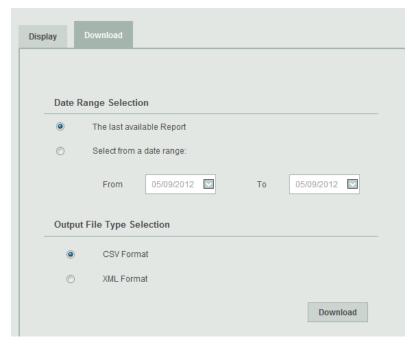

5.6.2.2.2 Automatic download by an application

See chapter 6.



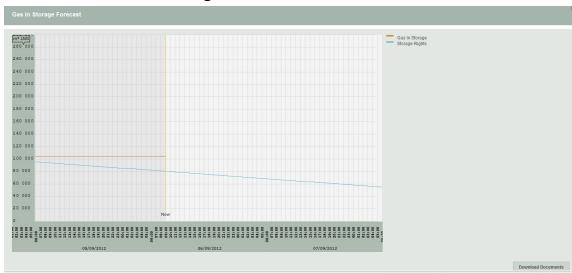

A picture is loaded representing two curves: the GIS level in red, calculated until the last gashour and the total storage rights in blue. The picture displays an hourly detail for a period of 3 gasdays (yesterday, today and tomorrow).

The "Download Documents" button will allow the download of this information in XML format

5.6.4 Provisional Hourly Allocations

The 'Provisional Hourly Allocation Report' screen gives the ability to navigate through all of the user's Provisional Hourly Allocation reports of the past 3 years. The allocations are categorised by their respective gashour.

5.6.4.1 Published data

For each gashour a list of all provisional allocations is given. Every allocation detail concludes the gashour and gasday, the shipper account, the EDIGAS-code of the location and the allocation value (expressed in kWh).

5.6.4.2 Access to publications

The provisional hourly allocations can be accessed in three different ways: via the display section, the download section and via a download URL.

The display section allows the grid user to view and consult the provisional hourly allocations online and the download section and download URL give the grid user the ability to download the available allocations in different file formats for further usage.

5.6.4.2.1 Display section

The last available Provisional Hourly Allocation Report will be displayed by default.

If the user wants to display the allocations for a different gashour, then he should first select the correct gasday with the calendar tool at the top left corner of the screen. By default the Allocations first gashour of the day is displayed. Then the correct gashour can be chosen from the bar on the left side of the screen.



Additionally to the allocation data, the generation date and time of the report is displayed on top of the screen.

5.6.4.2.2 Download section

To manually download provisional hourly allocations, the user should select the download tab.

The download screen gives two options to download the provisional hourly allocations. The gasday or range of gasdays and the output file format can be chosen by the user.

Date range selection:


- Last available report
 - This option returns the provisional hourly allocations for the last gasday.
- Date range

Select all the gasdays starting at gasday 'From' until gasday 'To'. The FROM date may not be later in time than the TO date and the maximum date range is limited to one week. The screen automatically changes the FROM or TO date if the maximum date range of one week is exceeded.


Output File Type Selection:

Three file types are available for manual download:

- CSV
- XML

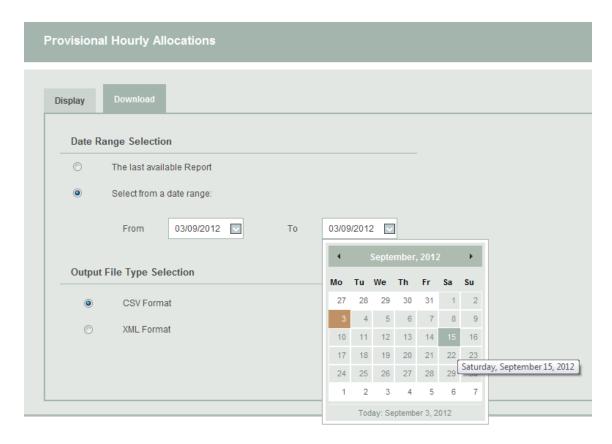

After the user has set the right parameters to download the desired Provisional Hourly Allocations and clicked the Download button, the File Download screen pops up, giving him the choice to directly open the file, or to save it.

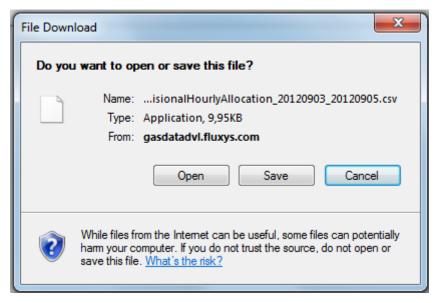


5.6.4.2.3 Automatic download URL

See chapter 6.

5.7 Invoicing

5.7.1 Allocation Details


As the filter option "All" is selected on the panel by default, the navigation panel shows all available invoicing months and allocation details versions. The user can use the Navigation Tree to select an allocation detail and view or download the document.

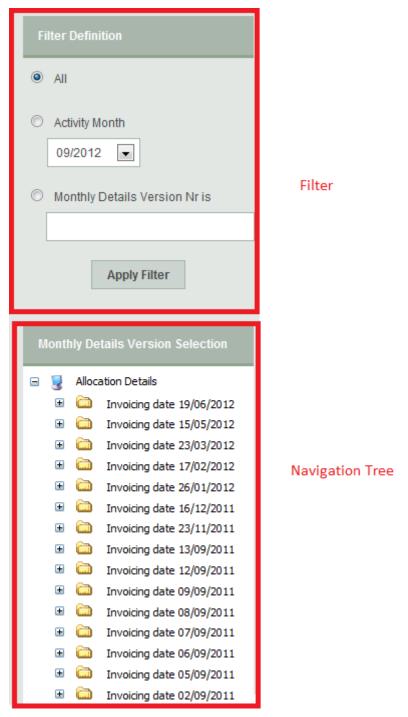

The user can modify the filter applied on the collection of available allocation details organized in the navigation tree. The allocation details are grouped per invoicing month and per monthly details version number.

The Navigation Tree, the Filter Panel and the different downloading options will be discussed in the following sections.


5.7.1.1 Navigation Tree

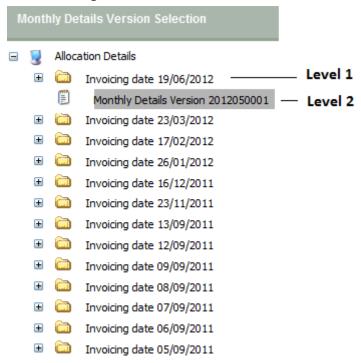

The navigation provides a tree structure of all invoicing dates (i.e. document date of the allocation details) of the last 3 years and the associated bundled/linked Monthly Details Version Numbers:

- Level 0: label 'Allocation Details'.
 - This navigation tree is built for the quick navigation through the archived collection of allocation details of the last 3 years. The filter above provides additional browsing facilities and is applicable on the tree content.
- Level 1: Invoicing Dates (invoicing data available for the past 3 years).
 This level of the navigation tree contains the invoicing dates or document dates of the last 36 invoicing months.
- Level 2: Monthly Details Version Number
 - In the second level, the user can find all the Monthly Details Version Numbers that are attached/bundled/linked to a particular invoicing date or document date. If a Monthly Details Version Number has been selected in the navigation tree, the user will have the possibility to download all the allocation details associated with that particular Monthly Details Version Number, and related to the invoicing date of the previous level. All the related allocation details for a particular Monthly Details Version Number and Invoicing Month/Document date will be shown in the Allocation Details Download Panel to the right of the Navigation Tree. These particular allocation details can be downloaded separately or all together in a zip file.

5.7.1.2 Filter Panel

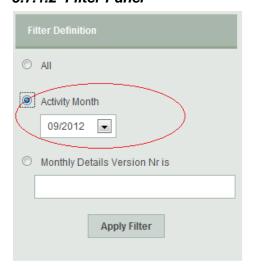

=> Only the Monthly Details Versions of Activity Month September 2012 are shown in the navigation tree, even though the invoicing dates contain other Monthly Details Versions

The Filter Panel gives the user the possibility to filter/limit the available Monthly Details Version Numbers in the navigation tree for easy and quick navigation. After applying a desired filter-option by selecting the preferred filter option and clicking the "Apply Filter" button, this option is highlighted. The filter panel consists of the following criteria/options.

All

If this option is chosen, no filter is applied. The option "All" gives all the available Monthly Details Version Numbers grouped by the Invoicing Date (=document date) to which they are linked/bundled.

Activity Month

This filter criterion gives the user the option to restrict the available Monthly Details Version Numbers shown in the navigation tree to a pre-defined Activity Month in the combo-box.

Monthly Details Version Number

This option offers the possibility to search and request a specific Monthly Details Version Number that fully matches the expression entered in the corresponding edit-box. As so, the user can limit the Monthly Details Version Numbers shown in the navigation tree to one particular version.

5.7.1.3 Download


Essentially, there are two different ways in which the download features of the application can be used:

- Download the desired information through the Graphical User Interface.
- Address the download feature directly by using the Download URL.

5.7.1.3.1 Manual download by the user

The user can download the allocation details of a selected invoicing date or linked to the selected Monthly Details Version Number by navigating to the desired invoicing month (level 1) and Monthly Details Version Number (level 2).

If a Monthly Details Version Number has been selected in the fourth level of the navigation tree, all the related allocation details for a particular Monthly Details Version Number and Invoicing Date/Document Date are shown in the Allocation Details Download Panel to the right of the Navigation Tree.

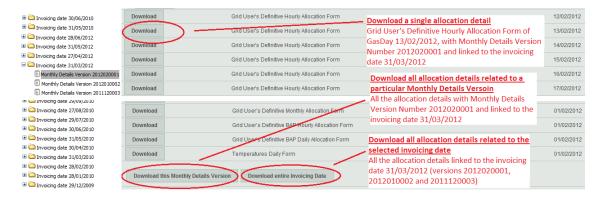

The user has the possibility to choose the granularity of the group of allocation details to download:

- A particular single allocation detail can be downloaded by clicking the download button in front of the associated allocation detail line. Subsequently, this allocation detail file is downloaded as a CSV file which can be opened with either Notepad or Excel, and/or can also be saved to a local drive.
- All the allocation details related to a particular Monthly Details Version Number can be
 downloaded by selecting the option "Download this Monthly Details Version" and clicking
 the "Start Download" button. This bundle of allocation details is downloaded as a ZIP file
 containing all the allocation details in CSV file format.
- The download of all the allocation details of all the allocation details versions related to the
 selected invoicing date of the previous level is executed by selecting the option "Download
 entire Invoicing Date", and clicking the "Start Download Button". This group of allocation
 details is downloaded as a ZIP file containing all the allocation details in CSV file format.

After the user has initiated a download, the File Download screen pops up giving him the choice to either directly open the file or save it.


More information on the description and content of these files can be found in the Implementation Information at http://www.fluxys.com/belgium/en/Services/Transmission/BeluxStarterKit/BeluxModel

5.7.1.3.2 Automatic download by an application

See chapter 6.

5.7.2 Invoices

5.7.2.1 Navigation Tree

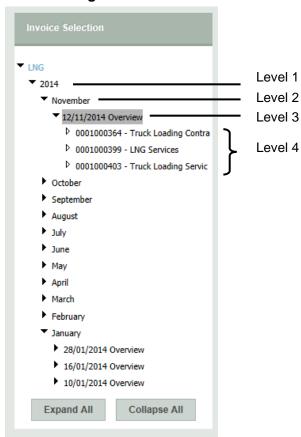

The navigation provides a tree structure of all invoicing dates from January 2014 and the associated bundled/linked Invoice Numbers:

- Level 0: label 'LNG'.
 - This navigation tree is built for the quick navigation through the archived collection of invoices from January 2014.
- Level 1: Invoicing year
 - This level of the navigation tree contains the invoicing year.
- Level 2: Invoicing month
 - This level of the navigation tree contains the invoicing month.
- Level 3: Invoicing Dates (invoicing data available from Januray 2014).
 - This level of the navigation tree contains the invoicing dates. If a invoicing version number has been selected in the navigation tree, the user will have the possibility to download all the invoices associated
- Level 4: Invoicing Number
 - In this level, the user can find all the invoicing version numbers that are attached/bundled/linked to a particular invoicing date.

5.7.2.2 Download

A manual download for the desired information through the Graphical User Interface can be done.


5.7.2.1.1 Manual download by the user

The user can download the document of a selected invoicing date or linked to the selected invoice number by navigating to the desired invoicing month (level 2).



5.7.3 Invoices for truck companies

5.7.3.1 Navigation Tree

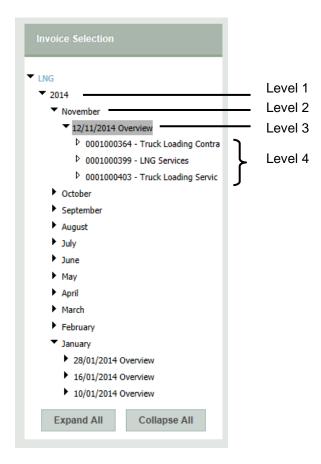

The navigation provides a tree structure of all invoicing dates from January 2014 and the associated bundled/linked Invoice Numbers:

- Level 0: label 'LNG'.
 - This navigation tree is built for the quick navigation through the archived collection of invoices from January 2014.
- Level 1: Invoicing year
 - This level of the navigation tree contains the invoicing year.
- Level 2: Invoicing month
 - This level of the navigation tree contains the invoicing month.
- Level 3: Invoicing Dates (invoicing data available from January 2014).

This level of the navigation tree contains the invoicing dates. If an invoicing version number has been selected in the navigation tree, the user will have the possibility to download all the invoices associated

Level 4: Invoicing Number
 In this level, the user can find all the invoicing version numbers that are attached/bundled/linked to a particular invoicing date.

5.7.3.2 Download

A manual download for the desired information through the Graphical User Interface can be done.

5.7.3.2.1 Manual download by the user

The user can download the document of a selected invoicing date or linked to the selected invoice number by navigating to the desired invoicing month (level 2).



5.7.4 Other invoices: Fluxys LNG

This section of EDP gives access to private data concerning invoices and appendixes for non-regulated activities.

5.7.5 Gas In Storage Account for LNG Terminal

This report contains the monthly detail of the individual total inventory position (GIS account level) at the Zeebrugge LNG Terminal during the month.

The Gas In Storage account is published every month on Electronic Data Platform.

LNG-TERMINAL ZEEBRUGGE




GIS Account for	XXX	
Unloading Month	September 2014	kWh
1. Quantities IN LNG Ship Unloading Ship Allocated Fuelgas IN Transfert To XXX	dd/mm/yyyy	950 854 000 0
Commodity From XXX Distribution of Differe	dd/mm/yyyy ence Deemed vs Allocated Fuel Gas :	50 140 000
mmm-yyyyy Distribution of Month	4 514	
Distribution of Monthly Energy Balance : mmm-yyyy Total Quantities IN		- 5 410 125 995 588 389

2. Quantities OUT		
Allocated Quantities OUT		0
Allocated Fuelgas OUT	0	
Transfert From XXX		
Commodity		
To XXX	dd/mm/yyyy	25 149 700
To XXX	dd/mm/yyyy	19 049 150
Truck Loadings		45 000
Total Quantities OUT		44 243 850

3. Balance	
GIS at 31/08/2014 06:00	608 718 748
+ Quantities IN	995 588 389
- Quantities OUT	44 243 850
GIS at 01/10/2014 06:00	1 560 063 287
Change in GIS	951 344 539

5.7.6 Synchronization GIS-level LNG Terminal

The synchronization between the steering and validation level of the Gas In Storage account at the Zeebrugge LNG Terminal. The scheduling date for this synchronization is communicated by Fluxys with the publication on Electronic Data Platform.

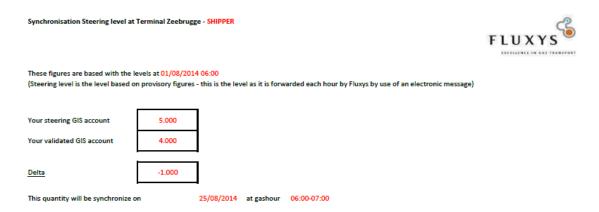

5.7.7 Transfers Monthly Energy Balance & Monthly Fuelgas **Balance for LNG Terminal**

Distribution of the Monthly Fuelgas Balance and the Monthly Energy Balance at the Zeebrugge LNG Terminal.

This operation is done the following month. The scheduling date for this transfer is communicated by Fluxys with the publication on Electronic Data Platform.

Monthly Energy & Fuelgas Balance tranfers at Terminal Zeebrugge - SHIPPER The following quantities will be settled with your Gas in Storage account: 5.000 Monthly Energy Balance 4.000 Monthly Fuelgas Balance This quantity will be synchronize on 25/08/2014 at gashour 06:00-07:00 Please contact us before Monday 26/11/2014 (15.00u), if the proposed date and time are not convenient for you.

5.8 Regulatory and contractual documents

5.8.1 Terminalling model

Link to contractual documents and tariffs for all LNG services in Zeebrugge.

5.8.2 Terminalling services offer

Program for LNG Terminalling: overview of services offered at the LNG terminal in Zeebrugge.

5.8.3 Tariffs

Link to tariffs for all LNG services in Zeebrugge.

5.8.4 Specific requirements at the LNG Terminal Delivery point

List of LNG quality requirements for delivery in Zeebrugge.

5.8.5 Specific requirement at the LNG Terminal Redelivery point

List of natural gas quality requirements of regasified LNG.

5.9 Truck planning for shippers

5.9.1 Authorize appointment

Every appointment to load an LNG Truck in Zeebrugge has to indicate who is the Terminal User that supplies the LNG. The Terminal User has to confirm that he is the supplier of LNG, by clicking 'Confirm'. The Terminal User can also click on 'Confirm automatically until 31/12' in order to automatically confirm all the future appointments by this trucking company until the end of the year. If the Terminal User does not want to supply the LNG, he can click 'deny'. DEADLINE = 11:00 AM of the day before the appointment.

5.9.2 LNG truck quality and quantity document

When the LNG Truck has been loaded, the Terminal User can download a PDF document to see how much LNG was loaded of which quality.

5.9.3 LNG truck loadings

When LNG Trucks have been loaded, the Terminal User can download a Excel document to see how much LNG was loaded of which quality.

5.9.4 Manage automatic confirmations

If the Terminal User has clicked on 'Confirm automatically until 31/12' in 5.9.1 Authorize Appointment, he can afterwards change the date until which all appointments are automatically confirmed.

5.10 Truck planning for trucking companies

5.10.1 Truck loading appointment scheduling

The trucking company can schedule appointments to load an LNG Truck in Zeebrugge, by clicking on the desired free date and hour. As soon as the trucking company clicks on 'Save', the time-slot is reserved, and is no longer free for others. The trucking company has to enter more data before the LNG Truck can be loaded:

- Select the LNG Truck that shall be loaded
- Select the tractor that shall transport the LNG Truck
- Which Terminal User that shall supply LNG
- Terminal User Quantity: the maximum amount of LNG that the Terminal User should allow to be loaded into the LNG Truck
- Loading Quantity: the amount of LNG the Trucking Company wants to load. (shall always be lower than the Terminal User Quantity)
- A comment can be added that is visible for Fluxys and the LNG Shipper.

The trucking company can click 'Cancel' and then make the time-slot again available for others. DEADLINE = 11:00 AM of the day before the appointment.

5.10.2 Appointment overview

The trucking company is provided with an overview of the appointments scheduled in the previous section.

5.10.3 Contract overview

The trucking company can see how many LNG Truck Loading Services have been subscribed for which period.

5.10.4 LNG truck quantity and quantity document

When the LNG Truck has been loaded, the trucking company can download a PDF document to see how much LNG was loaded of which quality.

5.11 REMIT messages

Regulation on Energy Market Integrity and Transparency

<u>Purpose</u>: Publishing information to foster open and fair competition through reporting that may impact price and applies to market participants (including TSO's or Grid-Users who enters into transactions in wholesale energy markets).

6. Automatic downloads

For most of the reports in the Electronic Data Platform and Electronic Booking System, it is possible to let a system perform automatic downloads through an URL with parameters.

The Implementation Information provides a full overview of the reports under consideration, the URLs, the parameters, and the format of the output files. The Implementation Information and all the relevant files can be retrieved at http://www.fluxys.com/belgium/en/Services/Transmission/BeluxStarterKit/BeluxModel

©2015, Fluxys Automatic downloads • 114