



GRAVITY® TXT

P O R T A B L E   Q U A D - B A N D  
M O B I L E   P H O N E

**User Manual**

**Please read this manual before operating your  
phone, and keep it for future reference.**



## Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating there to (the "Phone System"), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

## Samsung Telecommunications America (STA), LLC

Headquarters:	Customer Care Center:
1301 E. Lookout Drive	1000 Klein Rd.
Richardson, TX 75082	Plano, TX 75074
Toll Free Tel:	1.888.987.HELP (4357)

Internet Address: <http://www.samsung.com>

©2011 Samsung Telecommunications America, LLC is a registered trademark of Samsung Electronics America, Inc. and its related entities.

Do you have questions about your Samsung Mobile Phone?

For 24 hour information and assistance, we offer a new FAQ/ARS System (Automated Response System) at:

[www.samsung.com/us/support](http://www.samsung.com/us/support)

Nuance<sup>®</sup>, VSuite<sup>™</sup>, T9<sup>®</sup> Text Input, and the Nuance logo are trademarks or registered trademarks of Nuance Communications, Inc., or its affiliates in the United States and/or other countries.

ACCESS<sup>®</sup> and NetFront<sup>™</sup> are trademarks or registered trademarks of ACCESS Co., Ltd. in Japan and other countries.

The Bluetooth<sup>®</sup> word mark, figure mark (stylized “B Design”), and combination mark (Bluetooth word mark and “B Design”) are registered trademarks and are wholly owned by the Bluetooth SIG.

microSD<sup>™</sup> and the microSD logo are Trademarks of the SD Card Association.

Openwave<sup>®</sup> is a registered Trademark of Openwave, Inc.

### ***Open Source Software***

Some software components of this product incorporate source code covered under GNU General Public License (GPL), GNU Lesser General Public License (LGPL), OpenSSL License, BSD License and other open source licenses. To obtain the source code covered under the open source licenses, please visit:

<http://opensource.samsung.com>.

## ***Dynamic Noise Suppression from Audience***

Your phone is equipped with an advanced voice processing chip that delivers clear mobile calls by suppressing background noise, intermittent sounds (like a siren or nearby conversation), and echoes, allowing you to hear and be heard nearly anywhere.

### **How Does It Work?**

Based on the intelligence of the human hearing system, the technology:

- Captures, evaluates and distinguishes all the sound signals surrounding your phone, and the person you're speaking with.
- Then isolates the primary voice in conversation and filters out the background noise - so the person you're calling hears only your voice, without disturbing background noise.
- Dynamically equalizes and adjusts voice volume to optimize your calling experience, so you can hear clearly and don't need to speak louder to overcome surrounding noise.

The noise suppression technology is built-in and already enabled in your new mobile phone. So it's ready to provide unsurpassed voice clarity with every call.

## **Disclaimer of Warranties; Exclusion of Liability,**

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.



# Table of Contents

---

## Section 1: Getting Started ..... 4

Understanding this User Manual .....	4
Battery Cover .....	5
Activating Your Phone .....	6
Battery .....	8
Accessing the QWERTY Keyboard .....	10
Switching the Phone On or Off .....	11
Setting Up Your Voice Mail .....	11
Visual Voicemail .....	12

## Section 2: Understanding Your Phone ..... 13

Features of Your Phone .....	13
Open View of Your Phone .....	13
Keys .....	14
Camera View of Your Phone .....	15
Side Views of Phone .....	16
Display Layout .....	17
Missed Messages Tab .....	17
Menu Navigation .....	20
Help .....	21

## Section 3: Call Functions ..... 22

Making a Call .....	22
Adjusting the Call Volume .....	23
Answering a Call .....	24
Call history .....	24

Vibration Profile .....	27
Selecting Functions and Options .....	27
In Call Options .....	28

## Section 4: Menu Navigation ..... 33

Menu Navigation .....	33
Menu Design .....	33

## Section 5: Entering Text ..... 35

Using the QWERTY Keyboard .....	35
Changing the Text Input Mode .....	37
Using T9 Mode .....	38
Using ABC Mode .....	40
Using the Numeric Mode .....	41
Using Symbol Mode .....	41

## Section 6: Messaging ..... 43

Types of Messages .....	43
Display Icons for Messages .....	43
View Tab .....	44
Text Messages .....	44
Picture Messages .....	46
Message Inbox .....	48
Drafts .....	51
Templates .....	51
My folders .....	53
Voicemail .....	53

Email	54	Sounds	81
Exchange Email	55	Videos	82
Social Buzz	55	Other Files	83
Instant Messaging (IM)	56	<b>Section 9: Organizer</b>	<b>85</b>
Settings	56	Organizer	85
Messages settings	56	Calendar	85
Delete by folder	58	Alarm	90
<b>Section 7: People</b>	<b>60</b>	Voice Recognition	91
Mobile Backup	60	Tasks	97
Using the Contacts List	60	Memo	97
Finding a Contact Entry	62	Calculator	98
Dialing a Number from Contacts	63	Tip calculator	98
Caller Groups	63	World clock	99
Editing a Caller Group	64	Converter	99
Speed Dialing	65	Timer	100
Management	65	Stopwatch	100
My Profile	67	RSS reader	100
My number	68	<b>Section 10: Camera</b>	<b>102</b>
Service Dialing Numbers	68	Using the Camera	102
<b>Section 8: Media and Web</b>	<b>69</b>	Take and Send	102
T-Mobile Mail	69	Photo Gallery Options	105
web2go	69	Using the Camcorder	106
Games and Apps	73	Recording and Sending a Video	106
Photos	74	Configuring the Camcorder Settings	107
Images	76	Video Options	108
Music	77	My Album	109
Music Player	78		



## **Section 11: Changing Your Settings ..... 110**

My Account .....	110
Personalize your Phone .....	110
Sound profiles .....	110
Display settings .....	114
Phone settings .....	116
Messaging Key .....	120
4-way Shortcuts .....	120
Keyboard Shortcuts .....	121
Memory Settings .....	122
Language .....	123
Greeting message .....	123
Time and Date .....	124
Help .....	124
Bluetooth .....	124
Manage Online Album .....	126
Call settings .....	127
Advanced .....	131
Reset settings .....	132

## **Section 12: Health and Safety Information ..... 133**

Exposure to Radio Frequency (RF) Signals .....	133
Specific Absorption Rate (SAR) Certification Information ....	137
Smart Practices While Driving .....	139
Battery Use and Safety .....	140
Samsung Mobile Products and Recycling .....	141
UL Certified Travel Charger .....	142
Display / Touch-Screen .....	143

GPS & AGPS .....	143
Emergency Calls .....	145
Care and Maintenance .....	145
Responsible Listening .....	146
Operating Environment .....	148
FCC Hearing Aid Compatibility (HAC) Regulations for Wireless Devices .....	150
Restricting Children's Access to Your Mobile Device .....	151
FCC Notice and Cautions .....	152
Other Important Safety Information .....	152

## **Section 13: Warranty Information ..... 154**

Standard Limited Warranty .....	154
End User License Agreement for Software .....	158

## **Index ..... 164**

## Section 1: Getting Started

---

This section explains how to start using your phone. Start by configuring your hardware, activating your service, and then setting up your voice mail.

### Understanding this User Manual

The sections of this manual generally follow the features of your phone. A robust index for features begins on page 164.

Also included is important safety information that you should know before using your phone. This information is available near the back of the guide, beginning on page 133.

This manual provides navigation instructions according to the default display settings. If you select other settings, navigation may be different.

Unless otherwise specified, all instructions in this manual assume you are starting from the Home screen and using the available keys.

---

**Note:** Instructions in this manual are based on default settings, and may vary from your phone, depending on the software version on your phone, and any changes to the phone's Settings.

Unless stated otherwise, instructions in this User Manual start with the phone unlocked, at the Home screen.

All screen images in this manual are simulated. Actual displays may vary, depending on the software version of your phone and any changes to the phone's Settings.

---

### Special Text

Throughout this manual, you'll find text that is set apart from the rest. These are intended to point out important information, share quick methods for activating features, to define terms, and more. The definitions for these methods are as follows:

- **Notes:** Presents alternative options for the current feature, menu, or sub-menu.
- **Tips:** Provides quick or innovative methods, or useful shortcuts.
- **Important:** Points out important information about the current feature that could affect performance.
- **Warning:** Brings to your attention important information to prevent loss of data or functionality, or even prevent damage to your phone.

## Text Conventions

This manual provides condensed information about how to use your phone. To make this possible, the following text conventions are used to represent often-used steps:

- Arrows are used to represent the sequence of selecting successive options in longer, or repetitive, procedures.
- LSK Left Softkey (indicates the feature is available by pressing the left softkey).
- RSK Right Softkey (indicates the feature is available by pressing the right softkey).

---

**Example:** "From the Home screen, press **Menu Key** (LSK) → **Settings** → **Bluetooth** → **Turn Bluetooth on.**"

---

## Battery Cover

The battery, SIM card and SD card are installed under the battery cover.

 
---

**Important!** Before removing or replacing the battery cover, make sure the phone is switched off. To turn the phone off, hold down  .

---

## To remove the battery cover:

1. Hold the device firmly and locate the cover release latch.
2. Place your fingernail in the opening and firmly "pop" the cover off the device (similar to a soda can).

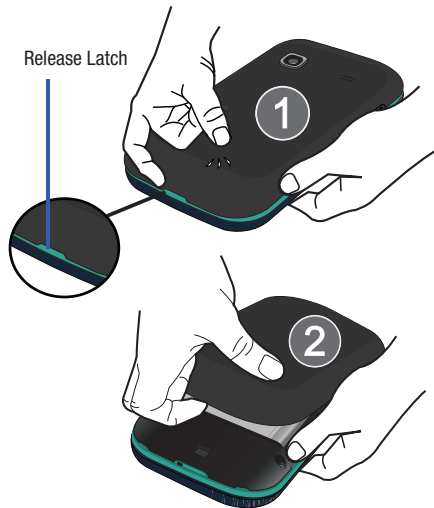

### To replace the battery cover:

1. Position the battery cover over the battery compartment and press down until you hear a click.
2. Press down along the edges of the cover to verify it is secured.

## Activating Your Phone

When you subscribe to a cellular network, you are provided with a plug-in SIM card containing subscription details, such as your PIN, available optional services, and many other service features.

### SIM Card Overview

---

**Important!** Before removing or replacing the battery cover, make sure the phone is switched off. To turn the phone off, hold down .

---

The SIM card is loaded with your subscription details such as your telephone number, PIN, available optional services, and many other features.

---

**Important!** The SIM card and its information can be easily damaged by scratching or bending, so be careful when handling, inserting, or removing the card. Keep all SIM cards out of reach of small children.

---

## Installing and Removing the SIM card

### To install the SIM card:

1. Confirm the battery is not currently installed within the battery compartment. The battery blocks the proper installation of the SIM card into the slot.



Install the SIM Card



Remove the SIM Card

2. Carefully slide the SIM card into the SIM card socket until the card is secured into place. Make sure that the card's gold contacts face down and that the upper-left angled corner of the card is positioned as shown.

#### To remove the SIM card:

1. If installed, remove the battery from its compartment (1 and 2). The battery will block the proper removal of the SIM card from the slot.
2. Carefully slide the SIM card out of the SIM card socket.

---

**Note:** If the card is not inserted correctly, the phone will not detect it and no service will be available. If this happens, turn off the phone, remove the card, and reinstall the card in the correct orientation.

---

#### Installing the microSD Memory Card

Your phone supports an optional (external) microSD™ or microSDHC™ memory card for storage of media such as music, pictures, video and other files. The SD card is designed for use with this mobile phone and other devices.

---

**Note:** microSD memory cards include capacities of up to 2GB. The microSDHC™ memory card types can range from 4GB to up to 32GB.

---

---

**Note:** This device supports up to a 32GB microSDHC memory card.

---

1. Remove the battery cover.
2. Orient the card with the gold strips facing down.



3. Firmly press the card into the slot and make sure that it catches with the push-click insertion.

---

**Important!** Be sure to align the gold contact pins on the card with the phone's contacts.

---

### Removing the microSD Memory Card

1. Remove the battery cover.
2. Firmly press the card into the slot and release it. The card should pop partially out of the slot.
3. Remove the card from the slot.

### Battery

Before its initial use, install the battery and charge it fully.

 
 
---

**Important!** Before removing or replacing the battery cover, make sure the phone is switched off. To turn the phone off, hold down .

---

### Installing the Battery

1. Slide the battery into the compartment (1) so that the tabs on the end align with the slots at the bottom of the phone, making sure the connectors align.
2. Gently press down to secure the battery (2).

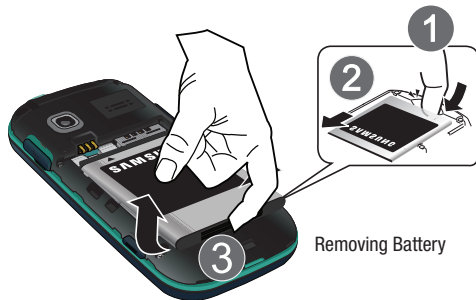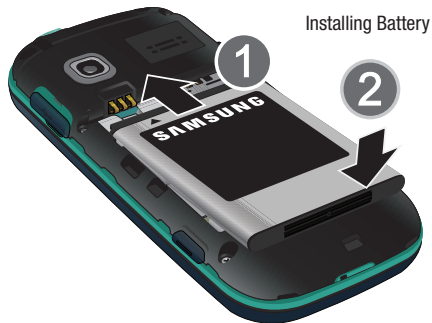

## Removing the Battery

1. Place your finger into the battery groove (1).
2. Grip the battery at the top end (2) and lift it up and out of the battery compartment (3).

## Charging the Battery

Your phone is powered by a rechargeable Li-ion battery. A wall charger, which is used for charging the battery, is included with your phone. Use only approved batteries and chargers. Ask your local Samsung dealer for further details. Before using your phone for the first time, you must fully charge the battery. A discharged battery recharges fully in approximately 4 hours.

---

**Note:** Verify that the battery is installed prior to connecting the wall charger. If both the wall charger is connected and the battery is not installed, the handset will power cycle continuously and prevent proper operation. Failure to unplug the wall charger before you remove the battery, can cause the phone to become damaged.

---

**Important!** Although the battery comes partially charged, it is recommended that you fully charge the battery before its initial use.

---

1. Slide open the Charger/Accessory jack cover (1).
2. Insert the USB cable into the device's Charger/Accessory jack.

3. Plug the charger into a standard AC power outlet. The device turns on with the screen locked and indicates both its charge state and percent of charge.



---

**Note:** This illustration displays both the **correct** and **incorrect** orientation for connecting the charger. If the charger is incorrectly connected, damage to the accessory port will occur therefore voiding the phone's warranty.

---

4. When charging is finished, first unplug the charger's power plug from the AC wall outlet, then disconnect the charger's connector from the phone.

---

**Important!** If your handset has a touch screen display, please note that a touch screen responds best to a light touch from the pad of your finger or a non-metallic stylus. Using excessive force or a metallic object when pressing on the touch screen may damage the tempered glass surface and void the warranty. For more information, refer to "Standard Limited Warranty" on page 154.

---

### Low Battery Indicator

When the battery level is low and only a few minutes of talk time remain, a warning tone sounds and the "Low battery" message repeats at regular intervals on the display. In this condition, your phone conserves its remaining battery power, by dimming the backlight. When the battery level becomes too low, the phone automatically turns off.

---

**Note:** Some applications which serve the purpose of showing battery life may not display an accurate battery percentage.

---

### Accessing the QWERTY Keyboard

Your phone has a full, slide-out QWERTY keyboard. The keyboard is located beneath the display screen and is accessed by sliding it open. This orients the phone's display to Landscape



(widescreen) mode. With the QWERTY keyboard, you can type letters, numbers, punctuation, and other special characters into both text entry fields or other applications as easily as you can on your computer.

1. Rotate the phone 90 degrees counter-clockwise.
2. Slide the top section of the phone up to open, as shown in the illustration. When you slide it open, the display rotates from a vertical viewing mode (Portrait) to a horizontal viewing mode (Landscape).






## Switching the Phone On or Off

1. Press and hold  until the phone switches on.
2. If prompted to enter the phone password, use the keypad to enter your password and press **Confirm** (LSK) or .  
– or –



If prompted to unlock the keypad, use the keypad to press **Unlock** (LSK) → **OK** (RSK).

The phone searches for your network and after finding it, the term “T-Mobile” displays on the upper left half of your screen. Now you can make or receive calls.

3. When you wish to switch off the phone, press and hold  until the power-off image displays.

## Dialing Options Without a SIM card installed

At this point you can only make an emergency calls with the phone but normal cell phone service is not available.

1. Press  to return to the Idle mode (Home screen).
2. Enter the phone number and then press .

3. If you enter a non-emergency number, you are notified there is not network available.

– or –

If you enter an emergency number, your call is passed along to emergency services.

## Dialing Options With a SIM card installed


1. Press and hold  until the phone switches on.

The phone searches for your network and after finding it, you can make or receive calls.

2. Enter the phone number and then press .

## Setting Up Your Voice Mail

For new users, follow the instructions below to set up voice mail:

1. From the Home screen, press and hold  on the keypad. You may be prompted to enter a password.
2. Follow the tutorial to create a password, a greeting, and your name.



---

**Note:** These steps may be different depending on your network.

---

## Accessing Your Voice Mail

You can access your voice mail by either pressing and holding

-  on the keypad or by using the phone's menu.
1. In Idle mode, press and hold . Your phone dials the specified voicemail number.
  2. When connected, follow the voice prompts from the voicemail center.

## Visual Voicemail

Visual Voicemail gives you a quick and easy way to access your voicemail. Now you can find exactly the message you are looking for without having to listen to every voicemail message first. This new feature periodically goes out to your voicemail, and gathers the caller information from all of the current voicemails.

## Setting Up Your Visual Voicemail

Your device automatically transfers all unanswered calls to your voicemail, even if your device is in use or turned off. You should set up your voicemail and personal greeting as soon as your device is activated.

## Enabling Your Visual Voicemail

1. From the Home screen, press **Menu → Messaging → Voicemail**.

2. Press **Yes** (LSK) to setup your visual voicemail for the first time.
3. When connected to the online visual voicemail, select **Enable Visual Voicemail** and follow the onscreen prompts.

## Accessing Your Visual Voicemail

- From the Home screen, press **Menu → Messaging → Voicemail**.

## Section 2: Understanding Your Phone

This section outlines some key features of your phone. It also displays the screen and the icons that are displayed when the phone is in use.

 
### Features of Your Phone

Your phone is lightweight, easy-to-use and offers many significant features. The following list outlines a few of the features included in your phone.

- 2.0 Megapixel Camera with Camcorder
- 2.0 Bluetooth® Wireless Technology
- Expandable memory up to 32GB
- MP3 Music Player
- Visual Voicemail
- Pre-loaded games
- Picture and Text Messaging
- Web-enabled via web2go
- Horizontal slider with full QWERTY keyboard with soft keys & messaging shortcut key
- Social Networking Service (SNS)
- Assisted GPS (Telenav GPS Navigator™)




### Open View of Your Phone

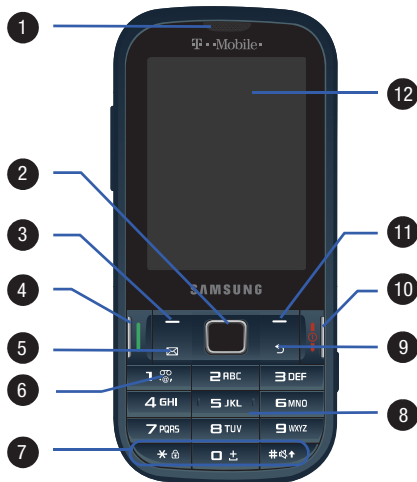The following illustrations show the main elements of your phone:



## Keys

The following list correlates to the illustrations.

1. **Speaker** allows you to hear the other caller and the different ring tones or sounds offered by your phone.
2. **OK key/Optical Joystick** pressing down allows you to accept the choices offered when navigating through a menu. The optical joystick lets you navigate around your on-screen selections and items.
3. **Left Soft key** allows you to select soft key actions or menu items corresponding to the bottom left line on the display screen.
4. **Send key** allows you to make or answer a call. From the Home screen, recalls the last number dialed or received when held down.
5. **Messaging key** customizable key that can be programmed to launch your favorite application. By default, this key can be used to access your Messaging menu.
6. **Voice Mail key** allows you to quickly access your voice mail. Press and hold this key for two seconds to automatically dial your voice mail's phone number.
7. **Special function keys** allow you activate unique features while in Home screen. In Home screen, if you press and hold , you can turn on the Vibration Mode. Press and hold the  to enter an international prefix. Press and hold  to insert a Pause (P) to a phone number or lock the keypad.
8. **Alphanumeric keys** allow you to enter numbers, letters, and some special characters.
9. **Back key** redisplay the previous screen or clears entries.
10. **Power On/Off (Exit) key** ends a call. Press and hold this key for two seconds to turn your phone on or off. While in the Menu mode, it returns the phone to Home screen and then cancels your input.
11. **Right Soft key** allows you to select soft key actions or menu items corresponding to the bottom right line on the display screen. It also provides quick access to your phonebook.


12. **Display** shows all the information needed to operate your phone, such as the received signal strength, phone battery level, and time.

This phone also offers the convenience of a slide out QWERTY keyboard. To access the keyboard, rotate the phone 90 degrees and slide the top section of the phone up. For more information, refer to “*Accessing the QWERTY Keyboard*” on page 10.



## Camera View of Your Phone


The following illustrations show the back of your phone:

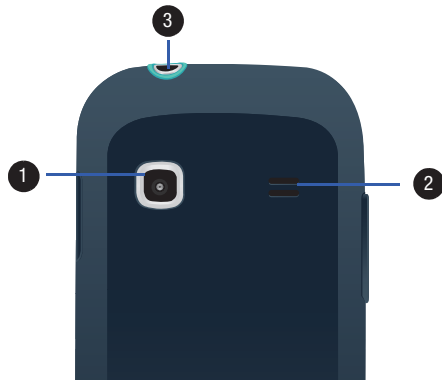 

1. **Camera lens** is used to take photos.
2. **External speaker** allows you to hear ringers, music, and other sounds offered by your phone.
3. **Headset jack** allows you to connect a hands-free headset so you can listen to music.

## Side Views of Phone


The following illustrations show the side elements of your phone:

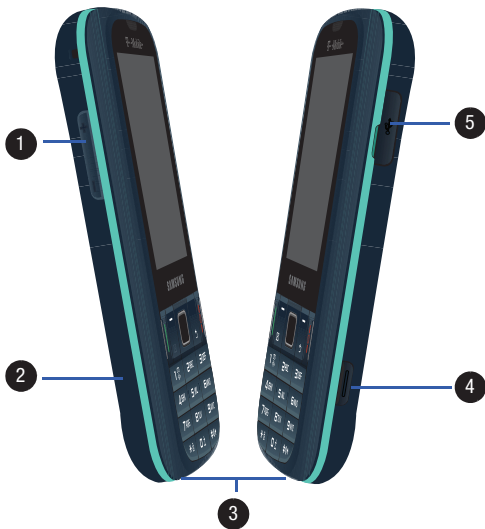 

1. **Volume keys** allow you to adjust the Ring volume in standby mode (with the phone open) or adjust the Speaker volume during a call. When receiving an incoming call, if you press the volume key, you can mute the ring tone. If you press and hold the volume key, you can reject the call.
  2. **microSD Card Slot (internal)** lets you use a microSD card to expand the memory of your phone.
  3. **Microphone** is used during phone calls and allows other callers to hear you clearly when you are speaking to them. It is also used in making voice note recordings.
  4. **Camera key** lets you to take pictures when you are in camera mode.
  5. **USB Power/Accessory connector** allows you to connect a power cable or optional accessories such as a USB/data cable.
- CAUTION!** Inserting an accessory into the incorrect jack may damage the phone.


## Display Layout

 Your phone's display screen provides a wealth of information about your phone's status and options. The display has 3 areas:

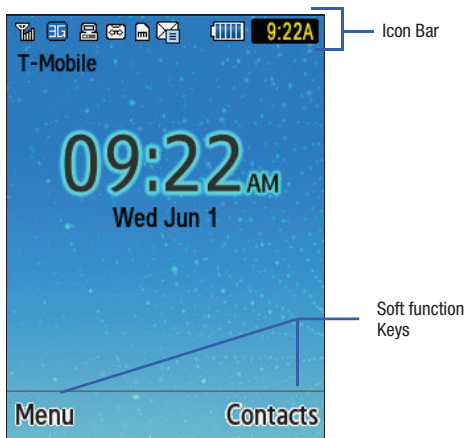

## Missed Messages Tab

 When you receive new messages, icons display in two locations, on the phone's screen, Missed Messages tab (shown below), and in the icon bar at the top of the screen.

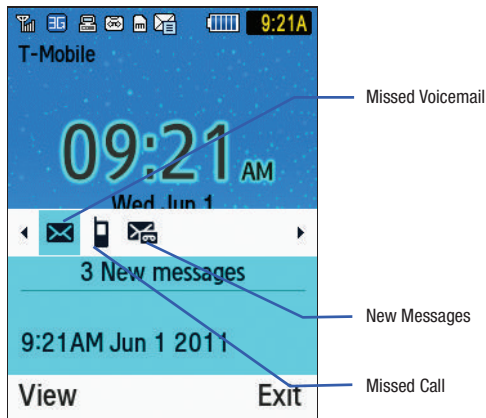

## Icons

This list identifies the symbols you'll see on your phone's display screen:



Shows the received signal strength. The greater the number of bars, the stronger the signal.



Displays when connected to the GPRS network.



Displays when your phone is communicating with the GPRS network.



Displays when connected to the EDGE network.



Displays when your phone is communicating with the EDGE network.



Displays that 3G data service is active.



Displays that 3G data service is now active and communicating.



Shows the level of your battery. The more bars you see, the more power remains.



Displays when a call is in progress.



Displays when the phone is not receiving a signal.



Displays when the phone is in Airplane mode.



Displays when Bluetooth wireless technology is active.



Displays when your phone is searching for external Bluetooth devices.



Indicates the current call is Muted.



Indicates the current call is Unmuted.



Displays when USB communication is active.



Displays when a microSD is detected and was properly installed.





Displays when Silent Mode is active. All incoming sounds are turned off.



Displays when Vibration Mode is active. The ringer is set to vibrate only.



Displays when sound profile is set to Driving.



Displays when sound profile is set to Outdoor.



Displays when you set an alarm to ring at a specified time.



Displays in the View Tab when you missed a call.



Displays in the View Tab when you missed a message.



Displays in the View Tab when you missed a voicemail message.



Displays when a new text message is received.



Displays when a new visual voicemail is received.



Displays when a new voicemail is received.



Displays when a new picture or multimedia message is received.



Displays when the Call Forwarding feature is active. For more details, see “*Call Forwarding*” on page 128.



## Backlight

A backlight illuminates the internal display and the keypad. When you press any key, the backlight comes on. It goes off when no keys are pressed within a given period of time, depending on the setting within the **Backlight time** menu. The display turns off after one minute to conserve battery power.

The **On** setting is how long the keypad backlight is on. The **Dim** option is how much longer after the keypad backlight goes off that the display remains lit.

To specify the length of time the backlight is active, access the **Backlight time** menu:

1. From the Home screen, press **Menu** (LSK) → **Settings** → **Personalize** → **Display settings** → **Backlight time** and press **Select** (LSK) or .

2. Select the **On** option. Choose from **5 seconds**, **15 seconds**, or **30 seconds** and press .
3. Select the **Dim** option. Choose from **Off**, **5 seconds**, **15 seconds**, or **30 seconds** and press .
4. Press **Save** (LSK) to retain your new settings.


## Menu Navigation

Menus, sub-menus, and features are accessed by scrolling through the available on-screen menus.


There are two ways to navigate through a menu:

- Using the Volume Keys (for Up and down navigation through the on-screen list)
- Using the Optical Joystick

### Scrolling through Menu Items Using the Volume Keys

 
1. Within an active on-screen menu list, press the Volume keys Up or Down to scroll through the current list.
2. Press  (**OK key**) to select the currently highlighted on-screen item.

### Scrolling through Menu Items Using the Optical Joystick

The Optical Joystick acts as a dual touch-sensitive mouse and OK/Enter key. As you navigate through a menu, options are highlighted. Select any option by highlighting it and pressing  (Optical Joystick).


The direction of your onscreen movements while using the Optical Joystick is determined by the current orientation of your device.

- When your QWERTY keyboard is visible, your device is placed into Landscape mode.
- When the keyboard is hidden, your device is placed into Portrait mode.

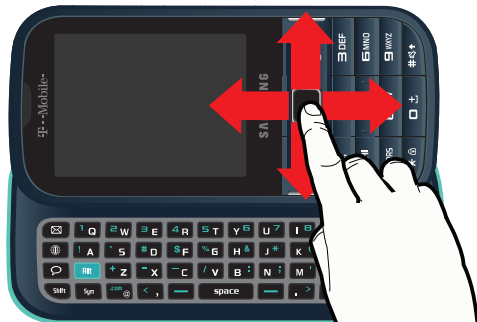

## Customization of Optical Joystick

### To enable feedback sound:

1. From the Home screen, press **Menu** (LSK) → **Settings** → **Personalize** → **Sound profiles** → **Normal**.
2. Highlight **Normal** and then press **Options** (LSK) → **Edit**.
3. Use your Optical Joystick to scroll to the right and select the **Phone sounds** tab.
4. Scroll down to **Keypad tone** and press .
5. Select either **Beep** or **Lucid**.

### To adjust the Sensitivity of the Optical Joystick:

1. From the Home screen, press **Menu** (LSK) → **Settings** → **Personalize** → **Phone settings** → **OJ Sensitivity**.
2. Move the joystick to the left or right to adjust the sensitivity. The sensitivity range is from 1(weak) to 9 (highly sensitive).
3. Press **Save** (LSK) to store the new sensitivity level.

For more information, refer to “*Personalize your Phone*” on page 110.

## Help

Help is designed to work with the browser to show you some of the unique features of your phone. You can search help files on the fly while traveling, at home or anywhere.

1. From the Home screen, press **Menu** (LSK) → **My Account**.
2. The browser displays general help information such as Web, Downloads, and My Account.

 
For more information on browser options, see “*web2go*” on page 69.

## Section 3: Call Functions

---

This section describes how to make or answer a call. It also explains the features and functionality associated with making or answering a call. For more information on ringtones see “*Sound profiles*” on page 110. For more information, refer to “*Call Forwarding*” on page 128.

### Making a Call



- ▶ From the Home screen, enter the desired number and press .

---




**Note:** When you activate the **Auto redial** option (within the **Call settings** menu), the phone automatically redials up to 10 times when the recipient does not answer your call or is already on the phone, provided your call is not sent to voicemail. For more information, see “*Auto redial*” on page 127.

---


### Making an International Call

1. From the Home screen, press and hold . The + character displays on-screen to indicate an international prefix.
2. Enter the country code, area code, and phone number.
3. Press  to make the call.

### Correcting the Number

1. Press  to clear the last digit displayed.
  - To clear any other digit in the number, scroll across the optical joystick **Left** or **Right** until the cursor is immediately to the right of the digit to clear and then press . You can also enter a missing digit.
2. Press and hold  to clear the entire display.



### Ending a Call



- ▶ When you want to finish your call, briefly press .

### Redialing the Last Number

The phone stores the numbers of the calls you've dialed, received, or missed if the caller is identified.

#### To recall any previously dialed numbers:

1. If you entered characters on the display, press  to return to Home screen.
2. Press  to display the Call history screen (calls are displayed in the order you dialed or received them).

- Use the optical joystick to scroll through the numbers and highlight the number you want. With the entry highlighted from the Call history screen press **Options** (LSK) to display the following options:
  - Call:** Places a call back to the number.
  - Send message:** Allows you to send a Message.
  - Save to contacts:** Allows you to save the selected phone number to the Contacts list.
  - Delete:** Allows you to delete the selected number or all call records.
  - View contact details:** Allows you to view the details of a call log entry that is already in your current Contacts list.
- To view details of the highlighted number, press **View** (). Before you dial the number, you may also press **Options** (LSK) to display the following options:
  - Send message:** Allows you to send a Message.
  - Save to contacts:** Allows you to save the selected phone number to the Contacts list.
  - Delete:** Allows you to delete the selected number or all call records.
  - View contact details:** Allows you to view the details of a call log entry that is already in your current Contacts list.
- Press  to dial the number.

### **Making a Call from the Phonebook**

You can store regularly used phone numbers into the phone's memory or onto your SIM card. These entries are collectively called the Phonebook.

Once you have stored a number in Contacts, you can dial it by pressing only a few keys. You can also assign your most frequently-used numbers to number keys using the Speed Dial feature.

### **Adjusting the Call Volume**

During a call, use the Volume keys on the left side of the phone, to adjust the speaker volume.

- ▶ Press the **Up** volume key to increase the volume level and **Down** volume key to decrease the level.

 

---

**Tip:** From the Home screen, you can also adjust the ring volume using these keys.

---

## Answering a Call

When somebody calls you, the phone rings and displays the incoming call image. The caller's phone number, or name if stored in Contacts, is then displayed.

1. Press  or **Accept** (LSK) to answer the incoming call.
  - If the **Any Key** answer option is enabled within the Answer options menu (**Menu** → **Settings** → **Call settings** → **Answering mode**) you can press any key to answer a call except  and **Reject** (RSK).

---

**Note:** To reject an incoming call, press **Reject** (RSK) or . This send the caller to your voicemail.

---

2. Press  to end the call.

---

**Note:** You can answer a call while using the Contacts or menu features. After ending the call, the phone returns to the function screen you were previously using.

---

## Call history

All missed, dialed and answered calls are listed in the Call history screen. This list of your call history is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

- ▶ From the Home screen, press **Menu** (LSK) → **Call history**.

---

**Note:** While on the Home screen, press  then scroll left or right between the following Call history tabs: **All calls**, **Missed calls**, **Dialed calls**, **Answered calls**, and **Voicemail**.

---

### All calls

This menu lets you view the 90 most recent calls you received, dialed, missed, or voicemail. The name or number, if already stored in your Contacts, displays with the number of occurrences for each number.

When you view the numbers in this list, the phone icon to the left of the number indicates the call type:

- **Answered:** Indicates any received calls that were answered.
- **Missed:** Indicates any missed calls.
- **Dialed:** Indicates all outgoing calls made from your phone.



**Answered Call:** Indicates any received calls that were answered.



**Missed Call:** Indicates any missed calls. These are routed to your voicemail.



**Dialed Call:** Indicates all outgoing calls made from your device.



**Voicemail:** Indicates any received calls that were not answered and sent directly to your voicemail.

---

**Note:** At any time while you are in Call history, you may use the optical joystick to scroll left or right between **All calls**, **Missed calls**, **Dialed calls**, **Answered calls**, and **Voice mail**.

---

---

**Note:** Recent Calls records only calls that occur while the phone is turned on. If a call is received while your phone is turned off, it will not be included in the phone's call history. If you return a call from the voicemail menu, it will not be included in your phone's history.

---


## Missed calls

This menu lets you view the 30 most recent calls you received, but did not answer. The name and number, if already stored in your Contacts, displays with the number of occurrences for each number.

When you are unable to answer a call for any reason, you can find out who is calling you, if this service is available, so that you can call the person back.

The number of missed calls displays on the Home screen on the Missed Call/Messages tab, immediately after a call is missed.

### To view a missed call immediately:


1. If the display is off, press the **Volume** key to activate the display.
2. Press **View** (LSK) or press . The number corresponding to the most recently missed call is displayed, if available. If only one missed call has occurred, the LSK reads **Call**.

– or –

Use the optical joystick to scroll through the missed calls.

3. Press  to call the displayed number.

– or –

Press **View** (  ) to display the call details.

4. Press **Options** (LSK) to access the following options:

- **Call:** Places a call back to the number.
- **Send message:** Allows you to send a Message.
- **Save to contacts:** Allows you to save the selected phone number to the Contacts list.
- **Delete:** Allows you to delete the selected number or delete all call records.
- **View contact details:** Allows you to view the details of a call log entry that is already in your current Contacts list.

---

**Tip:** You can press  at any time to exit the **Missed calls** feature.

---

### ***Dialed calls***

This menu lets you view the most recent calls you dialed. The name and number, if already stored to Contacts, displays with the number of occurrences for each number.

### ***Answered calls***


This menu lets you view the 30 most recent calls you received. The name and number, time and date, displays with the number of occurrences for each number.

### ***Voicemail***

This menu lets you view the 30 most recent voicemail calls you received.

### ***Delete all Call history entries***



This menu allows you to delete all of the records in each call record separately, or you can delete all of your call records at one time.



1. From the Home screen, press  to display **Call history**.
2. Press **Options** (LSK) → **Delete** → **All**.
3. Press **Yes** (LSK) to delete all files.



## Vibration Profile

The Vibration audio profile is convenient when you wish to stop the phone from making any noise, in a theater for example.

From the Home screen, press and hold  until the “**Vibration profile on**” message and  displays. In this Vibration profile, instead of sounds, your phone vibrates. For more information, refer to “*Sound profiles*” on page 110.

To exit and reactivate the previous sound settings, press and hold  again until the “**Normal profile on**” message displays. The Vibration profile icon  no longer displays.

## Selecting Functions and Options

Your phone offers a set of functions that allow you to customize it. These functions are arranged in menus and sub-menus, accessed using the two soft keys. Each menu and sub-menu allows you to view and alter the settings of a particular function.

### Soft Keys

The roles of the soft keys vary depending on the function you are currently using. The labels on the bottom line of the display just above each key indicate their current role.

The two available keys are Left Softkey (LSK) and Right Softkey (RSK).

Press LSK to access Menu mode

Press RSK to access Contacts





### Selecting Options

To view the various functions and options available, you must press an available softkey and select an option by:

1. Press the appropriate soft key.
2. Press **Select** (LSK) to select the function or the highlighted option.

– or –

Press the **Back** (RSK) to move back up one level in the menu structure

3. Press the **Up** or **Down** Volume keys to view the next function or highlight the next option on a list.  
– or –  
Use the optical joystick to move back to the previous function or option on a list.
4. Press  to exit the menu structure without changing the settings.
5. In some functions, you may be asked for a password or PIN. Enter the correct code and press the **Confirm** (LSK) or .

When you access a list of options, your phone highlights the currently active option. If there are only two options, such as **On/Off** or **Enable/Disable**, your phone highlights the option that is not currently active, so you can select it.

## In Call Options

Your phone provides a number of features that are available for use during a call.

### Switching off the Microphone (Mute)

You can temporarily switch your phone's microphone off, so that the other person cannot hear you.


---

**Example:** You wish to say something to a person in the room but do not want the person on the phone to hear you.



---

#### To switch the microphone off temporarily:

- ▶ Press **Mute** (  )

The other person can no longer hear you. The Mute icon (  ) at the left of the screen.

#### To switch the microphone back on:

- ▶ Press **Unmute** (  ). The other person can hear you again. The Unmute icon (  ) displays atop the current call information.

## Placing a Call on Hold

You can place the current call on hold whenever you want. If your network supports this service, you can also make another call while a call is in progress.

### To place a call on hold:


1. Press **Options** (LSK) → **Hold**.
2. Press **Resume** (RSK) to reactivate the call whenever you want.

### To make a new call while you have a call in progress:

1. While in a call, press **Options** (LSK) → **New Call** to dial the second call. The first call is automatically placed on hold.  
– or –  
Press the **Options** (LSK) → **Hold**. This places the currently active call on hold and allows you to make a new call.
2. Enter the new phone number that you wish to dial or look it up in the Contact list.
3. Make the second call in the normal way.

When you have both an active call and a call on hold, you may switch between the two calls by placing the current held call to active and then placing the other on hold.

### To switch between the two calls:

1. Press the **Options** (LSK) → **Swap**. The current active call is placed on hold and the call on hold is reactivated so you can continue talking.
2. Press  to finish and end each call normally.

## Using the Speakerphone

While on a call, you can use your Speakerphone by following these steps:

1. Press **Spkr on** (RSK).
2. Press **Spkr off** (RSK) to turn the Speakerphone off.

---

**Important!** For safety information related to speakerphone use, see “Responsible Listening” on page 146.

---

## Searching for a Number in Contacts

You can search for a number in Contacts during a call.

1. During an active call, press **Options** (LSK) → **Contacts**.

2. With the Contacts entries displayed, enter the name to locate in the field above the entries. If you enter the first few letters of the name, the Contact entries list starting with the first entry matching your input.

– or –

Use the optical joystick to highlight a contact.

3. Press **View** (LSK) to display contact information for the highlighted entry.



For further details about the Contact feature, see “*Finding a Contact Entry*” on page 62.

### Call Waiting

You can answer an incoming call while you have a call in progress, if this service is supported by the network and you must have previously set the Call waiting option to **Activate**. For more information, refer to “*Call Waiting*” on page 129.

You are notified of an incoming call by a call waiting tone.

### To answer a new call while you have a call in progress:

1. Press either **Accept** (LSK) or  to answer the incoming call. The first call is automatically placed on hold.
2. Press **Options** (LSK) → **Swap** to switch between the two calls.
3. Press **Options** (LSK) → **End** → **Held call** option to end a call on hold (**Active call**, **Held call**, or **All calls**).
4. Press  to end the current or remaining call.

### Making a Multi-Party Call

A multi-party call is a network service that allows up to six people to take part simultaneously in a multi-party or conference call.

For further details about subscribing to this service, contact T-Mobile customer service.

 
### Setting up a Multi-Party Call

---

**Note:** A maximum of two callers can be joined to a single multi-party line. You cannot create two multi-party calls.

---

### To set up a multi-party call:

1. From the Home screen, enter the desired number and press .
2. Wait for the caller to answer, then press **Options** (LSK) and select **New call** to place the current caller on hold and dial the second call.
3. Enter the new phone number and press **Call** (LSK).
4. Wait for the second caller to answer the incoming call and then press **Options** (LSK) and select **Join**. The two calls are now joined into a multi-party call and display in the order in which they were called.

---

**Important!** A maximum of two callers can be joined to a single multi-party line at a time. Additional callers will participate in a new Multiparty session and held in conjunction with the previous multiparty call. You can swap or place each multi-party call on hold.

---

---

**Note:** These first two calls are then grouped together on screen and displayed in the order in which the calls were made.

---

### Having a Private Conversation With One Participant



When you have two participants in a multi-party session, you might be necessary to place one of those participants on hold so that a private conversation can be held with a single caller. While you are in a multi-party call:

#### To split Callers Within a Multi-Party Line:

When you have two participants in a multi-party session, it might be necessary to place one of those participants on hold so that a private conversation can be held with a single caller. While you are in a multi-party call:

1. From within the active multi-party call, press **Options** (LSK) and select **Split**.
2. Select the participant you would like to split from the current multi-party call. The list displays the callers in the order they were dialed. You can now talk privately to that person while the other participants can continue to converse with each other. If there is only one other participant, that person is placed on hold.
3. To return to the multi-party call, press **Options** (LSK) and select **Join**. All of the multi-party call participants can now hear each other.

## Dropping One Participant

1. While in a multi-party call, press **Options** (LSK) → **End** → **Select participant**.
2. Highlight the desired participant to drop and press  to place a checkmark alongside their entry.
3. Press **Drop** (LSK) to drop the participant.
4. Press  to end the multi-party call.

## Section 4: Menu Navigation

---

 
This section explains the menu navigation for your phone.

### Menu Navigation






You can tailor the phone's range of functions to your needs using menus and sub-menus. Menus and sub-menus can be accessed by scrolling using the Optical joystick or by using shortcuts.
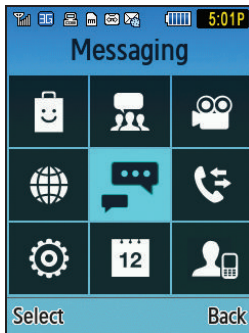
### Menu Design

The main menu displays as a Grid menu with three rows and three columns.



### Accessing a Menu Function by Scrolling

1. In Home screen, press **Menu** (LSK).
2. Use the optical joystick to highlight a Main menu (for example: **Settings**). To activate an onscreen option, press either **Select** (LSK) or .
3. If the menu contains sub-menus, (for example: **Personalize**). Press either **Select** (LSK) or  to enter the menu. If the menu you selected contains further options, repeat this step.
4. Scroll through the menus and press either **Select** (LSK) or  to confirm the chosen setting.
5. Press **Back** (RSK) or  to return to the previous menu level.
6. Press  to exit the menu without changing the settings.





## Using Shortcuts

The menu items, such as sub-menus, and options, are numbered and can be accessed quickly by using their shortcut numbers. Within the main menu's Grid view, you can access any one of menus or sub-menus by pressing the number keys (1 to 0) corresponding to their location on the screen.

---

**Example:** Accessing the Security menu.

---

1. In Home screen, press **Menu** (LSK).
2. Press  **Settings.**
3. Press  **Personalize.**
4. Press  **Phone settings.**
5. Press  **Security.**



## Section 5: Entering Text

This section outlines how to select the desired text input mode when entering characters. This section also describes how to use the T9 predictive text system to reduce the number of key strokes associated with entering text.

### Using the QWERTY Keyboard

The following keys perform special functions when entering text:



Using the QWERTY keyboard, you can type letters, numbers, punctuation, and other special characters into text entry fields or other applications simpler and faster than using the telephone keypad.

The QWERTY Navigation keys can be used to both navigate around an on-screen menu and make selections as easily as they can be done using the optical joystick.

1. **Alt key** allows you to use the alternate characters displayed at the top of the QWERTY keys. Examples are: \$, #, &, 1, etc..
2. **Messaging key** allows you to program this key as a shortcut to your favorite messaging application. You can reprogram the key at any time.
3. **web2go key** launches the built-in browser and takes you to your homepage.
4. **Social Buzz key** launches social networking applications (Twitter, Facebook, or MySpace), where you can automatically view updates of these applications. For more information, refer to “Social Buzz” on page 55.

5. **Shift key** converts the alphabetic character into uppercase. Changes the text input mode to Upper/Lower case mode.
6. **Sym key** allows you to enter symbols, such as punctuation marks.
7. **Left Softkey (LSK)** allows you to select soft key actions or menu items corresponding to the bottom left line on the display screen. In Idle mode, the Left softkey also provides quick access to the Menu.
8. **Space key** inserts an empty space.
9. **Right Softkey (RSK)** allows you to select soft key actions or menu items corresponding to the bottom right line on the display screen. In Idle mode the right softkey also provides quick access to Contacts.
10. Navigation key scrolls through the phone's menu options and acts as a shortcut key from Idle mode. In Idle mode:
  - **Up key:** allows you to directly access the Media shortcut. This can be changed to launch other applications such as: Media, Photos, Camera, Camcorder, or Music Player)
  - **Down key:** allows you to directly access the Web shortcut. This can be changed to launch either the web2go or bookmarks.
- **Left key:** allows you to directly access the Messaging shortcut screen. This can be changed to launch social applications such as: Create message, Conversations, Voicemail, Email, Exchange email, Socail Buzz, or IM.
- **Right key:** allows you to directly access the Social shortcut. This can be changed to launch social applications such as: Social Buzz, Facebook, Twitter, My Space, My Stream, Upload pic, or Facebook chat.
11. **Emoticons key** provides access to available emoticons that can be inserted into text fields.
12. **Enter key** moves the insertion point to the next line in a message, similar to a carriage return.
13. **Back key** redisplayes the previous screen or clears text field entries.

The keyboard provides dual-use keys labeled with alphabetic characters on the lower half and numbers and symbols on the upper half. Press the key corresponding to the character you want to enter.

## Changing the Text Input Mode

When using your phone, you often need to enter text, such as when storing a name in Contacts, creating your personal greeting or scheduling events on your calendar. You can enter alphanumeric characters by using your phone's keypad.

Your phone has the following text input modes accessible via the right softkey (RSK) on the keypad:

- **ABC mode:** this mode allows you to enter letters by pressing the key labeled with the letter you want.
- **T9 (English):** this mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter; for example, pressing **4 GHI** can enter G, H, or I. However, the T9 mode automatically compares the series of keystrokes you make with an internal linguistic dictionary to determine the most likely word, thus requiring far fewer keystrokes than the traditional ABC mode.
- **Numeric:** this mode allows you to enter numbers.
- **Symbol:** this mode allows you to enter symbols, such as punctuation marks.



When you are in a field that allows characters to be entered, the text input mode indicator displays on the bottom right of the screen.

---

**Example:** Writing a text message.

---



1. Press  (RSK) to change the text input mode.
2. Scroll to the mode you prefer and press **Select** (LSK) or . The text input mode indicator displays the new selection in the lower right corner of your display. The following options are available:
  - ABC
  - T9 (English)

- Numeric
  - Symbol
3. When the Text input mode indicator displays your selected mode, enter text within the text message.

## Using T9 Mode

T9 is a predictive text input mode that allows you to enter any character using single keystrokes. This text input mode is based on a built-in dictionary.

### Entering a word in T9 mode

1. While in T9 mode (**T9 Eng**), enter a word by pressing the **2** to **9** keys. Press each key only once for each letter.

---

**Note:** Pressing the **1** key enters additional characters.

---

---


**Example:** To enter “Hello” in T9 mode, press the **4**, **3**, **5**, **5**, and **6** keys.

---

The word that you type displays on the screen and may change with each consecutive key press due to the internal linguistic dictionary.

2. Enter the whole word before editing or deleting the keystrokes.

 
3. When the word correctly displays, go to step 4.

If the word doesn't display correctly, press  to display alternative letter choices for the current key you pressed.

---

**Example:** Both the words “Of” and “Me” use the 6 and 3 keys. The phone displays the most commonly used choice first.

---



4. Press  to accept the currently displayed word, insert a space, and start entering the next word.

### Deleting characters in T9 mode

- ▶ Press  once to delete a previous character.  
– or –

Press and hold  to clear the display.

## Adding a new word into the T9 dictionary

1. After pressing the keys corresponding to the word you want to add, press  to display alternative words. If the last alternative word is not recognized by the dictionary, the screen displays **Spell** on the bottom left line.
2. Press **Spell** (LSK).
3. Enter the word you want to add using ABC mode. For more information, refer to “*Changing the Text Input Mode*” on page 37.
4. Press **Add** (LSK) or  after you finish entering the new word.

The word is added to the T9 dictionary and becomes a word for the associated keypress series.



---

**Note:** This feature may not be available for some languages. The **1** key has some emoticons associated with it. To enter other special characters within the T9 mode, press and hold  to cycle through these characters.


---

## Entering additional T9 characters



To enter periods, hyphens, apostrophes, and other special characters:

- ▶ Press  →  to cycle through these available characters (see “*Keys*” on page 41.) T9 mode applies grammar rules to ensure that correct punctuation is used.

To shift case in T9 mode:



1. Press . There are 3 cases: Initial capital (**Abc**), Capital lock (**ABC**), and Lower case (**abc**). The case displays in the upper, right corner of the screen.
2. Enter the next character using the new case. You can move the cursor by using the Navigation keys.

To delete letters:


- ▶ Press  once to delete a previous character.  
– Or –  
Press and hold  to clear the display.

## Using ABC Mode


### To enter text in ABC mode:

1. Press  (RSK) to change the text input mode.
2. Scroll to the **ABC** mode and press **Select** (LSK) or  .  
Use the **2** to **9** keys to enter your text.
3. Press the key labeled with the letter you want. Once for the first letter, twice for the second letter, and so on.



### To enter periods, hyphens, apostrophes, and other special characters:

- ▶ Repeatedly press  to cycle through periods, hyphens, apostrophes, and other special characters. ABC mode applies grammar rules to ensure correct punctuation.

### To shift case in ABC mode:

- ▶ Press  to shift case in ABC mode. There are 3 cases: Initial capital (**Abc**), Capital lock (**ABC**), and Lower case (**abc**). The case displays in the upper, right corner of the screen. You can move the cursor by using the Navigation keys.

### To delete letters:

- ▶ Press  once to delete a previous character.  
– or –  
Press and hold  to clear the display.













---

**Note:** The cursor moves to the right when you press a different key. When entering the same letter twice or a different letter on the same key, just wait for a few seconds for the cursor to move to the right automatically, and then select the next letter.

---

## Keys



By default, the first letter of an entry is capitalized and all consecutive letters are kept in lowercase (unless the Shift key is used). After a character is entered, the cursor automatically advances to the next space after two seconds or when you enter a character on a different key. In ABC mode, characters scroll in the following order (lowercase characters shown in parentheses):

	. @ , : ? - ! ' / 1		P Q R S 7 (p q r s 7)
	A B C 2 (a b c 2)		T U V 8 (t u v 8)
	D E F 3 (d e f 3)		W X Y Z 9 (w x y z 9)
	G H I 4 (g h i 4)		0 (press and hold) (Adds a space)
	J K L 5 (j k l 5)		* (press and hold) Symbol
	M N O 6 (m n o 6)		# (press and hold) Shift (Toggles Lower/Uppercase)


## Using the Numeric Mode

The Numeric mode enables you to enter numbers into a text message.



### To enter text in Numeric mode:


1. Press  (RSK) to change the text input mode.
2. Scroll to the **Numeric** mode and press **Select** (LSK) or . Use the **2** to **9** keys to enter your text.
3. Press the keys corresponding to the digits you want to enter.

## Using Symbol Mode

Symbol mode enables you to insert symbols and punctuation marks into text. To display a list of symbols press and hold .

### To enter text in Symbol mode:

1. Press  (RSK) to change the text input mode.
2. Scroll to the **Symbol** mode and press **Select** (LSK) or .
3. Use the Navigation key to select an onscreen symbol set and press the corresponding number key.

4. Press **OK** (LSK). The new symbol is inserted into your message. Each onscreen symbol set offers different symbols for each key.
5. To clear the symbol(s), press . When the input field is empty, this key returns the display to the previous mode.



## Section 6: Messaging

---

This section describes how to send or receive different types of messages. It also explains the features and functionality associated with messaging.

### Types of Messages

Your phone provides the following message types:

- Email Messages
- Text Messages
- Picture Messages
- Voicemail

### Display Icons for Messages

When your handset receives new messages, icons display on the screen in two locations: on the View Tab that displays on the lower portion of the screen, and on the top of the screen. The following table outlines the Icons that appear within the Icon area and View Tabs:

#### Icon area:



A new text message was received.



A new voice message was received.



A new Picture or Video message was received.

#### View Tab area:



A call was missed.



A new message was missed.



 
A new voicemail message was missed.

## View Tab

The View Tab is an area that displays on the screen when a missed call, message, or voicemail is sent to the phone.

The three View tabs that display icons are:

- New messages
- Missed calls
- New Voice mail messages

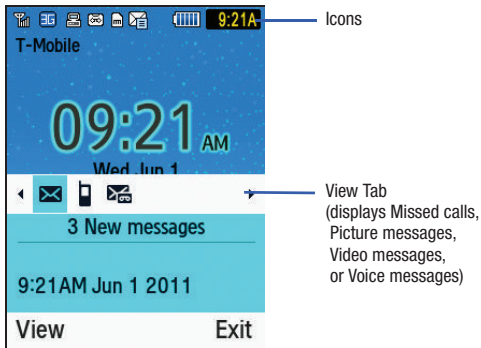


You can search through missed calls or unviewed messages by using the optical joystick (or **Right** and **Left** navigation keys) to

select the associated message tab, then pressing the associated left softkey (**View**, **Call**, or **Dial**).

## Text Messages

Short Message Service (SMS) allows you to send and receive short text messages to and from other mobile phones.


The Message icon (  ) displays in the icon area when you have received a new text message. When the memory is full, the message icon flashes on your phone and you cannot receive any new messages. You must delete a message before you can receive additional messages. This type of message must first be retrieved from T-Mobile's before it can be viewed.


- ▶ Use the **Options** (LSK) → **Delete** function in each message box to erase obsolete messages.

## Creating a Simple Text Message

1. From the Home screen, press **Menu** (LSK) → **Messaging** → **Create message**.
2. Highlight the **To** field and enter a phone number.

– or –

Highlight the **To** field and press **Add** (  ) to add a recipient and choose from one of the following:

- **Recent recipients:** allows you to select from recipients of your previous messages.
- **Contacts:** allows you to enter the phone number you want from Contacts.
- **Groups:** allows you to select a group.
  - Highlight an option and press **Select** (LSK) or .
  - Highlight and enter and press **Add** (LSK) or  to place a checkmark alongside it.
  - Press **Done** (LSK) to complete the selection.

– OR –

Press the **Options** (LSK) and select one of the following:

- **Add recipients:** allows you to add Recent recipients, Contacts, or a Group.
- **View recipients:** allows you to view and add a recipient from the Recipient list.
- **Exit composer:** exits the composer and displays the Create new screen.

---

**Note:** Your recipient must reside in Contacts before you can add the recipient to this message.

---

3. Highlight the text field and create your message.

---


**Note:** For further details about entering characters, see “*Changing the Text Input Mode*” on page 37.

---

4. Highlight the recipient area, and press **Options** (LSK) when you finish entering your message. The following options are available:
  - **Add recipients:** allows you to add Recent recipients, Contacts, or a Group.
  - **Send:** allows you to deliver the current message.
  - **View recipients:** displays a list of the current message recipients.
  - **Save to:** saves this message to either the Drafts or Templates folder.
  - **Exit composer:** exits the composer and displays the Create new screen.
5. Press the **Options** (LSK) and select **Send** () to send the current message.

## Picture Messages

This menu allows you to use the Multimedia Message Service (MMS) to create a Picture messages.


Picture Messaging is a messaging service that provides delivery of personal picture messages from phone to phone or from phone to email. The Picture messaging icon () displays in the icon area when you have received a new text message.

In addition to the familiar text content available via traditional text messages, picture messages can contain images, graphics, voice, and audio clips.

A Picture Messaging message is a multimedia presentation contained in a single file. It is not a text file with attachments.

Using the Picture Messaging feature, your phone can receive and send messages that contain multimedia files, such as photos, sounds and images that you downloaded from the Internet and voice notes you recorded. This function is available only if it is supported by your service provider. Only phones that offer picture messaging features can receive and display picture messages.

## Creating and Sending a Picture Message

1. From the Home screen, press **Menu** (LSK) → **Messaging** → **Create message**.
2. Highlight the **To** field and enter a phone number.  
– or –
3. Highlight the **To** field and press **Add** () to add a recipient and choose from one of the following:
  - **Recent recipients:** allows you to select from recipients of your previous messages.
  - **Contacts:** allows you to enter the phone number you want from Contacts.
  - **Groups:** allows you to select a group.– or –

Press the **Options** soft key and select one of the following:

- **Add recipients:** allows you to add Recent recipients, Contacts, or a Group.
- **View recipients:** allows you to view and add a recipient from the Recipient list.
- **Exit composer:** exits the composer and displays the Create new screen.

---

**Note:** Your recipient must reside in Contacts before you can add the recipient to this message.


---

4. Highlight the text field and create your message.

---

**Note:** For more information about entering characters, see “Using ABC Mode” on page 40. You can enter up to 2000 standard Alphabet characters per page in your message. The message can be up to 20 pages in length.

---

5. Scroll down to the attachment options, highlight an option, and press . The following options are available:

- **Add photo:** allows you to add a photo by either taking a new picture or adding an existing photo.
  - **Take photo:** activate the camera so you can take a picture and attach it to this message.
  - **Add from photos:** attach a photo from the Photos folder.
- **Add video:** allows you to add a video by either recording a new video or adding an existing video.
  - **Record video:** record a video to attach to this message.
  - **Add from video:** attach a video file from the Videos folder.
- **Add sound:** allows you to add a sound by either recording a new audio message or adding an existing audio file.
  - **Record sound:** record a voice note to attach to this message.
  - **Add from sounds:** attach a sound file or voice list from the Sounds folder.

- **Add others:** allows you to add an attachment such as: a Files, Name card, Appointment, Anniversary event, Private, Holiday, Important, Tasks, Memo, or Bookmarks.

When an attachment is detected, the message is changed into a picture message.

6. After adding the attachment, press **Options** to set options for this message:

- **Preview:** allows you to view the message prior to sending.
- **Jump to recipient field:** allows you to add Recent recipients, Contacts, Groups, or send this message to the Online Album.
- **Jump to attachment bar:** allows you to choose from one of the available attachment options.
- **Insert text:** allows you to insert a Text templates, Text emoticon, Contacts, or Bookmarks. The Text templates allow you to apply one of the preset message templates to the text. Select one of the 10 items stored in the **Text templates** menu. Contact allows you to add names and phone numbers to your message. Bookmarks allows you to add Internet addresses to your message.
- **More:** allows you to Add page, Add subject, Edit style, Sending options, or Select a language (Français, or Español) for this message.
- **Exit composer:** exits the composer and displays the Create new screen.

7. Press **Send** () to send the current picture message.

## Message Inbox

The Message inbox stores received messages. You can tell what kind of message it is by the icon displayed. If the open envelope icon displays then the message was read, otherwise the closed envelope icon displays. The following types of messages may display in your Message inbox:

- Text messages 
- Picture or Video messages 

When you enter the Message inbox, the list of messages displays with the sender's phone numbers, or names, if available in your Contacts. After you read the message, the open envelope icon displays.

---

**Note:** Press the **Left** or **Right** Navigation keys or scroll across the optical joystick to move between **Conversations**, **Drafts**, **Templates** (Text and Picture message templates), and **My folders**.


---

- ▶ From the Home screen, press **Menu** (LSK) → **Messaging** → **Conversations**.

## Message Threads

Sent and received text/picture messages are grouped into message threads. Threaded messages allow you to see all the messages exchanged between parties and displays a contact on the screen. Message threads are listed in the order in which they were received, with the latest message displayed at the top.

**To reply to a text message:**

1. From the Home screen, press **Menu** (LSK) → **Messaging** → **Conversations**.
2. Select a text message from the list and press **View** () to view the contents.
3. Scroll down to the **Reply** field and compose your reply. Your texts appear within a light Blue box and your caller's reply's appear within a white box.


---

**Note:** Your text chatter is displayed on-screen as a "bubble". Your recipients' replies are described as a reply bubble.

---

4. Press **Send** () to send the current picture message.

## Viewing a Text Message

1. From the Home screen, press **Menu** (LSK) → **Messaging** → **Conversations**.
2. Select a text message from the list and press **View** () to view the contents.

– or –

From the message list, press **Options** (LSK) and select one of the following:

- **Create message:** allows you to create a new message.
- **Call:** Places a call back to the number.
- **Delete:** deletes the selected text message, multiple messages, or all messages.
- **Save to contacts:** saves the selected contact information to Contacts.

---

**Note:** The **Save to Contacts** feature displays only if the contact information is not already saved to Contacts.

---

- **Sort by:** allows you to sort messages by Date, Sender, or Frequency.
- **Search:** allows you to search through your current text message conversations for keywords.



3. Scroll down to the **Reply** field and compose your reply message.

– or –

Select a message bubble and press **Options** (LSK) while reading a text message to display the following:

- **Full Composer:** launches the full text composer screen.
- **Attach:** allows you to attach a file from your available Media folder (Photos, Images, Music, Sounds, Videos, or Other files).
- **View Recipient list:** allows you to view and add a recipient from the Recipient list.
- **Call:** places a call back to the number.
- **Delete:** allows you to delete bubbles from the current message such as: Selected, Multiple, or All.
- **Forward:** allows you to forward the message to another number.
- **Lock/Unlock:** allows you to lock or unlock the message.
- **Save to:** saves the selected message to either your Drafts or Templates folder.
  - When you save a highlighted message bubble as a text message template it can later be used as a stock reply to recipient messages.
- **Exit conversation:** exits from the current message conversation (thread).

## Viewing a Picture Message

1. From the Home screen, press **Menu** (LSK) → **Messaging** → **Conversations**.
2. Highlight a message from the list and press **View** () to view the contents.
3. Highlight the message bubble containing the grey multimedia icon and press **Play/Pause** () to play or pause the multimedia message. Press **Stop** (LSK) to stop the playback.


– or –

After viewing the media (**Stop** [LSK]), press **Options** (LSK) to display the following:

- **Reply**: allows you to reply to the current sender.
- **Call sender**: allows you to call back the current sender.
- **Forward**: allows you to forward the message to another number.
- **Replay**: allows you to replay the current media attachment.
- **Save to contacts**: allows you to save the current senders' contact information into your Contacts list as a new entry.
- **Delete**: allows you to delete the current media file.
- **Save media**: saves the selected attachment to either your Phone or Memory card.

- **Lock/Unlock**: allows you to lock or unlock the attachment.
- **Save to templates**: saves the selected attachment to your T
- **More**: provides additional options such as: Move to my folder, Print via Bluetooth, and Properties

## Viewing a Picture Message When You Receive It

When a new picture message comes in, the icon area displays the Picture Messaging Message icon () .

---

**Note:** The message can also be displayed as a missed Picture message.

---


1. Press **View** () to view the picture message.

– or –

Press **Exit** (RSK) if you want to view the message later in the Message inbox.

– or –

Press **Options** (LSK) to access the various options previously described.

2. Press  when you are finished.



## Drafts

This message box stores messages you may want to edit or send at a later time. When you enter this menu, the list of draft messages is displayed.

1. From the Home screen, press **Menu** (LSK) → **Messaging** → **Drafts**.

---



**Note:** Press the **Left** or **Right** Navigation keys or scroll across the optical joystick to move between **Conversations**, **Drafts**, **Templates** (Text and Picture message templates), and **My folders**.

---

2. Highlight a message from the Drafts list and press **Options** (LSK) to select from the following options:
  - **Send:** allows you to send the draft message.
  - **Preview:** allows you to preview the multimedia contents of an MMS message.
  - **Delete:** deletes the Selected, Multiple, or All messages.
  - **Lock/Unlock:** locks the selected message to protect it from deletion, or unlocks the message to allow deletion.
  - **More:**
    - **Move to my folder:** the draft message to a personal folder.
    - **Sort by:** allows you to sort the messages stored in this folder by Date, Recipient, Type, Subject, Size, or Lock/Unlock.
    - **Properties:** shows you information about the draft message.

– or –

Press **Edit** () and alter the message contents.

3. Press **Send** () to send the message.
4. Press  to return to the Home screen.

---

**Tip:** While viewing a draft message, press **Options** to choose different options. Options depend on the type of message.

---

## Templates




Besides entering message text using the keypad keys, you can speed message composition by including copies of stored text and/or image templates in your message.

- ▶ From the Home screen, press **Menu** (LSK) → **Messaging** → **Templates**.

The following options are available:

- **Text templates**
- **Picture Message templates**

## ***Sending a Text Message Template***


1. From the Home screen, press **Menu** (LSK) → **Messaging** → **Templates** → **Text templates**.
2. Select a template from the **Templates** list and press **Send** (  ) to send the message.
3. Press **Add** (  ) and select from one of the following:
  - **Recent recipients:** allows you to select a number or an address from the last 10 destinations you entered.
  - **Contacts:** allows you to enter the phone number you want from Contacts.
  - **Groups:** allows you to send this message to a group.
4. Select the text message field to alter the template if desired.
5. Press **Send** (  ) when you are finished.

## ***Creating a new Picture Message Template***

1. From the Home screen, press **Menu** (LSK) → **Messaging** → **Templates** → **Picture message templates**.
2. Press **Create** (LSK) to create a new template.
3. Highlight the **Subject** field and enter your text.
4. Highlight the text field and create your message.

5. Scroll down (or press the **Down** Navigation key), then select one of the following:
  - **Add photo:** allows you to add a photo by either taking a new picture or adding an existing photo.
    - **Take photo:** activate the camera so you can take a picture and attach it to this message.
    - **Add from photos:** attach a photo from the Photos folder.
  - **Add video:** allows you to add a video by either recording a new video or adding an existing video.
    - **Record video:** record a video to attach to this message.
    - **Add from video:** attach a video file from the Videos folder.
  - **Add sound:** allows you to add a sound by either recording a new audio message or adding an existing audio file.
    - **Record sound:** record a voice note to attach to this message.
    - **Add from sounds:** attach a sound file or voice list from the Sounds folder.
  - **Add others:** allows you to add an attachment such as: a Files, Name card, Appointment, Anniversary event, Private, Holiday, Important, Tasks, Memo, or Bookmarks.
6. Press **Save** (  ) to store the new picture message template.

## **Sending a Picture Message Template**


1. From the Home screen, press **Menu (LSK) → Messaging → Templates → Picture message templates**.
2. Highlight a template from the **Picture message templates** list and press **Options (LSK) → Send**.
3. From the **Create** screen, highlight the **To** field, press **Options (LSK)** and select one of the following options:
  - **Add recipients:** allows you to add recipients for the new template. Choose from: Recent recipients, Contacts, Groups, and Online album.
  - **Preview:** allows you to view the message prior to sending.
  - **Save to:** save the current message to either the drafts or picture message templates list.
  - **Exit composer:** exits the composer and displays the Create new screen.
4. Select the text message field to alter the template if desired.
5. Press **Send** (  ) when you are finished. The template message is sent to the selected recipient(s).

## **My folders**

Use My folders to manage and organize your messages and store them on your phone.

- ▶ From the Home screen, press **Menu (LSK) → Messaging → My folders**.

### **Creating a new folder**

1. Press **Create (LSK)**.
2. Enter the title of the folder and press the **OK (LSK)** or .

The newly created folder displays on the My folders screen.

## **Voicemail**

This menu helps you access your voice mailbox, if provided by your network. You can also setup Voicemail from this menu.

1. From the Home screen, press **Menu (LSK) → Messaging → Voicemail**.
2. At the prompt, press **Yes (LSK)**, if you want to set up your Voicemail, or **No (RSK)** to reject WVM.
3. Select **Voicemail** again from the Messaging menu.

4. Press **Options** (LSK) to access the following application options:

- **Voicemail settings:** allows you to record a greeting, change your PIN, or activate the voicemail feature.
- **Call voicemail:** dials the voice mailbox.
- **Sync now:** synchronizes with the voicemail inbox and displays recent voicemail messages.

– or –

Highlight a listed voicemail message and press **Options** (LSK) to access the following voicemail message options:

- **Reply:** allows you to call or send message to sender.
- **Delete:** deletes the selected or multiple voicemail messages.
- **Forward via:** allows you to forward via Message or Email.
- **Save in contacts:** allows you to save number to Contacts.
- **Copy to:** allows you to copy voice sound to Phone or Memory card.
- **Sort by:** allows you to sort the voicemail inbox by Date, Sender, Played, or Duration.
- **Voicemail settings:** allows you to record a greeting, change your PIN, or activate the voicemail feature.
- **Call voicemail:** dials the voice mailbox.
- **Sync now:** synchronizes with the voicemail inbox and displays recent voicemail messages.

## Voicemail settings

1. From the Home screen, press **Menu** (LSK) → **Messaging** → **Voicemail**.

---

**Important!** You must have previously activated your account to use this feature.

---

2. Press **Options** (LSK) → **Voicemail settings**.
3. Select **Record greeting**, **Change PIN**, or **Deactivate now**.

## Email

- ▶ From the Home screen, press **Menu** (LSK) → **Messaging** → **E-mail** to view received email messages.

The first time you select Email, a Welcome message displays. Follow the onscreen prompts.


---

**Note:** Confirm your email settings if you experience any issues with sending or receiving email.

---

## Exchange Email

Use the following procedure to configure your phone to synchronize with a corporate email account. Before you begin synchronizing, record the server and URL address of the Exchange server, your Exchange account user name, and your Exchange account password. You also need to know the domain name for the Exchange server, and whether to use SSL encryption.

1. From Idle mode, press **Menu** (LSK) → **Messaging** → **Exchange email**. The Exchange email Tutorial screen displays.
2. Press **Next**  to continue the tutorial, or **Manual** (LSK) to begin setting up the account.

---

**Note:** Data charges can apply to usage of email services.

---

3. Enter the appropriate information on the Server settings screen and press **Save** (LSK) to save your configuration.

## Social Buzz

When you first open this application the Status screen displays. After login to your social networking applications (Facebook, Myspace, or Twitter), status updates display automatically in the top box for any of your friends for each of these applications. Your My Facebook status displays your status automatically as you post. You can view a stream of updates from friends, as well as your inbox or wall.



1. From the Home screen, press **Menu** (LSK) → **Messaging** → **Social Buzz**.
2. Read the onscreen disclaimer and press **Continue** (LSK).
3. Read the onscreen End User License Agreement (EULA) and press **Accept** (LSK).

---

**Note:** The screen defaults to a Facebook login screen.

---



4. Scroll left or right to select a desired social networking icon (top of screen) such as Facebook, My Stream, Twitter, or MySpace, then log in to the application.
5. Sign in to the selected social networking service.

6. Press **More** (RSK) once you are signed in to refresh the screen, change settings, minimize the screen, exit, or view help.
7. Press  twice to exit the application.  
– or –  
Press  → **Yes** (LSK) when "Do you want to exit?" displays to exit this application.

## Instant Messaging (IM)

Instant Messaging is a way of sending short, simple messages that are delivered real time to users online.

Before using this feature, you need to subscribe to a messenger service. Your handset has two pre-loaded Messaging services (Windows Live Messenger, and Yahoo!). This message box stores messages that you may want to edit

1. From the Home screen, press **Menu** (LSK) → **Messaging** → **IM**.
2. Select an account, and press **Select** (LSK) or .
3. Enter a user ID and password information.
4. Press  to place a check mark next to **Save my password**, **Automatic sign-in**, or **Sign In as invisible**.

5. Highlight **Sign in** and press  to log on.


## Settings

The **Settings** menu allows you to set various message options, delete messages by folder, or check your phone's memory status.

- ▶ From the Home screen, press **Menu** (LSK) → **Messaging** → **Settings**.

## Messages settings

In this menu, you can set up a default text message or a picture message. The last setting you accessed is automatically activated for sending subsequent messages.

1. From the Home screen, press **Menu** (LSK) → **Messaging** → **Settings** → **Messages settings**.
2. Select an available option and press **Select** (LSK) or .
  - Choose from: **Text message**, **Text message center**, **Picture message**, **Voicemail**, or **Push message**.

## Text message

Centers around Text sending options. The following **Sending options** are available:

- **Reply path:** allows the recipient of your message to send you a reply message using your message center, if your network supports this service.
- **Request delivery report:** allows you to activate or deactivate the report function. When this function is activated, the network informs you whether or not your message was delivered.

## Text message center

Sets the default method of text message transmission used by the Text message center. The options are:

- T-Mobile
- Center 2
- Center 3
- Center 4

## Picture message

- ▶ Press **Save** (LSK) to store the new settings.

## Sending options

- **Priority:** you can select the priority level of your messages. Selections are: Normal, High or Low.
- **Expiration:** allows you to select the length of time for your message to remain on the MMS server: Maximum, 1 day, 2 days, 1 week, 2 weeks, Custom time(Hour).
- **Message size:** allows you to set a size limit for your message: 30 KB, 100 KB, 300 KB, 600 KB, or 1MB.
- **Request delivery report:** when enabled, the network informs you whether or not your message was delivered.
- **Request read report:** when enabled, the network informs you when your message is read.
- **Keep a copy:** when this option is enabled, a copy of your message is stored.
- **Add my name card:** allows you to add your name card to your message.

## Receiving options

This option specifies the category of messages you want to receive and allows you to set the following:

- **Send read report:** when enabled, your phone sends a notification back to the recipient indicating that your message was received.

- **Send delivery report:** when enabled, the phone informs the network whether or not your message was received.
- **Reject anonymous:** automatically rejects messages with a category of anonymous.
- **Reject advertisement:** automatically rejects messages with a category of advertisement.

### Auto resize image

- No Resize
- 100 KB
- 300 KB
- 600 KB
- 1MB

### Creation Mode

- Free
- Warning
- Restricted

### Default style

- Font color
- Font style (Small normal, Small bold, Small Italic, Medium normal, Medium bold, Medium italic, Large normal, Large bold, or Large italic)
- Background color
- Page duration (2 seconds, 5 seconds, 10 seconds, or a Custom time)

### Voicemail

This menu displays the default phone number used for access of phone's remote voicemail.

### Push Message

- **Receiving options:** you can specify whether to turn push message reception **On** or **Off**.
- **Service loading:** you can specify whether to load this service:
  - Always
  - Prompt
  - Never


### Delete by folder

This menu allows you to delete all of the messages in each message box. Or, you can also delete all of your messages in all message boxes at one time.

---

**Important!:** Once messages are deleted, they cannot be recovered.

---


1. From the Home screen, press **Menu** (LSK) → **Messaging** → **Settings** → **Delete by folder**.
2. Select a message box to clear. To delete all of your messages, select the **All** option.
3. Highlight a message box to clear and press **Mark** (  ) to place or remove a check mark next to your selection.



4. Press **Delete** (LSK) to delete the marked objects.
5. Press **Yes** (LSK) after you receive the **Delete? Locked messages** confirmation.

### **Memory status**

#### **To view the memory status:**

- ▶ From the Home screen, press **Menu** → **Messaging** → **Settings** → **Memory status** and press **Select** (LSK) or .

You can view the amount of the allocated memory and the memory available for picture messages. Scroll left or right to display the memory status for the various categories listed below.

The display shows the total space including the used and free space. You can also view how much space and the number of messages currently occupying each message box type:

- **Picture message**
  - Message inbox
  - Sentbox
  - Drafts
  - My folders
- **Text message** (saved on the phone)
  - Phone
  - SIM card
  - Message inbox
  - Sentbox
  - Drafts
  - My folders
- **Push message**
  - Phone
  - My folders
- **Voice mail**
  - Inbox
- **Configuration**
  - Phone
  - My folders

## Section 7: People

---

This section explains how to use and manage your Contacts list. You can save phone numbers to your phone's memory or to your SIM card.

### Mobile Backup

Your Contacts list is backed up by T-Mobile the first time you turn on your phone and each time you make a change to the address book.

- ▶ If notified that Contact sync is in progress, press either **Yes** (LSK) or **No** (RSK).

---

**Important!** You can view and manage all your contacts and update your Mobile Backup options at [my.t-mobile.com](http://my.t-mobile.com).

---

### Using the Contacts List

#### Storing a Number in the Phone's Memory

The default storage location for saving phone numbers to your contacts is your phone's built-in memory. As soon as the SIM card is inserted into the handset, the phone synchronizes the Contacts (using the Mobile backup feature) to the T-Mobile network. Additional, new contact information stores directly to the phone's memory and synchronizes with T-Mobile's network during predetermined, timed intervals.

For information on how to change this setting, see “*Save Contacts To*” on page 66. Also, numbers that were stored on your SIM card can later be copied to your phone's memory.

---

**Note:** When you copy a phone number from your SIM card to your phone, the number displays twice in your Contact list.

---



---

**Note:** When storing a Contacts list entry into your SIM card, note that only the Name, and Number are saved. To save additional information for a particular contact, such as notes, e-mail, etc., it is important to save that Contact into your phone's onboard memory.

---

1. From the Home screen, press **Menu** (LSK) → **People** → **Create contact**.
2. Enter a first name in the **First name** text box. For further details about how to enter characters, see “*Using ABC Mode*” on page 40.
3. Enter a last name in the **Last name** text box.
4. Highlight a number type by pressing the **Up** or **Down** Navigation key, then enter a number in the text box.

The following options are available:

- **Mobile:** assigns the number entered to the Mobile entry.
  - **Home:** assigns the number entered to the Home entry.
  - **Work:** assigns the number entered to the Office entry.
  - **Others:** allows you to enter an additional phone number for this entry.
  - **Email:** allows you to enter the email address for the contact.
  - **Group:** allows you to assign this contact to a group.
  - **Picture ID:** allows you to add a Picture ID assigned to the contact.
  - **Ringtone:** allows you to assign a Ringtone by choosing from one of the following locations: Voice list, Sounds, or Music.
  - **Birthday:** allows you to enter the contact's birthday.
  - **Address:** allows you to enter the address for the contact.
  - **Notes:** allows you to enter additional information about the contact. Up to 100 characters are allowed.
5. Press **Save** () to store your selections. The number saves to your selected destination and the new contact information displays.
  6. Press  to return to the Home screen.


## Copying a Contact Number

The default storage location for saving phone numbers to your Contacts list is your phone's built-in memory. To save a number to your SIM card, you need to change the Default saving option first.

---

**Note:** When you copy a phone number from your SIM card to your phone (or vice versa), the number displays twice in your Contact list. Only the icon adjacent to the Contacts entry indicates where the entry is stored (Phone or SIM).

---

1. From the Home screen, press **Menu** (LSK) → **People** → **Contacts**.  
– or –  
From the Home screen, press **Contacts** (RSK).
2. Highlight a Contacts entry and press **Options** (LSK) → **Copy to SIM card** → **Select/Multiple**. The SIM storage location is then indicated as a value (Ex: 6/250).  
– or –  
Highlight a Contacts entry and press **Options** (LSK) → **Copy to phone** → **Select/Multiple**.
3. Press  to return to the Home screen.


## Finding a Contact Entry


You can store phone numbers and their corresponding names onto either your SIM card or phone's built-in memory. They are physically separate but are used as a single entity, called Contacts.

---


**Note:** A Phone icon appears to the left of a Contact entry stored on the phone. A SIM card icon appears to the left of an entry stored on the SIM card.

---

1. From the Home screen, press **Menu** (LSK) → **People** → **Contacts**.
2. Enter the first few letters of the name in the text box. The Contacts entries are listed, starting with the first entry matching your input.  
– or –  
Scroll up or down until the entry you want is highlighted.
3. Once you locate the desired entry, press  to dial the number.  
– or –  
Press **Options** (LSK) to access the following options:
  - **Edit:** allows you to edit the Name and number for the selected contact.

- **Send:** allows you to send a message to the selected number. You may choose between **Message**, **Email**, or **Exchange email**.
  - **New contact:** takes you to the Add new contact menu.
  - **Call:** places the call to the selected phone number.
  - **Copy to phone/SIM card:** copies the selected or all of the contacts to the phone or SIM card. Depends on where the contact was previously saved.
  - **Assign speed dial:** allows you to assign a speed dial key number to the selected Contacts entry.
  - **Send namecard via:** allows you to send your name card by way of **Message**, **Bluetooth** enabled devices, **Email**, or **Exchange email**.
  - **Delete:** allows you to delete the **Selected** or **Multiple** names and numbers from your Contacts or delete all numbers. You are asked to confirm your name and number deletion by pressing the **Yes** (LSK). To cancel, press the **No** (RSK).
  - **Print via Bluetooth:** sends the contents of the selected contact to a Bluetooth enabled printer.
  - **Mobile backup:** allows you to view the Last sync you performed, or view the **About mobile backup** information.
  - **Back:** allows you to return to the previous screen.
4. Press **View** (  ) to view contact information, then press **Options** (LSK) and select one of the following options:
    - **Edit:** allows you to edit the name and number fields in the entry. You can also add an email address and notes.

- **Send:** allows you to send a message to the selected number. You may choose between Message, Email, or Exchange email.
- **Copy to phone/SIM card:** copies the selected or all of the contacts to the phone or SIM card. Depends on where the contact was previously saved.
- **Send namecard via:** allows you to send your name card by way of **Message**, **Bluetooth** enabled devices, **Email**, or **Exchange email**.
- **Delete:** allows you to delete the contact. You are asked to confirm your name and number deletion by pressing the **Yes** (LSK). To cancel, press the **No** (RSK).
- **Print via Bluetooth:** sends the contents of the selected contact to a Bluetooth enabled printer.

5. Press **Call** () to dial the selected number.

## Dialing a Number from Contacts

Once you store phone numbers in People, you can dial them easily and quickly by using the location numbers assigned to them and listed in the Contacts.

---

**Note:** If you cannot remember a location number, you must go into the **Contacts** menu in the **People** menu to search for the entry by name. For more information, refer to “*Finding a Contact Entry*” on page 62.

---

1. From the Home screen, press **Menu** (LSK) → **People** → **Contacts**.


2. Enter the location number for the contact you want to dial. For more information, refer to “*Finding a Contact Entry*” on page 62.

– or –





Highlight the desired number and press .

## Caller Groups


### Adding a New Caller Group



1. From the Home screen, press **Menu** (LSK) → **People** → **Groups**.
2. Press **Options** (LSK) → **Create group**.
3. Enter a name for the new group in the **New group** field and press **Options** (LSK) → **Save** or .

## Configuring the Caller Groups Settings

1. Highlight the newly created group and press .
2. Press **Options** (LSK) → **Group settings**.
3. Highlight the **Picture** field and press **Select** (LSK) or  to create a Picture ID for this new caller group. Select from an available location on either the phone or SIM card:
  - **Wallpapers**: allows you to select a wallpaper image to use as a Picture ID.
  - **Downloaded images**: displays a list of downloaded images from which to select as a Picture ID.
4. Highlight the **Ringtone** field and press **Select** (LSK) or  to create a ringtone for this new caller group. Select from one of the following options:
  - **Sounds**: displays a list of sounds from which to select as a ringtone.
  - **Voice list**: displays a list of voice messages from which to select as a ringtone.
5. Press **Options** (LSK) → **Save** when you are finished.
6. Press  to return to Home screen.

## Editing a Caller Group

1. From the Home screen, press **Menu** (LSK) → **People** → **Groups**.
2. Scroll through the group list and highlight the group you want.
3. Press **Options** (LSK) → **Rename group**. Modify the text in the **Rename group** text box.  
– or –  
Press **Options** (LSK) → **Delete group**. Delete the selected group.  
– or –  
Press **Options** (LSK) → **Group settings**.
4. With **Group settings** enabled, highlight the **Picture** field and press **Change** () to alter the Picture ID for this caller group. The following options are available:
  - **Wallpapers**: allows you to select a wallpaper image to use as a Picture ID.
  - **Downloaded images**: displays a list of downloaded images from which to select as a Picture ID.

5. Highlight the **Ringtone** field and press **Change** () to alter the ringtone. The following options are available:
  - **Sounds**: displays a list of sounds from which to select as a ringtone.
  - **Voice list**: displays a list of voice messages from which to select as a ringtone.
6. Press **Options** (LSK) → **Save** when you are finished.
7. Press  to return to Home screen.

## Speed Dialing

Once you store phone numbers from your Contacts list, you can set up to 8 speed dial entries and then easily dial them whenever you want, by pressing the associated numeric key.

- ▶ From the Home screen, press and hold the speed dial numbers assigned to keys (2 to 9).




---

**Note:** Memory location 1 is reserved for your Voice mail server number and this speed dial location can not be changed.

---

## Setting Up Speed Dial Entries

1. From the Home screen, press **Menu** (LSK) → **People** → **Speed dial**.

2. Select an available keypad number key to where you wish to assign the new speed-dialing number, select from the 2 to 9 keys.
3. Press **Assign** (LSK) or .
4. Highlight a contact entry number from the list and press **Select** (LSK) or . You receive a **Speed dial assigned** confirmation and the **Speed dial** menu is displayed with the number assigned to the number key highlighted.
5. Press  to return to the Home screen.

## Management

The **Management** menu allows you to select where your contacts are saved, copy your SIM contacts to your phone and phone contacts to your SIM card, sort by contacts, delete your contacts, or check your memory status.

- ▶ From the Home screen, press **Menu** (LSK) → **People** → **Management**.

## View Contacts From

This option allows you filter the displayed contacts and to select the location from which you displayed available contacts **SIM card**, **Phone**, or the **Phone and SIM card**.

---

**Note:** The Phone and SIM card option from the **Menu → People → Management → View contacts from → Phone and SIM card** option must be selected in order to access all Contacts.



---

### Save Contacts To

This option allows you to assign the default storage location for new contacts. Choose from: **Phone, SIM card, Ask on saving.**

### Copy All To

You can copy all Contact entries from their current location to either the Phone's memory or the SIM card.

1. From the Home screen, press **Menu (LSK) → People → Management → Copy all to.**
2. Highlight **Phone** or **SIM card** the press the **Select (LSK)** or . By default, all the entries in the Contacts list on the Phone or SIM card are selected.
3. Highlight each contact you want to copy and press  to place a check mark next to the entry or place a check mark alongside **All** to copy all entries.
4. Press **Copy (LSK)** to copy the selected contacts to the Phone or SIM card.

### Delete contacts

Allows you to delete either **All** contacts, or those only from your **Phone** or **SIM card**.

### Delete all

---

**Important!:** Once contact entries are deleted, they cannot be recovered.

---

This option allows you to delete all your contacts from both your phone and SIM card.


### Deleting all of the Contact Entries

Perform the following procedure to delete all your entries from both your phone's memory and the SIM card.

---

**Important!:** Once contact entries are deleted, they cannot be recovered.

---

1. From the Home screen, press **Menu (LSK) → People → Management → Delete contacts.**
2. Select **All** and when the **Delete?** confirmation message displays, press **Yes (LSK)** to delete or press **No (RSK)** to cancel.
3. Press  to return to the Home screen.




## Deleting Contact Entries from the Phone or SIM

---

**Important!** Once contact entries are deleted, they cannot be recovered.


---

1. From the Home screen, press **Menu** (LSK) → **People** → **Management** → **Delete contacts**.
2. Select **Phone** and when the **Delete?** confirmation message displays, press **Yes** (LSK) to delete or press **No** (RSK) to cancel.  
– or –  
Select **SIM card** and when the **Delete?** confirmation message displays, press **Yes** (LSK) to delete or press **No** (RSK) to cancel.
3. Press  to return to the Home screen.

## Memory status

You can check how many names and numbers are stored in the Contacts, within the Phone, SIM and FDN. You can also see the current storage capacity of the memory.

1. From the Home screen, press **Menu** (LSK) → **People** → **Management** → **Memory status**.

2. Select an available category (**Phone**, **SIM**, or **FDN**) and free space by navigating to the submenus and deleting unnecessary information.
3. Press  to return to the Home screen.

## My Profile

My Profile allows you to create a virtual business card. Once completed, you can send the card to recipients as a V-card attachment.

---

**Note:** As with any profile, your profile can be associated with a group.



---

1. From the Home screen, press **Menu** (LSK) → **People** → **Contacts**.  
– or –  
From the Home screen, press **Contacts** (RSK).

---





**Note:** My profile is listed at the top of the contact list and displays the name of the associated group (if applicable).

---

2. Press **Edit** () to view if your profile is available.
3. Fill in the desired fields.
4. Press **Save** () to save your information.

## My number

This function is a memory aid, which you can use to edit or remove your own phone number. You can also edit the default name assigned to your phone number.

1. From the Home screen, press **Menu** (LSK) → **People** → **My number**.
2. Press (  ) to change the information.
3. Highlight the **Name** field and enter in desired text to name your phone. Press and hold  to erase any current entry.
4. Scroll down and press  to erase the current entry and type in a new number if desired.
5. Press **Save** (  ) when finished.

---

**Note:** If you later need to edit the information in these fields, highlight a field and press **Options** (LSK) → **Edit**.

---

## Service Dialing Numbers

You can view the list of Service Dialing Numbers (SDN) assigned by your service provider. These numbers include emergency numbers, customer service numbers and directory inquiries.

- ▶ From the Home screen, press **Menu** (LSK) → **People** → **Service number**. The service numbers are displayed.

## Section 8: Media and Web

---

This section outlines the media features available on your phone such as the web2go browser, Games and Apps, photos, music, images, sounds, videos, and other types of files.

### T-Mobile Mall

This built-in application provides access to several phone features and tunes.

1. From the Home screen, press **Menu** (LSK) → **T-Mobile Mall**.
2. Read and accept the on-screen disclaimers to complete the activation process.
3. Select from the available on-screen options:

### web2go

This section outlines the web2go features available on your phone. For more information, contact T-Mobile.

**web2go**<sup>SM</sup> is a WAP (Wireless Application Protocol) browser which provides you wireless access and navigation of the Web using your phone.

**To access web2go via the menu:**

- ▶ From the Home screen, press **Menu** (LSK) → **web2go**.

---

**Tip:** From the Home screen you can also quickly press **web2go** (RSK) to bypass the need to access the main menu.

---

---

**Important!** To use the web2go feature, Javascript must be enable from your phone's browser settings menu (**Menu** → **web2go** → **Browser settings** → **Preferences** and enable **Run javascript**).

---

The following options are available:

#### Home

Selecting this menu connects the phone to the network and loads the web2go homepage.

The content of the web2go startup homepage depends on your Wireless Web service provider. To scroll through the screen, use the **Up** and **Down** keys.

To go to the startup homepage from any other screen in the web2go, use the **Home** option. For more information on the web2go menus, see *“Selecting and Using Menu Options”* on page 71.

- ▶ From the Home screen, press **Menu** (LSK) → **Media** → **web2go** → **Home**.

– or –


From the Home screen, press **Menu** (LSK) → **web2go**.

When you access the Browser, the **web2go home page** displays the following topics:


- **Google Search:** allows you to quickly search for online topics using the Google search engine.
- **Advertisement:** provides an on-screen advertisement bubble providing suggested phone applications.
- **More sites:** provides you access to additional sites.
- **Downloads:** allows you to download Ringtone, Callertunes, Games, Apps, or Gift and Deals.
- **Yahoo Mail:** displays the Sign in for Yahoo Mail. Register by sending a text message with the word START to 92500 if you are not already registered.
- **Facebook:** displays the Facebook Log in. Sign up from this page if you are not already registered.
- **Monachie, NJ:** based on your location settings, AccuWeather displays the current weather conditions The default location is NJ.
- **CNN:** displays current news headlines and more.
- **ESPN:** displays current sports news headlines and more.

- **What's Now:** provides quick access to a variety of different entertainment and shopping websites.
- **My Account:** provides quick access to your My Account page.

### Exiting web2go


- ▶ To exit the browser at any time, press  .

### Navigating web2go



1. To scroll through browser items, either scroll around the screen using the optical joystick or press the **Up** or **Down** Navigation key.
2. To select browser items, press  .
3. To return to the previous page, press **Back** (RSK).
4. Press **Back** (RSK) until the startup **Home** page displays.



## Entering Text in web2go

When you are prompted to enter text, the currently active text input mode is indicated on the screen. The following modes are available:

- **ABC mode:** this mode allows you to enter letters by pressing the key labeled with the letter you want.
- **T9 (English):** this mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter; for example, pressing  can enter G, H, or I. However, the T9 mode automatically compares the series of keystrokes you make with an internal linguistic dictionary to determine the most likely word, thus requiring far fewer keystrokes than the traditional ABC mode.
- **Numeric:** this mode allows you to enter numbers.
- **Symbol:** this mode allows you to enter symbols, such as punctuation marks.

### To change the text input mode:

1. Press **Right** soft key (RSK) one or more times.
2. To enter a space, press  (portrait mode) or  (QWERTY landscape mode).
3. To edit text, set the cursor to the right of the character(s) to be corrected.

4. To delete current characters, press  (portrait mode) or  (QWERTY landscape mode) as required.
5. Enter the correct character(s).

## Selecting and Using Menu Options

Various menus are available when you are using web2go to navigate the Wireless Web.

### To access the browser options menu:

---

**Note:** The menus may vary, depending on your version of web2go.

---

- ▶ From an active page, press **Options** (LSK) and select from the following options:
  - **Reload:** reloads the current page.
  - **Resize page:** allows you to manually resize the page by sliding the size bar to the left or right.
  - **Forward:** pages forward one page
  - **Go to:** navigates to the URL address, Homepage, Bookmarks, History, or Saved pages.
  - **Save:** allows you to save the Image or Page.
  - **Add to bookmarks:** adds the current URL to Bookmarks.
  - **Send URL via message:** sends the currently viewed URL to a recipient as a message.

- **Page details:** allows you to view details about the current page such as: Title, Address, Size, MIME type, and Last updated.
- **Browser settings:** various settings are available, see “*Browser Settings*” on page 73.
- **Exit browser:** exits the browser page you are viewing and returns to the Home page.


### Enter URL


This menu allows you to manually enter the URL address of a web site that you wish to access. For further details about entering characters, see “*Entering Text*” on page 35.

### Bookmarks

This menu stores up to 15 URL addresses.

To store a URL address:

1. From the Home screen, press **Menu** (LSK) → **web2go** → **Bookmarks**.
2. Press **Options** (LSK) → **Add bookmark**.
3. Enter a name for the bookmark in the **Title** text box the address in the **URL** text box and press **Save** (  ).

4. Highlight the newly created bookmark and press **Options** (LSK) to access the following options:
  - **Edit bookmark:** allows you to edit the address.
  - **Delete:** allows you to delete the selected address or multiple addresses.
  - **Add bookmark:** allows you to enter a new bookmark URL.
  - **Send URL via message:** allows you to send the selected bookmark as a text message.
  - **Set as homepage:** allows you to set the selected bookmark as a homepage.
5. Select a URL and press **Go** (  ). Your browser displays the site.

### Saved Pages

This option displays a list of the pages that were saved while navigating the browser.

### History

This option provides you with a list of the most recently visited web sites. You can use these entries to return to previously visited, but not bookmarked, web pages.

## Browser Settings

Various settings are available when you are using the web2go browser to navigate the wireless web.

- ▶ From the Home screen, press **Menu** (LSK) → **web2go** → **Options** (LSK) → **Browser settings**. Choose from the following options:

### Clear cache

You can clear the information stored in the cache, which is the phone's temporary memory and stores the most recently accessed Web pages.

- ▶ Press **Yes** (LSK) to confirm the deletion. Otherwise, press **No** (RSK).

### Cookies

Use this option to select cookie mode or to delete cookies.

- **Cookie mode:** this mode allows you to Accept all cookies, Reject all cookies, or Prompt you when a site wants to deposit a cookie.
- **Delete cookies:** deletes all currently stored cookies. Cookies identify who you are when you visit favorite web sites; however, they can also be used to track your web surfing habits.

#### To delete cookies:

- ▶ Highlight **Delete cookies** and press **Select** (LSK) or  → **Yes** (LSK) at the **Delete cookies?** prompt.

## Preferences

The Preferences option allows you to set web2go preferences such as Run javascript, Display images, Play sound, and View mode.

### About Browser

About Browser displays information about the browser such as the type and version.

## Games and Apps

Use **Games and Apps** to download MIDlets (Java applications that run on mobile phones) from various sources using the browser and store them in your phone.

- ▶ From the Home screen, press **Menu** (LSK) → **Media** → **Games and Apps**.

When you access the **Games and Apps** menu, the list of default games displays. Once you download new games, they are added to the list.

## Find Great Games

You can download more games from the T-Mobile website by using the **Find Great Games** option.

- ▶ From the Home screen, press **Menu (LSK) → Media → Games and Apps → Find Great Games.**

---

**Note:** When downloading games, charges may apply. MIDlet game options differ depending on the MIDlet selected.

---

## The Best Apps

You can download the best T-mobile applications from the T-Mobile website using this feature.

- ▶ From the Home screen, press **Menu (LSK) → Media → Games and Apps → The Best Apps.**

---

**Note:** When downloading applications, charges may apply.

---

## Social Buzz


This menu item lets you log in to your social networking applications (twitter, Facebook, or Myspace) and get automatic status updates for each of these applications.

- ▶ From the Home screen, press **Menu (LSK) → Media → Games and Apps → Social Buzz.**

For more information, refer to “*Social Buzz*” on page 55.

## Photos

Use the **Photos** option, to manage photos saved on your phone.

1. From the Home screen, press **Menu (LSK) → Media → Photos**. When you access this menu, your phone displays the photos in Line view (column), which shows them as small images. Use the Navigation keys to scroll through the photos.
2. To view the photos on the full screen, press **View** (). To go back to Line view, press **Back (RSK)**.

## Photos Options

1. While viewing the image, press the **Options (LSK)** to display these options:
  - **Send to My Album:** allows you to send the selected photo to My Album.
  - **Send via:** allows you to send the selected photo as a Message, Email, Exchange email, or to a Bluetooth enabled device.
  - **Set as:** allows you to set the photo as a Wallpaper or as a Picture ID.
  - **Default destination:** allows you to Remove or Change the destination folder for your photos.
  - **Delete:** allows you to delete the currently active image.



- **Rename:** allows you to rename the photo.
- **Edit image:** allows you to take edit the current image by choosing from features such as: Effects, Adjustments, Transformations, Cropping, and Insertions.
- **Bluetooth visibility:** allows you to configure the visibility of your device via Bluetooth.

---

**Note:** The Bluetooth visibility option is available only if you are viewing an image stored on your phone and not within the default Memory card location.


---

- **Slide show:** allows you to display all available images as part of an onscreen slideshow where the images are cycled.
- **Print via Bluetooth:** allows you to send the selected photo to a Bluetooth enabled printer.
- **Lock/Unlock:** allows you to lock the image to protect it from deletion, or unlock it to allow deletion.
- **Properties:** allows you to view Basic details about the selected image.

### Deleting a Photo

You can delete photos one by one or all at one time.

1. From the **Photos** menu, highlight the photo you want to delete.
2. Press **Options** (LSK) → **Delete**.
3. Select an available option: **Selected**, **Multiple**, or **All**.

4. Press **Yes** (LSK) to confirm the deletion.
5. Press  when you are finished.

### My Album

**My album** is a private online picture album that you can use to store and share pictures, videos, voice messages, and text. When you take a photo, the phone prompts with **Send to: My Album Online?**

---

**Note:** When accessing My Album, charges may apply.




---

1. From the Home screen, press **Menu** (LSK) → **Media** → **Photos** → **My album**.

---

**Note:** The My album feature is only available from within the **Photos** → **On phone** tab.

---

2. In your browser, select the **Inbox Album** link and press **Go** ().
3. Use the **Up** or **Down** key to highlight a particular image and press  to view the photos.
4. Press  when you are finished.

## Camera

Use your phone's **Camera** to take photos of people or events while on the move. Additionally, you can send these photos to other people in a Picture Messaging message or set a wallpaper or picture ID image.

For more information about using the Camera and features, see *"Using the Camera"* on page 102.

## Images

In this menu, you can view the list of images downloaded from the web server, taken with the built-in camera, or received in messages. You can set an image as the current background image.

- ▶ From the Home screen, press **Menu** (LSK) → **Media** → **Images**. Choose from either: Fresh Wallpaper, Wallpapers, or Downloaded images.

### Fresh wallpaper

Using the Fresh Wallpaper option, allows you to access the T-Mobile website and download new images to use as wallpaper using the browser.

- ▶ Highlight **Fresh Wallpaper** and press **Connect** ()

---

**Note:** When downloading wallpapers, charges may apply.

---

## Wallpapers

Allows you to access the local default wallpaper images.

1. Select **Wallpapers**.
2. Press either **View** () to open the selected image full screen

– or –

Press **Options** (LSK) to select from available onscreen options.

- **Set as:** sets the image as Wallpaper or as a Picture ID.
- **Take Photo:** allows you to take a photo and use it as a wallpaper.
- **Create folder:** creates a new folder in which to contain your own images.
- **Sort by:** lists the images by Date, Type, Name, or Size.
- **Properties:** displays the image name, format, resolution, size, forwarding, date created, and location.

## Downloaded images

This menu allows you to access your downloaded images on your phone.

- ▶ With the image highlighted within the list, press the **Options** (LSK) to choose from the following options:
  - **Send to My Album:** sends the selected image to My Album.
  - **Send via:** creates a message to send the image as a Message, Email, Exchange email, or to another Bluetooth device.
  - **Set as:** allows you to set the image as a Wallpaper or Picture ID.
  - **Delete:** erases images. Choose from Selected, Multiple, or All.
  - **Move:** moves the Selected, or Multiple images to another location.
  - **Copy:** copies the Selected, or Multiple images to another location.
  - **Default destination:** Remove or Change the default destination for images.
  - **Rename:** renames the image.
  - **Take Photo:** allows you to take another photo with the camera.
  - **Create folder:** allows you to create a new folder in which to store images.
  - **Sort by:** lists images by Date, Type, Name, or Size.

- **Bluetooth visibility:** allows you to enable the image so it is visible to other Bluetooth devices. This option is available for a single image you are viewing, not selected or multiple images.

---

**Note:** The Bluetooth visibility option appears for downloaded images stored within the Phone and not on the SIM card.

---

- **Print via Bluetooth:** sends the selected image to a Bluetooth printer.
- **Lock/Unlock:** locks the image to protect it from deletion, or unlocks it to allow deletion.
- **Properties:** displays Basic details or Media Information about the image.

## Music

Your phone's **Music** features allow you to play and manage the music files stored on your phone.

1. From the Home screen, press **Menu** (LSK) → **Media** → **Music**.

---

**Note:** Music should be stored within the SD card. It is recommended you create a Music folder and store the DRM-free music files therein.

---

2. From the **On card** tab, select a music file and press **Options** (LSK) to choose from the following options:

- **Send via:** allows you to send the selected music file via Message, Exchange email, or to a Bluetooth enabled device.
- **Set as:** allows you to set the music file as a Ringtone, Individual ringtone, Alarm tone, Message tone, or as a Calendar reminder.
- **Delete:** allows you to delete the Selected, Multiple, or All music files.
- **Move:** allows you to move the Selected music file or Multiple music files to another location or folder.
- **Copy:** allows you to copy the Selected music file or Multiple music files to another location or folder.
- **Rename:** allows you to rename the selected music file.
- **Create folder:** allows you to create a folder in which to store the selected music file.
- **Sort by:** allows you to sort the music by Date, Type, Name, or Size.
- **Bluetooth visibility:** allows you to select one or multiple music files to share with other Bluetooth devices.
- **Lock/Unlock:** allows you to lock the music file to protect it from deletion or unlocks it to allow deletion.
- **Properties:** displays Basic details about the selected music file such as Name, Format, Size, Forwarding, Date created, and Location.

## Music Player

Use **Music Player** to add music files or play music stored in your playlist.


1. From the Home screen, press **Menu** (LSK) → **Media** → **Music** → **Music player**.
2. Select **All tracks**, **Artists**, **Albums**, or **Playlists** and press **Open** (LSK).
3. Highlight a music file, then press **Options** (LSK) and select one of the following options:
  - **Add to playlist:** allows you to add the Selected, Multiple, or All music files to a playlist.
  - **List by:** allows you to display music files by category such as: Recently added, My rating, or Title.
  - **Delete:** allows you to delete the Selected, Multiple, or All music files.
  - **Send via:** allows you to send this music file as a Message, Email, Exchange email, or to a Bluetooth device.
  - **Set as:** allows you to set the music file as Ringtone, Individual ringtone, Alarm tone, Message tone, or as a Calendar reminder.
  - **Properties:** displays Basic details about the selected music file.
  - **Settings:** set Background playing, choose Sound effects, change the 5.1 channel setting (requires attached earphones), and adjust the Volume limit.

4. Select a music file and press  to play the music. During playback, press **Options** (LSK) for playback options:

- **Transfer to Bluetooth stereo headset:** sends audio via Bluetooth to a Bluetooth stereo headset.
- **Set as:** allows you to set the music file as Ringtones, Individual ringtone, Alarm tone, Message tone, or as a Calendar reminder.
- **Send via:** allows you to send this music file as a Message, Email, Exchange email, or to a Bluetooth device.
- **Rate track:** select a rating for the track from 0 to 5 stars or No rating.
- **Add to Playlist:** allows you to add the current track to a playlist.
- **Properties:** displays Basic details about the music file.
- **Settings:** set Background playing, choose Sound effects, change the 5.1 channel setting (requires attached earphones), and adjust the Volume limit.
- **Shortcuts:** view keypad and navigation key shortcuts.

### Music Player Shortcut Keys

While playing a music file you can use one of the following shortcut keys to control the player.

1. From the Home screen, press **Menu** (LSK) → **Media** → **Music** → **Music player**.
2. Select a music file and press  to play the music.

3. While playing a music file, the following keys act as shortcuts:



**OK key.** Plays or pauses the music file, depending on which mode is active.

**Up Navigation key.** One press accesses the Music player listing of songs.

**Down Navigation key** stops the playback of the music file.

**Left Navigation key** plays the previous music file in the playlist. Press and hold to scrub back through the current song.

**Right Navigation key** plays the next music file in the playlist. Press and hold to scrub forward through the current song.

### Volume Keys

**Up Volume key:** Press to increase playback volume.

**Down Volume key:** Press to decrease playback volume.



To toggle between 5.1 channel surround sound mode and the currently selected equalizer setting (accessed via the 2 key).

 ABC

Press to change the Sound effects presets: NORM (Normal), AUTO, POP, ROCK, JAZZ, DAN (Dance), CLAS (Classical), LIVE, WIDE, CONH, CLAR, BASS, or EXTE.

 DEF

Press to adjust the song rating

 GHI

Press to toggle Player modes:

- Normal: songs are played in the order they appear in the current list.
- Repeat one: repeats the current track, until you stop playback.
- Repeat all: repeats all songs in the current playlist, until you stop playback.

 JKL

Press to toggle Shuffle mode On or Off.

4. Press  to exit and return to Home screen.

## Playlists



There are ten available playlists. You can add music files to any one of these playlists, and you can customize the playlists by renaming them. You cannot, however, add a new playlist or delete a playlist.

1. From the Home screen, press **Menu** (LSK) → **Media** → **Music** → **Music player** → **Playlists**.
2. Highlight a playlist and press  to open the playlist.



## Creating a Playlist

1. From the Home screen, press **Menu** (LSK) → **Media** → **Music** → **Music player** → **Playlists**.
2. Select **Create playlist**, enter a name for the playlist and press **Save** (LSK).

## Renaming a playlist

1. From the Home screen, press **Menu** (LSK) → **Media** → **Music** → **Music player** → **Playlists**.
2. Highlight a playlist and press **Options** (LSK) → **Rename**.
3. Press  to delete the previous name.
4. Enter a new name for this playlist and press **Save** (LSK) or .

## Adding Music Files to a Playlist

1. From the Home screen, press **Menu** (LSK) → **Media** → **Music** → **Music player**.
2. Highlight the playlist in which you want to add a music file and press .
3. Press **Options** (LSK) → **Add** → **Tracks**.
4. Locate and highlight a music file then press  to place a check mark next to the file(s) you want to add to this playlist.
5. Press **Add** (LSK) to add the music file(s).

## Sounds

In this menu, you can view the list of sounds downloaded from the web server or received in picture messages. You can also set a downloaded sound as the current ring tone.

- ▶ From the Home screen, press **Menu** (LSK) → **Media** → **Sounds**.

## Hottest Ringtones

In this menu, you can view a list of the Hottest Ringtones offered by T-Mobile.

1. From the Home screen, press **Menu** (LSK) → **Media** →

**Sounds** → **Hottest Ringtones**. A list of ringtones and other downloads display.

2. Select a category of ringtones, select a ringtone, then follow the prompts to download or purchase the ringtone.

## Browse CallerTunes

In this menu, you can view a list of CallerTunes and download them for your phone.

1. From the Home screen, press **Menu** (LSK) → **Media** → **Sounds** → **Browse CallerTunes**<sup>®</sup>.
2. A list of **CallerTunes** display.
3. Follow the prompts to download and purchase CallerTunes.

## Sounds

Use Sounds to manage sounds on your phone.

- ▶ Highlight an item in the Sounds menu and press **Options** (LSK). The following options are available:
  - **Set as**: allows you to set the sound as an Ringtone, Individual ringtone, Alarm tone, Message tone, or Calendar reminder.
  - **Create folder**: allows you to create a new folder to contain sounds.

- **Sort by:** allows you to sort sound files by: Date, Type, Name, or Size.
- **Properties:** displays the sound name, format, size, forwarding, date created, location.

## Voice list


The Voice list contains your recorded audio messages.

- ▶ Highlight an item and press **Options** (LSK). The following options are available:
  - **Send via:** allows you to send this voice file as a Message, Email, Exchange email, or to a Bluetooth enabled device.
  - **Set as:** allows you to set the voice file as Ringtones, Individual ringtone, Alarm tone, Message tone, or Calendar reminder.
  - **Delete:** deletes Selected, Multiple, or All voice files.
  - **Move:** moves Selected or Multiple voice files to another folder.
  - **Copy:** copies Selected or Multiple voice files to another folder.
  - **Rename:** allows you to rename the selected voice file.
  - **Create folder:** allows you to create a new folder for voice files.
  - **Sort by:** sorts the voice files by Date, Type, Name, or Size.
  - **Bluetooth visibility:** makes Selected or Multiple voice files visible to a Bluetooth device.
  - **Lock/Unlock:** locks the voice file to protect it from deletion, or unlocks the voice file to allow deletion.

- **Properties:** displays basic details about this voice file such as: Name, Format, Size, Forwarding, Date created, and Location.

## Videos

In this menu, you can record a video, or view a list of videos downloaded from the web server or received within multimedia messages. You can also view a video saved to your Videos folder or memory card.

1. From the Home screen, press **Menu** (LSK) → **Media** → **Videos**.
2. Highlight a video clip from your Videos folder and press **Play** (  ) to play it.  
– or –

Before you play the video, press **Options** (LSK) and select one of the following:

- **Send via:** sends the video using a Message, Email, Email exchange, or to a Bluetooth enabled device.
- **Delete:** deletes the Selected, Multiple, or All video files.
- **Move:** allows you to move the Selected or Multiple videos to another location.
- **Copy:** allows you to copy the Selected or Multiple videos to another location.
- **Rename:** changes the name of the video.



- **Create folder:** allows you to create a new folder to contain your videos.
- **Sort by:** allows you to sort and view videos by Date, Type, Name, or Size.
- **Bluetooth visibility:** allows you to enable Bluetooth to share the selected video or multiple videos with other Bluetooth devices.
- **Lock/Unlock:** locks the video file to protect it from deletion, or unlocks the video file to allow deletion.
- **Properties:** shows properties of the video, such as Name, Format, Resolution, Size, Forwarding, Date created, and Location.

### Recording a Video

Use your phone's Camcorder to take videos of people or events while on the move. You can send these videos in a message or to another Bluetooth device. For more information on how to record a video, see *"Recording and Sending a Video"* on page 106.

### Other Files

In **Other Files**, you can view or store other types of files without corruption, various document files and files stored in the phone's memory, or on a memory card.

Available file formats are Microsoft Word, Adobe PDF, or Plain text.

1. From the Home screen, press **Menu (LSK) → Media → Other files.**

2. Highlight a file and press the **Options (LSK)** to choose from the following options:

- **Send via:** allows you to send a file as an attachment via Message, Email, Exchange email, or to a Bluetooth enabled device.
- **Delete:** allows you to delete the Selected, Multiple, or All files.
- **Move:** allows you to move the Selected, or Multiple files to another location or folder.
- **Copy:** allows you to copy the Selected, or Multiple files to another location or folder.
- **Rename:** allows you to change the name of the selected file.
- **Create folder:** allows you to create a new folder in which to contain other files.
- **Sort by:** allows you to sort files by Date, Type, Name, or Size.
- **Bluetooth visibility:** allows you to enable Bluetooth to share the selected file or multiple files with other Bluetooth devices.
- **Lock/Unlock:** allows you to lock the file to protect it from deletion or unlock it to allow deletion.
- **Properties:** allows you to view Basic details about the selected file.

## **Memory Status**

With **Memory Status**, you can check the amount of memory being used and memory remaining for Photos, Music, Images, Sounds, Videos, Other files, or Games and Apps.

1. From the Home screen, press **Menu** (LSK) → **Media** → **Memory status**.
2. Scroll across the optical joystick or press the **Left** or **Right** navigation keys to scroll between the memory status **On phone** or **On memory card**.

## Section 9: Organizer

---

This section outlines the various applications that are available on your phone.

### Organizer

The Organizer allows you to set alarms, schedule appointments, view the calendar, create tasks, perform simple math calculations, check world time, perform unit conversions, set a timer, and use a stopwatch.

### Calendar

With the Calendar feature, you can:

- Consult the calendar by month, week, or day.
- Set schedules and note anniversaries
- Write memos to keep track of your schedule.
- Set an alarm to act as a reminder, if necessary.
- Check your memory status.

#### To navigate to the Calendar:

- ▶ From the Home screen, press **Menu** (LSK) → **Organizer** → **Calendar**.

When you select the **Calendar** menu, the following options are available:

### Month view

This is the default view for the Calendar application, the calendar displays the selected month with today's date highlighted.

- ▶ In Month view, press **Options** (LSK) for choose any of these options:
  - **View by:** displays the Day view or Week view for the selected day.
  - **Create:** allows you to create an Appointment, Anniversary, Holiday, Important, or Private event.
  - **Go to:** takes you to the Today's date or the date you entered.
  - **Event list:** displays a list of selectable events such as: Appointments, Anniversaries, Holidays, Important, or Private.
  - **Delete:** allows you to delete all events for a selected date, for a specified period, for this month, or before a date. You can also delete all events.
  - **Settings:** allows you to configure calendar viewing settings such as the Starting day (of the week) and View by.
  - **Missed alarm events:** displays a list of any missed events.
  - **Memory status:** displays the number of calendar events you presently have and how many events you can create for each category. For example: 0/50 means you used zero of fifty available events for this category.

## Week view


When you select this option, the calendar displays the selected week with today's date and time highlighted.

1. From the Home screen, press **Menu (LSK) → Organizer → Calendar → Options (LSK) → View by → Week**.
2. In Week view, press **Options (LSK)** for choose any of these options:
  - **View by:** takes you to the Day view or Month view for the selected day.
  - **Create:** allows you to create an Appointment, Anniversary, Holiday, Important, or Private event.
  - **Go to:** takes you to today's date or the date you entered.
  - **Event list:** displays a list of selectable events such as: Appointments, Anniversaries, Holidays, Important, or Private.
  - **Delete:** allows you to delete all events for a selected date, for a specified period, for this week, or before a date. You can also delete all events.
  - **Settings:** allows you to configure calendar viewing settings such as the Starting day (of the week) and View by.
  - **Missed alarm events:** displays a list of missed alarm events.
  - **Memory status:** displays the number of calendar events you presently have and how many events you can create for each category. For example: 0/50 means you used zero of fifty available events for this category.

## Day view


When you select this option, you are taken to the Day view of the selected day with any events listed.

1. From the Home screen, press **Menu (LSK) → Organizer → Calendar → Options (LSK) → View by → Day**.
2. In Day view, highlight the event and press **Options (LSK)** for choose any of these options:
  - **View by:** takes you to the Week view or Month view for the selected day.
  - **Create:** allows you to create an Appointment, Anniversary, Holiday, Important, or Private event.
  - **Send via:** allows you to send this event information as an attachment via Message, Email, Exchange email, or to a Bluetooth enabled device.
  - **Event list:** displays a list of selectable events such as: Appointments, Anniversaries, Holidays, Important, or Private.
  - **Delete:** allows you to delete the selected event, or delete all events.
  - **Save in Other files:** allows you to save this event information to Other files.
  - **Print via Bluetooth:** allows you to send this event information to a Bluetooth enabled device.
  - **Settings:** allows you to configure calendar viewing settings such as the Starting day (of the week) and View by.

- **Missed alarm events:** displays a list of missed alarm events.
  - **Memory status:** displays the number of calendar events you presently have and how many events you can create for each category. For example: 0/50 means you used zero of fifty available events for this category.
3. Press **View** (  ) to view the information about the selected event.


## Appointments

This option allows you to set appointments.

1. From the Home screen, press **Menu** (LSK) → **Organizer** → **Calendar**.
2. Press **Options** (LSK) → **Event list** → **Appointments**.
3. Press **Options** (LSK) → **Create**.
4. Enter the occasion in the **Title** text box then press the **Down** Navigation key.
5. Continue to enter other information including Details, Start date, Start time, End date, End time, Location, Alarm, Before, Alarm tone, Repeat and Until.
6. Press **Save** (  ) to save the Appointment event to the Calendar.


## Anniversaries

This option allows you to record anniversaries in your calendar. You can also set an alarm to remind you of important anniversaries.

1. From the Home screen, press **Menu** (LSK) → **Organizer** → **Calendar**.
2. Press **Options** (LSK) → **Event list** → **Anniversaries**.
3. Press **Options** (LSK) → **Create**.
4. Enter the occasion in the **Title** text box then press the **Down** Navigation key.
5. Continue to enter other information including Details, Date, Alarm, and Repeat every year.
6. Press **Save** (  ) to save the Anniversary event to the Calendar.

## Holidays


This option allows you to record holidays in your calendar. You can also set an alarm to remind you of important anniversaries.

1. From the Home screen, press **Menu (LSK) → Organizer → Calendar**.
2. Press **Options (LSK) → Event list → Holidays**.
3. Press **Options (LSK) → Create**.
4. Enter the occasion in the **Title** text box then press the **Down** Navigation key.
5. Continue to enter other information including Details, Date, and Repeat every year.
6. Press **Save** (  ) to save the Holiday event to the Calendar.

## Important


This option allows you to record important dates in your calendar. You can also set an alarm to remind you of important dates.

1. From the Home screen, press **Menu (LSK) → Organizer → Calendar**.
2. Press **Options (LSK) → Event list → Important**.
3. Press **Options (LSK) → Create**.

4. Enter the occasion in the **Title** text box.
5. Continue to enter other information including Details, Start date, Start time, End date, End time, Location, Alarm, Before, Alarm tone, Repeat, and Until.
6. Press **Save** (  ) to save the Important event to the Calendar.



## Private

This option allows you to record private dates in your calendar. You can also set an alarm to remind you of important dates.

1. From the Home screen, press **Menu (LSK) → Organizer → Calendar**.
2. Press **Options (LSK) → Event list → Private**.
3. Press **Options (LSK) → Create**.
4. Enter the occasion in the **Title** text box.
5. Continue to enter other information including Details, Start date, Start time, End date, End time, Location, Alarm, Before, Alarm tone, Repeat, and Until.
6. Press **Save** (  ) to save the Private event to the Calendar.

## Missed alarm events

You can display all the events where an alarm was set, but was not turned off.

1. From the Home screen, press **Menu** (LSK) → **Organizer** → **Calendar**.
2. Press **Options** (LSK) → **Missed alarm events**.
3. To view event information, highlight an event and press . The missed alarm event information displays.
4. To acknowledge and remove the event, press **Confirm** (LSK) or . The event is removed from the **Missed alarm events** menu.

## Memory status

This menu item shows the number of calendar events that are stored on the handset as well as the total number of available events. Example: 2/100 means that currently there are two alarm events scheduled out of a possible 100.

1. From the Home screen, press **Menu** (LSK) → **Organizer** → **Calendar**.

2. Press **Options** (LSK) → **Memory status**. The available categories are: Appointment, Anniversary, Holiday, Important, or Private.

## TeleNav GPS Navigator

**TeleNav** is a driving aid that uses both audible and visual directions for GPS navigation.

1. From the Home screen, press **Menu** (LSK) → **Organizer** → **TeleNav GPS Navigator**.
2. At the prompt, read the agreement and press **Agree** (LSK) to accept the terms, or press **Exit** (RSK) → **Yes** (LSK) to close the window.

---

**Note:** When accessing TeleNav Navigator, charges may apply.

---

## Alarm



This feature allows you to:




- Set up to ten alarms to ring at specified times.
- Set the phone to switch on automatically and ring the alarm even if the phone is switched off.

The following options are available:





- **Alarm 1 - Alarm 10:** set the Name, Alarm activation, Alarm time, Alarm type, Alarm tone, Alarm volume, Day, Snooze, and Repeat for this alarm.
- **Auto power:** alarm rings at the specified time even if the phone is turned off. If the option is set to **Off**, the alarm does not ring.

### To set the alarm:

1. From the Home screen, press **Menu** (LSK) → **Organizer** → **Alarm**.
2. Select an alarm and press the **Select** (LSK) or .
3. Highlight the **Name** field, press and hold  to backspace and erase the text, then enter a new name for this alarm (if desired).
4. Highlight the **Alarm activation** field and scroll right on your optical joystick or use the **Right** Navigation key to select **On**.

5. Highlight the **Alarm time** option. Enter the time you want the Alarm to sound.
6. Highlight the **Alarm type** option and press **Edit** ().  
Select one of the following alarm types and press **OK** (LSK):
  - **Melody:** the alarm rings using the selected ring melody.
  - **Increasing melody:** the volume of the melody increases.
  - **Vibration:** the phone vibrates but does not play a tone.
  - **Vibration then melody:** the phone vibrates 3 times and then starts playing a melody.
  - **Vibration and melody:** the phone vibrates and plays the melody simultaneously.
  - **Vibration and increasing melody:** the phone vibrates and increases the volume of the melody.
7. Highlight the **Alarm tone** field, press **Edit** () to display a list of tones from which to choose, then press **Select** (LSK).
8. Highlight the **Alarm volume** field and scroll right on your optical joystick or press the **Left** or **Right** Navigation key to decrease or increase the volume.
9. Highlight the weekday check boxes. Press **Edit** () to display a list of days.



- Press  to place a checkmark (**Mark**) next to one of the following selections: Everyday, Once only, Sunday, Monday, Tuesday, Wednesday, Thursday, Friday, or Saturday. Press  to place or remove a check mark (Unmark).
  - Press **OK** (LSK) to confirm your selections.
10. Highlight the **Snooze** field and press the **Right Navigation** key to select one of the following times: **Off**, **1 min**, **3 min**, **5 min**, **7 min**, or **10 min**.
  11. Highlight the **Repeat** field and scroll right to select one of the following times: **1 time**, **2 times**, **3 times**, **5 times**, or **10 times**.
  12. Press **Save** () to confirm and store your new settings.
  13. Press the  key to return to Home screen.
  14. To stop the alarm when it rings, press any key or press the **Snooze** (RSK).

## Voice Recognition

This feature is used to activate a wide variety of functions on your phone. You can use your phone's built-in automatic speech recognition (ASR) software to dial a phone number in your Contacts or to launch phone functions. All you have to do is to talk into the phone, and your phone will recognize your voice and complete tasks by itself.

The screen displays and says **"Say a command."** The phone prompts you to say the name of the command you want to use. To complete your task, simply follow the voice prompts.

- **Call <Name or #>** to call an entry in your Contacts list or a spoken phone number. (For more information, refer to *"Making a Voice Call"* on page 92.)
- **Send Text to <Name or #>** to launch text messaging on your phone and specify a recipient for a new message. (For more information, refer to *"Sending a Message"* on page 93.)
- **Look up <Name>** to lookup a Contacts entry name from your current list of available contacts.
- **Go To <App>** to jump directly to menu items or applications. (For more information, refer to *"Opening Menus using Voice Recognition"* on page 94.)
- **Check <Item>** to check your phone's status. (For more information, refer to *"Checking Phone Status"* on page 94.)

---

**Note:** Use ASR in a quiet environment so it can accurately recognize your commands. Voice Dial works best in quieter environments. When saying a name, speak at a normal speed and say the name clearly. There is no need to pause between the first name and last name.

---

1. From the Home screen, press **Menu** (LSK) → **Organizer** → **Voice recognition**.

2. When the Voice Dialer says the **“Say a command”** prompt, say one of the following commands:
  - “Call Steve Smith”
  - “Call Steve Smith at home,...”
  - “Call (888) 555 5555”
  - “Send text to Steve Smith”
  - “Lookup Steve Smith”
  - “Go to [Application]”
  - “Go to Calendar”
  - “Check Missed calls”
3. A menu prompts you to confirm your selection. If you said a name with more than one match in Contacts, or if you stored more than one number for the contact, you are prompted to select from multiple options.

### **Tips for Using Voice Dial**

Voice recognition works best in quieter environments. When saying a name, speak at a normal speed and say the name clearly. There is no need to pause between the first name and last name.

### **Making a Voice Call**

1. From the Home screen, press **Menu** (LSK) → **Organizer** → **Voice recognition**.
2. When the application says the **“Say a command”** prompt, say **“Call”**.
3. If you hear **“Say the name or number,”** say a name or a phone number.
4. If you hear **“Which number?,”** say a number type (for example, “Mobile1”).

---

**Note:** You can skip steps 3 and 4 by saying a name and location after “Call” without pausing (for example, **“Call Steve Smith mobile”**).


---

---

**Note:** If the voice recognition does not recognize the name or number, it will find the most likely matches and display a list of up to three names or numbers. You will hear “Did you say...” followed by the name or number. You can confirm by saying **“Yes.”** Say **“No”** to change the selection.

---


## Sending a Message

1. From the Home screen, press **Menu** (LSK) → **Organizer** → **Voice recognition**.
2. When the application says the “**Say a command**” prompt, say “**Send Text to**”.
3. If you hear “**Say the name or number**,” say a name or phone number of the recipient. For example, say “Steve Smith” or “9725555555.” The entry information for the specified contact is displayed. Use the name of a person in your Contacts list and, optionally, the type of number (Mobile1, Home1, etc.) you want to send it to. For example, say “Send Text Steve Smith Mobile1.”
4. If the phone did not properly recognize the command, it prompts you with “**Did you say, send text message to?**”
5. Respond by saying one of the following: **Yes**, **No**, **Repeat**, or **Cancel**.
6. Use the keypad to enter text and press **Send** (  ) to complete the message and deliver it. For more information, refer to “*Entering Text*” on page 35.

---

**Note:** If you want to create a multimedia message, follow steps 7 and 8.

---

7. Press the **Down** navigation key and select **Add photo**.
8. After adding the attachment, press **Options** to set options for this message:
  - **Preview:** allows you to view the message prior to sending.
  - **Jump to recipient field:** allows you to add Recent recipients, Contacts, Groups, or send this message to the Online Album.
  - **Jump to attachment bar:** allows you to choose from one of the available attachment options.
  - **Insert text:** allows you to insert a Text templates, Text emoticon, Contacts, or Bookmarks. The Text templates allow you to apply one of the preset message templates to the text. Select one of the 10 items stored in the **Text templates** menu. Contact allows you to add names and phone numbers to your message. Bookmarks allows you to add Internet addresses to your message.
  - **More:** allows you to Add page, Add subject, Edit style, Sending options, or Select a language (Français, or Español) for this message.
  - **Exit composer:** exits the composer and displays the Create new screen.
9. Press **Send** (  ) to send the current picture message.

### **Looking Up a Name using Voice Recognition**

1. From the Home screen, press **Menu** (LSK) → **Organizer** → **Voice recognition**.
2. When the application says the “**Say a command**” prompt, say “**Look up**”.
3. If you hear “**Say the name,**” say a name of the recipient you would like to look up.

– or –

If you hear “**Say the name,**” say Check Minutes (to look up your current minute usage) or Voicemail (to access your voicemails).

### **Opening Menus using Voice Recognition**

1. From the Home screen, press **Menu** (LSK) → **Organizer** → **Voice recognition**.
2. When the application says the “**Say a command**” prompt, say “**Go to**”. A list of valid destinations is displayed and you are prompted with “**Which shortcut?**”

3. If the list is too long to fit on one screen, you can say the name of a destination. Examples can include: Web, Calendar, Ringtones, Tasks, Contacts, Voicemail, or Games and Apps.
4. Say the name of the application you want the phone to activate.

### **Checking Phone Status**

You can use voice recognition to obtain information about your phone such as Status, Messages, Missed calls, Time, Signal strength, Network, Battery, My phone number, and Volume.

1. From the Home screen, press **Menu** (LSK) → **Organizer** → **Voice recognition**.
2. When the application says the “**Say a command**” prompt, say “**Check**”.
3. When you hear “**Which status item?**”, speak an item.

## Voice Recognition Settings

- ▶ From the Home screen, press **Menu** (LSK) → **Organizer** → **Voice recognition** → **Settings** (RSK). Voice recognition settings consist of the following options:
  - Confirmation
  - Adaptation
  - Audio modes
  - Speakerphone
  - About


## Configuring Voice Recognition Options

### To change the confirmation:

1. From the Home screen, press **Menu** (LSK) → **Organizer** → **Voice recognition**.
2. From the “**Say a command**” prompt, press **Settings** (RSK) → **Confirmation**.
3. Select one of the available options:
  - **Automatic** to always provide you with options if there was an issue registering the command, confirm any commands, and then announce any actions.
  - **Always Confirm** to always confirm any command actions before they are done, even if it was properly registered.

- **Never Confirm** to never confirm any command operations. The phone will always act on what it registers as the current command, even if it is incorrect and without notifying you.

### To adapt the system to your voice:

1. From the Home screen, press **Menu** (LSK) → **Organizer** → **Voice recognition** → **Settings** (RSK) → **Adaptation** → **Adapt voice** → **Start**.
2. Hold the phone so that the microphone is approximately six inches away from your mouth and you can clearly read the onscreen number sequences.
3. Repeat either the digits or words shown onscreen using a normal tone of voice.
  - If the phone cannot recognize your words, it will continue to display the same information onscreen.
4. Repeat the previous step for the remaining sets of digits or words.
5. When you are finished with a full session, you will reach a screen that reads, “**Adapting.**”
6. Press  to save.

### To reset the adaptation

1. From the Home screen, press **Menu (LSK) → Organizer → Voice recognition → Settings (RSK) → Adaptation → Reset Voice**. (The phone displays a reset voice dialog).
2. Press **Yes** to reset the voice recognition parameters or **No** to exit.

### To enable and disable Audio Modes:

You can customize whether the voice recognition feature displays either a list of top voice recognition choices or automatically dials the first number without displaying a choice list.

1. From the Home screen, press **Menu (LSK) → Organizer → Voice recognition**.
2. From the “**Say a command**” prompt, press **Settings (RSK) → Audio modes**.
3. Select one of the following:
  - **Expert mode** displays both a selectable list of matching entries and if the first entry is not correct, the phone will continue to read out each available option until it detects either a confirmation (Yes) or rejection (No).
  - **Prompt mode** displays a selectable list of available dialing options and only reads out the entry name. You are required to touch an onscreen option to activate a command.

- **Readout mode** reads out every onscreen menu and option selected.

### To enable and disable Speakerphone:

You can control the speakerphone behavior while using voice recognition.


1. From the Home screen, press **Menu (LSK) → Organizer → Voice recognition**.
2. From the “**Say a command**” prompt, press **Settings (RSK) → Speakerphone**.
3. Select one of the following: **Automatic, Always on, or Always off**.

### To display information about voice recognition

1. From the Home screen, press **Menu (LSK) → Organizer → Voice recognition → Settings (RSK) → About**.

## Tasks

This feature allows you to enter a task list.




1. From the Home screen, press **Menu** (LSK) → **Organizer** → **Tasks**.
2. Press **Options** (LSK) → **Create task** to create a new task.
3. Enter a short description of the task in the **Title** field then press the **Down** Navigation key.
4. Enter a short description in the **Details** field and press the **Down** Navigation key.
5. Continue to enter other information including **Start date**, **Due date**, **Alarm**, **Alarm date**, **Alarm time**, **Alarm tone** and **Priority**.
6. Press **Save** (  ) when you are finished. Your Task list saves to the Calendar.

## Editing the Tasks List

When you select the Tasks list menu, the current contents display with a status checkbox and a priority marker.


If the item was done, a check displays in the checkbox.

High priority items display a “1” triangle icon, Normal priority items display a “2” triangle icon, and Low priority items display a “3” triangle icon.

1. From the Home screen, press **Menu** (LSK) → **Organizer** → **Tasks**.
2. Highlight a task from the list and press **View** (  ).
3. Highlight a field to edit and press **Edit** (  ).
4. Edit the items you wish to change and press **Save** (  ) when your edits are complete.

## Memo

This option allows you to create notes to add to your events.

1. From the Home screen, press **Menu** (LSK) → **Organizer** → **Memo**.
2. Press **Options** (LSK) → **Create memo** to create a new memo. A blank Memo screen displays.
3. Enter your text and press **Save** (  ) to save.



## Calculator


With this feature, you can use the phone as a calculator. The calculator provides the basic arithmetic functions; addition, subtraction, multiplication, and division.

1. From the Home screen, press **Menu** (LSK) → **Organizer** → **Calculator**.
2. Enter the first number using the numeric keys.
3. Select the calculation method, according to the illustration on the display.
4. Enter the second number using the numeric keys.

---

**Note:** Press the **Left** soft key to insert a decimal point, or press it multiple times to create brackets.

Press  to move the cursor to the left or press  to move the cursor to the right within a number.

- 
5. Press  to view the result. Repeat steps 1 to 4 as many times as required.

## Tip calculator

This feature calculates a tip amount by percentage, and divides the total bill by the number of payers.

1. From the Home screen, press **Menu** (LSK) → **Organizer** → **Tip calculator**.
2. In the **Bill** field, enter the check amount.

---

**Note:** Press  to enter a decimal point for the exact dollar amount.

---

3. Highlight **Tip(%)** percentage. 15 is the default value but you can change this value. The **Tip(\$)** field value calculates according to the values entered.
4. Highlight the **# paying** field to change the number of people contributing to the bill.
5. The **You pay** field displays the total for each individual.



## World clock

This feature allows you to see the current time in another part of world. There are two time lines available. You can set the first setting to your home city and use the second setting to check other city times.


1. From the Home screen, press **Menu** (LSK) → **Organizer** → **World clock**.
2. Press **Options** (LSK) → **Add** to create a new time zone.
3. Scroll across your optical joystick or press the **Left** or **Right** Navigation key until the desired GMT time zone displays in the field.
4. Place a check mark in the **Daylight saving** checkbox (if applicable).
5. Press **OK** (LSK) to confirm you settings.

## Converter

The conversion menu provides the following conversion categories:

- Currency
- Length
- Weight
- Volume
- Area
- Temperature

### To convert from one unit to another:

1. From the Home screen, press **Menu** (LSK) → **Organizer** → **Converter**.
2. Scroll to the conversion category you wish to use and press **Select** (LSK) or .
3. Use the **Up**, **Down**, **Left**, and **Right** navigation keys to select the **From** and **To** units of measure for the quantity you want converted.

---




**Tip:** Press  to enter a decimal point.

---

4. Press **Back** (RSK) to return to the **Converter** menu.




## Timer

You can use this menu to set a timer. To enable the Timer, use the following options:

1. From the Home screen, press **Menu** (LSK) → **Organizer** → **Timer**.
2. Press **Set** (LSK), enter the length of time as **HH:MM:SS** and press **OK** (LSK).
3. Press **Start** () to start the timer.  
– or –  
Press **Pause** () to pause the timer.
4. Press  when you are finished.

## Stopwatch

This feature allows you to use a stopwatch.

1. From the Home screen, press **Menu** (LSK) → **Organizer** → **Stopwatch**.
2. Press **Start** or  to start the stopwatch.
3. Press **Lap** () to record each lap.
4. Press **Stop** (RSK) or  to stop recording the lap time.  
You can view up to 50 lap times.
5. Press **Reset** (LSK) to erase all previously recorded stopwatch times.


## RSS reader

The RSS reader feature allows you to receive up-to-date web pages, news, and other information (such as updates) distributed through an RSS feed.


Enter the RSS feed address in the RSS reader to create an entry, then periodically update the entry manually or automatically.

**To set up the RSS reader feature:**

1. From the Home screen, press **Menu** (LSK) → **Organizer** → **RSS reader**.
2. Press **Options** (LSK) → **Add**.

3. Enter a URL for the RSS feed, then press **OK** (LSK).  
The URL automatically retrieves.
4. Press **Subscribe** (LSK),  to add the current RSS to your list of stored RSS feeds, or **Cancel** (RSK) to exit the application.

### ***Configuring the RSS reader settings***

1. From the Home screen, press **Menu** (LSK) → **Organizer** → **RSS reader**.
2. Press **Options** (LSK) → **Settings**.
3. Highlight **Auto update** and press **Mark** ().
4. Highlight the next field and press the **Right Navigation** key to select the frequency the RSS reader updates: **RSS reader launch**, **Daily**, or **Weekly**.
5. Press **Save** (LSK) to confirm and save your selections.

## Section 10: Camera

---

This section explains how to use the camera on your phone. You can take photographs by using the built-in camera functionality.

### Using the Camera

Using the camera module in your phone, you can take photos of people or events while on the move. Additionally, you can send these photos to other people in a Picture Messaging message or set a wallpaper or caller ID image.

---

**Note:** Do not take photos of people without their permission.  
Do not take photos in places where cameras are not allowed.  
Do not take photos in places where you may interfere with another person's privacy.

---


### Take and Send

Your camera produces photos in JPEG format.

---

**Note:** When you take a photo in direct sunlight or in bright conditions, shadows may appear on the photo.

---

1. From the Home screen, press **Menu** (LSK) → **Media** → **Photos** → **Camera**.  
– Or –  
Press and hold  (**Camera**) on the right side of the phone to access the camera module.
2. Adjust the image by aiming the camera at the subject.
3. Press **Menu** (LSK) to access the camera options. For details, see “*Configuring Camera Options*” on page 104.

---

**Note:** You can use the keypad to quickly change the camera options.

---

4. Press  or  to take the photo.  
The **Send to: My Album Online?** message.

5. Press **Yes** (RSK) if you want to send the photo to your T-Mobile **My Album Online** service. The phone's default destination is set to **My Album Online**. The photo is automatically saved to the **Photos** folder in the phone.

---

**Note:** To change the default destination for your pictures, press **Options** (LSK) when **Send to: My Online Album?** displays on the screen. Select the **Default destination** → **Change**, then change your default destination to Recent recipients, Contacts, Online album, New email, or New number.

---

6. Press **Options** (LSK) to view the following options:
  - **Take another:** allows you to take another picture.
  - **Send to:** sends this image to Recent recipients, Contacts, Groups, or Online album.
  - **Send via:** attaches this photo to a new outgoing Message, Email, Exchange email, or Bluetooth.
  - **Default destination:** allows you to remove or change the default destination for the location of photos. Options to change include: Recent recipients, Contacts, Online album, New email, or New number.
  - **Print via Bluetooth:** allows you to send the current picture to an external Bluetooth printer for reproduction.
  - **Delete:** allows you to erase the current image. Press **Yes** (LSK) to complete the deletion.
  - **Set as:** allows you to set this image as a Picture ID or Wallpaper.


- **Edit:** allows you to edit the current image attributes such as: Effects, Adjust, Transform, Crop, Insert, Set as, Send via, or Print via Bluetooth. Within the Edit screen, press **Options** (LSK) to activate these options.
- **Rotate:** allows you to rotate the current image.
- **Slide Show:** displays several images as a slide show.
- **Properties:** displays properties for the current image such as: Name, Format, Resolution, Size, Forwarding, Date created, and Location.

7. Press **Options** (LSK) → **Send via** to send this image in a **Message, Email, Email exchange,** or via **Bluetooth**.

– or –

Press **Options** (LSK) → **Send to** creates a Message, where you can choose to send the photo to **Recent recipients, Contacts, Groups,** or to an **Online album**.

– or –

Press **Options** (LSK) and select **Take another** then press **Select** or  to return to Capture mode.

8. Press  to return to Home screen.

## Camera Shortcuts:

Shortcut keys allow you to change some settings using the keypad, Navigation keys, and Volume key while in capture mode.

---

**Note:** These button functions also apply to the camera feature if it is accessed via **Menu (LSK) → Media → Photos → Camera**.

---



takes the photograph.

**Navigation Keys** **Up** and **Down** navigation keys adjust the image brightness.

**Left** and **Right** navigation keys zoom in and out.

**Optical Joystick** Scroll **Up** and **Down** to adjust the image brightness. Scroll **Left** and **Right** to zoom in and out.

A black rectangular button with rounded corners. On the left is a white number '1'. To the right of the number are two small white icons: a camera lens and a video camera.

Allows you to switch between Camera and Camcorder modes

A black rectangular button with rounded corners. On the left is a white icon of a camera with a film strip. To the right of the icon are the letters 'ABC' in white.

toggles through the shooting modes.

A black rectangular button with rounded corners. On the left is a white icon of a camera with a clock. To the right of the icon are the letters 'DEF' in white.

cycles among the various timer modes (Off, 2 seconds, 5 seconds, or 10 seconds).

A black rectangular button with rounded corners. On the left is a white icon of a camera with a viewfinder. To the right of the icon is a white arrow pointing to the right.


changes the viewfinder mode.

## Configuring Camera Options

- ▶ Before taking a photo, press **Menu (LSK)** to access the following:
  - **Camera:** allows you to take a picture.
  - **Shooting Mode:** takes a photo in various modes. Once you change the mode, the corresponding indicator displays at the top left of the display.
    - **Single:** takes a single photo and allows you view it before returning to the shooting mode.
    - **Continuous:** takes a succession of photos.
    - **Panorama:** takes multiple photos to be combined into a single panoramic image.
    - **Smile shot:** focuses on the foreground or subject and not on the background.
    - **Mosaic:** takes up to four photos and then groups them together into a single final photo.
  - **Night mode:** select On (allows for better pictures in low light conditions) or Off.
  - **Size:** allows you to set the image size to either: 2M (1600x1200), 1.3M (1280x960), 0.3M (640x480), or 320x240.
  - **White balance:** allows you to set this option from the following choices: Auto, Daylight, Incandescent, Fluorescent, or Cloudy.
  - **Exposure meter:** choose how the camera measures the light source: Matrix, Center-weighted or Spot.

- **Effects:** choose how the image effects: None, Black and white, Sepia, Negative, and Watercolor.
- **Set default destination:** allows you to Remove a current destination location or Change the current location by establishing a new folder in which to place the photo(s). Change the destination to one of the following options: Recent recipients, Contacts, Online album, New email, or New number.
- **Self timer:** choose the time delay before an image is taken: Off, 2 seconds, 5 seconds, or 10 seconds.
- **Viewfinder mode:** choose assign the way in which the camera image is displayed: Full screen view and indicator, Full screen view, Full screen view and guidelines.
- **Settings:**
  - **Photo:** choose the Quality of new photos (Economy, Fine, or Superfine).
  - **Setup:** configure the **Review screen**, **Shutter sound**, **Default storage**, or view camera **Shortcuts**.

## Photo Gallery Options

1. From the Home screen, press **Menu** (LSK) → **Media** → **Photos**. When you access this menu, your phone displays the photos in Line view, which shows them as small images. Scroll through the available photos.
2. Highlight an image file and press **View** () to open the photo on the full screen. Press **Back** (RSK) to redisplay the files in list view.
3. With the image displayed in full screen, press **Options** (LSK) to use the following options:
  - **Send to My Album:** allows you to send your photos to My Album.
  - **Send via:** allows you to send the selected photo as a Message, Email, Exchange email, or to a Bluetooth enabled device.
  - **Set as:** allows you to set the photo as a Wallpaper or as a Picture ID.
  - **Default destination:** allows you to Change or Remove where your photos are sent after you take them.
  - **Delete:** allows you to delete the selected or multiple photos.
  - **Rename:** allows you to rename the photo.
  - **Edit image:** allows you to edit the selected image.

- **Bluetooth visibility:** allows you to configure the visibility of your device via Bluetooth.

---


**Note:** The Bluetooth visibility option is available only if you are viewing an image stored on your phone and not within the default Memory card location.


---

- **Slide show:** allows you to see all of your photos in a slide show presentation.
- **Print via Bluetooth:** allows you to send the selected photo to a Bluetooth enabled printer.
- **Lock/Unlock:** allows you to lock the selected photo to protect it from deletion, or unlock the photo to allow deletion.
- **Properties:** shows the properties of the photo, such as the file Name, Date, Format, Resolution, Size, and Lock/Unlock.

## Deleting a Photo

You can delete photos one by one or all at one time.

1. From the Home screen, press **Menu (LSK) → Media → Photos**. From the **Photos** menu, highlight the photo you want to delete.
2. Press **Options (LSK) → Delete** and press the **Right** Navigation key.
3. Select a deletion of either the currently **Selected** image, **Multiple**, or **All** images and press **Select (LSK)** or .

4. Press **Yes (LSK)** to confirm the deletion.
5. Press  when you finish.

## Using the Camcorder



Use the camcorder module in your phone to record videos of people or events while on the move. You can send videos to other people in a message or via Bluetooth.

## Recording and Sending a Video

---

**Tip:** For best results when shooting video in direct sunlight or in bright conditions, provide your subject with sufficient light by putting the light source behind you.

---





1. From the Home screen, press **Menu (LSK) → Media → Videos → Camcorder**.  
– or –  
Press and hold  (**Camera**) →  to activate the camcorder mode.
2. Before recording the video, press **Menu (LSK)** to access camcorder options. For more information, refer to “*Configuring the Camcorder Settings*” on page 107.
3. Adjust the image by aiming the lens at the subject.




---

**Tip:** You can use shortcuts to quickly change some camcorder settings. For more information, refer to “*Camcorder Shortcuts*” on page 108.

---

4. Press  or  to begin shooting video.
5. Press **Stop** (RSK) or **Camera** key to stop the recording and save the video. Press  to pause or resume recording.
6. After the video saves you have two available options:
  - The screen displays “**Send to: My Album Online?**”  
Press **Yes** (RSK) to send the highlighted video to your online album.
  - Press **Options** (LSK) for Video options. For more information, see “*Video Options*” on page 108.
7. Press **Options** (LSK) → **Send via** to send the video in a Message, Email, Exchange email, or to a Bluetooth device.  
– or –  
Press **Options** (LSK) → **Send to**, to create a Message, where you can choose to send the video to Recent recipients, Contacts, Groups, or to an Online Album.
8. Press  to return to the Home screen.

## Configuring the Camcorder Settings

- ▶ Before taking a photo, press **Menu** (LSK) to access the camcorder options.
  - **Camcorder:** allows you to record a video.
  - **Video Mode:** limit the size of videos. Choose Normal or Limit for MMS.
  - **Size:** if the Limit setting is set to Normal, this displays either 320x240 or 176 x 144.
  - **White balance:** choose a setting to match conditions. Choose from Auto, Daylight, Incandescent, Fluorescent, or Cloudy.
  - **Exposure meter:** choose how the camera measures the light source: Matrix, Center-weighted or Spot.
  - **Effects:** apply special effects to the photo. Options include: None, Black and White, Sepia, Negative, or Watercolor.
  - **Default destination:** Remove a current destination location or Change the current location.
  - **Timer:** set a time delay between the time you press  and the video starts to record. Select the length of delay, from Off, 2 seconds, 5 seconds, or 10 seconds.
  - **Viewfinder mode:** select either Full screen view and indicator, Full screen view, or Full screen view and guidelines.

- **Settings:**
  - **Video:** set the Quality of the video (Economy, Fine, or Superfine), and set Audio recording (On or Off).
  - **Setup:** configure the **Review screen**, **Default storage**, or view camcorder **Shortcuts**.

## Camcorder Shortcuts

Shortcut keys allow you to change some settings using the keypad, Navigation keys, and Volume key while in capture mode.

---

**Note:** These button functions also apply to the camcorder feature if it is accessed via **Menu (LSK) → Media → Videos → Record video**.

---



shoots the video.

**Navigation Keys** **Up** and **Down** navigation keys adjust the video brightness.

**Left** and **Right** navigation keys zoom in and out.

**Optical Joystick** Scroll **Up** and **Down** navigation keys adjust the video brightness.

Scroll **Left** and **Right** navigation keys zoom in and out.



Allows you to switch between Camcorder and Camera modes



changes the size of the image being recorded.



cycles among the various timer modes (Off, 2 seconds, 5 seconds, or 10 seconds).



changes the viewfinder mode.

## Video Options

1. With the video recording just stopped (capture mode), press **Options** (LSK) for these options:
  - **Record another:** returns to capture mode to record another video.
  - **Play:** plays back the current video.
  - **Send to:** creates a message to send this video in a message.
  - **Send via:** sends the selected photo in a Message, Email, Exchange email, or to a Bluetooth enabled device.
  - **Default destination:** change where your videos are sent after recording. Change the destination to one of these options: Recent recipients, Contacts, Online Album, New Email, New number.
  - **Delete:** delete the selected video.
  - **Slide Show:** allows you to display all available videos as part of an onscreen slideshow where the videos are cycled.
  - **Properties:** displays information about the video, such as Name, Format, Resolution, Size, Forwarding, Date created, and Location.

## My Album



My album is a private online picture album that you can use to store and share pictures, videos, voice messages, and text.

Use the following procedures to access **My album**.

---

**Note:** When accessing My album, charges may apply. The feature is not activated until you send your first image to the remote My album location.

---

1. From the Home screen, press **Menu** (LSK) → **Media** → **Photos**.
2. Select **My album**. The web2go browser launches and the T-Mobile Web page displays.
3. Scroll to highlight an album and press **Select** (LSK) or  to view the photos.
4. Scroll to view the photos in the album.
5. Press the  key to exit the browser and return to the Home screen.

## Section 11: Changing Your Settings

---

This section explains the sound and phone settings for your phone. It includes such settings as: display, security, memory, and any other settings associated with your phone.

### My Account

This option provides you with account specific information.

- ▶ From the Home screen, press **Menu (LSK) → My Account**.

### Personalize your Phone

You can customize various phone settings such as sounds, the display, phone settings, messaging key, memory, language, greeting message, and time and date.

- ▶ From the Home screen, press **Menu (LSK) → Settings → Personalize**.




### Sound profiles

You can choose and customize sound settings as part of sound profile.

#### Normal

Normal profile includes audible alerts and tones for incoming calls and messages, key presses, and powering on and off.

1. From the Home screen, press **Menu (LSK) → Settings → Personalize → Sound profiles**.
  - **Normal**: the phone's incoming Alert Type is set to melody.
  - **Silent**: the speaker is muted.
  - **Vibration**: the phone vibrates but does not play any other sound or melody.
  - **Driving**: the speaker is activated and launches the currently selected ringtone or melody when the associated notification is activated.
  - **Outdoor**: the speaker is activated, the volume settings are raised to their highest levels, and any currently active ringtones or melodies are activated.
2. To customize the Normal profile settings, highlight **Normal** and press the press **Options (LSK) → Edit**. Scroll left or right to select a new tab and modify its parameters.

- **Incoming call:** highlight a setting and press  **Edit** to make a selection.
  - **Call alert type:** select an alert type for incoming calls, from Melody, Increasing melody, Vibration then melody, Vibration and melody, or Vibration and increasing melody.
  - **Ringtone:** select a ringtone for incoming calls, from one of the listed folders, or from the optional memory card.
  - **Ringtone volume:** choose a volume level between 1 and 7 for incoming call alerts.
- **New messages:** highlight a setting and press  **Edit** to make a selection.
  - **Message alert type:** select an alert type for new messages, from Melody, Vibration, Vibration and melody, or Mute.
  - **Message alert tone:** choose an alert tone for new messages, from T-Mobile message, Message tone 1 - 7.
  - **Message alert repetition:** choose an interval for repeating alerts for new messages, from Once, Every 1 minute, or Every 2 minutes.
  - **Message tone volume:** choose a volume level between 1 and 7 for new messages alerts.
- **Phone sounds:** highlight a setting and press **Edit** () to make a selection.
  - **Keypad tone:** select a tone for keypad presses, from Beep, Lucid, or Off.
  - **Power on type:** choose a type of sound for the phone to play when powering on, from Melody, Vibration, Vibration and melody, or Mute.

- **Power off type:** choose a type of sound for the phone to play when powering off, from Melody, Vibration, Vibration and melody, or Mute.
- **Phone sound volume:** choose a volume level between 0 and 7 for phone sounds.

3. After making selections, press **Options** (LSK) → **Save** or press the **Back** soft key, then press the **Yes** (LSK) soft key to confirm your settings.

### Silent

When set to Silent profile, your phone makes no sounds.

- ▶ From the Home screen, press **Menu** (LSK) → **Settings** → **Personalize** → **Sound profiles** → **Silent**.

---


**Note:** There are no settings to customize for the Silent profile.

---

### Vibration

When set to Vibration profile, your phone vibrates to alert you to incoming calls and messages.

1. From the Home screen, press **Menu** (LSK) → **Settings** → **Personalize** → **Sound profiles** → **Vibration**.
2. To customize the Vibration profile settings, highlight **Vibration** and press the press **Options** (LSK) → **Edit**. Select the **New messages** tab.

- **New messages:** highlight a setting and press  **Edit** to change the selection.
  - **Message alert repetition:** choose an interval for repeating alerts for new messages, from Once, Every 1 minute, or Every 2 minutes.

---

**Note:** There is only one setting available for customization within the Vibration profile.

---

**Tip:** You can quickly activate Vibration profile From the Home screen by pressing and holding the  key until the “Vibration Profile on” message and the **Vibration profile** icon  displays.




To return to the previous sound profile, press and hold the  key until the phone returns to the previous profile and the icon disappears.

---

## Driving

You can customize the Driving profile to include audible alerts and tones for incoming calls and messages, key presses, and powering on and off.

1. From the Home screen, press **Menu** (LSK) → **Settings** → **Personalize** → **Sound profiles**.
2. To customize the Driving profile settings, highlight **Driving** and press the press **Options** (LSK) → **Edit**. Select an available tab.



- **Incoming call:** highlight a setting and press **Edit** () to make a selection.
  - **Call alert type:** select an alert type for incoming calls, from Melody, Increasing melody, Vibration then melody, Vibration and melody, or Vibration and increasing melody.
  - **Ringtone:** select a ringtone for incoming calls, from the Music, Sounds, or Voice list folders on your phone, or from the optional memory card.
  - **Ringtone volume:** choose a volume level between 1 and 7 for incoming call alerts.
- **New messages:** highlight a setting and press **Edit** () to make a selection.
  - **Message alert type:** select an alert type for new messages, from Melody, Vibration, Vibration and melody, or Mute.
  - **Message alert tone:** choose an alert tone for new messages, from T-Mobile message, Message tone 1 - 7.
  - **Message alert repetition:** choose an interval for repeating alerts for new messages, from Once, Every 1 minute, or Every 2 minutes.
  - **Message tone volume:** choose a volume level between 1 and 7 for new messages alerts.
- **Phone sounds:** highlight a setting and press **Edit** () to make a selection.
  - **Keypad tone:** select a tone for keypad presses, from Beep, Lucid, or Off.
  - **Power on type:** choose a type of sound for the phone to play when powering on, from Melody, Vibration, Vibration and melody, or Mute.

- **Power off type:** choose a type of sound for the phone to play when powering off, from Melody, Vibration, Vibration and melody, or Mute.
  - **Phone sound volume:** choose a volume level between 0 and 7 for phone sounds.
3. After making selections, press **Options** (LSK) → **Save** or press the **Back** soft key, then press the **Yes** soft key to confirm your settings.

## Outdoor

You can customize an Outdoor profile to include audible alerts and tones for incoming calls and messages, key presses, and powering on and off.

1. From the Home screen, press **Menu** (LSK) → **Settings** → **Personalize** → **Sound profiles**.
2. To customize the Outdoor profile settings, highlight **Outdoor** and press the press **Options** (LSK) → **Edit**. Select an available tab.
  - **Incoming call:** highlight a setting and press **Edit** (  ) to make a selection.
    - **Call alert type:** select an alert type for incoming calls, from Melody, Increasing melody, Vibration then melody, Vibration and melody, or Vibration and increasing melody.
    - **Ringtone:** select a ringtone for incoming calls, from the Music, Sounds, or Voice list folders on your phone, or from the optional memory card.


- **Ringtone volume:** choose a volume level between 1 and 7 for incoming call alerts.
- **New messages:** highlight a setting and press **Edit** (  ) to make a selection.
    - **Message alert type:** select an alert type for new messages, from Melody, Vibration, Vibration and melody, or Mute.
    - **Message alert tone:** choose an alert tone for new messages, from T-Mobile message, Message tone 1 - 7.
    - **Message alert repetition:** choose an interval for repeating alerts for new messages, from Once, Every 1 minute, or Every 2 minutes.
    - **Alert tone volume:** choose a volume level between 1 and 7 for new messages alerts.
  - **Phone sounds:** highlight a setting and press **Edit** (  ) to make a selection.
    - **Keypad tone:** select a tone for keypad presses, from Beep, Lucid, or Off.
    - **Power on type:** choose a type of sound for the phone to play when powering on, from Melody, Vibration, Vibration and melody, or Mute.
    - **Power off type:** choose a type of sound for the phone to play when powering off, from Melody, Vibration, Vibration and melody, or Mute.
    - **Phone sounds volume:** choose a volume level between 0 and 7 for phone sounds.
  3. After making selections, press **Options** (LSK) → **Save** or press the **Back** soft key, then press the **Yes** soft key to confirm your settings.

## Display settings

Use Display settings to change various settings for the display or backlight.

### Themes

Select from an available menu “skin” such as Starry Night or Lime Green.

1. From the Home screen, press **Menu** (LSK) → **Settings** → **Personalize** → **Display settings** → **Themes**.
2. Highlight an available on-screen theme and press **Select** (LSK) or .

### Wallpaper


Select a background image for display while in Home screen mode.

---

**Note:** Wallpapers can be assigned to the Main Display.

---

1. From the Home screen, press **Menu** (LSK) → **Settings** → **Personalize** → **Display settings** → **Wallpaper**.
2. Choose either the current **Theme Wallpaper** or select **Other image** to browse for images from the Photos or Images folders on your phone, or from an optional memory card.

3. To set an image as the Wallpaper, highlight the image and press **Select** (LSK) or the  key.
4. Preview the image, then press **Set** (LSK) to retain the wallpaper, or press the **Back** soft key to discard the change and choose another image.

### Dialing display

Choose font and the background settings for the dialing display.

1. From the Home screen, press **Menu** (LSK) → **Settings** → **Personalize** → **Display settings** → **Dialing display**.
2. Highlight a setting and press **Select** (LSK) to customize it:
  - **Font type:** choose Normal 1 or Normal 2, then press **Save** (LSK).
  - **Font size:** select Large, Medium or Small, then press **Save** (LSK).
  - **Font color:** select Basic (black and white), Monochrome, or Gradation. For Monochrome or Gradation, press the **Down** Navigation key and then scroll through the available colors. Press **Save** (LSK) to save your selection.
  - **Background color:** choose from the available colors, then press **Save** (LSK).




## Brightness

Adjust the display brightness for better viewing in different lighting conditions.

1. From the Home screen, press **Menu** (LSK) → **Settings** → **Personalize** → **Display settings** → **Brightness**.
2. Choose a brightness level between 1 and 5 by scrolling across your optical joystick, then press **Save** (LSK) to save your changes.

## Backlight time

Select the length of time that the screen backlight stays on and how long the backlight is dimmed before turning off.

1. From the Home screen, press **Menu** (LSK) → **Settings** → **Personalize** → **Display settings** → **Backlight time**.
2. Highlight a setting and press **Edit** () to select a time:
  - **On**: choose a length of time for the screen backlight to stay on, from 5 seconds, 15 seconds, or 30 seconds.
  - **Dim**: choose a length of time for the screen backlight to remain dim after the backlight setting, from Off, 5 seconds, 15 seconds, or 30 seconds.
3. Choose a time value, then press **Save** (LSK) to save your changes.

## Keypad light

Choose settings for times of day when the keypad light turn on.

1. From the Home screen, press **Menu** (LSK) → **Settings** → **Personalize** → **Display settings** → **Keypad light**.
2. In the **Set time** field, choose **Use at any time** to have the keypad light turn on at any time of day, or **Use at custom time** to create a time window for keypad light by setting **After time** and **Until time**.
3. Press **Save** (LSK) to store your changes.

## Phone settings

Use Phone settings to customize your phone's operation to suit your needs.

### Airplane mode

Airplane Mode allows you to use many of your phone's features, such as Games, Voice Notes, etc., when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When your phone is in Airplane Mode, it cannot send or receive any calls or messages, or access online information.

1. From the Home screen, press **Menu (LSK) → Settings → Personalize → Phone settings → Airplane mode.**
2. Highlight **On** or **Off** and press **Save (LSK).**

### HAC mode

This menu is used to activate or deactivate the Hearing Aid Compatibility feature.

---

**Important!** Hearing aid (HAC) mode works when the phone is open but is not accessible when the phone is closed.

---

1. From the Home screen, press **Menu (LSK) → Settings → Personalize → Phone settings → HAC mode.**
2. Highlight **On** or **Off** and press **Save (LSK).**

### Keypad auto-lock

1. From the Home screen, press **Menu (LSK) → Settings → Personalize → Phone settings → Keypad auto-lock.**
2. Select either **Off** or **On** and press the **Save (LSK).**

### Security

The Security settings allow you to restrict the use of your phone by others and to restrict dialed calls. Lock codes and passwords are used to protect the features of your phone.

- ▶ From the Home screen, press **Menu (LSK) → Settings → Personalize → Phone settings → Security.**

### Lock phone


When the Lock phone setting is enabled, the phone locks automatically when powered on, and you must enter the phone password to use the phone. After entering the correct password, you can use the phone until you power it off.

1. From the Home screen, press **Menu (LSK) → Settings → Personalize → Phone settings → Security → Lock phone.**

2. Select **Enable** to have the phone prompt you for a user-defined code when you power on the phone.  
– or –  
Select **Disable** to have the phone power on with no code required.
3. Press **Confirm** (LSK) to store your changes.

### Lock applications

Using this menu, you can lock your applications which provide access to information such as All, Call history, Messaging, Voicemail, E-Mail, Exchange email, IM, Media (Sounds, Images, Videos, Music, Other files), Contacts, Calendar, Tasks, and Memo. Once you have locked the contents, you must enter the phone's password to access the associated menus.

1. From the Home screen, press **Menu** (LSK) → **Settings** → **Personalize** → **Phone settings** → **Security** → **Lock applications**.
2. Use the optical joystick or navigation key to highlight an on-screen option and press **Mark** (  ) to place a check mark alongside the selected item.
  - Select **All** to lock all listed applications.
3. Press **Save** (LSK) to lock the selected applications.

4. Enter a security password and press **Confirm** (LSK).

### Change phone password

The Change phone password setting allows you to change the current phone password to a new one. You must enter the current password to confirm the password change.

1. From the Home screen, press **Menu** (LSK) → **Settings** → **Personalize** → **Phone settings** → **Security** → **Change phone password**.
2. Enter a password in the **Current password** field and press **Confirm** (LSK). This password would have been previously setup, see “*Lock phone*” on page 116.
3. Enter the new password in the **New password** field and press **Confirm** (LSK).
4. Re-enter the same new password and press **Confirm** (LSK).

---

**Note:** If you change your password, be sure to record it and keep it in a safe place. If you forget your password, contact your Service Provider for assistance.

---

## Check PIN code

When the Check PIN code feature is enabled, you must enter your PIN each time you switch on the phone. This means that any person who does not know your PIN cannot use your phone without your approval.

---

**Note:** You must enter the PIN code to enable or disable the Check PIN Code feature.

---

1. From the Home screen, press **Menu** (LSK) → **Settings** → **Personalize** → **Phone settings** → **Security** → **Check PIN code**.
2. Select **Enable** to have the phone prompt you for the PIN each time you power it on.  
– or –  
Select **Disable** to have the phone connect directly to the network when you power it on.
3. Press **Save** (LSK) to store your changes.

## Change PIN code

This feature allows you to change your current PIN, provided that the Check PIN code feature is enabled. You must enter the current PIN before you can specify a new one.

---

**Note:** Pin lock must be enable before using this feature.

---

Once you enter a new PIN, you are asked to confirm the PIN number by re-entering it.

- ▶ From the Home screen, press **Menu** (LSK) → **Settings** → **Personalize** → **Phone settings** → **Security** → **Change PIN code**.

## Set FDN mode

FDN (Fixed Dialing Number) mode, if supported by your SIM card, allows you to restrict your dialed calls to a limited set of phone numbers.

1. From the Home screen, press **Menu** (LSK) → **Settings** → **Personalize** → **Phone settings** → **Security** → **Set FDN mode**.
2. Select one of the following options:
  - **Disable:** you can call any number.

- **Enable:** you can only call phone numbers stored in Contacts. You must enter your PIN2 code. You can obtain your PIN2 from T-Mobile's customer service.

3. Press **Save** (LSK) to store your changes.

### Change PIN2 code

The Change PIN2 feature allows you to change your current PIN2 to a new one. You must first enter the current PIN2 (obtained from T-Mobile) before you can specify a new one. Once you enter a new PIN2, you are asked to re-enter the new PIN2 to as confirmation.

---

**Note:** Not all SIM cards have a PIN2. This menu does not display if your SIM card does not have the PIN2 feature.

---

### USB Mode

Select the default method of communication when you connect your phone to a USB port on a PC to transfer files between your PC and phone.

1. From the Home screen, press **Menu** (LSK) → **Settings** → **Personalize** → **Phone settings** → **USB mode**.
2. Choose one of the following options:
  - **Samsung PC studio:** uses PC Studio to communicate with the phone.
  - **Ask on connection:** each time you connect the phone to a PC, the phone will prompt you to choose a USB mode.

- **Mass storage:** treats your phone's memory, and an optional memory card, as a removable storage drive.

3. Press **Save** (LSK) to store your changes.

---

**Note:** You are unable to connect to PC Studio when the Mass storage option is selected.

---

### Data Roaming

This feature allows you to control the use of data services when your phone is in roaming area.

---

**Important!:** Once data roaming is disabled, avoid applications that may reactivate the data roaming feature and charges incurred. Please contact your T-Mobile service center for details.

---


1. From the Home screen, press **Menu** (LSK) → **Settings** → **Personalize** → **Phone settings** → **Data roaming**.
2. Select either **Enable** (allows data roaming) or **Disable** (prevents you from using your data services when you find yourself in a roaming area).
3. Press **Save** (LSK) to store your changes.

## Optical Joystick Sensitivity

Also known as “OJ Sensitivity”, allows you to configure the sensitivity of your optical joystick.

1. From the Home screen, press **Menu** (LSK) → **Settings** → **Personalize** → **Phone settings** → **OJ Sensitivity**.
2. Use your joystick to move the sensitivity level slider.
3. Press **Save** (LSK) to store the new sensitivity level.

## Messaging Key

This menu allows you to assign a shortcut to the  **Messaging** key on both the keypad and QWERTY keyboard.



1. From the Home screen, press **Menu** (LSK) → **Settings** → **Personalize** → **Messaging key**.
2. If this is the first time you are programming this key, read the information that displays and press **OK** (LSK).
3. Select the application shortcut to assign to the Messaging key and press **Assign** (LSK). Choose from: Create message, Conversations, Voicemail, Email, Exchange email, Social Buzz, or IM.

## 4-way Shortcuts


This menu allows you to both assign a shortcut to the Navigation keys on the QWERTY keyboard or activate/deactivate the optical joystick.




1. From the Home screen, press **Menu** (LSK) → **Settings** → **Personalize** → **4-way shortcuts**.

2. Select one of the on-screen shortcut navigation key directions to change the assigned application. Choose from:
  - **Left:** Messaging shortcut. Press the left key from the navigation area to launch a messaging shortcut. Applications include: Create message, Conversations, Voicemail, Email, Exchange email, Social Buzz, and IM.
  - **Up:** Media shortcut. Press the up key from the navigation area to launch a media shortcut. Applications include: Media, Photos, Camera, Camcorder, and Music Player.
  - **Right:** Social shortcut. Press the right key from the navigation area to launch a social shortcut. Social sites include: Social Buzz, Facebook, Twitter, My Space, My Stream, Upload pic, Facebook chat.
  - **Down:** Web shortcut. Press the down key from the navigation area to launch a Web shortcut. Web applications include: web2go and Bookmarks.
3. Highlight a shortcut category and press  → **OK** (LSK).
4. Select an available on-screen application and press  or **Assign** (LSK).

## Keyboard Shortcuts

This menu allows you to assign a shortcut to the  **Shift** key.

Pressing this key in conjunction with another QWERTY key will launch a user-assignable shortcut when pressed. You can modify this setting any time.

1. From the Home screen, press **Menu** (LSK) → **Settings** → **Personalize** → **Keyboard shortcuts**.
2. If this is the first time you are programming this key, read the information that displays and press **OK** (LSK).
3. Scroll down the list of alphabet location and press **Change** ().
4. Highlight an available application and press **Assign** (LSK). Choose from one of the following: T-Mobile Mall, People, Media, web2go, Messaging, Call history, Settings, Organizer, or My Account.


To change the assigned keyboard shortcuts:

1. From the Home screen, press **Menu** (LSK) → **Settings** → **Personalize** → **Keyboard shortcuts**.
2. Press **Options** (LSK), highlight an option and press **Select** (LSK). Choose from one of the following: Clear shortcut, Restore selected, or Restore all.

## Memory Settings

### Clear phone memory


From this menu you can clear the memory for Media, Messaging, Phonebook, Calendar, Tasks, or Memo. You can also select All to clear everything listed.

1. From the Home screen, press **Menu** (LSK) → **Settings** → **Personalize** → **Memory settings** → **Clear phone memory**.
2. Highlight one of the applications to clear, or highlight **All** to clear all the memory settings and press . A checkmark displays next to each application to clear.
3. Press **OK** (LSK) to clear the application.
4. Enter your phone password in the **Password** field and press **Confirm** (LSK).

5. At the **Clear?** prompt, press **Yes** (LSK) to confirm your action or **No** (RSK) to cancel.

### Memory Card Settings

From this menu you can view details about the memory card, format the memory card, rename the memory card, or turn Bluetooth visibility on or off.

1. From the Home screen, press **Menu** (LSK) → **Settings** → **Personalize** → **Memory settings** → **Memory card settings**.
2. Select one of the following options and press .
  - **Memory card details:** displays information about the memory card such as Name, Maximum size and Available memory.
  - **Format:** allows you to format the memory card.
  - **Rename memory card:** allows you to rename the memory card.
  - **Bluetooth visibility on:** allows you to control the visibility of a memory card to Bluetooth devices.


### Memory status

You can check the amount of the memory being used and the memory remaining for Shared memory, Messaging, Media, Calendar, Tasks, Memo, and Contacts.

The display shows the total space including the used and free space. You can also view how much space is currently occupied by each message box.





You can also check how many names and numbers are stored on the Phone, on the SIM card, and the FDN list.

1. From the Home screen, press **Menu** (LSK) → **Settings** → **Personalize** → **Memory settings** → **Memory status**.
2. Select a category from the menu and press  to view the memory status for that category.



## Language

Select the language for screen text and inputs.

1. From the Home screen, press **Menu** (LSK) → **Settings** → **Personalize** → **Language**.
2. Highlight the **Screen text** field and press **Edit** () , then select **Automatic** (based on the Input language), **English**, **Français**, or **Español**.
3. Highlight the **Input language** field and press **Edit** () , then select **English**, **Français**, or **Español**.
4. Press **Save** (LSK) to confirm your selections.

## Greeting message

Enter a greeting to display briefly when the phone is powered on. For details about entering characters, see “*Entering Text*” on page 35.

1. From the Home screen, press **Menu** (LSK) → **Settings** → **Personalize** → **Greeting message**.
2. Press  to clear the default text and enter your own message.
3. Press **Options** (LSK) for these options:
  - **Save**: saves the currently entered greeting message.
  - **Select language**: select Français or Español as the language for displaying your message.
  - **Edit style**: configure the Font color, Font size, or Font type for this greeting message.
  - **Cancel**: exits the menu and return to the Personalize options.
4. Press  to save your selections.

## Time and Date

This menu allows you to control how your phone determines and displays the current time and date.

1. From the Home screen, press **Menu** (LSK) → **Settings** → **Personalize** → **Time and Date**.
2. Select any of the following options:
  - **Time zone updating:** allows you to receive time information from T-Mobile's network.
    - **Automatic:** the phone automatically updates the time and date according to the current time zone using the network service.
    - **Manual only:** you need to manually set the time and date according to the current time zone using the Set time menu.
    - **Prompt first:** the phone asks for a confirmation before the update.
  - **Home zone:** choose from a list of 30 time zones, if Manual only or Prompt first are selected.
  - **Time:** allows you to change the hour and minute, if Manual only or Prompt first are selected.
  - **Date:** allows you to enter the month, day, and year, if Manual only or Prompt first are selected.
  - **Time format:** allows you to select whether the time displays in 12 hour or 24 hour format.
3. Press **Save** (LSK) to store your changes.

## Help

This option uses the browser to display the T-Mobile Help menu.

- ▶ From the Home screen, press **Menu** (LSK) → **Settings** → **Help**.

## Bluetooth

### About Bluetooth

Bluetooth is a short-range wireless communications technology capable of exchanging information over a distance of about 30 feet without requiring a physical connection.


You don't need to line up the devices to beam information with Bluetooth. If the devices are within range, you can exchange information between them, even if they are located in different rooms.

- ▶ From the Home screen, press **Menu** (LSK) → **Settings** → **Bluetooth**.

The following options are available:

### Turn Bluetooth On/Off

#### Turn Bluetooth On or Off:

- ▶ Make a selection and press **Select** (LSK) or . When you turn Bluetooth on, your phone proceeds with searching for nearby Bluetooth devices.

## My devices

This option allows you to search for new Bluetooth devices.

- ▶ Select **My devices** → **Search new device**. The phone searches for available devices.

## My visibility


When Bluetooth Visibility is turned on, your phone is wirelessly transmitting its phone name and status. This can be useful if you are attempting to connect to other Bluetooth devices. Making your phone visible can pose a security risk and invite unauthorized connection. This feature should be used with Bluetooth security options.

- ▶ Highlight the option (Off/On/Custom) and press **Select** (LSK) or .

## My phone name


When your phone's Bluetooth visibility is On, it identifies itself using the name entered into this text field. This name can be altered by selecting the pre-existing text and entering a new text string in its place. This feature should be paired with a Bluetooth security option.

1. Press and hold  to erase the previous name.

2. Use the phone's keypad to enter a new name. The default input entry method is Abc, where the initial character is Uppercase and each consecutive character in that same word is left as lowercase text.
3. Press **Save** () to save the new name.

## Security mode

When the Bluetooth Visibility is turned on, your phone is wirelessly transmitting its phone name and status. This transmission can pose a security risk and invite unauthorized connection to your phone. It is recommended that you activate your phone's Bluetooth security.

- ▶ Highlight **On** or **Off** and press **Select** (LSK) or .

## Remote SIM mode

This mode allows you to control whether a Bluetooth car kit can access the contact information stored on your phone's SIM card.

- ▶ Press **On** or **Off** and press **Select** (LSK) or .

## Features

The Bluetooth specification describes how Bluetooth short-range wireless technology works, and service profiles, or features, describe the services supported by individual devices. Profiles improve the chances that different devices can communicate.

Your phone supports these Bluetooth features:


- **Headset:** used to make incoming and outgoing calls via Bluetooth headsets.
- **Handsfree:** used to make incoming and outgoing calls via Bluetooth handsfree car kits.
- **Bluetooth stereo headset:** used to make calls and listen to music via Bluetooth stereo headset.
- **File transfer:** used to transfer files to and from Bluetooth devices.
- **Object push:** used to exchange personal data such as name cards and Phonebook contacts between Bluetooth devices.
- **Basic printing:** used to print images, text, and personal data such as name cards and appointments via a Bluetooth printer.
- **Serial port:** used to connect to other Bluetooth devices via a virtual serial port.
- **SIM access:** used to provide access to the SIM card through Bluetooth.
- **Phonebook access:** used to export phonebook data to Bluetooth devices.

## Help

Launches the web2go browser and the T-Mobile Help menu for general help information.

### Manage Online Album

This menu allows you to manage the addresses for Flickr, Kodak, Photobucket, or Snapfish.


1. From the Home screen, press **Menu (LSK) → Settings → Manage Online Album.**
2. Select one of the services, **Flickr, Kodak, Photobucket, or Snapfish** and press **View.** (LSK)
3. Press **Edit** (LSK) and enter a new Email address in the **Email address** field.
4. Press  to save your entry.

## Call settings

Use Call settings to customize your phone's call functions.

### Answering mode

Answering Mode allows you to select how your phone answers incoming calls.

1. From the Home screen, press **Menu** (LSK) → **Settings** → **Call settings** → **Answering mode**.
2. Highlight an option, then press **Save** (  ) to update your selection. Options include:
  - **Send key**: answers the call when the Send key is pressed.
  - **Any key**: answers the call when any key on the keypad is pressed.

### Auto redial

You can have the phone automatically redial the last number if the call was cut off or did not connect.

1. From the Home screen, press **Menu** (LSK) → **Settings** → **Call settings** → **Auto redial**.
2. Highlight a selection and press **Save** (LSK). Options include:
  - **Off**: the phone will not automatically redial the last number.
  - **On**: the phone will automatically redial the number.


## Show My Number


Use the Show my number setting to control how your phone number is displayed when you make a call.

1. From the Home screen, press **Menu** (LSK) → **Settings** → **Call settings** → **Show my number**.
2. Highlight an option and press **Save** (LSK). Options include
  - **Set by network**: uses the network's settings to determine whether your phone number is displayed.'
  - **Show number**: displays your information to the recipient.
  - **Hide number**: hides your information from the recipient.

### Auto block

This feature allows you to block specific types of incoming and outgoing calls on your phone based on a phone number. This is useful if you allow someone to use your phone for a short period of time.

1. From the Home screen, press **Menu** (LSK) → **Settings** → **Call settings** → **Auto block**.
2. Highlight the **Activation** field and press the right Navigation key to enable the feature.
3. Highlight **Block list** and press (  ).

4. Add or edit the current block list:
  - Unknown blocks all incoming calls from unknown phone numbers.
  - Add additional numbers by select the **Block list** field and pressing **Options** (LSK) → **Add new**.
5. Press **Save** (LSK) or  to save the new numbers.

## Call Forwarding

This network service enables incoming calls to re-route to a secondary number that you specify.

---

**Example:** You may wish to forward your business calls to a colleague while you are on holiday.

---

### To activate call forwarding:

1. From the Home screen, press **Menu** (LSK) → **Settings** → **Call settings** → **Call forwarding**.
2. Select an available option, then press **Select** (LSK).
  - **Always:** all calls are forwarded until this setting is changed.
  - **If busy:** calls are forwarded when you are already on another call.
  - **If no reply:** calls are forwarded when you do not answer the phone for a specified time period (set when you activate call forwarding).
  - **If out of reach:** calls are forwarded when you are not in an area covered by T-Mobile, or when your phone is switched off.
  - **Cancel all:** cancels all call forwarding settings.

3. In the **Forward to** field, enter the number to which calls should be forwarded. The current status displays. If the option was previously set, the Forward to number displays.
4. Press **Options** (LSK), then select **Activate**.
5. Press **Back** (RSK) to go back to activate additional call forwarding options.

### To deactivate call forwarding:

1. From the Home screen, press **Menu** (LSK) → **Settings** → **Call settings** → **Call forwarding**.
2. Select an available option, then press **Select** (LSK).
  - **Always:** all calls are forwarded until this setting is changed.
  - **If busy:** calls are forwarded when you are already on another call.
  - **If no reply:** calls are forwarded when you do not answer the phone.
  - **If out of reach:** calls are forwarded when you are not in an area covered by T-Mobile, or when your phone is switched off.
  - **Cancel all:** cancels all call forwarding settings.
3. Press **Options** (LSK), then select **Deactivate**.

## Call Barring (SIM Card Dependent)

Call Barring allows you to restrict specific types of incoming and dialed calls on your phone. This is useful if you allow someone to use your phone for a short period of time.

## Call Waiting

Call waiting is a network service which informs you when someone is trying to reach you during another call. You can specify individual call waiting options for voice calls and/or data calls.

### To set your call waiting options:


1. From the Home screen, press **Menu** (LSK) → **Settings** → **Call settings** → **Call waiting**.

2. Press **Options** (LSK) → **Deactivate** or **Activate**.  
– or –

Press **Options** (LSK) → **Check status** to confirm your current call waiting status.


## Call Status Tones

This option allows you to activate the phone to alert you to changes in call status.

1. From the Home screen, press **Menu** (LSK) → **Settings** → **Call settings** → **Call status tones**.
2. Press  to check/uncheck the following options:
  - **Call connect tone**: an alert is played when the call is connected.
  - **Minute minder**: an alert plays at one-minute intervals.
  - **Call end tone**: an alert plays when the call is disconnected.
3. Press **Options** (LSK) → **Save** or press the **Back** soft key.

## Alerts on Call

Specify whether the phone will use sounds to alert you to incoming messages or calls during a call.

1. From the Home screen, press **Menu** (LSK) → **Settings** → **Call settings** → **Alerts on call**.
2. Highlight **Off** or **On** and press **Save** (LSK) or .

## Auto Reply

Create a text message to be sent to the caller when you choose to Reject an incoming call.

1. From the Home screen, press **Menu (LSK) → Settings → Call settings → Auto reply.**
2. In the **Activation** field, scroll left or right to choose **On** or **Off**.
3. Scroll to the **Reply to send** field, then enter the text of the reply message.
4. Press **Options (LSK)** and select **Save** to store the message.

## Call History Management

This menu allows you to manage your call history. You can view time logs for all calls dialed and received, as well as delete call history.

- ▶ From the Home screen, press **Menu (LSK) → Settings → Call settings → Call history management.**

## Call time

This menu lets you view the time log for calls both made and received.

---

**Important!** The actual time invoiced by T-Mobile may differ from times displayed due to network features and service plan.

---

- ▶ From the Home screen, press **Menu (LSK) → Settings → Call settings → Call history management → Call time.**



The following time logs are available:

- **Last call time:** shows the length of your last call.
- **Total incoming:** shows the total length of all calls you have received since the timer was last reset.
- **Total outgoing:** shows the total length of all calls you have made since the timer was last reset.
- **Life time:** shows the total length of time for all incoming and dialed calls. This information cannot be cleared.



## Delete all history

This menu allows you to delete all of the call history, or you can delete missed calls, dialed calls, or answered calls.

1. From the Home screen, press **Menu** (LSK) → **Settings** → **Call settings** → **Call history management**.
2. Select **Delete all history** and press **Select** (LSK) or .
3. Highlight options, then press  to place a check mark next to your selection(s).
  - **All calls**: deletes all call history.
  - **Missed calls**: deletes all missed call history.
  - **Dialed calls**: deletes all dialed call history.
  - **Answered calls**: deletes all answered call history.
  - **Voice mail**: deletes all voicemail history.
4. Press **Delete** to delete the selected records.

## Advanced

Advanced settings allow you to select and manage your networks, update software, and reset all your settings.

### Network


Use the Network setting select the network when roaming outside of your home area.

---


**Note:** You can select a network other than your home network only if there is a valid roaming agreement between the two.

---

#### To select a network:

1. From the Home screen, press **Menu** (LSK) → **Settings** → **Advanced** → **Network**.
2. Select **Search now**.
3. Highlight a network and press **Select** (LSK) or .

#### To change your Default setup:

1. From the Home screen, press **Menu** (LSK) → **Settings** → **Advanced** → **Network**.
2. Select **Default setup**.
3. Highlight an option and press **Select** (LSK) or :
  - **Automatic**: you are connected to the first available network when roaming.

- **Manual:** search for available networks and make a selection.

## Software Update

Use the Software Update setting to check for upgrades and upload them directly to your phone.


1. From the Home screen, press **Menu** (LSK) → **Settings** → **Advanced** → **Software update**.
2. Follow the on-screen instructions.

## Reset settings

Use Reset settings to set phone settings to their default settings. The following options are available:

- **All:** Phone, Display, and Sound, are returned to default values.
- **Phone settings:** only phone settings are returned to default values.
- **Display settings:** only display settings are returned to default values.
- **Sound profiles:** only sound settings are returned to default values.

### To reset your settings:

1. From the Home screen, press **Menu** (LSK) → **Settings** → **Reset settings** → **Reset settings**.
2. Highlight individual options or highlight **All**, and press **Mark** () to mark selections.
3. Press **Reset** (LSK).
4. Enter your password and press **Confirm**.

5. At the **Reset settings?** prompt, press **Yes** (LSK) to reset the settings.

## Master reset

From this menu you can reset your phone and sound settings to the factory default settings.

1. From the Home screen, press **Menu** (LSK) → **Settings** → **Reset settings** → **Master reset**.
2. Enter your phone password and press **Confirm** (LSK).
3. Press **Yes** (LSK) to reset your settings or **No** (RSK) to cancel. Once reset, the phone reboots.

## Section 12: Health and Safety Information

---

This section outlines the safety precautions associated with using your phone. The terms “mobile device” or “cell phone” are used in this section to refer to your phone. **Read this information before using your mobile device.**

### Exposure to Radio Frequency (RF) Signals

The U.S. Food and Drug Administration (FDA) has published information for consumers relating to Radio Frequency (RF) exposure from wireless phones. The FDA publication includes the following information:

#### *Do cell phones pose a health hazard?*

Many people are concerned that cell phone radiation will cause cancer or other serious health hazards. The weight of scientific evidence has not linked cell phones with any health problems.

Cell phones emit low levels of Radio Frequency (RF) energy. Over the past 15 years, scientists have conducted hundreds of studies looking at the biological effects of the radio frequency energy emitted by cell phones. While some researchers have reported biological changes associated with RF energy, these studies have failed to be replicated. The majority of studies published have failed to show an association between exposure to radio frequency from a cell phone and health problems.

The low levels of RF cell phones emit while in use are in the microwave frequency range. They also emit RF at substantially reduced time intervals when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects.

The biological effects of radio frequency energy should not be confused with the effects from other types of electromagnetic energy.

Very high levels of electromagnetic energy, such as is found in X-rays and gamma rays, can ionize biological tissues. Ionization is a process where electrons are stripped away from their normal locations in atoms and molecules. It can permanently damage biological tissues including DNA, the genetic material.

The energy levels associated with radio frequency energy, including both radio waves and microwaves, are not great enough to cause ionization of atoms and molecules. Therefore, RF energy is a type of non-ionizing radiation. Other types of non-ionizing radiation include visible light, infrared radiation (heat), and other forms of electromagnetic radiation with relatively low frequencies. Electromagnetic radiation with relatively low frequencies.

While RF energy does not ionize particles, large amounts can increase body temperatures and cause tissue damage. Two areas of the body, the eyes and the testes, are particularly vulnerable to RF heating because there is relatively little blood flow in them to carry away excess heat.

### **Research Results to Date: Is there a connection between RF and certain health problems?**

The results of most studies conducted to date say no. In addition, attempts to replicate and confirm the few studies that have shown a connection have failed.

The scientific community at large therefore believes that the weight of scientific evidence does not show an association between exposure to Radio Frequency (RF) from cell phones and adverse health outcomes. Still the scientific community has supported additional research to address gaps in knowledge. Some of these studies are described below.

#### **Interphone Study**

Interphone is a large international study designed to determine whether cell phones increase the risk of head and neck cancer. A report published in the International Journal of Epidemiology (June, 2010) compared cell phone usage for more than 5,000 people with brain tumors (glioma and meningioma) and a similar number of healthy controls.

Results of this study did NOT show that cell phones caused brain cancer. In this study, most people had no increased risk of brain cancer from using cell phones. For people with the heaviest use of cell phones (an average of more than ½ hour per day, every day, for over 10 years) the study suggested a slight increase in brain cancer. However, the authors determined that biases and errors prevented any conclusions being drawn from this data.

Additional information about Interphone can be found at <http://com.iarc.fr/en/media-centre/pr/>.

Interphone is the largest cell phone study to date, but it did not answer all questions about cell phone safety. Additional research is being conducted around the world, and the FDA continues to monitor developments in this field.

#### **International Cohort Study on Mobile Phone Users (COSMOS)**

The COSMOS study aims to conduct long-term health monitoring of a large group of people to determine if there are any health issues linked to long-term exposure to radio frequency energy from cell phone use. The COSMOS study will follow approximately 300,000 adult cell phone users in Europe for 20 to 30 years. Additional information about the COSMOS study can be found at <http://www.ukcosmos.org/index.html>.

## **Risk of Brain Cancer from Exposure to Radio Frequency Fields in Childhood and Adolescence (MOBI-KIDS)**

MOBI-KIDS is an international study investigating the relationship between exposure to radio frequency energy from communication technologies including cell phones and brain cancer in young people. This is an international multi-center study involving 14 European and non-European countries. Additional information about MOBI-KIDS can be found at [http://www.creal.cat/programes-recerca/en\\_projectes-creal/view.php?ID=39..](http://www.creal.cat/programes-recerca/en_projectes-creal/view.php?ID=39..)

## **Surveillance, Epidemiology, and End Results (SEER) Program of the National Cancer Institute**

The National Cancer Institute (NCI) actively follows cancer statistics in the United States to detect any change in rates of new cases for brain cancer. If cell phones play a role in risk for brain cancer, rates should go up, because heavy cell phone use has been common for quite some time in the U.S. Between 1987 and 2005, the overall age-adjusted incidence of brain cancer did not increase. Additional information about SEER can be found at <http://seer.cancer.gov/>.

## **Cell Phone Industry Actions**

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the cell phone industry to take a number of steps, including the following:

- Support-needed research on possible biological effects of RF for the type of signal emitted by cell phones;
- Design cell phones in a way that minimizes any RF exposure to the user; and
- Cooperate in providing users of cell phones with the current information on cell phone use and human health concerns.

The FDA also is working with voluntary standard-setting bodies such as the Institute of Electrical and Electronics Engineers (IEEE), the International Commission on Non-Ionizing Radiation Protection (ICNIRP), and others to assure that safety standards continue to adequately protect the public.

## **Reducing Exposure: Hands-Free Kits and Other Accessories**

### **Steps to Reduce Exposure to Radio Frequency Energy**

If there is a risk from being exposed to radio frequency energy (RF) from cell phones - and at this point we do not know that there is - it is probably very small. But, if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your RF exposure.

- Reduce the amount of time spent using your cell phone;
- Use speaker mode or a headset to place more distance between your head and the cell phone.

### **Hands-Free Kits**

Hands-free kits may include audio or Bluetooth® headsets and various types of body-worn accessories such as belt-clips and holsters. Combinations of these can be used to reduce RF energy absorption from cell phones.

Headsets can substantially reduce exposure because the phone is held away from the head in the user's hand or in approved body-worn accessories. Cell phones marketed in the U.S. are required to meet RF exposure compliance requirements when used against the head and against the body.

Because there are no known risks from exposure to RF emissions from cell phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used for convenience and comfort. They are also required by law in many states if you want to use your phone while driving.

### **Cell Phone Accessories that Claim to Shield the Head from RF Radiation**

Because there are no known risks from exposure to RF emissions from cell phones, there is no reason to believe that accessories which claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing more than a metallic accessory attached to the phone. Studies have shown that these products generally do not work as advertised. Unlike “hands-free” kits, these so-called “shields” may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption.

### **Children and Cell Phones**

The scientific evidence does not show a danger to any users of cell phones from RF exposure, including children and teenagers. The steps adults can take to reduce RF exposure apply to children and teenagers as well.

- Reduce the amount of time spent on the cell phone;

- Use speaker mode or a headset to place more distance between the head and the cell phone.

Some groups sponsored by other national governments have advised that children be discouraged from using cell phones at all. For example, The Stewart Report from the United Kingdom made such a recommendation in December 2000. In this report, a group of independent experts noted that no evidence exists that using a cell phone causes brain tumors or other ill effects. Their recommendation to limit cell phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

Additional information on the safety of RF exposures from various sources can be obtained from the following organizations (updated 10/1/2010):

- FCC RF Safety Program:  
<http://www.fcc.gov/oet/rfsafety/>.
- Environmental Protection Agency (EPA):  
<http://www.epa.gov/radtown/wireless-tech.html>.
- Occupational Safety and Health Administration (OSHA):  
<http://www.osha.gov/SLTC/radiofrequencyradiation/>.  
(Note: This web address is case sensitive.)
- National Institute for Occupational Safety and Health (NIOSH):  
<http://www.cdc.gov/niosh/>.

- World Health Organization (WHO):  
<http://www.who.int/peh-emf/en/>.
- International Commission on Non-Ionizing Radiation Protection:  
<http://www.icnirp.de>.
- Health Protection Agency:  
<http://www.hpa.org.uk/Topics/Radiation/>.
- US Food and Drug Administration:  
<http://www.fda.gov/Radiation-EmittingProducts/RadiationEmittingProductsandProcedures/HomeBusinessandEntertainment/CellPhones/default.htm>.

## Specific Absorption Rate (SAR) Certification Information

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for Radio Frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government.

These FCC exposure limits are derived from the recommendations of two expert organizations: the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE).

In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit set by the FCC for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg).

The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each model phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

For body-worn operation, this phone has been tested and meets FCC RF exposure guidelines when used with an accessory that contains no metal and that positions the mobile device a minimum of 1.5 cm from the body.

Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

The FCC has granted an Equipment Authorization for this mobile phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. The maximum SAR values for this model phone as reported in the FCC equipment authorization grant is:

- Head: 0.87 W/Kg.
- Body-worn: 0.62 W/Kg.

SAR information on this and other model phones can be viewed online at <http://www.fcc.gov/oet/ea>. To find information that pertains to a particular model phone, this site uses the phone FCC ID number which is usually printed somewhere on the case of the phone.

Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone. Additional product specific SAR information can also be obtained at [www.fcc.gov/cgb/sar](http://www.fcc.gov/cgb/sar).



## Smart Practices While Driving

### On the Road - Off the Phone

The primary responsibility of every driver is the safe operation of his or her vehicle.

Responsible drivers understand that no secondary task should be performed while driving whether it be eating, drinking, talking to passengers, or talking on a mobile phone - unless the driver has assessed the driving conditions and is confident that the secondary task will not interfere with their primary responsibility.

**Do not engage in any activity while driving a moving vehicle which may cause you to take your eyes off the road or become so absorbed in the activity that your ability to concentrate on the act of driving becomes impaired.** Samsung is committed to promoting responsible driving and giving drivers the tools they need to understand and address distractions.

**Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas. For example, only hands-free use may be permitted in certain areas.**

Before answering calls, consider your circumstances. Let the call go to voicemail when driving conditions require. Remember, driving comes first, not the call!

If you consider a call necessary and appropriate, follow these tips:

- Use a hands-free device;
- Secure your phone within easy reach;
- Place calls when you are not moving;
- Plan calls when your car will be stationary;
- Do not engage in stressful or emotional conversations;
- Let the person with whom you are speaking know that you are driving and will suspend the call if necessary;
- Do not take notes or look up phone numbers while driving;

Notice regarding legal restrictions on mounting this device in an automobile:

Laws in some states may prohibit mounting this device on or near the windshield of an automobile. In other states, the law may permit mounting this device only in specific locations in the automobile. Be sure to consult the state and local laws or ordinances where you drive before mounting this device in an automobile. Failure to comply with these restrictions could result in fines, penalties, or other damages.

Never mount this device in a manner that will obstruct the driver's clear view of the street and traffic.

**Never use wireless data services such as text messaging, Web browsing, or e-mail while operating a vehicle.**

Never watch videos, such as a movie or clip, or play video games while operating a vehicle.

For more information, go to <http://www.ctia.org>.

## Battery Use and Safety

---

**Important!** Handle and store batteries properly to avoid injury or damage.

Most battery issues arise from improper handling of batteries and, particularly, from the continued use of damaged batteries.

---

- **Do not disassemble, crush, puncture, shred, or otherwise attempt to change the form of your battery.** Do not put a high degree of pressure on the battery. This can cause leakage or an internal short-circuit, resulting in overheating.
- **Do not let the phone or battery come in contact with liquids.** Liquids can get into the phone's circuits, leading to corrosion. Even when the phone appears to be dry and appears to operate normally, the circuitry could slowly corrode and pose a safety hazard. If the phone and/or battery get wet, have them checked by your service provider or contact Samsung, even if they appear to be working properly.
- **Do not place your battery in or near a heat source.** Excessive heating can damage the phone or the battery and could cause the phone or the battery to explode. Do not dry a wet or damp battery with an appliance or heat source such as a microwave oven, hair dryer,

iron, or radiator. Avoid leaving your phone in your car in high temperatures.

- **Do not dispose of the phone or the battery in a fire.** The phone or the battery may explode when overheated.
- **Do not handle a damaged or leaking battery.** Do not let leaking battery fluid come in contact with your eyes, skin or clothing. For safe disposal options, contact your nearest Samsung-authorized service center.
- **Avoid dropping the cell phone.** Dropping the phone or the battery, especially on a hard surface, can potentially cause damage to the phone and battery. If you suspect damage to the phone or battery, take it to a service center for inspection.
- **Never use any charger or battery that is damaged in any way.**
- **Do not allow the battery to touch metal objects.** Accidental short-circuiting can occur when a metallic object (coin, key, jewelry, clip, or pen) causes a direct connection between the + and - terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.

---

**Important!** Use only Samsung-approved batteries, and recharge your battery only with Samsung-approved chargers which are specifically designed for your phone.

---

---

**Warning!** Use of a non-Samsung-approved battery or charger may present a risk of fire, explosion, leakage, or other hazard. Samsung's warranty does not cover damage to the phone caused by non-Samsung-approved batteries and/or chargers.

---

- **Do not use incompatible cell phone batteries and chargers.** Some websites and second-hand dealers not associated with reputable manufacturers and carriers, might be selling incompatible or even counterfeit batteries and chargers. Consumers should purchase manufacturer or carrier-recommended products and accessories. If unsure about whether a replacement battery or charger is compatible, contact the manufacturer of the battery or charger.
- **Misuse or use of incompatible phones, batteries, and charging devices could result in damage to the equipment and a possible risk of fire, explosion, or leakage, leading to serious injuries, damages to your phone, or other serious hazard.**

## Samsung Mobile Products and Recycling

Samsung cares for the environment and encourages its customers to recycle Samsung mobile devices and genuine Samsung accessories.

Proper disposal of your mobile device and its battery is not only important for safety, it benefits the environment. Batteries must be recycled or disposed of properly.

Recycling programs for your mobile device, batteries, and accessories may not be available in your area.

We've made it easy for you to recycle your old Samsung mobile device by working with respected take-back companies in every state in the country.

## Drop It Off

You can drop off your Samsung-branded mobile device and batteries for recycling at one of our numerous Samsung Recycling Direct (SM) locations. A list of these locations may be found at: [http://pages.samsung.com/us/recyclingdirect/usactivities\\_environment\\_samsungrecyclingdirect\\_locations.jsp](http://pages.samsung.com/us/recyclingdirect/usactivities_environment_samsungrecyclingdirect_locations.jsp).

Samsung-branded devices and batteries will be accepted at these locations for no fee.

Consumers may also recycle their used mobile device or batteries at many retail or carrier-provided locations where mobile devices and batteries are sold. Additional information regarding specific locations may be found at:

<http://www.epa.gov/epawaste/partnerships/plugin/cellphone/index.htm> or at <http://www.call2recycle.org/>.

## Mail It In

The Samsung Mobile Take-Back Program will provide Samsung customers with a free recycling mailing label. Just go to [http://www.samsung.com/us/aboutsamsung/citizenship/usactivities\\_environment\\_samsungrecyclingdirect.html?INT=STA\\_recycle\\_your\\_phone\\_page](http://www.samsung.com/us/aboutsamsung/citizenship/usactivities_environment_samsungrecyclingdirect.html?INT=STA_recycle_your_phone_page) and follow the instructions to print out a free pre-paid postage label and then send your old mobile device or battery to the address listed, via U.S. Mail, for recycling.

Dispose of unwanted electronics through an approved recycler.

To find the nearest recycling location, go to our website:

[www.samsung.com/recyclingdirect](http://www.samsung.com/recyclingdirect)

Or call, (877) 278-0799.

## Follow local regulations regarding disposal of mobile devices and batteries

Dispose of your mobile device and batteries in accordance with local regulations. In some areas, the disposal of these items in household or business trash may be prohibited. Help us protect the environment - recycle!

---

**Warning!** Never dispose of batteries in a fire because they may explode.

---

## UL Certified Travel Charger

The Travel Charger for this phone has met applicable UL safety requirements. Please adhere to the following safety instructions per UL guidelines:

**FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY  
LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE  
PROPERTY DAMAGE.**

## **IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS.**

**DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.**

FOR CONNECTION TO A SUPPLY NOT IN NORTH AMERICA, USE AN ATTACHMENT PLUG ADAPTOR OF THE PROPER CONFIGURATION FOR THE POWER OUTLET.

THIS POWER UNIT IS INTENDED TO BE CORRECTLY ORIENTED IN A VERTICAL OR HORIZONTAL OR FLOOR MOUNT POSITION.

### **Display / Touch-Screen**

Please note the following information when using your mobile device:

#### **WARNING REGARDING DISPLAY**

The display on your mobile device is made of glass or acrylic and could break if your mobile device is dropped or if it receives significant impact. Do not use if screen is broken or cracked as this could cause injury to you.

## **WARRANTY DISCLAIMER: PROPER USE OF A TOUCH-SCREEN MOBILE DEVICE**

If your mobile device has a touch-screen display, please note that a touch-screen responds best to a light touch from the pad of your finger or a non-metallic stylus. Using excessive force or a metallic object when pressing on the touch-screen may damage the tempered glass surface and void the warranty. For more information, please refer to the “Standard Limited Warranty” on page 154.

### **GPS & AGPS**

Certain Samsung mobile devices can use a Global Positioning System (GPS) signal for location-based applications. A GPS uses satellites controlled by the U.S. Government that are subject to changes implemented in accordance with the Department of Defense policy and the 2008 Federal Radio navigation Plan (FRP). Changes may affect the performance of location-based technology on your mobile device.

Certain Samsung mobile devices can also use an Assisted Global Positioning System (AGPS), which obtains information from the cellular network to improve GPS performance. AGPS uses your wireless service provider's network and therefore airtime, data charges, and/or additional charges may apply in accordance with your service plan. Contact your wireless service provider for details.

### Your Location

Location-based information includes information that can be used to determine the approximate location of a mobile device. Mobile devices which are connected to a wireless network transmit location-based information. Additionally, if you use applications that require location-based information (e.g. driving directions), such applications transmit location-based information. The location-based information may be shared with third-parties, including your wireless service provider, applications providers, Samsung, and other third-parties providing services.

### Use of AGPS in Emergency Calls

When you make an emergency call, the cellular network may activate AGPS technology in your mobile device to tell the emergency responders your approximate location.

AGPS has limitations and **might not work in your area**. Therefore:

- Always tell the emergency responder your location to the best of your ability; and
- Remain on the mobile device for as long as the emergency responder instructs you.

### Navigation


Maps, directions, and other navigation data may contain inaccurate or incomplete data, and circumstances can and do change over time. In some areas, complete information may not be available. Therefore, **you should always visually confirm that the navigational instructions are consistent with what you see before following them. All users should pay attention to road conditions, closures, traffic, and all other factors that may impact safe driving or walking. Always obey posted road signs.**

## Emergency Calls

This mobile device, like any wireless mobile device, operates using radio signals, wireless and landline networks, as well as user-programmed functions, which cannot guarantee connection in all conditions, areas, or circumstances. Therefore, you should never rely solely on any wireless mobile device for essential communications (medical emergencies, for example). Before traveling in remote or underdeveloped areas, plan an alternate method of contacting emergency services personnel. Remember, to make or receive any calls, the mobile device must be switched on and in a service area with adequate signal strength.

Emergency calls may not be possible on all wireless mobile device networks or when certain network services and/or mobile device features are in use. Check with local service providers.

### To make an emergency call:

1. If the mobile device is not on, switch it on.
2. Key in the emergency number for your present location (for example, 911 or other official emergency number).  
Emergency numbers vary by location.
3. Press  .

If certain features are in use (call blocking, for example), you may first need to deactivate those features before you can make an emergency call. Consult your User Manual and your local cellular service provider. When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your mobile device may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

## Care and Maintenance

Your mobile device is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years:

### Keep your Samsung Mobile Device away from:

#### Liquids of any kind

Keep the mobile device dry. Precipitation, humidity, and liquids contain minerals that will corrode electronic circuits. If the mobile device does get wet, do not accelerate drying with the use of an oven, microwave, or dryer, because this may damage the mobile device and could cause a fire or explosion. Do not use the mobile device with a wet hand. Doing so may cause an electric shock to you or damage to the mobile device.

### **Extreme heat or cold**

Avoid temperatures below 0°C / 32°F or above 45°C / 113°F.

### **Microwaves**

Do not try to dry your mobile device in a microwave oven. Doing so may cause a fire or explosion.

### **Dust and dirt**

Do not expose your mobile device to dust, dirt, or sand.

### **Cleaning solutions**

Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the mobile device. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.

### **Shock or vibration**

Do not drop, knock, or shake the mobile device. Rough handling can break internal circuit boards.

### **Paint**

Do not paint the mobile device. Paint can clog the device's moving parts or ventilation openings and prevent proper operation.

## **Responsible Listening**

---

**Caution!: Avoid potential hearing loss.**

---

Damage to hearing occurs when a person is exposed to loud sounds over time. The risk of hearing loss increases as sound is played louder and for longer durations. Prolonged exposure to loud sounds (including music) is the most common cause of preventable hearing loss. Some scientific research suggests that using portable audio devices, such as portable music players and cell phones, at high volume settings for long durations may lead to permanent noise-induced hearing loss. This includes the use of headphones (including headsets, earbuds, and Bluetooth® or other wireless devices). Exposure to very loud sound has also been associated in some studies with tinnitus (a ringing in the ear), hypersensitivity to sound, and distorted hearing. Individual susceptibility to noise-induced hearing loss and potential hearing problem varies. Additionally, the amount of sound produced by a portable audio device varies depending on the nature of the sound, the device settings, and the headphones that are used. As a result, there is no single volume setting that is appropriate for everyone or for every combination of sound, settings, and equipment.



You should follow some common sense recommendations when using any portable audio device:

- Always turn the volume down before plugging the earphones into an audio source.
- Set the volume in a quiet environment and select the lowest volume at which you can hear adequately.
- Be aware that you can adapt to higher volume settings over time, not realizing that the higher volume may be harmful to your hearing.
- When using headphones, turn the volume down if you cannot hear the people speaking near you or if the person sitting next to you can hear what you are listening to.
- Do not turn the volume up to block out noisy surroundings. If you choose to listen to your portable device in a noisy environment, use noise-cancelling headphones to block out background environmental noise. By blocking background environment noise, noise cancelling headphones should allow you to hear the music at lower volumes than when using earbuds.
- Limit the amount of time you listen. As the volume increases, less time is required before your hearing could be affected.
- Avoid using headphones after exposure to extremely loud noises, such as rock concerts, that might cause temporary hearing loss. Temporary hearing loss might cause unsafe volumes to sound normal.

- Do not listen at any volume that causes you discomfort. If you experience ringing in your ears, hear muffled speech, or experience any temporary hearing difficulty after listening to your portable audio device, discontinue use and consult your doctor.

You can obtain additional information on this subject from the following sources:

### **American Academy of Audiology**

11730 Plaza American Drive, Suite 300

Reston, VA 20190

Voice: (800) 222-2336

Email: [info@audiology.org](mailto:info@audiology.org)

Internet: <http://www.audiology.org/Pages/default.aspx>

### **National Institute on Deafness and Other Communication Disorders**

National Institutes of Health

31 Center Drive, MSC 2320

Bethesda, MD 20892-2320

Email: [nidcdinfo@nih.gov](mailto:nidcdinfo@nih.gov)

Internet: <http://www.nidcd.nih.gov/>

## National Institute for Occupational Safety and Health (NIOSH)

395 E Street, S.W.

Suite 9200

Patriots Plaza Building

Washington, DC 20201

Voice: 1-800-35-NIOSH (1-800-356-4674)

1-800-CDC-INFO (1-800-232-4636)

Outside the U.S. 513-533-8328

Email: [cdcinfo@cdc.gov](mailto:cdcinfo@cdc.gov)

Internet: <http://www.cdc.gov/niosh/topics/noise/default.html>

1-888-232-6348 TTY

## Operating Environment

Remember to follow any special regulations in force in any area, and always switch your mobile device off whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the mobile device or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

## Using Your Mobile Device Near Other Electronic Devices

Most modern electronic equipment is shielded from Radio Frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless mobile device. Consult the manufacturer to discuss alternatives.

## Implantable Medical Devices

A minimum separation of six (6) inches should be maintained between a handheld wireless mobile device and an implantable medical device, such as a pacemaker or implantable cardioverter defibrillator, to avoid potential interference with the device.

Persons who have such devices:

- Should ALWAYS keep the mobile device more than six (6) inches from their implantable medical device when the mobile device is turned ON;
- Should not carry the mobile device in a breast pocket;
- Should use the ear opposite the implantable medical device to minimize the potential for interference;
- Should turn the mobile device OFF immediately if there is any reason to suspect that interference is taking place;
- Should read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your wireless mobile device with an implantable medical device, consult your health care provider.

For more information see: <http://www.fcc.gov/oet/rfsafety/rf-faqs.html#>.

### **Other Medical Devices**

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch your mobile device off in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

### **Vehicles**

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle before using your mobile device in a motor vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

### **Posted Facilities**

Switch your mobile device off in any facility where posted notices require you to do so.

### **Potentially Explosive Environments**

Switch your mobile device off when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Users are advised to switch the mobile device off while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust, or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

## FCC Hearing Aid Compatibility (HAC) Regulations for Wireless Devices

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless mobile devices under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless mobile devices be compatible with hearing aids.

The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities. While some wireless mobile devices are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and mobile devices also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless mobile devices to assist hearing device users find mobile devices that may be compatible with their hearing devices. Not all mobile devices have been rated. Mobile devices that are rated have the rating on their box or a label located on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated mobile device successfully. Trying out the mobile device with your hearing device is the best way to evaluate it for your personal needs.

**M-Ratings:** Mobile devices rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than mobile devices that are not labeled. M4 is the better/higher of the two ratings.

**T-Ratings:** Mobile devices rated T3 or T4 meet FCC requirements and are likely to generate less interference to hearing devices than mobile devices that are not labeled. T4 is the better/higher of the two ratings.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise. The hearing aid and wireless mobile device rating values are then added together.

A sum of 5 is considered acceptable for normal use. A sum of 6 is considered for best use. If a hearing aid meets the M2 level rating and the wireless mobile device meets the M3 level rating, the sum of the two values equal M5. This is synonymous for T ratings. This should provide the hearing aid user with "normal

 
usage” while using their hearing aid with the particular wireless mobile device.

“Normal usage” in this context is defined as a signal quality that is acceptable for normal operation. The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT marks are referenced in Section 20.19 of the FCC Rules.

### HAC/Wi-Fi for Newer Technologies

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.

The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

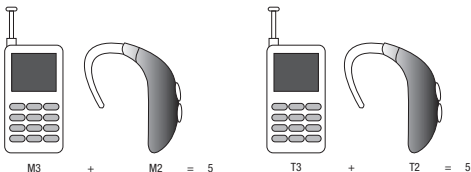

### Restricting Children's Access to Your Mobile Device

Your mobile device is not a toy. Do not allow children to play with it because they could hurt themselves and others, damage the mobile device, or make calls that increase your mobile device bill.

Keep the mobile device and all its parts and accessories out of the reach of small children.

## FCC Notice and Cautions

### FCC Notice

The mobile device may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the mobile device if such interference cannot be eliminated. Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association.

### Cautions

Any changes or modifications to your mobile device not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment. Only use approved batteries, antennas, and chargers. The use of any unauthorized accessories may be dangerous and void the mobile device warranty if said accessories cause damage or a defect to the mobile device. Although your mobile device is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending, or sitting on it.

## Other Important Safety Information

- Only qualified personnel should service the mobile device or install the mobile device in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Ensure that any mobile devices or related equipment installed in your vehicle are securely mounted.
- Check regularly that all wireless mobile device equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the mobile device, its parts, or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including installed or portable wireless equipment near or in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.
- Switch your mobile device off before boarding an aircraft. The use of wireless mobile devices in aircraft is illegal and may be dangerous to the aircraft's operation. Check with appropriate authorities before using any function of a mobile device while on an aircraft.
- Failure to observe these instructions may lead to the suspension or denial of cell phone services to the offender, or legal action, or both.

- If the phone, battery, charger or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.
- Dispose of phones in accordance with local regulations. In some areas, the disposal of phones in household or business trash may be prohibited. For safe disposal options for phones, contact your nearest Samsung authorized service center.

## Section 13: Warranty Information

---

### Standard Limited Warranty

#### What is Covered and For How Long?

SAMSUNG TELECOMMUNICATIONS AMERICA, LLC ("SAMSUNG") warrants that SAMSUNG's handsets and accessories ("Products") are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase by the first consumer purchaser and continuing for the following specified period of time after that date:

Phone	1 Year
Batteries	1 Year
Case/Pouch/Holster	90 Days
Other Phone Accessories	1 Year

#### What is Not Covered?

This Limited Warranty is conditioned upon proper use of the Product. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abnormal use, abnormal conditions, improper storage, exposure to liquid, moisture, dampness, sand or dirt, neglect, or unusual physical, electrical or electromechanical stress; (b) scratches,

defects and cosmetic damage, unless caused by SAMSUNG; (c) defects or damage resulting from excessive force or use of a metallic object when pressing on a touch screen; (d) equipment that has the serial number or the enhancement data code removed, defaced, damaged, altered or made illegible; (e) ordinary wear and tear; (f) defects or damage resulting from the use of Product in conjunction or connection with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (g) defects or damage resulting from improper testing, operation, maintenance, installation, service, or adjustment not furnished or approved by SAMSUNG; (h) defects or damage resulting from external causes such as collision with an object, fire, flooding, dirt, windstorm, lightning, earthquake, exposure to weather conditions, theft, blown fuse, or improper use of any electrical source; (i) defects or damage resulting from cellular signal reception or transmission, or viruses or other software problems introduced into the Product; or (j) Product used or purchased outside the United States. This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery; (ii) any of the seals on the battery are broken or show evidence of tampering; or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.



### **What are SAMSUNG's Obligations?**

During the applicable warranty period, provided the Product is returned in accordance with the terms of this Limited Warranty, SAMSUNG will repair or replace the Product, at SAMSUNG'S sole option, without charge. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product, or may replace the Product with a rebuilt, reconditioned or new Product. Repaired/replaced cases, pouches and holsters will be warranted for a period of ninety (90) days. All other repaired/replaced Products will be warranted for a period equal to the remainder of the original Limited Warranty on the original Product or for ninety (90) days, whichever is longer. All replaced Products, parts, components, boards and equipment shall become the property of SAMSUNG. Except to any extent expressly allowed by applicable law, transfer or assignment of this Limited Warranty is prohibited.

### **What must you do to obtain warranty service?**

To obtain service under this Limited Warranty, you must return the Product to an authorized phone service facility in an adequate container for shipping, accompanied by the sales receipt or comparable proof of sale showing the original date of purchase, the serial number of the Product and the seller's name and address. To obtain assistance on where to deliver the Product, please call SAMSUNG Customer Care at 1-888-987-4357. If

SAMSUNG determines that any Product is not covered by this Limited Warranty, you must pay all parts, shipping, and labor charges for the repair or return of such Product.

You should keep a separate backup copy of any contents of the Product before delivering the Product to SAMSUNG for warranty service, as some or all of the contents may be deleted or reformatted during the course of warranty service.

### **What Are The Limits On SAMSUNG's liability?**

THIS LIMITED WARRANTY SETS OUT THE FULL EXTENT OF SAMSUNG'S RESPONSIBILITIES, AND THE EXCLUSIVE REMEDY REGARDING THE PRODUCTS. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SAMSUNG BE LIABLE FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR FOR, WITHOUT LIMITATION, COMMERCIAL LOSS OF ANY SORT; LOSS OF USE, TIME, DATA, REPUTATION, OPPORTUNITY, GOODWILL, PROFITS OR SAVINGS; INCONVENIENCE; INCIDENTAL, SPECIAL, CONSEQUENTIAL OR PUNITIVE DAMAGES; OR DAMAGES ARISING FROM THE USE OR INABILITY TO USE THE PRODUCT. SOME STATES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, OR THE DISCLAIMER OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND DISCLAIMERS MAY NOT APPLY TO YOU.

SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRD-PARTY SOFTWARE OR EQUIPMENT USED IN CONJUNCTION WITH THE PRODUCT, OR THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE. RESPONSIBILITY FOR THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT RESTS SOLELY WITH THE USER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT.

Nothing in the Product instructions or information shall be construed to create an express warranty of any kind with respect to the Products. No agent, employee, dealer, representative or reseller is authorized to modify or extend this Limited Warranty or to make binding representations or claims, whether in advertising, presentations or otherwise, on behalf of SAMSUNG regarding the Products or this Limited Warranty.

This Limited Warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

### **What is the procedure for resolving disputes?**

ALL DISPUTES WITH SAMSUNG ARISING IN ANY WAY FROM THIS LIMITED WARRANTY OR THE SALE, CONDITION OR PERFORMANCE OF THE PRODUCTS SHALL BE RESOLVED EXCLUSIVELY THROUGH FINAL AND BINDING ARBITRATION, AND NOT BY A COURT OR JURY. Any such dispute shall not be combined or consolidated with a dispute involving any other person's or entity's Product or claim, and specifically, without limitation of the foregoing, shall not under any circumstances proceed as part of a class action. The arbitration shall be conducted before a single arbitrator, whose award may not exceed, in form or amount, the relief allowed by the applicable law. The arbitration shall be conducted according to the American Arbitration Association (AAA) Commercial Arbitration Rules applicable to consumer disputes. This arbitration provision is entered pursuant to the Federal Arbitration Act. The laws of the State of Texas, without reference to its choice of laws principles, shall govern the interpretation of the Limited Warranty and all disputes that are subject to this arbitration provision. The arbitrator shall decide all issues of interpretation and application of this arbitration provision and the Limited Warranty.

For any arbitration in which your total damage claims, exclusive of attorney fees and expert witness fees, are \$5,000.00 or less ("Small Claim"), the arbitrator may, if you prevail, award your reasonable attorney fees, expert witness fees and costs as part

of any award, but may not grant SAMSUNG its attorney fees, expert witness fees or costs unless it is determined that the claim was brought in bad faith. In a Small Claim case, you shall be required to pay no more than half of the total administrative, facility and arbitrator fees, or \$50.00 of such fees, whichever is less, and SAMSUNG shall pay the remainder of such fees. Administrative, facility and arbitrator fees for arbitrations in which your total damage claims, exclusive of attorney fees and expert witness fees, exceed \$5,000.00 ("Large Claim") shall be determined according to AAA rules. In a Large Claim case, the arbitrator may grant to the prevailing party, or apportion among the parties, reasonable attorney fees, expert witness fees and costs. Judgment may be entered on the arbitrator's award in any court of competent jurisdiction.

This arbitration provision also applies to claims against SAMSUNG'S employees, representatives and affiliates if any such claim arises from the Product's sale, condition or performance.

**You may opt out of this dispute resolution procedure by providing notice to SAMSUNG no later than 30 calendar days from the date of the first consumer purchaser's purchase of the Product. To opt out, you must send notice by e-mail to [optout@sta.samsung.com](mailto:optout@sta.samsung.com), with the subject line: "Arbitration Opt Out." You must include in the opt out e-mail (a) your name and address; (b) the date on which the Product was purchased; (c) the Product model name or model**

**number; and (d) the IMEI or MEID or Serial Number, as applicable, if you have it (the IMEI or MEID or Serial Number can be found (i) on the Product box; (ii) on the Product information screen, which can be found under "Settings;" (iii) on a label on the back of the Product beneath the battery, if the battery is removable; and (iv) on the outside of the Product if the battery is not removable). Alternatively, you may opt out by calling 1-888-987-4357 no later than 30 calendar days from the date of the first consumer purchaser's purchase of the Product and providing the same information. These are the only two forms of notice that will be effective to opt out of this dispute resolution procedure. Opting out of this dispute resolution procedure will not affect the coverage of the Limited Warranty in any way, and you will continue to enjoy the benefits of the Limited Warranty.**

#### **Severability**

If any portion of this Limited Warranty is held to be illegal or unenforceable, such partial illegality or unenforceability shall not affect the enforceability of the remainder of the Limited Warranty.

Samsung Telecommunications America, LLC

1301 E. Lookout Drive

Richardson, Texas 75082

Phone: 1-800-SAMSUNG

Phone: 1-888-987-HELP (4357)

©2011 Samsung Telecommunications America, LLC. All rights reserved.

No reproduction in whole or in part allowed without prior written approval. Specifications and availability subject to change without notice. [060111]

## End User License Agreement for Software

**IMPORTANT. READ CAREFULLY:** This End User License Agreement ("EULA") is a legal agreement between you (either an individual or a single entity) and Samsung Electronics Co., Ltd. for software owned by Samsung Electronics Co., Ltd. and its affiliated companies and its third party suppliers and licensors that accompanies this EULA, which includes computer software and may include associated media, printed materials, "online" or electronic documentation ("Software"). BY CLICKING THE "I ACCEPT" BUTTON (OR IF YOU BYPASS OR OTHERWISE DISABLE THE "I ACCEPT", AND STILL INSTALL, COPY, DOWNLOAD, ACCESS OR OTHERWISE USE THE SOFTWARE), YOU AGREE TO BE BOUND BY THE TERMS OF THIS EULA. IF YOU DO NOT ACCEPT THE TERMS IN THIS EULA, YOU MUST CLICK THE "DECLINE" BUTTON, AND DISCONTINUE USE OF THE SOFTWARE.

1. **GRANT OF LICENSE.** Samsung grants you the following rights provided that you comply with all terms and conditions of this EULA: You may install, use, access, display and run one copy of the Software on the local hard disk(s) or other permanent storage media of one computer and use the Software on a single computer or a mobile device at a time, and you may not make

the Software available over a network where it could be used by multiple computers at the same time. You may make one copy of the Software in machine-readable form for backup purposes only; provided that the backup copy must include all copyright or other proprietary notices contained on the original.

2. **RESERVATION OF RIGHTS AND OWNERSHIP.** Samsung reserves all rights not expressly granted to you in this EULA. The Software is protected by copyright and other intellectual property laws and treaties. Samsung or its suppliers own the title, copyright and other intellectual property rights in the Software. The Software is licensed, not sold.

3. **LIMITATIONS ON END USER RIGHTS.** You may not reverse engineer, decompile, disassemble, or otherwise attempt to discover the source code or algorithms of, the Software (except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation), or modify, or disable any features of, the Software, or create derivative works based on the Software. You may not rent, lease, lend, sublicense or provide commercial hosting services with the Software.

4. **CONSENT TO USE OF DATA.** You agree that Samsung and its affiliates may collect and use technical information gathered as part of the product support services related to the Software provided to you, if any, related to the Software. Samsung may use this information solely to improve its products or to provide

customized services or technologies to you and will not disclose this information in a form that personally identifies you.

5. **UPGRADES.** This EULA applies to updates, supplements and add-on components (if any) of the Software that Samsung may provide to you or make available to you after the date you obtain your initial copy of the Software, unless we provide other terms along with such upgrade. To use Software identified as an upgrade, you must first be licensed for the Software identified by Samsung as eligible for the upgrade. After upgrading, you may no longer use the Software that formed the basis for your upgrade eligibility.

6. **SOFTWARE TRANSFER.** You may not transfer this EULA or the rights to the Software granted herein to any third party unless it is in connection with the sale of the mobile device which the Software accompanied. In such event, the transfer must include all of the Software (including all component parts, the media and printed materials, any upgrades, this EULA) and you may not retain any copies of the Software. The transfer may not be an indirect transfer, such as a consignment. Prior to the transfer, the end user receiving the Software must agree to all the EULA terms.

7. **EXPORT RESTRICTIONS.** You acknowledge that the Software is subject to export restrictions of various countries. You agree to comply with all applicable international and national laws that

apply to the Software, including the U.S. Export Administration Regulations, as well as end user, end use, and destination restrictions issued by U.S. and other governments.

8. **TERMINATION.** This EULA is effective until terminated. Your rights under this License will terminate automatically without notice from Samsung if you fail to comply with any of the terms and conditions of this EULA. Upon termination of this EULA, you must cease all use of the Software and destroy all copies, full or partial, of the Software.

9. **THIRD-PARTY APPLICATIONS.** Certain third-party applications may be included with, or downloaded to this mobile device. SAMSUNG makes no representations whatsoever about any of these applications. Since SAMSUNG has no control over such applications, Purchaser acknowledges and agrees that SAMSUNG is not responsible for the availability of such applications and is not responsible or liable for any content, advertising, products, services, or other materials on or available from such applications. Purchaser expressly acknowledges and agrees that use of third-party applications is at Purchaser's sole risk and that the entire risk of unsatisfactory quality, performance, accuracy and effort is with Purchaser. It is up to Purchaser to take precautions to ensure that whatever Purchaser selects to use is free of such items as viruses, worms, Trojan horses, and other items of a destructive nature. References on this mobile device to any names, marks, products, or services of

any third-parties are provided solely as a convenience to Purchaser, and do not constitute or imply an endorsement, sponsorship, or recommendation of, or affiliation with the third-party or its products and services. Purchaser agrees that SAMSUNG shall not be responsible or liable, directly or indirectly, for any damage or loss caused or alleged to be caused by, or in connection with, use of or reliance on any such third-party content, products, or services available on or through any such application. Purchaser acknowledges and agrees that your use of any third-party application is governed by such third-party application provider's Terms of Use, License Agreement, Privacy Policy, or other such agreement and that any information or personal data you provide, whether knowingly or unknowingly, to such third-party application provider, will be subject to such third-party application provider's privacy policy, if such a policy exists. SAMSUNG DISCLAIMS ANY RESPONSIBILITY FOR ANY DISCLOSURE OF INFORMATION OR ANY OTHER PRACTICES OF ANY THIRD-PARTY APPLICATION PROVIDER.

10. Disclaimer of Warranty Regarding Third-Party Applications. SAMSUNG DOES NOT WARRANT OR MAKE ANY REPRESENTATIONS REGARDING THE AVAILABILITY, USE, TIMELINESS, SECURITY, VALIDITY, ACCURACY, OR RELIABILITY OF, OR THE RESULTS OF THE USE OF, OR OTHERWISE RESPECTING, THE CONTENT OF ANY THIRD-PARTY APPLICATION WHETHER SUCH THIRD-PARTY APPLICATION IS INCLUDED WITH THE

PRODUCT DISTRIBUTED BY SAMSUNG, IS DOWNLOADED, OR OTHERWISE OBTAINED. USE OF ANY THIRD-PARTY APPLICATION IS DONE AT PURCHASER'S OWN DISCRETION AND RISK AND PURCHASER IS SOLELY RESPONSIBLE FOR ANY DAMAGE TO YOUR MOBILE DEVICE OR LOSS OF DATA THAT RESULTS FROM THE DOWNLOADING OR USE OF SUCH THIRD-PARTY APPLICATIONS. SAMSUNG EXPRESSLY DISCLAIMS ANY WARRANTY REGARDING WHETHER PURCHASER'S PERSONAL INFORMATION IS CAPTURED BY ANY THIRD-PARTY APPLICATION PROVIDER OR THE USE TO WHICH SUCH PERSONAL INFORMATION MAY BE PUT BY SUCH THIRD-PARTY APPLICATION PROVIDER. ANY THIRD-PARTY APPLICATIONS PROVIDED WITH THIS MOBILE DEVICE ARE PROVIDED "AS IS" AND ON AN "AS AVAILABLE" BASIS, WITHOUT WARRANTIES OF ANY KIND FROM SAMSUNG, EITHER EXPRESS OR IMPLIED. TO THE FULLEST EXTENT POSSIBLE PURSUANT TO APPLICABLE LAW, SAMSUNG DISCLAIMS ALL WARRANTIES EXPRESS, IMPLIED, OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, SATISFACTORY QUALITY OR WORKMANLIKE EFFORT, FITNESS FOR A PARTICULAR PURPOSE, RELIABILITY OR AVAILABILITY, ACCURACY, LACK OF VIRUSES, QUIET ENJOYMENT, NON-INFRINGEMENT OF THIRD PARTY RIGHTS OR OTHER VIOLATION OF RIGHTS. SAMSUNG DOES NOT WARRANT AGAINST INTERFERENCE WITH YOUR ENJOYMENT OF THE THIRD-PARTY APPLICATION, THAT THE FUNCTIONS

CONTAINED IN THE THIRD-PARTY APPLICATION WILL MEET PURCHASER'S REQUIREMENTS, THAT THE OPERATION OF THE THIRD-PARTY APPLICATION WILL BE UNINTERRUPTED OR ERROR-FREE, OR THAT DEFECTS IN THE THIRD-PARTY APPLICATION WILL BE CORRECTED. PURCHASER ASSUMES THE ENTIRE COST OF ALL NECESSARY SERVICING, REPAIR, OR CORRECTION. SOME JURISDICTIONS DO NOT ALLOW EXCLUSIONS OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. NO ADVICE OR INFORMATION, WHETHER ORAL OR WRITTEN, OBTAINED BY PURCHASER FROM SAMSUNG SHALL BE DEEMED TO ALTER THIS DISCLAIMER OF WARRANTY REGARDING THIRD-PARTY APPLICATIONS, OR TO CREATE ANY WARRANTY.

11. Limitation of Liability. SAMSUNG WILL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND ARISING OUT OF OR RELATING TO THE USE OR THE INABILITY TO USE ANY THIRD-PARTY APPLICATION, ITS CONTENT OR FUNCTIONALITY, INCLUDING BUT NOT LIMITED TO DAMAGES CAUSED BY OR RELATED TO ERRORS, OMISSIONS, INTERRUPTIONS, DEFECTS, DELAY IN OPERATION OR TRANSMISSION, COMPUTER VIRUS, FAILURE TO CONNECT, NETWORK CHARGES, AND ALL OTHER DIRECT, INDIRECT, SPECIAL, INCIDENTAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES EVEN IF SAMSUNG HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME

JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. NOTWITHSTANDING THE FOREGOING, SAMSUNG'S TOTAL LIABILITY TO PURCHASER FOR ALL LOSSES, DAMAGES, CAUSES OF ACTION, INCLUDING BUT NOT LIMITED TO THOSE BASED ON CONTRACT, TORT, OR OTHERWISE, ARISING OUT OF PURCHASER'S USE OF THIRD-PARTY APPLICATIONS ON THIS MOBILE DEVICE, OR ANY OTHER PROVISION OF THIS EULA, SHALL NOT EXCEED THE AMOUNT PURCHASER PAID SPECIFICALLY FOR ANY SUCH THIRD-PARTY APPLICATION THAT WAS INCLUDED WITH THIS MOBILE DEVICE. THE FOREGOING LIMITATIONS, EXCLUSIONS, AND DISCLAIMERS (INCLUDING SECTIONS 9, 10, AND 11) SHALL APPLY TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, EVEN IF ANY REMEDY FAILS ITS ESSENTIAL PURPOSE.

12. U.S. GOVERNMENT END USERS. The Software is licensed only with "restricted rights" and as "commercial items" consisting of "commercial software" and "commercial software documentation" with only those rights as are granted to all other end users pursuant to the terms and conditions herein.

13. APPLICABLE LAW. This EULA is governed by the laws of TEXAS, without regard to conflicts of laws principles. This EULA shall not be governed by the UN Convention on Contracts for the International Sale of Goods, the application of which is expressly

excluded. If a dispute, controversy or difference is not amicably settled, it shall be finally resolved by arbitration in Seoul, Korea in accordance with the Arbitration Rules of the Korean Commercial Arbitration Board. The award of arbitration shall be final and binding upon the parties.

14. ENTIRE AGREEMENT; SEVERABILITY. This EULA is the entire agreement between you and Samsung relating to the Software and supersedes all prior or contemporaneous oral or written communications, proposals and representations with respect to the Software or any other subject matter covered by this EULA. If any provision of this EULA is held to be void, invalid, unenforceable or illegal, the other provisions shall continue in full force and effect.

### ***Precautions for Transfer and Disposal***

If data stored on this device is deleted or reformatted using the standard methods, the data only appears to be removed on a superficial level, and it may be possible for someone to retrieve and reuse the data by means of special software.

To avoid unintended information leaks and other problems of this sort, it is recommended that the device be returned to Samsung's Customer Care Center for an Extended File System (EFS) Clear which will eliminate all user memory and return all settings to default settings. Please contact the **Samsung Customer Care Center** for details.

---

**Important!** Please provide warranty information (proof of purchase) to Samsung's Customer Care Center in order to provide this service at no charge. If the warranty has expired on the device, charges may apply.

---



Customer Care Center:

1000 Klein Rd.

Plano, TX 75074

Toll Free Tel: 1.888.987.HELP (4357)

Samsung Telecommunications America, LLC:

1301 East Lookout Drive

Richardson, Texas 75082

Phone: 1-800-SAMSUNG (726-7864)

---

**Important!** If you are using a handset other than a standard numeric keypad,  
dial the numbers listed in brackets.

---

Phone: 1-888-987-HELP (4357)

©2011 Samsung Telecommunications America. All rights reserved.

No reproduction in whole or in part allowed without prior written approval. Specifications and availability subject to change without notice. [060111]

## Numerics

**4-way Shortcuts** 120

## A

**ABC mode** 37, 71

**Accessing a Menu Function** 33

**Auto Block** 127

## B

### Backlight

Description 19

Settings 115

### Battery

Charging 9

Installing 8

Low Battery Indicator 10

Removal 9

Wall Charger 9

### Battery Cover

Replace 6

**Battery Use & Safety** 140

### Bluetooth

About 124

Features 126

Searching for New Devices 125

Turning Bluetooth On and Off 124

## C

### Calendar

#### Call

History 24

#### Call Functions

Adjusting the Call Volume 23

Answering a Call 24

Call History 24

Correcting the Number 22

Ending a Call 22

Making a Call 22

Making a Call from Phonebook 23

Multi-Party Calls 30

Placing a Call on Hold 29

Redialing Last Number 22

Splitting Callers 31

Vibration Profile 27

viewing recently answered calls 26

#### Call History

Call Time 130

Delete All 131

Delete All Entries 26

Management 130

Viewing Recently Answered Calls 26

### Call Records

All calls 24

Delete all 26

Dialed calls 26

Missed calls 25

Voicemail 26

### Call Waiting

#### Caller Groups

Adding 63

Editing 64

#### Camcorder

Default Storage 108

Options 107

Recording 106

Sending 106

Settings 107

#### Camcorder Shortcuts

Shortcut Keys 108

#### Camera

taking photos 102

**Care and Maintenance** 145  
**Charging Battery** 9  
**Children and Cell Phones** 136  
**Contact Entries**  
    Deleting All 66  
    Deleting from Phone 67  
    Deleting from SIM 67  
**Contacts**  
    Default Storage Settings 66  
**Conversations** 48  
**Copying**  
    Contact 61  
    Number 61  
    Phone to SIM 61  
**D**  
**Default Destination**  
    Images 74  
**Deleting**  
    Contacts 66  
**Dialing**  
    With a SIM 11  
    Without a SIM 11  
**Dialing a Number**  
    Phonebook 63

**Dialing Display** 114  
**Display**  
    Backlight 19  
    Icons 18  
**Display / Touch-Screen** 143  
**Do cell phones pose a health hazard?**  
133

## **E**

**Emergency Calls** 145  
**Entering Text** 35  
    Changing the Text Entry Mode 37  
    Using ABC Mode 40  
    Using Numeric Mode 41  
    Using Symbol Mode 41  
    Using T9 Mode 38  
**Exposure to RF Signals** 133

## **F**

**Facebook** 121  
    Chat 121  
**FCC Hearing Aid Compatibility (HAC)**  
**Regulations for Wireless Devices** 150  
**FCC Notice and Cautions** 152  
**Find Great Games** 74  
**Flickr** 126

**Font Size**  
    Main Display 114  
**Fun & Apps** 69, 85  
**Functions and Options** 27

## **G**

**Getting Started** 4, 33  
    Activating Your Phone 6  
    Battery 8  
    microSD card 7  
    SIM Card 6  
    Visual Voicemail 12

**GPS & AGPS** 143

## **H**

**HAC Mode** 116  
**Health and Safety Information** 133  
**Help** 21, 124

## **I**

**In Call Options** 28  
**International Call** 22

## **K**

**Keyboard Shortcuts** 121  
**Keypad Light**  
    Settings 115  
**Kodak** 126

## L

**Low Battery Indicator** 10

## M

**Making a Call**

Phonebook 23

**Mass Storage** 119

**Master Reset** 132

**Memory Status** 67

**Menu Navigation** 33

**Message Inbox**

Viewing a Picture Message 50

Viewing a Text Message 49

Viewing an Incoming Picture

Message 50

**Message Settings** 56

Receiving Options 57

Sending Options 57

Text Message 57

Text Message Center 57

**Message settings**

Picture message 57

**Message Threads** 48

**Messages** 43

**Messaging**

Types of Messages 43

**Messaging Key** 120

**microSD Card**

Insertion 7

Removal 8

**Missed Call**

Viewing 25

**Multi-Party Call** 30

Creating 31

Dropping One Participant 32

Private Conversation 31

Setting up 30

Splitting Callers 31

**Mute** 28

**My Album** 75, 109

**My Folders** 53

Creating 53

**My Number** 68

**My Space** 121

**My Stream** 121

## N

**Number mode** 37, 71

**Numeric** 37, 71

## O

**Operating Environment** 148

**Optical Joystick**

Customization 21

Feedback Sound 21

Sensitivity 21, 120

**Options**

During a Call 28

Making a New call while in a call 29

**Organizer** 85

Calculator 98

Calendar 85

Converter 99

Stopwatch 100

Timer 100

Tip calculator 98

World time 99

**Other Important Safety Information** 152

## P

**Phone**

Icons 18

Switching On/Off 11

**Phone Keys** 14

**Phone Settings** 116

**Photo Gallery** 105

**Photobucket** 126

**Photos**

- Accessing pictures 105
- Deleting pictures 75, 106
- Options 105

**Picture ID** 74, 76, 77

**Picture Messages** 46

**Profile**

- Normal 27
- Vibration 27

**R**

**Recording a Video** 106

**Reducing Exposure**

- Hands-Free Kits and Other Accessories 136

**Reset**

- Master Reset 132
- Settings 132

**Responsible Listening** 146

**Restricting Children's Access to Your Mobile device** 151

**S**

**Samsung PC Studio** 119

**Samsung Products and Recycling** 141

**SAR Certification Information** 137

**Sending a Video** 106

**Sensitivity** 120

**Settings** 110

- Bluetooth 124
- Display 114
- Phone 116
- Sound 110
- Time and Date 124

**Shortcuts** 34, 120, 121

**Show My Number** 127

**SIM Card**

- Insertion 6
- Removal 7

**Smart Practices While Driving** 139

**Snapfish** 126

**Social Buzz** 55, 121

**Soft Keys** 27

**Software Update** 132

**Sound Settings**

- Vibration Mode 111

**Speakerphone** 29

**Speed Dial**

- Setting Up Entries 65

**Standard Limited Warranty** 154

**Stopwatch** 100

**Storing a Number**

- phone's memory 60

**Symbol mode** 37, 71

**T**

**T9 mode** 37, 71

**Take and Send** 102

**Task List** 97

**Text Input Mode**

- Changing 37

**Text Messages** 44

**Themes** 114

**Timer** 100

**T-Mobile Mall** 69

**Twitter** 121

**U**

**UL Certified Travel Charger** 142

**Understanding Your Phone** 13

- Camera View 15
- Features of Your Phone 13
- Open View 13

**Understanding Your Phonebook** 60

Finding a Contact Entry 62

**Upload pic** 121

**USB Mode** 119

Mass Storage 119

**V**

**Vibration Mode** 27, 111

**Visual Voicemail**

Accessing 12

Enabling 12

Getting Started 12

Setting Up 12

**Voice Mail** 12, 53

**Voice Recognition** 91

About 96

Adaptation 95

Audio Modes 96

Checking Phone Status 94

Configuring Settings 95

Confirmation 95

Looking Up 94

Making a Voice Call 92

Opening Menus 94

Reset Adaptation 96

Sending a Message 93

Settings 95

Speakerphone 96

Tips for Using 92

**Voicemail** 26

**W**

**Wallpaper** 77, 114

**Warranty Information** 154

**web2go** 69

Bookmarks 72

Browser settings 73

Clear cache 73

Enter URL 72

Entering Text 71

Exiting 70

History 72

Home 69

Navigating 70

Saved pages 72