

sunslick 7/14/27 Watts

flexible solar panel

Operating instructions

Product Description: flexible solar panel for 12 Volts

Product Specifications (@ STC*):

Specifications	Sunslick 7 W	Sunslick 14 W	Sunslick 27 W
Operating Voltage (VDC)	15	15	15
Operating Current (mA)	450	900	1800
Weight (Kg)	0.48	0.90	1.5
Dimensions (mm)	350 x 695	350 x 1305	642 x 1305

sured @ Standard Testing Conditions (STC): 1000W/m2, AM 1.5, 25°C

Temperature Operating Range: -20°C to +60°C

Disclaimer of Liability

user's manual contains safety, installation. performances, maintenance and technical information which you should be familiar with before using your Flexcell solar charger. Please read it carefully!

Caution

Photovoltaic modules produce electricity when exposed to light. The voltage from a single module is not considered hazardous, however, if connected in series in order to increase voltage, the shock hazard increases.

When working around batteries and other electrical equipment, please observe industry standards and manufacturer's safety procedures.

"DOs and DON'ts"

- Make electrical connections to or from the solar panel preferably in low light conditions to reduce risk of electrical sparking.
- Make connections in well-ventilated area free from flammable gases or vapours.
- Check polarity! All connections must be positive (Red, +) to positive and negative (Black, -) to negative. Incorrect connection will damage the solar module and may result in electrical shock or fire hazard.
- DO NOT attempt to recharge NON-RECHARGEABLE batteries.
- Securely mount the solar panel on a supportive surface to avoid flapping in the wind.

 • Always roll the solar panel with the cell side (purple side)
- facing outwards.

Installation Instructions

1) Select best mounting location

Mount the panel, with the cell side oriented to the sun, in a location that will receive good direct sunlight throughout the day. For maximum charging performance, position the solar panel to face noon time sun.

- 2) Use corner grommets to properly tie or fasten the solar panel to a fixed surface or canvas. The solar panel must be secured sufficiently to avoid flapping in the wind.
- 3) Connect the solar panel cord at of the junction box to the 3 meter extension cable.
- 4) Identify the correct polarity (Red+, Black-) and connect the red terminal of the 3 m extension cable to the positive post of the battery, charge controller or any other 12 Volts device, and the black terminal to the negative post.

Warning: reverse connection to the battery is a fire hazard and could damage your solar panel.

5) You may leave the panel permanently connected to

your battery since a blocking diode in the panel junction box blocks reverse leakage of current from the battery at

sunslick

Application Chart

How do I know which Sunslick size I need?

Consult the application chart below. How do I know if the Sunslick is working?

You can check the solar panel ouput with a voltmeter.

Will this product drain my battery at night?

No. There is a built-in blocking diode to protect against reverse draining of current.

Can I leave it outside permanently?

Yes, if properly mounted and secured to avoid damage from winds. Terminals should be kept clean and firmly connected.

What if the product gets wet?

No problem. The product is waterproof.

What if the product goes under water? Simply wipe the Sunslick with a dry cloth. Avoid having the Sunslick completely submerged for an extended period of

How do I clean and maintain it?

The Sunslick requires practically no maintenance. Simply wipe the surface with a damp cloth or with a mild soap solution to clean the panel. Do not use any abrasive cleaner or solvent as this would damage the panel.

Do I need a charge controller?

A charge controller is used to prevent overcharging. A charge controller should be used if the current output of the solar panel (in Amps) is more than 1% of the battery capacity (in Amp-hours). Consult the battery manufacturer for complete battery information and recommendations. As an example, with a Sunslick 7 Watts (450 mA), a charge controller would be recommended with a battery that is less than 45 Amp-hours.

- **Troubleshooting**1) **Connection** Inspect your wiring for any sign of loose wires orrosion. Check polarity!
- 2) Voltage Using a voltmeter, test the open circuit voltage between the positive (Red+) and negative (Black-) terminals.
- 3) Battery Ensure your battery continues to be able to be recharged. Contact your battery's manufacturer for more detailed guidelines on battery testing.
- 4) Size Make sure you are using a properly sized system. Consult the application chart below for guidelines.

Warranty, limitation of liability

To the fullest extent permitted by law, Flexcell (VHF-Technologies SA, Av. des Sports 26, 1400 Yverdon-les-Bains, Switzerland)makes no warranties express or implied. including, but not limited to any condition, warranty or term as to satisfactory quality or fitness for purpose except the following:

Flexcell grants the original Purchaser of this product a limited three (3) year warranty on the electrical performance of the module and a two (2) year warranty on defects of material and workmanship: we guarantee that this unit will produce a minimum of 70% of its rated electrical performance for a period of three (3) years from the purchase date, and that this product is free of defects in materials and workmanship for a period of two (2) years from the purchase date. Upon purchase or receipt, Purchaser shall inspect and/or test

the quality of the delivered Goods as soon as it is customary in accordance with usual business practice. Purchaser shall notify Seller immediately from the date an alleged failure to conform with the specification(s) is discovered. If Purchaser fails to examine the quality of the Goods or give notice according to this provision, the Goods are deemed to have been accepted and any claim of breach of warranty with respect to such Goods shall be waived.

This warranty does not cover any product, which has been damaged by or acts of God, misuse, neglect or improper installation or application, or negligence in use, storage, transportation or handling, or repair by anyone other than flexcell. Operating instructions are communicated to Purchaser together with any purchased Goods.

Flexcell shall not be responsible for any damage to persons or property caused by misuse or improper handling of this product, or for any loss of profit, expense, or other incidental, consequential or special damages arising out of the use of, or inability to use, the product

The maximum liability to Flexcell under this warranty shall not exceed the purchase price of the product. Products returned under this warranty to flexcell or an authorized Flexcell distributor, will be either repaired or replaced free of charge, or refunded at purchase price, at the option of Flexcell

This warranty does not cover any transportation costs for return of module or for reshipment of any repaired or replaced module, or costs associated with installation. removal, reinstallation or adaptation, modification of the original product.

This warranty is only applicable if the returned product is accompanied by the original invoice (purchase date and name of retailer must be indicated). Flexcell will accept no return without prior authorization.

Any other form of warranty given by the retailer is entirely his own responsibility and no person is authorised to change the terms of this warranty of the manufacturer.

The warrantee does not affect the Purchaser's rights under governing national laws as to consumers' rights.

Accessories

Consult the Flexcell website at www.flexcell.com to get the latest update on solar accessories.

Application

First connect your solar panel via the AMP Superseal IP67 waterproof connector to the 3 m extension cable (included).



Then either connect direct the solar panel to a 12 V battery with the appropriate terminals (not included),



or connect your Sunslick, your battery and your load (e.g. a light) to a charge controller (not included)







3 years warranty



do not fold







battery (not included) fish finder AM/FM radio rd GPS

liite phone



battery capacity (mAh) / charging time in hours (@STC*) : 600 900 2000 4000 1500 8000 4h30 9h00 18h00 1h20 2h00 3h20 15VDC 450mA 2h15 4h30 9h00 0h40 1h40 14W 15VDC 900mA 1h00 0h50 1h10 2h15 4h30 15VDC 0h20 0h30