

## 1. INTRODUCTION

Please read this user manual carefully and thoroughly before operation.

### 1.1 What is Included

- a) 1X led digit with lead
- b) 1X user manual

Carefully unpack the carton, check the contents to ensure that all parts are present and in good condition. Contact your supplier if any part is missing or damaged.

### 1.2 Safety Instructions



**WARNING!!!** To reduce risk of fire, electric shock, or injury, follow these important safety instructions

- This product is intended for indoor use only!
- Always turn off, unplug power and allow fixture to cool before servicing.
- Ensure that fixture is properly grounded.
- Please keep this User Guide for future reference.
- Always make sure that you are connecting to the proper voltage and that the line voltage you are connecting to is not higher than that stated on decal or rear panel of the fixture.
- To prevent risk of fire or shock, do not expose fixture to rain or moisture.
- Make sure power cord is never crimped or damaged.
- Do not look into the beam from a distance of less than 40 cm (16 inches).

*digit*



Copyright triAngle lights  
Last updated on Mach 28<sup>th</sup> 2012  
triangle.lights@gmail.com

## 1.3 Product Features

- RGBW 65X5mm LEDs (R4,B28,G20,W12)
- Auto Run, and Sound Active Mode
- Interesting Patterns for kids and toddlers

## 2. SET UP

### 2.1 Mounting

With adjustable mounting double brackets, this unit may be wall mounted, free standing, or clamp mounted.

**IMPORTANT!!! Safety cables must always be used. The safety cable must be capable of holding 10 times the weight of the fixture.**

### 2.2 AC Power

The fixture is designed to work on 100V-240V 50/60Hz.

**Warning!!! All fixtures must be connected to circuits with a suitable Earth Ground.**

## 3 OPERATION INSTRUCTIONS

### 3.1 Auto Mode

Use dip switch 1-8 to set this unit into Auto Run mode. The speed is slow to fast for dips 1-8.

### 3.2 Sound Mode

Dip switch 9 On for sound active mode.

## 4.SERVICING

### 4.1 Fuse Replacement

1. Unscrew the fuse holder and remove the damaged fuse.
2. Replace with exact same type fuse and screw the fuse holder back in its place.

### 4.2 Cleaning

To maintain optimum performance fixtures should be cleaned frequently.

Unplug fixture from power and allow the fixture to cool down. Use a vacuum or air compressor and a soft brush to remove dust collected on the plastic cover or lens.

### 4.3 Trouble Shooting

1. Unit does not respond to DMX:

Check that the DMX cables are connected properly and are wired correctly (pin 3 is "hot"; on some other DMX devices pin 2 may be 'hot'). It does matter which way the inputs and outputs are connected.

**Disconnect from mains before servicing.**

## 5. TECHNICAL SPECIFICATIONS

### WEIGHT&DIMENSIONS

Length	18cm
Depth	6cm
Height	8cm
Weight	0.5kg

### POWER

AC Power	AC110-240V	50/60Hz
Power Consumption	180 MAX.	
Fuse		

### LIGHT SOURCE

	65X5mm rgb leds
Beam Angle	25 degree

### IMPORTANT INFORMATION!

In order to optimize the recovery and recycling of the materials that old appliances contain and reduce the impact on human health and the environment, ensure that this product is recycled at the end of its life.

