



Spark

QUICK START GUIDE

Spark R83
MOBILE PHONE



Spark R83 Overview



LED Charging Status

Red	✳	Less than 15% charge
Orange	✳	Between 15 – 90%
Green	✳	More than 90% charge
LED Flashing		Message or Missed Call Notification

Key Functions

Key	Function
Power Key	Press to wake up your phone Press and hold to select Silent, Vibrate or Flight mode, to Restart your device or power on & off Press to switch your phone to Sleep mode.
Back 	Touch to return to the previous screen Touch to exit applications
Home 	Touch to go to the Home Screen Press and hold to view recent apps
Options 	Touch for current Options menu
Apps 	View all your system apps
Volume Keys	Press or hold to turn the volume up or down. Can be used to take photos in camera mode.

Insert the SIM Card and microSDHC Card*

1. Locate and open the SIM port on the left hand side of the phone.
2. Hold the SIM card with the gold contacts facing down and the cut corner facing the top of the phone as shown and slide it into the card holder. Press it home so it clicks into place.
3. If you wish to increase the memory capacity insert a microSDHC card (*optional) up to 32GB with the metal contacts facing down as shown above. Push it fully home until it clicks into place. The microSDHC card is not included in the box.
4. Remember to always close the port covers after use to maintain the ingress protection (IP67) rating.



NOTE:  microSDHC Logo is a trademark of SD-3C, LLC.

Charging the Battery

The back cover is sealed and the battery is not removable.
Do not attempt to open the back cover which will void your warranty.


To charge the battery:

Insert the charger lead carefully. Ensure that the plug is inserted with the correct orientation.
Do not force the connector into the charging jack.
Connect the charger to a standard AC wall outlet.
Disconnect the charger when the battery is fully charged.
Remember to close the charging port to maintain protection against liquid ingress.

How much charge have you got?

If the battery is low, there will be a pop-up message on the screen. As you charge your phone, the lock screen will tell you the battery level each time you wake up your phone.

If the phone is on, you'll see the charging icon   on the status bar.

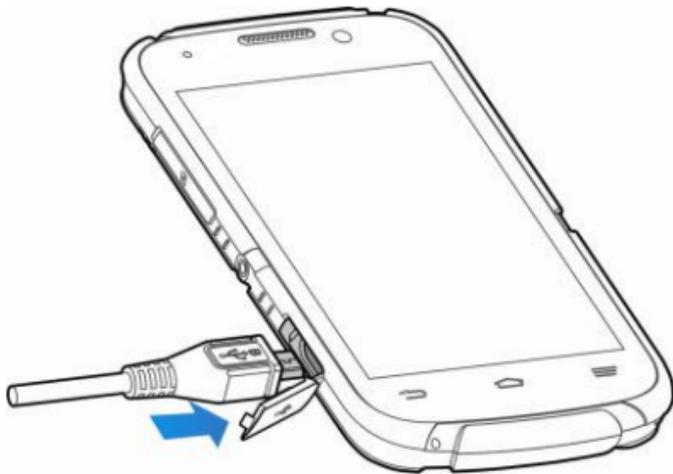

Powering On/Off

- Press and hold the **Power Key** to turn on your phone.
- To turn it off, press and hold the **Power Key** to open the options menu. Touch **Power off** and then touch **OK**.

TIP If you see FTM during power up this indicates Factory Test Mode and is initiated by holding the Volume Down key during power on. Press the **Power Key** for 10 seconds to exit FTM mode.

Setting Up for the First Time

When you first power on your phone or after a factory reset you need to enter some settings before use.

1. The default language is English (New Zealand) touch to change if required or touch **Start**.
2. Select **Yes** if you have a Google account or **No** to skip.
3. Configure the Google location options and touch ►.
4. Enter your name which the phone uses to personalize some apps and touch ►.
5. You will be prompted to accept the terms of Google service. Touch ► to continue.
6. Touch **Finish** to complete the setup.
7. Further assistance is given in the form of pop ups describing how to use various features.

The Home Screen



Notification Icons


	New SMS		microSDHC card not mounted
	New MMS		microSDHC card unexpectedly removed
	New Email		Upcoming event
	New Gmail message		Call on hold
	Problem with SMS/MMS delivery		New Wi-Fi network detected
	Missed call		Downloading data
	Call in progress		Sending data
	USB connected		USB tethering is on
	Song is playing		Portable Wi-Fi hotspot is on
	GPS is on		Updates available

Phone Status Icons

G	GPRS network		No Network signal
E	EDGE network		Signal strength (no data)
3G	3G network		Signal strength (data ready)
4G	4G LTE network		Mobile data in use
H	HSDPA network		Wi-Fi on but not connected
	Flight mode		Wi-Fi connected, no data in use
	Battery flat		Wi-Fi data in use
	Battery low		Bluetooth on
	Battery partially drained		Ringer off
	Battery full		Muted (microphone off)
	Battery charging		Vibrate mode
	Wired headset connected		Speaker on

Quick Settings Panel

Swipe down from the top of the screen for the Quick Settings panel. You can quickly switch device features on and off. Blue is enabled, grey is off.

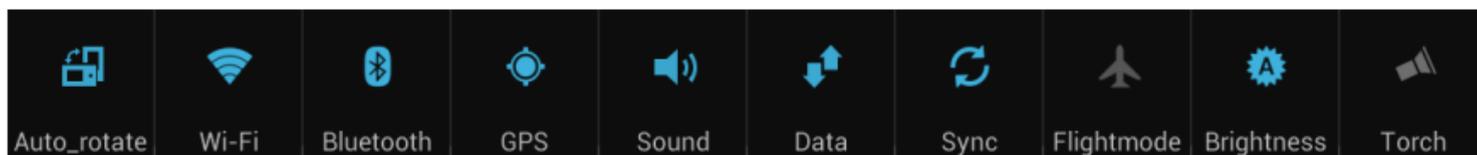

Access the full user guide on your device

The full user guide is available in your device. Go to Apps > Help or download a copy from zte.co.nz



Spark