

SWR-COM

User Manual

Version 1.0

Plug-In Modem for Powerline Communication with Sunny Boy String Inverters

Alteration Review

Document- Number SWRCOM	Version and Alteration Review ¹⁾		Comments	Author
-11:EE3798	1.0	A	New Edition	Salisbury

¹⁾ A: Alterations due to mistakes and errors in previous documents or improvement of the documentation

B: Alterations maintaining full or upward compatibility

C: Alterations limiting or excluding compatibility

	Name	Date	Signature
Release	N. Kullik	10.9.1998	

Explanation of Symbols used in this Document

To enable optimal usage of this manual and safe operation of the device during installation, operation and maintenance routines, please note the following description of symbols:



This indicates a feature that is important either for optimal and comfortable usage or optimal operation of the system.

Example: „Useful C routines for this purpose are on the support disk.“



This indicates a fact or feature very important for the safety of the user and / or can cause a serious hardware defect if not appropriately applied.

Example: „Disconnect the mains plug before opening the case!“



This indicates an example.

Content

1 Information about the SWR-COM and „Powerline“	5
1.1 Safety Information	5
1.2 Introduction.....	5
1.3 What is Powerline Communication?	6
2 Establishing a Powerline Communication.....	7
2.1 System Requirements	7
2.2 What connection to the grid is „suitable“?	7
2.3 Installing the SWR-COM.....	8
3 Trouble Shooting	10
3.1 How to identify the interference source	10
3.1.1 Strong Signal Damping	11
3.1.2 Phase coupling.....	12
3.1.3 Interference signals on the mains	13
3.1.4 Parallel Powerline Communication.....	14
4 Warrantee Regulations and Liability	17
5 Technical data	19

1 Information about the SWR-COM and „Powerline“

1.1 Safety Information



Opening the Powerline Modem SWR-COM is limited to qualified personnel.



Repairs of the SWR-COM must be done by the manufacturer.



Disconnection of the SWR-COM from the supply voltage is done by pulling the SWR-COM out of the socket. It is therefore necessary to always have access to the socket in order to be able to disconnect the device whenever necessary.

1.2 Introduction

The transmission link between the Sunny Boy String inverters and the SWR-COM is established with „Powerline Communication“. This transmission is a simple and reasonable way to transmit data over the mains connection without separate data cables. The Sunny Boy String inverters collect data concerning their operation and transmit this data to a central unit for further evaluation and storage.

As mentioned above, the Powerline Communication normally is a very simple way to transmit data, chapter 1. and 2. describe the function and the installation of the SWR-COM. The chapter 3 covers the different disturbances and interferences that can (but normally do not) occur with this kind of transmission. You will see that chapter 3 is very long, but this only in order to cover all possible disturbances and the according countermeasures.

1.3 What is Powerline Communication?

Powerline Communication is a data transmission mode where the data is sent over the normal mains connection. This so called mains connection supplies all electric devices in the electricity distribution with 230 V / 50 Hz. The data from the Sunny Boy inverters is sent over the same wire with a carrier frequency of 132,45kHz.

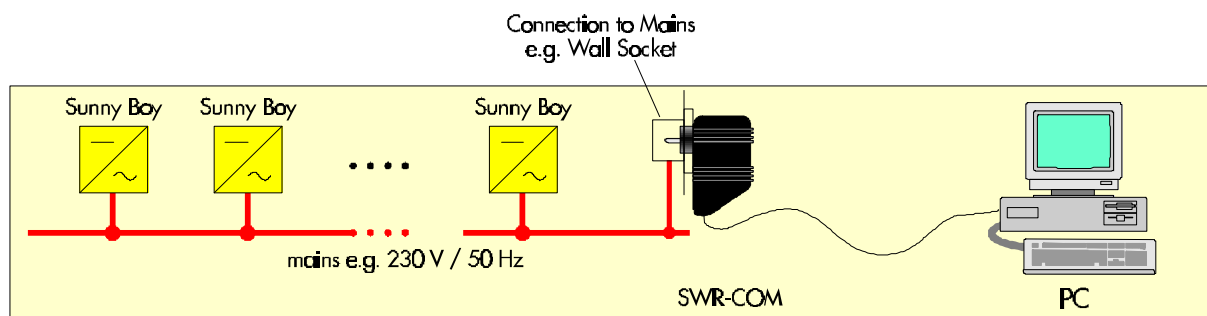


Fig. 1.1: Example for Standard Powerline Communication

With Sunny Data running, the PC collects all available data coming from the Sunny Boy String Inverters and evaluates and visualizes this data according to your specific configuration. Setting up and the using Sunny Data is another topic which is described in the *Sunny Data* manual. The latest version of *Sunny Data* and the according manual can be downloaded from our Internet site at WWW.SMA.DE.

2 Establishing a Powerline Communication

In the following a brief description of the installation of the SWR-COM Powerline modem. If you encounter any trouble establishing a connection to the Sunny Boy String inverters please have a look at chapter 3.

2.1 System Requirements

For the PV-plant monitoring with a SWR-COM and Powerline communication the following requirements must be fulfilled:

- 1 or more Sunny Boy String Inverters with integrated Powerline modem
(Type SWRxxxx-NE:100, which have to be **active** in order to be detected by *Sunny Data*, so run the installation during daytime)
- a PC (486 or higher, min. 4 MB RAM) with 1 free COM port and Windows 3.x or Win95
- a Powerline modem (SWR-COM) for connecting this PC to the grid
- the PV-plant monitoring and visualization software *Sunny Data*
- a suitable connection to the grid for the SWR-COM (see chap. 2.2 and chap. 3)

2.2 What connection to the grid is „suitable“?

The quality of a connection to the grid and the according Sunny Boy String inverters is essential for the effective data transmission to and from the Sunny Boy inverters. Beside the fact that transmission in the most cases can be established over very long distances (150 m and more) and over several phases, we recommend to stick to the following rules:

- connect the Sunny Boy Inverters and the SWR-COM to the same phase (if this is absolutely not possible a phase coupler must most likely be installed, see chap. 3.)
- keep the transmission line as short as possible.
- make sure that there are as few as possible (best none at all) disturbing electric devices in your grid. These can be neon tube lamps, some microwave ovens and sometimes large electric motors or similar.
- avoid the parallel usage of other devices that use the electricity grid for their transmission such as Babyphone or Interphone devices.

If you stick to (most of) the above given rules there should normally be no problem for the Powerline Communication - if there are problems with the data transmission and the detection of the Sunny Boy Inverters see chap. 3 „Troubleshooting“.

2.3 Installing the SWR-COM

The installation of the SWR-COM is done in two steps: First the installation of the SWR-COM Powerline modem to the grid and the PC, second the installation of Sunny Data, the detection of the according Sunny Boy inverters and the configuration according to your specific requirements.

For the *Sunny Data* installation and its usage please refer to the „*Sunny Data* User Manual“ - for connecting the SWR-COM do the following:

- write down the serial numbers of the Sunny Boy inverters you want to monitor
- plug the SWR-COM in the socket
- connect the cable from the SWR-COM to a free serial port of the PC (and write down the port COM1 or COM2 if you can't remember)

- run Sunny Data and start monitoring your PV-plant (see the „*Sunny Data* User Manual“)

If you encounter any problems during the device detection *with Sunny Data* see chap. 3 „Trouble Shooting“.

3 Trouble Shooting

If the communication between the SWR-COM and the Sunny Boy inverters is not satisfactory or cannot be established at all, it is necessary to find the reason for this disturbance for the subsequent appliance of appropriate countermeasures.

Disturbances of the Powerline communication can result from the following:

- **Signal damping**
 - other electric devices
 - long transmission line
 - unsuitable electric cabling
- **Insufficient phase coupling**
 - Sunny Boy inverters and SWR-COM are connected to different phases or missing phase coupler
- **External disturbances**
 - Babyphone usage or similar in the neighborhood
- **Internal disturbances**
 - Internal Babyphone or Intercom usage or similar

These may (but not must) effect the Powerline transmission. In some cases a perfect data transmission can be established with cable lengths over 150 m and over several phases and sometimes the data transmission will possibly even not work under apparently perfect conditions. SMA can therefore not guarantee a satisfactory Powerline transmission. How to detect and how to get rid of disturbing factors is described in the following.

3.1 How to identify the interference source

In order to launch appropriate countermeasures it is essential to clearly identify the interference source. There is a guideline for this identification in the following:

- Starting point for the interference identification is an operating communication. Connect the SWR-COM with the PC running *Sunny Data* as close as possible to the Sunny Boy inverters.
- Disconnect all devices that could disturb the communication. These devices can be neon tube lamps, washing machines, electric stoves, TVs and so on.
- Set *Sunny Data* to minimal request cycle (see „*Sunny Data* user manual“ chap. 3.4 for this). This is done in order to be able to examine the transmission as close as possible.
- Connect the SWR-COM to different sockets that are each further away from the Sunny Boy inverters. Observe the transmission - if the transmission starts to break down after a total cable length of about 30 m the communication most likely is disturbed by external devices beyond the household distribution. (Countermeasure: block filter in front of the house distribution).
- Now re-connect the devices you disconnected from the grid one after the other and observe the communication. This way you can easily identify the disturbing device. Once identified, remove the device, connect the device to another phase or equip your electricity circuit with a block filter.

3.1.1 Strong Signal Damping

Signal damping is the most frequent reason for disturbances of the Powerline communication. The cause for this may be a too long wiring between the inverter and the Power-Line-Modem, but most times certain electrical devices which are connected to this line are the reason. Devices with a high input capacity are able to massively damp the carrier signal independent from the fact if these devices are switched on or off. Examples for this are washing machines, dryers, electric ranges, microwave ovens, PCs, fluorescent lamps, etc.

Countermeasures against damped signals

- (1) reconnect the disturbing electric device(s) to another phase
- (2) install a special filter in the supply cable of the disturbing electrical devices
- (3) install a separate electricity cable from the inverter(s) to the Powerline modem

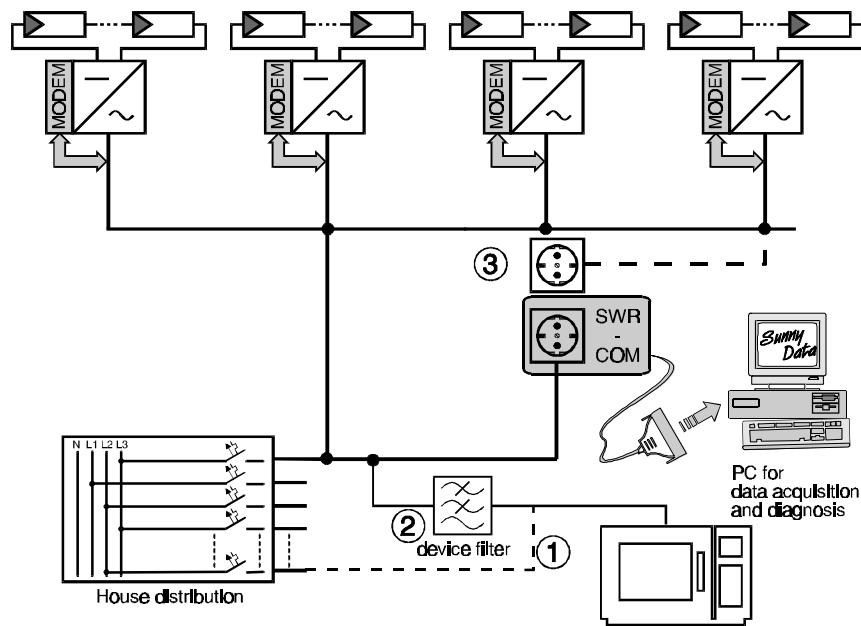


Fig. 2.1: Countermeasures against strong signal damping

3.1.2 Phase coupling

If you want the Powerline communication to run over several phases a major signal damping is the result. A phase coupler can then be necessary.



If the transmission runs over several different phases a phase coupler may be necessary. Sometimes although the phases are already coupled by other electric devices in the circuit such as three phase electric motors.

Countermeasure for Powerline transmission over different phases

- Install a phase coupler



A phase coupler can result in the following **disadvantages**:

The detour over the phase coupler leads to very long transmission distances and a signal damping.

The high-frequency coupling of the three phases can reinforce the influence of disturbing devices connected to the other phases.

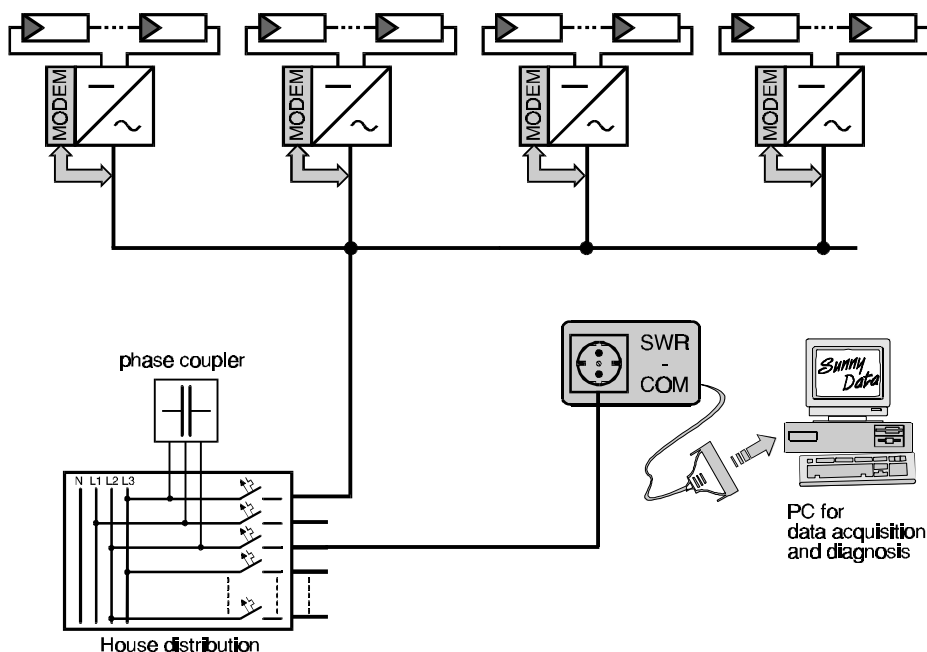


Abb. 2.2: Installation of a phase coupler for transmission over several phases

3.1.3 Interference signals on the mains

The data transmission uses a carrier frequency of 132.45 kHz. If other consumers emit signals in this frequency range to the mains, the transmission can be disturbed when these exceed a certain level. These interference signals can be internally emitted by electrical devices within your own household (insufficiently filtered devices like unshielded transformers), but they can also result from devices outside of the household distribution (e.g. high power machines in the neighborhood).

Countermeasures for internal and external interference

- Remove the disturbing device if possible
- Isolate the disturbing device by either connecting the device to another phase or
- Install a block filter (1). This block filter disconnects the part of the houses electric distribution used for the Powerline data transmission, from the section of the of the mains with the interfering devices. The effect of the blocking filter can be reinforced by the installation of an active damping module on the side of interference (before the block filter), which is active in the carrier frequency band (2).

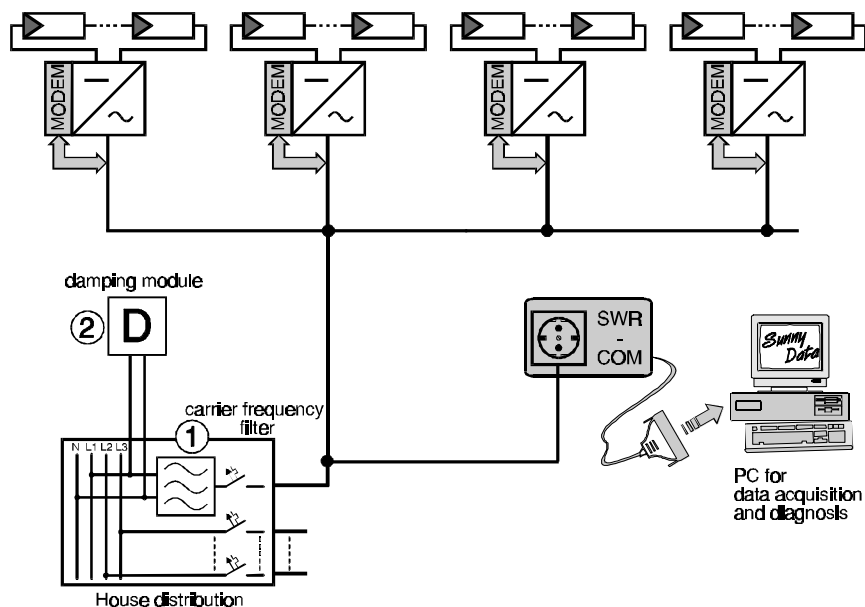


Fig. 2.3: Powerline communication in case of strong interference

3.1.4 Parallel Powerline Communication

It can be a problem when other devices use the electricity supply for communication as well as the SWR-COM. The situation is similar to devices emitting interfering signals, only the strict disconnection of the transmission lines can help in these cases. But in contrary to the method described in the previous chapter the damping of the disturbing signal does not help here. After all both communication systems have to operate parallel. At least one of the used systems should therefore be restricted to

the utilization of one phase. Then this part of electrical installation can be equipped with a block filter, which makes sure that neither high-frequent „alien“ signals get in nor that the own carrier signals are able to leave this part of electrical installation.

Countermeasures for parallel Powerline communication

- In case of a strong coupling such a restriction of the transmission link and the utilization of a block filter can be necessary for each of the used communication systems (1).
- An improvement can be achieved with damping modules, which extend the effect of the blocking filter by damping high-frequency signals selectively (2). Such a damping module may exclusively be installed in that part of the electrical installation where all transmission signals are not needed.

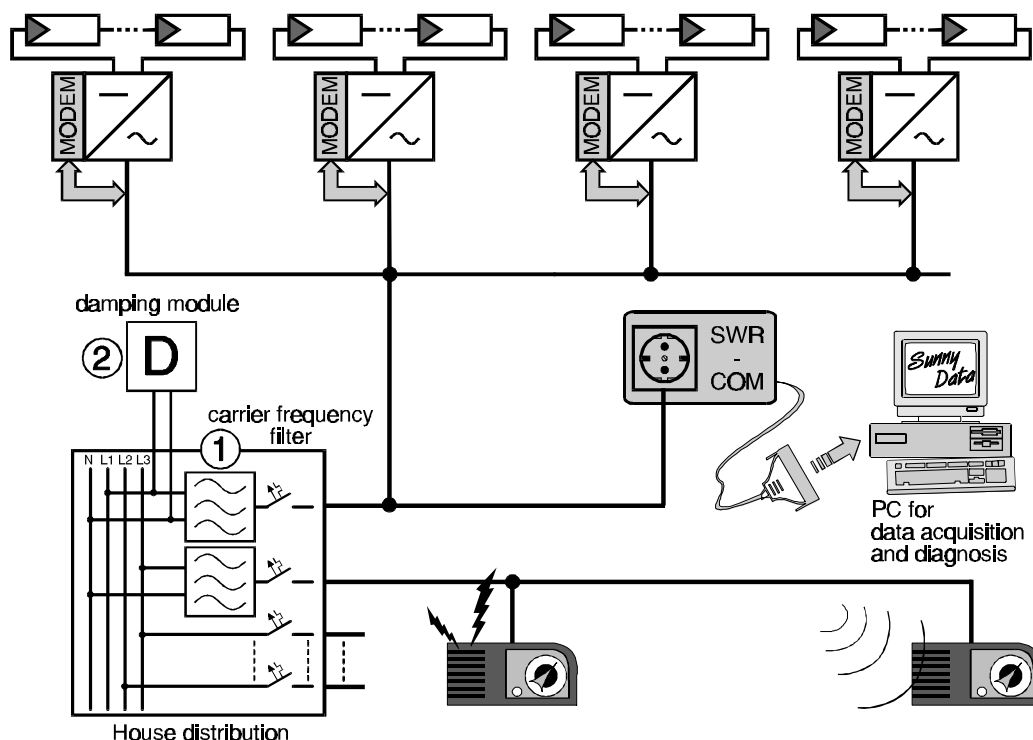


Fig. 2.4: Powerline Communication with other devices

Advice:

All additional components (carrier-current line trap, phase coupler, filter, damping module) are standard electric equipment and can be purchased from the local electrician supply or from SMA. The devices are installed in the house distribution while the installation must be done by qualified personnel.

4 Warrantee Regulations and Liability

You have purchased a product which was thoroughly checked before delivering. If your device should be defective or show a malfunction during the guaranty period in spite of this, please contact your distributor or installer.

Warranty

The warranty period is **12 months** from the date of purchasing the device by the end user. It ends at the latest 18 months after the delivery date at SMA, and includes all defects caused by material or manufacturing faults.

The guaranty period for warranty repairs or compensation deliveries ends 6 months after delivery, but runs at least until the expiration of the original guaranty period for the delivered item.

Evidence

SMA will only render warranty services, if the objected device is sent back to SMA together with a copy of the account the distributor has made out to the consumer. The type plate at the device must be readable completely. In case of nonfulfilment SMA reserves the right to refuse guaranty services.

Conditions

The device will be repaired after the choice of SMA in its works without invoice of material and work, or a replacement resp. compensation device will be delivered.

The objected device is to be sent back to SMA without charges in the original packing, or in a transport packing of equal quality.

The customer has to grant SMA the necessary time and opportunity to repair the defects.

Exclusion of Liability

Excluded are any guaranty claims and liabilities for direct or consequential damages due to

- shipping damages,
- faulty installation or putting into operation,
- engagements, alterations, or repairing attempts,
- inappropriate use or operation,
- insufficient air supply to the device,
- non-observance of relevant safety regulations (VDE etc.),
- or force majeure (lightning, overvoltage, storm, fire).

Caution! We cannot guarantee the proper function of the data transmission via mains lead (power line modem) in case it is carried out in electrical grids with high harmonic distortion resp. high-frequency line distortions like e.g. industrial power supply grids, or in the neighborhood of irregular consumers (unshielded motors, switching power supplies, converters etc.) Furthermore, the simultaneous operation of babyphones may lead to short-time data transmission disturbances or interruptions. In case of disturbed data transmission via mains lead, we offer alternatively a communication via separate data line as option (RS232 or RS485) (see Technical description *Sunny Boy*).

We reserve the right to make alterations serving for the improvement of the device.

Further or other claims for direct or indirect damages, especially including claims for damages from positive contract violation, are excluded insofar as not otherwise compelling stated by law.

5 Technical data

mains voltage:	230 V + 10 % / - 15 %
power consumption:	approx. 5 W
carrier frequency:	132, 45 kHz
transmission protocol:	according to DIN EN 50065 part 1 (VDE 0808 part 1)
ambient temperature:	0 ... 40 °C
size (mm):	126 x 75 x 53 (without plug and cable)
weight:	approx. 550 g
degree of protection:	IP 20
fuse:	fine-wire fuse, 250 V / 0,315 A slow blow

Connections:

- integrated mains plug for direct insertion into a-socket
- connection cable 2 m with D-SUB connector (socket, 9-pin)
for direct insertion into COM1- or COM2 connector
of a PC (RS232)

Note: The parallel operation of the Powerline modem together with other devices, which use the network for data transmission as well but do not comply with the standardized transmission protocol, is normally not possible.

Accessories (optional):

- interface adapter D-SUB plug adapter 9-pin to 25-pin

For installation in the house distribution:

- phase coupler Busch-Jaeger Elektro GmbH, Typ 2291 Kb-101

- carrier current line trap Busch-Jaeger Elektro GmbH, Typ 2293-63 kB

- device filter Busch-Jaeger Elektro GmbH, Typ 2294/16 kB

- damping module Busch-Jaeger Elektro GmbH, Typ 2260