

# USER MANUAL

---

## FP1560-T Touch Screen AD Display

---

Version 08.1

Before connecting, operating or adjusting this product, please read these instructions completely. Please keep this manual of future reference.

Product and brand names mentioned in this manual are trademarks of registered trademarks of their respective holders.

Specification is subject to change without notice.



## Important Information



Please do not open or remove the cover plate because it may generate a high voltage shocking or other dangers.



Please do not precede the maintenance or repairing of this unit by yourself. Carefully read the instruction manual before use, and keep the manual for future reference.

*Please read and comply with all warnings, cautions, and the manual thoroughly. You might lose your warranty if you modify or revise this item in such a manner not approved by this manual.*

- AC cords enclosed in this product are for 110V or 220V.
- If any liquid or solid objects fall inside the cabinet, unplug the set immediately and have it checked by qualified service personnel before operating it again.
- Never add any attachments and/or equipments without approval of the manufacturer. Such additions can increase the risk of fire, electric shock, or other personal injury.

## Important Warnings and Safety Precautions

- Read instructions- all the safety and operating instructions should be read before the product is operated.
- Keep the safety and operating instructions for future reference.
- Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in fire or electric shock. Never spill liquid of any kind on the product.
- Do not remove/insert the plug into the socket with wet hands in order to prevent electric shock.
- Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
- Do not attempt to service this product by yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all services to qualified service personnel. The manufacturer will not be responsible for any injuries or damage caused to the product.
- AC cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, pay attention particularly to cords at plugs, convenience receptacles, and the points where they exit from the product.
- Unplug the unit from the wall outlet before cleaning. Use a damp cloth; do not use liquid or aerosol cleaners. Please refer to the cleaning instruction.
- Do not place the product on an unstable cart, stand, tripod, bracket, or table where it may fall. A falling unit can cause serious injury to a child or adult and serious damage to the appliance. Follow the manufacturer's instructions when mounting the unit, and use a mounting accessory recommended by the manufacturer.
- The unit is designed with slots in the cabinet for ventilation to protect it from overheating. Do not block these openings with any object, and do not place this unit on a bed, sofa, rug, or other similar surfaces. Do not place it near a radiator or heat register.
- The plug provided by this unit will fit into the power outlet in only one way. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still does not fit, contact your electrician to replace your outlet.
- Use wall or ceiling mounts when mounting the product on a wall or ceiling, be sure to install the product according to the method recommended by the manufacturer.
- For safety reasons, do not leave children along with the unit. **DO NOT ALLOW CHILDREN TO CLIMB ON THE UNIT.**



## ***Contents***

1.	INTRODUCTION.....	1
	Product Description .....	1
	Product Features .....	1
	Package Contents .....	2
	Assembly and Connection.....	2
2.	Create Touch Content.....	3
3.	ON SCREEN DISPLAY OPERATING INSTRUCTIONS .....	4
	Device Selection (Home Page) .....	4
	Function Selection.....	5
	Setup Screen .....	5

# 1. INTRODUCTION

## *Product Description*

Thank you for choosing the Interactive Touch Screen AD Display and for your continued support and use of our products.

 
This Touch Screen AD Display allows you to play back high quality still image for JPEG files as well as video files through interactive touch screen.

## *Product Features*


- Free bundled interactive content editor software – "ezManager".
- Support object orient dragging editing.
- Support preview function to simulate the play-back orders.
- Support multi-hot zone on single screen. Hot zone size adjustable, up to 50 objects per page.
- Support objective multiple layer design. Objects can be overlay.
- High quality 2W speaker built-in for superior audio effect.
- Support audio file format: AAC, MP3, WMA
- Support photo file format: BMP, JPEG
- Support video file format: MPEG-1, MPEG-2, MPEG-4, H.264 BP, Flash Video (.flv).
- Firmware can be upgraded by using flash memory card.
- Power-on play: automatically play.

## Package Contents

Please check the package to make sure it contains the following items

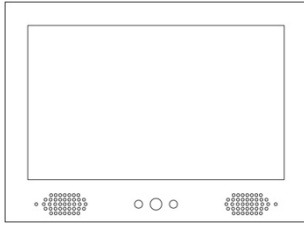

FP1010-T

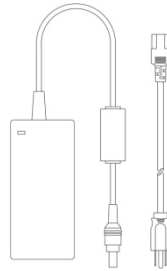 


AC Adapter / Power Cable




User Manual

## Assembly and Connection

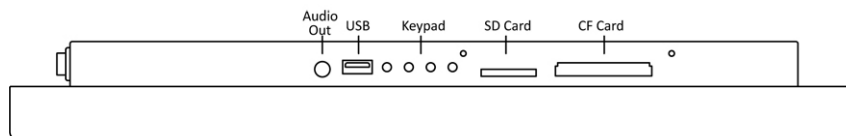 


Top View

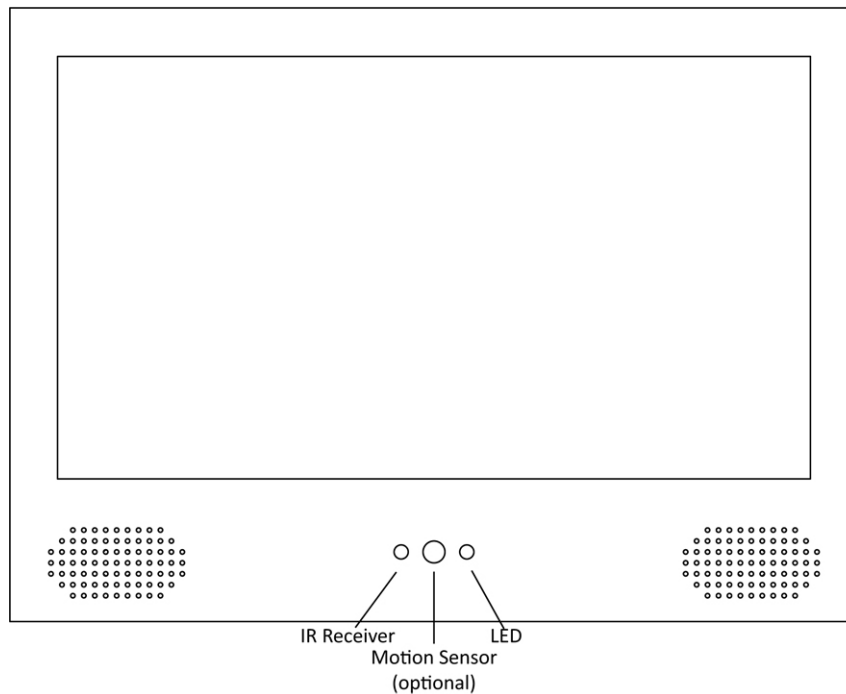 

Front View<sup>1</sup>

---

 
<sup>1</sup> Option: Motion sensor.

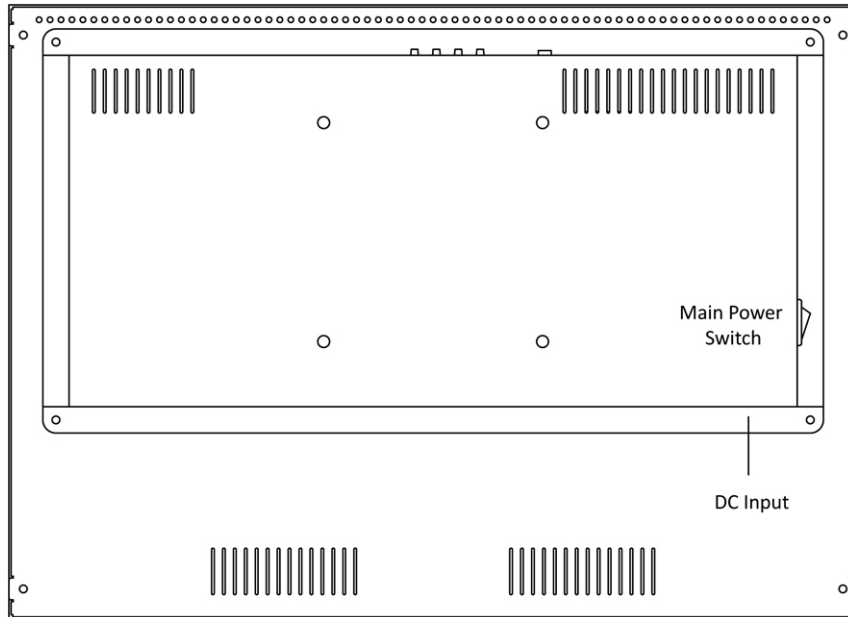

**Back View**

## 2. Create Touch Content

 
- ✧ Please refer "ezManager quick start guide" to create and generate script file.
- ✧ Load the memory card into Touch Screen AD Display, turn on power to automatically play back.

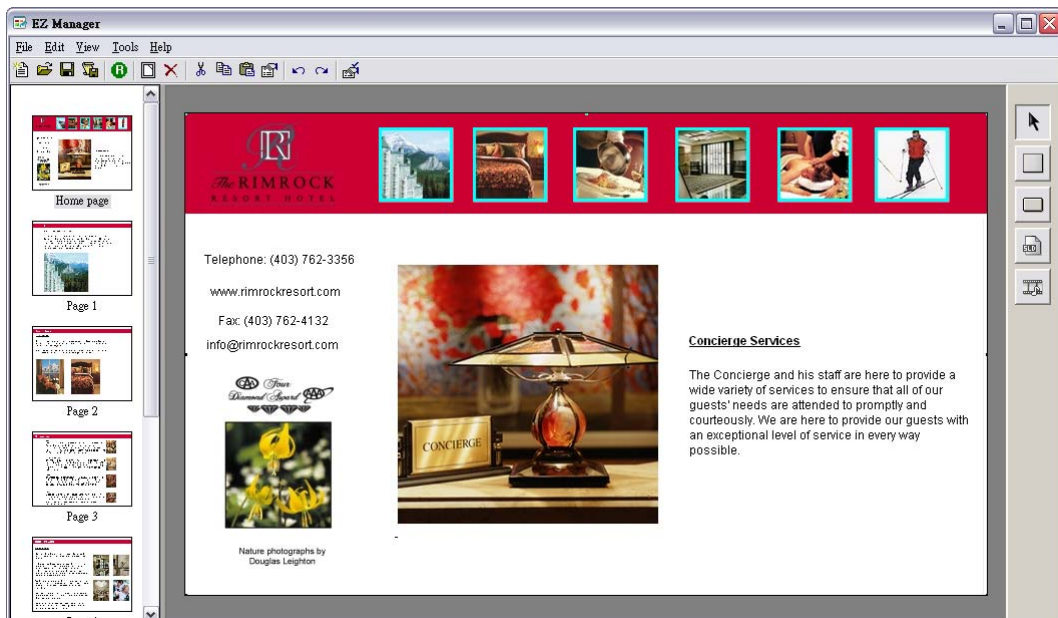



### 3. ON SCREEN DISPLAY OPERATING INSTRUCTIONS
 
#### *Device Selection (Home Page)*

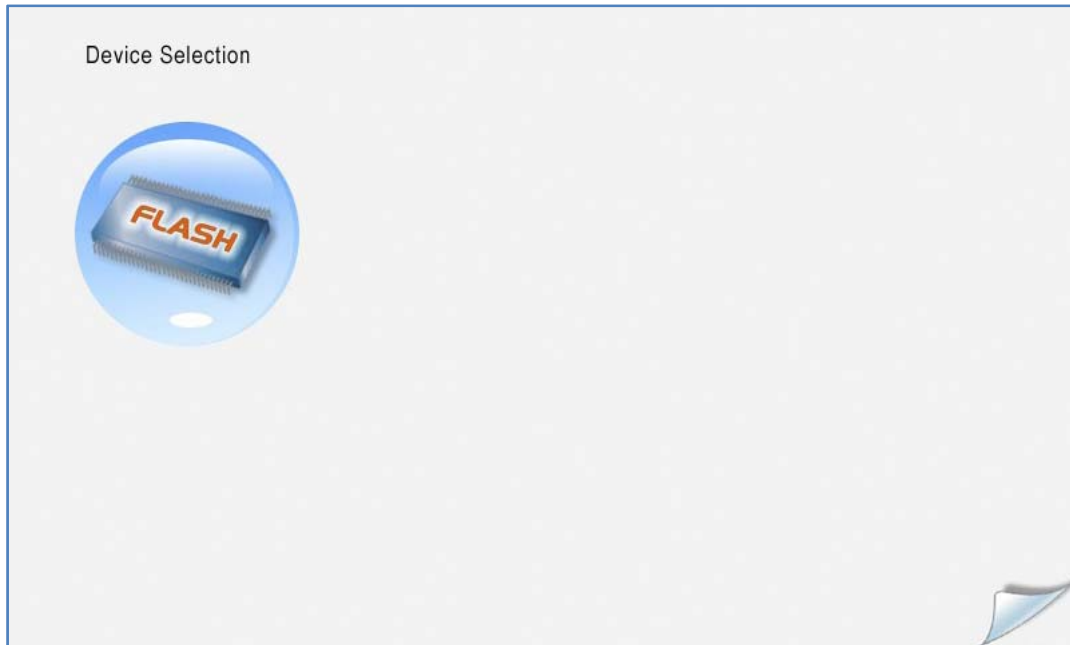


- ✧ Turn on device power without memory card loaded. "Device Selection" will be seen on screen. Press the "Flash" icon to get into "Function Selection" mode for selection.
- ✧ You may also use keypad operation other than object control on touch screen.
  - menu → represent "enter" or "select"<sup>2</sup>
  - volume up / down → represent arrow keys
  - exit → represent "back" or "exit"

---


<sup>2</sup> Default different functions under different mode.

## Function Selection

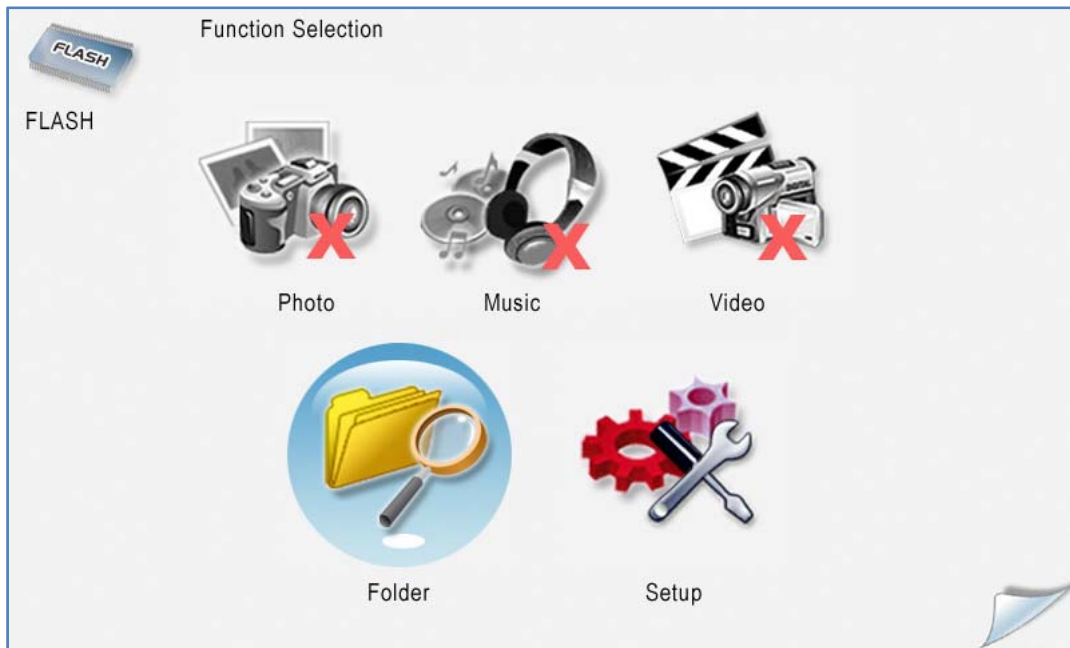 



- ✧ Press "Setup" hot zone to get into setup mode.
- ✧ To get into setup mode screen while memory card is loaded; turn off the power, press and hold the menu key on keypad then reboot.<sup>3</sup>

## Setup Screen

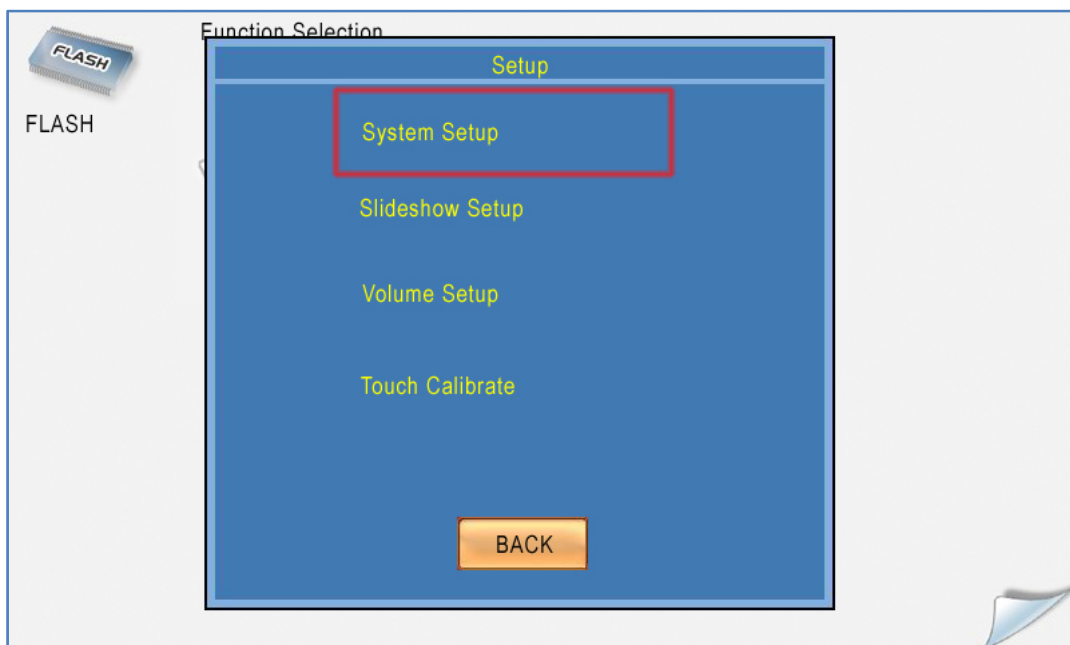 


 
<sup>3</sup> Please turn off the power after setup completed. Load the memory card and reboot to play back.

## System Setup – Brightness & Contrast

Level 1	Level 2	Function
<b>System Setup</b> Slideshow Setup Volume Setup Touch Calibrate	<b>Brightness &amp; Contrast</b> Time Setup Version	Brightness: 30%-90% Contrast: 30%-70%  ◆ Adjust brightness and contrast value. ◆ Press  /  icon for adjustment.

## System Setup – Time Setup

Level 1	Level 2	Function
<b>System Setup</b> Slideshow Setup Volume Setup Touch Calibrate	Brightness & Contrast <b>Time Setup</b> Version	RTC Clock  ◆ Adjust RTC clock. ◆ Default "YY/MM/DD" or "hr/min". ◆ Press  /  icon for adjustment.

## System Setup – Version

Level 1	Level 2	Function
<b>System Setup</b> Slideshow Setup Volume Setup Touch Calibrate	Brightness & Contrast Time Setup <b>Version</b>	Firmware version.  ◆ Display the current firmware version.

 

## Slideshow Setup – Interval Setup

Level 1	Level 2	Function
System Setup	Interval Setup	Fast/Medium/Slow/Very Slow  ◆ To adjust the interval timing for slideshow.
<b>Slideshow Setup</b>	Effect Setup	
Volume Setup		
Touch Calibrate		

## Slideshow Setup – Effect Setup

Level 1	Level 2	Function
System Setup	Interval Setup	Random/Top down/Bottom up/ ....  ◆ To adjust effect between slideshow change.
<b>Slideshow Setup</b>	Effect Setup	
Volume Setup		
Touch Calibrate		

## Volume Setup

Level 1	Level 2	Function
System Setup		0-10  ◆ Speaker volume control. ◆ Press  /  icon for adjustment.
Slideshow Setup		
<b>Volume Setup</b>		
Touch Calibrate		

## Touch Calibrate

Level 1	Level 2	Function
System Setup		
Slideshow Setup		
Volume Setup		
<b>Touch Calibrate</b>		<ul style="list-style-type: none"><li>◆ Calibration on touch screen.</li><li>◆ Press and hold the red "+" icon on screen until the second red "+" icon appear then press the second red "+" icon.</li></ul>

**MEMO**